



# pandigital novel

▶ User Guide  
v1.4

# Register your pandigital novel

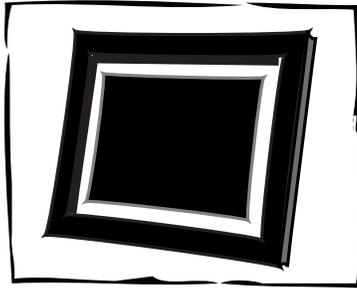

Qualify to win a FREE  
digital photo frame!\*  
(*valid in USA only*)

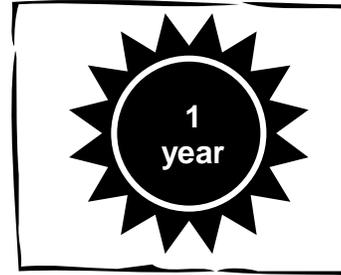

Register your FREE  
1-year warranty!\*\*

**Register now at [www.pandigital.net](http://www.pandigital.net)**

\*For details, go to our website: [www.pandigital.net](http://www.pandigital.net)

\*\*The online signup is for the purpose of user and product registration. Failure to register does not in any way diminish any of your standard warranty rights, as described in the documentation included with your product.

**NOTE:** If you must mail your 1-year registration, please send your name, address, phone number, model, serial number, and when and where purchased to: **Pandigital, P.O. Box 2969, Dublin, CA 94568-2969 USA**

**Note:** Your device style and features may differ from those documented in this User Guide.

UG-E\_PRD07T20WBL10P2\_v1.4\_09-10

---

## Table of Contents

<b>Package Contents</b> .....	<b>8</b>
<b>Covers for your pandigital novel</b> .....	<b>8</b>
<b>Device Overview</b> .....	<b>9</b>
<b>Power Button Usage</b> .....	<b>9</b>
<b>Touch-Screen Navigation</b> .....	<b>10</b>
Using the Stylus .....	10
<b>Wi-Fi &amp; Low Power Button</b> .....	<b>10</b>
<b>Reset Device</b> .....	<b>11</b>
<b>Getting Started</b> .....	<b>11</b>
<b>Home Screen</b> .....	<b>13</b>
<b>Applications</b> .....	<b>14</b>
<b>Application Function Menu</b> .....	<b>15</b>
Add .....	15
Wallpaper .....	17
Search .....	17
Notifications .....	17
Settings .....	17
<b>Overview of Buying &amp; Downloading eBooks to Device</b> .....	<b>18</b>
<b>Kobo eBooks</b> .....	<b>19</b>
Bookstore .....	19
Purchase eBooks .....	19
Get Free eBooks .....	20
Get Free Samples .....	20
Options Menu .....	20
Purchase History .....	21
<b>MY LIBRARY</b> .....	<b>22</b>
Manage Books .....	22
Bookshelves .....	23
Add New Bookshelf .....	23
Manage Bookshelf .....	23
Display Shelf .....	23
Quick Open another Bookshelf .....	24
Delete Shelf .....	24
<b>READER</b> .....	<b>24</b>
Reader Function Menu .....	25
Library .....	25
Table of Contents .....	25
Bookmarks .....	25
Bookmarks .....	25

Notes.....	26
Add Note .....	26
View Notes .....	26
Delete Notes.....	26
Highlights .....	26
Add Highlights .....	26
View Highlights .....	26
Hide all Highlights.....	27
Delete Highlights .....	27
Go To .....	27
Display Table of Contents.....	27
Jump to Page .....	27
Search for Specific Text.....	27
Last Read.....	28
Font Size .....	28
Night Read .....	28
Screen Orientation - Lock.....	29
Play Music in Background while Reading .....	29
<b>WEB .....</b>	<b>29</b>
Enter a Website URL Address .....	30
Zoom Web Pages.....	30
Browser Function Menu.....	31
Go To Website .....	32
Browser Bookmarks .....	32
Bookmark a Web Page.....	32
Go to Bookmarked Web Page .....	32
Manage Bookmarks.....	32
Open Bookmarked page.....	32
Edit Bookmark .....	32
Add Shortcut to Home Screen .....	33
Share Link .....	33
Copy & Paste URL .....	33
Delete Bookmark .....	33
Windows.....	33
Open New Window .....	33
Switch Windows .....	33
Close Windows.....	33
Refresh.....	34
Find on Page.....	34
Select Text .....	34
Share page.....	34
Downloads .....	35

Browser Settings .....	35
Page content settings .....	35
Privacy settings .....	35
Security settings .....	35
Advanced Settings.....	35
<b>SETTINGS .....</b>	<b>36</b>
Wireless controls .....	36
Connecting to Public Wi-Fi Hotspot .....	36
Wi-Fi Button on Device.....	37
‘Forget’ remembered Wi-Fi Network .....	37
Sound & display .....	37
Applications.....	38
SD card & eREader storage .....	38
Date & time .....	39
Locale & text.....	39
About eReader .....	39
<b>MUSIC.....</b>	<b>39</b>
Play Music.....	40
Music Play Screen.....	41
Music Control OptionS.....	41
Delete Music Files .....	42
Playlist.....	42
Create New Playlist .....	42
Add Songs to Playlist.....	42
Play songs in Playlist.....	42
Remove songs from Playlist .....	42
Rename or Delete a Playlist .....	43
<b>GALLERY .....</b>	<b>43</b>
PHOTOS.....	43
Photo Function Menu .....	44
Delete Photos.....	44
VIDEOS.....	45
Delete Videos .....	45
<b>EMAIL .....</b>	<b>46</b>
Add Email Accounts .....	46
Set up Yahoo! Plus Account .....	46
Set up Juno Platinum or Turbo Account.....	47
Email Inbox .....	47
Open Email Message .....	47
Compose New Email Message.....	48
Edit Email Account .....	48
Delete Email Accounts .....	48

Set Default Email Account .....	48
<b>ALARM .....</b>	<b>49</b>
Add Alarm .....	49
Shut Off Alarm Alert.....	49
De-Activate Alarms.....	49
Edit Alarm.....	50
Delete Alarm.....	50
<b>CALENDAR .....</b>	<b>50</b>
Add Event.....	50
Edit Event.....	51
Event Reminder Alerts.....	51
Delete Events.....	51
<b>CONTACTS .....</b>	<b>52</b>
Add New Contacts.....	52
Add Contact to Favorites .....	52
Edit Contacts.....	52
Email Contacts .....	52
Delete Contacts.....	53
<b>Installing Android Applications .....</b>	<b>53</b>
<b>Connect to Computer.....</b>	<b>54</b>
PC System Requirements .....	54
Connect to Windows PC.....	54
Connect to Macintosh Computer .....	56
Read Copied eBooks.....	57
<b>USER GUIDE .....</b>	<b>57</b>
<b>UPDATE FIRMWARE .....</b>	<b>58</b>
<b>Frequently Asked Questions.....</b>	<b>59</b>
<b>Battery Management .....</b>	<b>63</b>
<b>Important Safety Precautions.....</b>	<b>63</b>
Cleaning the device.....	64
<b>Technical Specifications.....</b>	<b>64</b>
<b>Limited Warranty .....</b>	<b>65</b>
FCC Notices.....	66
FCC Radiation Exposure Statement: .....	66
<b>Disclaimers .....</b>	<b>67</b>
<b>License Agreement and Terms of Use .....</b>	<b>67</b>



## pandigital novel

A contemporary multimedia device designed for straightforward functionality, featuring a full color TFT LCD display and convenient touch-screen navigation.

Your **pandigital novel** is a light and stylish electronic multimedia eReader which allows you to quickly and easily download and read digital eBooks anytime and anywhere.

Connect to a Wi-Fi network to shop, purchase and download eBooks from Kobo bookstore, browse the web, send/receive email, and much more!

Also, you can view photo slideshows, watch videos, and listen to music through the built-in speakers or with headphones (*not included*).

This device is an Android open platform model, allowing you to download Android applications.

### **READ. SURF. PLAY.**

Your **pandigital novel** is a step up in multimedia devices. Congratulations on your choice!

---

## Package Contents

pandigital **novel**  
Power Adapter  
Tabletop Stand  
USB Cable  
Stylus  
Quick Start Guide  
User Guide (*loaded in device*)

---

## Covers for your pandigital **novel**

Dress up your pandigital **novel** and keep it safe at the same time. Designed for protection, these stylish covers safeguard your eReader while still letting you read, surf and play.

Available in multiple colors. Sold separately wherever pandigital **novels** are sold, or on our website: [www.pandigital.net](http://www.pandigital.net).

### Portfolio Case



*with  
magnetic  
closure*

### Gel Cover



Read a good book,  
and look good doing it.

---

## Device Overview



---

## Power Button Usage

**Turn On:** Press and hold the power button at least 3 seconds or until the boot up message appears.

**Turn Off:** Press and hold the power button for 3 seconds, and then tap **Power off**, and tap **OK** confirm the power off or **Cancel** to leave the device on.

**Sleep Mode On/Off (energy saver):** While unit is on, press & release the power button quickly.

---

## Touch-Screen Navigation

The touch-screen allows for quick, easy and convenient navigation for all applications. Throughout the User Guide, you are instructed to use the following touch navigation methods:

**Tap** = quick touch and release your finger on an item on the screen (*i.e., type on the onscreen keyboard, select item buttons*).

**Touch & hold** = touch your finger and hold in place until a response by application (*i.e., display dictionary, add note to page*).

To open a menu for customizing the Home screen, touch and hold in an empty area on the screen until the menu appears.

**Touch & drag** = touch & hold an item for a moment and then, without lifting your finger, move your finger on the screen until you reach the target position (*i.e., reposition icons on Home screen*).

**Finger slide** = quick light touch & slide your finger across the screen, and then release (*i.e., turning pages, scrolling screen up/down*).

**Touch, hold & slide** = touch your finger, hold & slide your finger across the screen, and then release (*i.e., highlighting text, selecting text to paste*).

## Using the Stylus

A stylus is conveniently stored in the bottom right end of the device. When desired, you can use it instead of your finger for easier and sometimes more accurate screen navigation when tapping small options.

---

## Wi-Fi & Low Power Button

If you don't need a Wi-Fi connection for a while (*i.e., while reading books*), we recommend that you turn the Wi-Fi & Low Power button on the top of the device **OFF** to save battery power. Turn the button back on when you want Wi-Fi connection again.



❖ The  on the top of screens indicates the Wi-Fi is connected, otherwise no icon is displayed.

---

## Reset Device

In the event that the device does not respond to your touch, you can reboot/restart it by pressing and holding the power button for 10 seconds.

---

## Getting Started

### 1 Charge your Device

Plug the power adapter into an electrical wall outlet, and then connect to your device to fully charge the battery before use (approx. 4 hours).

❖ *The battery does not charge via the USB cable.*

While charging, the battery icon displays as: . When fully charged, the battery icon displays as: .

❖ *You can use the device while the battery is charging.*

### 2 Turn Device On

Press the power button approximately 3 seconds until you see the boot up message. Wait until the Home screen is displayed.



### 3 Register Account with Adobe

In order to download eBooks from the Kobo Bookstore, you must have a pre-registered account with Adobe. If you don't already have an Adobe account, we recommend you register now.

Go to <http://www.adobe.com> to register your account.

## 4 Set Date & Time

**IMPORTANT** - In order to connect with your Kobo online account, the **Date** and **Time** must be set correctly according to your location.

1. Tap the **Settings** application icon.
2. Tap **Date & time**.
3. Tap **Set date**, and then use the + or – to set the current date; tap **Set**.
4. Tap **Select time zone**, and then select the correct time zone for your location. (*Finger slide vertically to scroll the list.*)
5. Tap **Set time**, and then use the + or – to set the correct time according to your location; tap **Set**.
6. Select your desired time format:  
**12** = 12:00am-12:00pm (*default*)  
**24** = 12:00-24:00
7. Tap  to return to the Settings screen.

## 5 Wi-Fi Network Setup

Since many features require a Wi-Fi connection, we recommend you set up your Wi-Fi network now.

1. In the **Settings** screen, tap **Wireless controls**.
2. Make sure the Wi-Fi is on (.
3. Tap **Wi-Fi settings**. The device automatically scans and lists all local Wi-Fi networks found.  
*❖ If your Wi-Fi broadcast is set as hidden, tap **Add Network** to enter the network name and password, and then tap **Connect**.*
4. Tap the desired network to which you want to connect.
5. If the network is secure, tap in the password entry field to enter the **Network Password**.
6. Tap **Connect**.
7. After connection is made, tap  to return to the Home screen.

### Connecting to Public Wi-Fi Hotspot

If you are connecting via a public Wi-Fi hotspot, it may be necessary to immediately launch the browser and provide the hotspot login information prior to having an active internet connection.

1. Follow steps 1-6 above to select the hotspot Wi-Fi network.
2. Select the  **Web** application icon.
3. When prompted, enter the hotspot login information.



## Home Screen

- ❶ Notification icons  
(i.e., Email, SD card)
- ❷ Wi-Fi connection status  
Battery charge level status  
Alarm(s) are activated  
Current Time
- ❸ Widgets and Shortcuts can be added to the Home screen.
- ❹ Touch & hold in an empty spot to display the menu for adding application shortcuts, widgets, and so on.
- ❺ Tap to shop the Kobo Bookstore, download purchased Kobo ebooks, and access My Library to read your eBooks.
- ❻ Tap or finger slide up to open the Launcher screen to access all your applications.
- ❼ Return to previously displayed screen.
- ❽ Displays Home screen at any time, in any application.
- ❾ Displays application function options (i.e., add Shortcuts & Widgets, set Wallpaper).



- ❖ Tap on any application icon to open it.
- ❖ Touch, hold and slide an application icon to reposition it on the screen.
- ❖ Touch, hold and slide an application icon onto  to remove it from the Home screen. (The  changes to  when you touch & hold an icon.)
- ❖ To view extensions of the Home screen, finger slide the screen horizontally.

---

## Applications

Tap or finger slide up on  to open the Launcher screen to access all applications.

	<b>Alarm</b>	Use as alarm clock with scheduled alarms.
	<b>Calculator</b>	Use the calculator for basic math equations.
	<b>Calendar</b>	Display monthly calendar and schedule events.
	<b>Contacts</b>	Create a list of personal contacts, which can be linked with your email.
	<b>Email</b>	Send/Receive email using your existing email addresses.
	<b>Kobo™ eBooks</b>	Shop the Kobo Bookstore, download purchased eBooks, and access My Library.
	<b>Music</b>	Play and manage audio files ( <i>MP3, WAV, AAC</i> ).
	<b>Settings</b>	Multiple settings for personalizing and enhancing your device.
	<b>User Guide</b>	View complete Pandigital Novel User Guide.
	<b>Gallery</b>	View and manage photo files ( <i>JPG, JPEG, BMP, PNG, non-animated GIF</i> ). Play and manage video files ( <i>MPEG4</i> ).
	<b>Web</b>	Access the Internet and 'surf the web' whenever desired.

- ❖ *To move an icon to the Home screen, touch & hold on the icon, and then release it when it appears on the Home screen.*
- ❖ *Touch, hold, and then slide an icon to reposition it on the screen.*

---

## Application Function Menu

On the Home screen, tap  to display the Application Function Menu.



Application Function Menu



### Add

Tap **Add** on the Application Function Menu to add Shortcuts, Widgets, and Folders to the Home screen. You can also assign a different photo as the wallpaper.

- ❖ *The viewable portion of the Home screen allows only 12 icons. In order to add more items, finger slide the screen horizontally to expose available space, and then tap the **Add** button again.*

### Shortcuts

You can add quick access shortcuts on the Home screen.

- ❖ *If you select items that are shortcuts already on the Home screen, they will be duplicated, resulting in multiple icons for the same item.*

**Applications** Select desired application.

**Bookmark** Add a shortcut to a bookmarked web page.

**Contacts** Add a shortcut to a contact from the Contacts application.

**Music playlist** Select desired playlist.

## Widgets

You can add quick launch widgets on the Home screen.

**Analog clock** Add a round analog clock.

**Calendar** Add a calendar widget to quickly open the Calendar screen without launching the Calendar application.

**Music** Add a music widget to quickly begin playing music without launching the music application.

**Picture frame** Add a small clip of a personal photo on your Home screen. When the photo gallery opens, tap on desired photo. A cropping frame appears on the picture. Touch and drag the edges of the frame to re-adjust the size. Touch and drag the entire frame to reposition it. Tap **Save**.

**Search** Add a Google Search widget for performing quick Google searches without launching the Web application.

## Folders

You can add shortcuts to folders on the Home screen.

**New folder** Add a shortcut to a folder into which you can add applications as desired. To move applications on the Home screen into the folder, touch, hold & drag the icons directly on top of the folder icon. To add applications from the Launcher screen, first tap on the folder to open it, open the Launcher, and then touch & hold on an application icon. It is copied into the folder.

❖ *When you close the folder the first time, you are prompted to rename the folder as desired (i.e., Favorites). If you want to rename the folder later, open the folder and touch & hold on the folder name at the top. The Rename folder window appears.*

**All contacts** Add a shortcut to the complete contact list in the Contacts application.

**Starred contacts** Add a shortcut to the list of contacts you've marked as favorites.

## Wallpapers

Use this function to assign a different photo as your background image. Use the following instructions under "Wallpaper" to set your desired wallpaper.



## Wallpaper

Tap **Wallpaper** on the Application Function Menu to assign a different photo as your background image.

### Pictures

1. Select desired photo from your personal photos in the Photo Gallery.
2. A cropping frame appears on the picture. Touch and drag the edges of the frame to re-adjust the size. Touch and drag the entire frame to reposition it.
3. Tap **Save**.

### Wallpaper gallery

Select desired photo from preloaded photos, → tap **Set wallpaper**.



## Search

Tap **Search** on the Application Function Menu to perform a quick Google search using the Google widget.

1. Tap in the Google entry field, → enter the desired search text.
2. Tap  on the keypad or  on the Google widget.

The browser launches and displays your search results.



## Notifications

Tap **Notifications** on the Application Function Menu to list any pending notifications (*i.e., new email, calendar events, etc.*).

Tap on a notification to launch the corresponding application.



## Settings

Tap **Settings** on the Application Function Menu to quickly display the Settings screen.

See “Settings” on page 36 for complete instructions.

## Overview of Buying & Downloading eBooks to Device

Create an account on Kobo's website: [www.kobobooks.com](http://www.kobobooks.com)  
Create an Adobe account: [www.adobe.com](http://www.adobe.com)

Tap the  application icon on the Home screen.  
Wait for the Kobo Bookstore to be displayed.



Shop and purchase desired eBooks.  
(The first time, enter your Kobo account login information.)

Tap **Purchase History**; purchased eBooks are listed.

Tap **DOWNLOAD** on eBooks you want to download to your device.  
(The first time, enter your Adobe account login information.)

Tap **My Library**; downloaded eBooks are listed.

Tap on an eBook cover to open in the Reader.




## Kobo eBooks

### Bookstore


❖ For better navigation, the Kobo bookstore displays in a fixed landscape view.

Tap the  application icon to display the Kobo online bookstore.

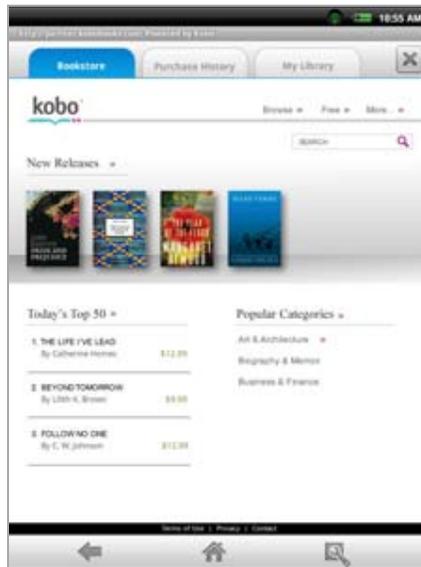

### Purchase eBooks

1. Tap on any eBook listing to display its descriptive information and synopsis.

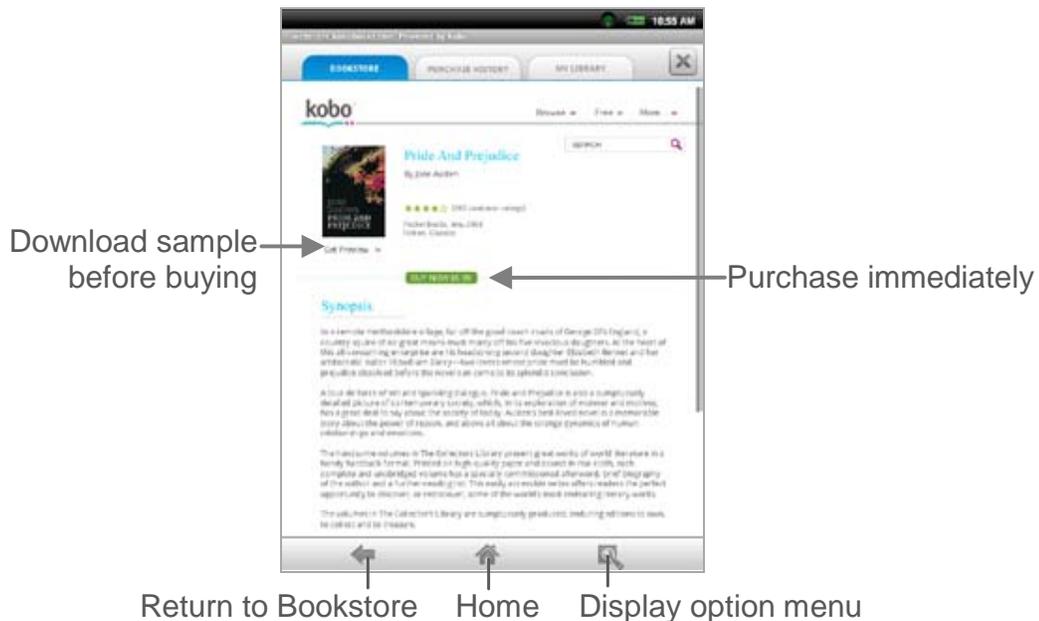

2. Tap **\$ BUY NOW** in the descriptive window, → tap **\$ BUY NOW** to confirm the purchase.
  - ❖ *If you do not have your credit card registered with your Kobo account, you are prompted for your credit card information. You can enter it now through the device or log into your account online through your computer.*
3. The eBook is added to your online Kobo account.
4. Tap **DOWNLOAD**.
5. The first time you download an eBook, you are prompted for your Adobe account login information.
  - ❖ *If you haven't registered an account with Adobe yet, tap **Adobe web** to do so now.*
6. Wait for the eBook to be downloaded to your device.
  - ❖ *If you don't want to download the eBook to your device now, you can use the **Purchase History** feature to to download eBooks when desired (pg. 21).*
7. Tap **My Library**, → tap on an eBook cover to open in the Reader.

### Get Free eBooks

Kobo offers many free eBooks that you can download to your device.

1. In the Bookstore screen, tap **Free** in the upper right corner.
2. Tap on any eBook listing to display its synopsis.
3. Tap **DOWNLOAD**.
4. The eBook is downloaded to your device.
5. Tap **My Library**, → tap on the eBook cover to open it in the Reader.

### Get Free Samples

Some, but not all, books offer a free sample that you can download and read before purchasing the eBook.

1. Tap on any eBook listing to display its descriptive information and synopsis.
2. Tap **GET PREVIEW**.
3. The sample eBook is downloaded to your device.
4. Tap **My Library**, → tap on the eBook cover to open it in the Reader.

### Options Menu

In the Bookstore screen, or when a “synopsis” screen is displayed, tap  to display the Options Menu.

**Sign Out** Sign out of your Kobo account. To sign back into your Kobo account later, the Sign In dialog box is presented when you tap the **Purchase History** tab or attempt to purchase or get free eBooks from the Kobo Bookstore.

**Refresh** Refresh the currently displayed screen.

**Bookstore** Re-display the Kobo Bookstore screen.

## Purchase History

You can download, or re-download, your purchased eBooks at any time using **Purchase History** tab.


❖ **IMPORTANT:** To *re-download eBooks*, you must use the same Adobe account that you used to originally download them.

1. Tap the  application icon, → tap the **Purchase History** tab.
2. You are presented with a Sign In dialog box. The first time, enter your account information, and then tap **Remember** if you want the login information saved for future logins (*recommended*).
3. Your purchased eBooks are listed.  
❖ *Finger slide vertically to view complete list of multiple books.*
4. Tap **DOWNLOAD** for the eBook you want to download to your device; wait for the eBook to be downloaded.
5. Tap the **My Library** tab, → tap on the eBook cover to open it in the Reader.

## MY LIBRARY

To access My Library, tap the  application icon, → tap the My Library tab.

- 1 Function Menu
- 2 To view pre-loaded Kobo eBooks or eBooks that you have copied into your device from your computer, tap **Date**, **Title** or **Author**, and then select **Local** from the drop down list.
- 3 **Row 1:** Quick launch area for your last read eBooks (*non scrollable*).
- 4 **Rows 2-4:** Downloaded eBooks from your Kobo online account (*rows are horizontally scrollable*).
- 5 Quick jump to other bookshelves. (Use **Bookshelves** function to create new bookshelves.)

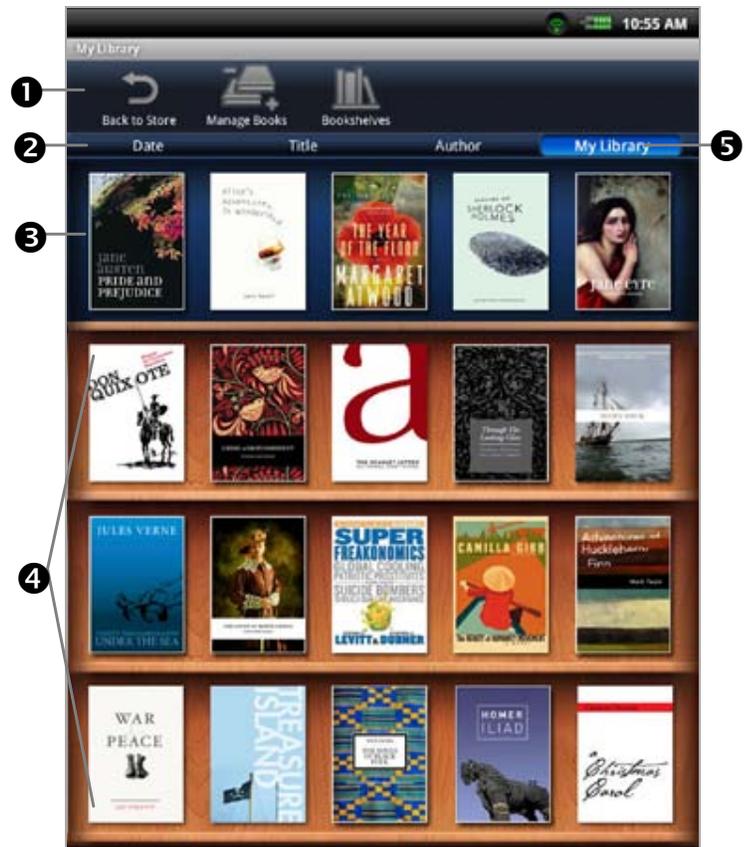

- ❖ Tap on any eBook icon to open and display it in the Reader.
- ❖ Finger slide to scroll rows 2-4 horizontally to view more eBooks.



### Manage Books

Use this feature to delete eBooks from My Library.

1. In the My Library screen, tap **Manage Books** to display a complete list of all eBooks you have added to My Library.

2. eBooks are sorted by date; if desired, tap **Title** or **Author** (first name) to re-sort accordingly.
3. Tap  next to the eBook you want to delete, → tap **Delete Selected**.



## Bookshelves

Use **Bookshelves** to create and manage personalized bookshelves into which you want to save your downloaded eBooks (*i.e.*, *Short Stories*, *Drama*, *etc.*).

❖ *The number of books within a bookshelf is displayed in the right column.*

### Add New Bookshelf

1. In the My Library screen, tap **Bookshelves**.
2. Tap **Add Shelf**.
3. Enter the desired bookshelf name (*i.e.*, *Short Stories*, *Drama*, *etc.*).
4. Tap  to create the new bookshelf. (Use Manage Bookshelf to add eBooks to the new bookshelf.)

### Manage Bookshelf

Use **Manage Bookshelf** to add to and remove eBooks from bookshelves.

1. In the My Library screen, tap **Bookshelves**.
2. Tap  next to the bookshelf you want to add or remove eBooks, → tap **Manage Bookshelf**.
3. eBooks are sorted by date; if desired, tap **Title** or **Author** to re-sort your eBooks accordingly.
4. Tap  next to the eBooks you want to add to the bookshelf, or tap  to delete from the bookshelf.
5. Tap **Save** to update your bookshelf.

### Display Shelf

1. In the My Library screen, tap **Bookshelves**.
2. Tap  next to the bookshelf you want to display, → tap **Display Shelf**.
3. The screen's layout resembles the My Library screen, with your last read eBooks in the top row and the eBooks you added in rows 2-4.
4. eBooks are sorted by date; if desired, tap **Title** or **Author** to re-sort them accordingly.

## Quick Open another Bookshelf

Tap the bookshelf name in the upper right of any bookshelf screen to display the list of all bookshelves, → tap the desired bookshelf to open.

## Delete Shelf

1. In the My Library screen, tap **Bookshelves**.
  2. Tap  next to the bookshelf you want to delete.
  3. Tap **Delete**.
- ❖ *Deleting a bookshelf does not delete the books from the device. They are still in My Library.*

---

## READER

The **Reader** application is used to display your downloaded eBooks.

❖ *eBook supported formats: EPUB and PDF*

Reader Function Menu →  
Tap on the  
**top of the screen**  
to display the menu



Tap  in upper right corner to bookmark a page (when Reader Function Menu is not displayed)

 
← Finger slide right-to-left for next page.

- ❖ To **highlight text**, touch, hold & slide across the desired text, and then select **Highlight** from the Reader Options window.
- ❖ To add a **Note** or access the **Dictionary**, touch & hold on a word to display the Reader Options window, and then select **Dictionary** or **Add Notes**.
- ❖ While viewing eBooks, you can turn the device 90 degrees to the right to rotate the orientation of the screen from vertical to horizontal.

❖ If unit goes into sleep mode (power saving feature), lightly press & release the power button quickly to turn sleep mode off.

## Reader Function Menu

In the **Reader**, tap on the top of the screen to display the Reader Function Menu.

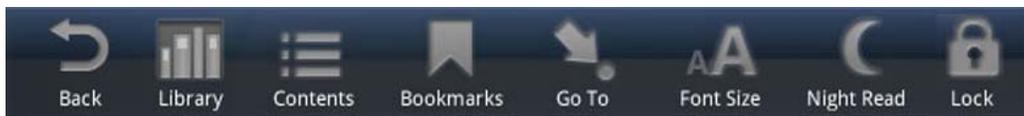

### Library

To access My Library bookshelf while viewing an eBook page, display the Reader Function Menu, → tap **Library**.



### Table of Contents

Display the Table of Contents of the currently open eBook, allowing you to quickly display a desired chapter/page.

1. While viewing an eBook page, display the Reader Function Menu, → tap **Contents**.
2. The Table of Contents is displayed; tap on a chapter/page to display it.



### Bookmarks

When desired, you can bookmark, add notes to, and highlight text on pages, making it quick and easy to return to those pages when desired.

#### Bookmarks

1. To **bookmark** a page, tap  in the upper right corner of the page. The symbol changes to , indicating the page has been bookmarked.
2. To display the list of all bookmarks you have created in the eBook you are currently viewing, display the Reader Function Menu, → tap **Bookmarks**.
3. To **return to a bookmarked page**, tap  next to desired bookmark, → tap **View**.

4. To **delete** bookmarks, tap on  while displaying a bookmarked page, or while in the Bookmarks screen, tap  next to the desired bookmark, → tap **Delete Selected**.

## Notes

As you read your eBook, you can quickly and easily make notes on pages for later reference.

### *Add Note*

1. On a page, touch & hold on any word to open the Reader options window.
2. Tap **Add Notes**. The **Notes** dialog window opens.
3. Tap into the note entry area, enter the desired text, → tap **Add**.
4. The word related to the note is highlighted in blue.

### *View Notes*

1. To display a list of all notes you have added to an eBook file, display the Reader Function Menu, → tap **Bookmarks**.
2. Tap **Notes**.
3. To view a note, tap on it.
4. To jump to the page associated with a note, tap  next to the note, → tap **View**.

### *Delete Notes*

1. Display the Reader Function Menu, → tap **Bookmarks**.
2. Tap **Notes**.
3. Tap  next to the notes you want to delete, → tap **Delete Selected**.

## Highlights

As you read your eBook, you may want to highlight points of interest for later reference.

### *Add Highlights*

1. On a page, touch, hold & slide your finger across the text that you want to highlight.
2. Tap **Highlight** in the Reader options window.
3. The selected text is **highlighted yellow**.

### *View Highlights*

1. To display a list of all highlights you have added in an eBook, display the Reader Function Menu, → tap **Bookmarks**.

2. Tap **Highlights**.
3. Tap on the highlight you want to view.
4. To jump to the page associated with a highlight, tap  next to the highlight, → tap **View**.

### *Hide all Highlights*

1. To turn all highlights off in the currently open eBook, display the Reader Function Menu, → tap **Bookmarks**.
2. Tap **Highlights**.
3. Tap **Highlights Off**.
4. To show highlights again, tap Highlights On.

### *Delete Highlights*

1. Display the Reader Function Menu, → tap **Bookmarks**.
2. Tap **Highlights**.
3. Tap  next to the highlights you want to delete, → tap **Delete Selected**.



## **Go To**

Use the **Go To** function for quick access to the Table of Contents, a particular page, or string of text (*word or phrase*) within the eBook you are viewing.

### **Display Table of Contents**

1. While viewing an eBook page, display the Reader Function Menu, → tap **Go To**.
2. Tap **Contents** to display the **Table of Contents**.
3. Tap on a chapter title to jump to it.

### **Jump to Page**

1. While viewing an eBook page, display the Reader Function Menu, → tap **Go To**.
2. Tap **Page**.
3. Enter the page number you want to view, → tap **Go**.

### **Search for Specific Text**

1. While viewing an eBook page, display the Reader Function Menu, → tap **Go To**.

2. Tap **Word**.
3. Enter the desired text, → tap **Go**. The first instance of the found text is highlighted.
4. Tap   to scroll through all found instances of the text throughout the eBook.
5. Tap **Cancel Find** (*in top left corner*) to return to the original page you were viewing.  
OR  
You can touch any of the highlighted text to automatically cancel the find mode, and then that page becomes the current page.

## Last Read

- ❖ *A page must be displayed at least 15 seconds to be saved as “last read”.*
- ❖ *Device only saves 50 last read items, therefore the 51<sup>st</sup> “last read” item is saved and the oldest saved item is eliminated (last in, first out).*

After performing searches and displaying other pages, quickly return to your last read page.

1. Display the Reader Function Menu.
2. Tap **Go To**, → tap **Last Read**.



## Font Size

For optimal viewing, you can adjust the size of the onscreen text by changing the **Font Size**.

1. While viewing an eBook page, display the Reader Function Menu, → tap **Font Size** to change the text size.
2. Tap the desired font size from the drop-down list.



## Night Read

You can switch the background to black with white text, allowing you to view the eBook without emitting as much light as the normal view mode.

**Normal** view mode is white background with black text.

**Night Read** view mode is black background with white text.

1. While viewing an eBook page, display the Reader Function Menu, → tap **Night Read**.

2. Night Read view mode stays in effect until you switch back to normal view mode by tapping **Day Read**.



## Screen Orientation - Lock

For optimal viewing while reading, the orientation of the screen automatically rotates from vertical to horizontal depending on how you hold the device.

When desired, you can lock the screen in the desired orientation to prevent the auto-rotation (*in Reader only*).

While viewing an eBook page in the desired orientation, display the Reader Function Menu, → tap **Lock**.

To unlock, display the Reader Function Menu, → tap **Unlock**.

## Play Music in Background while Reading

If desired, you can play music in the background as you read eBooks.

Open the desired eBook in the **Reader**.

Tap  in the upper left corner of the screen to display the music navigation bar.

Tap  to begin playing the music.

Use the controls to pause/play and play previous/next song. Use the volume buttons on the top of the device to adjust the volume.

Tap  to close the navigation bar and leave music playing.

Tap  to re-display the music navigation bar.

Tap  to stop the music and close the navigation bar.



---


## WEB

Use the Web feature to access the Internet and ‘surf the web’ and visit your favorite websites.

- ❖ *The Web feature requires a connection to a Wi-Fi network. If you have not set up your Wi-Fi network, do so now using the instructions on page 36.*
- ❖ *While viewing the browser, you can turn the device to rotate the orientation of the screen from vertical to horizontal.*

## Enter a Website URL Address

1. Tap the  **Web** application icon to launch the internet browser.

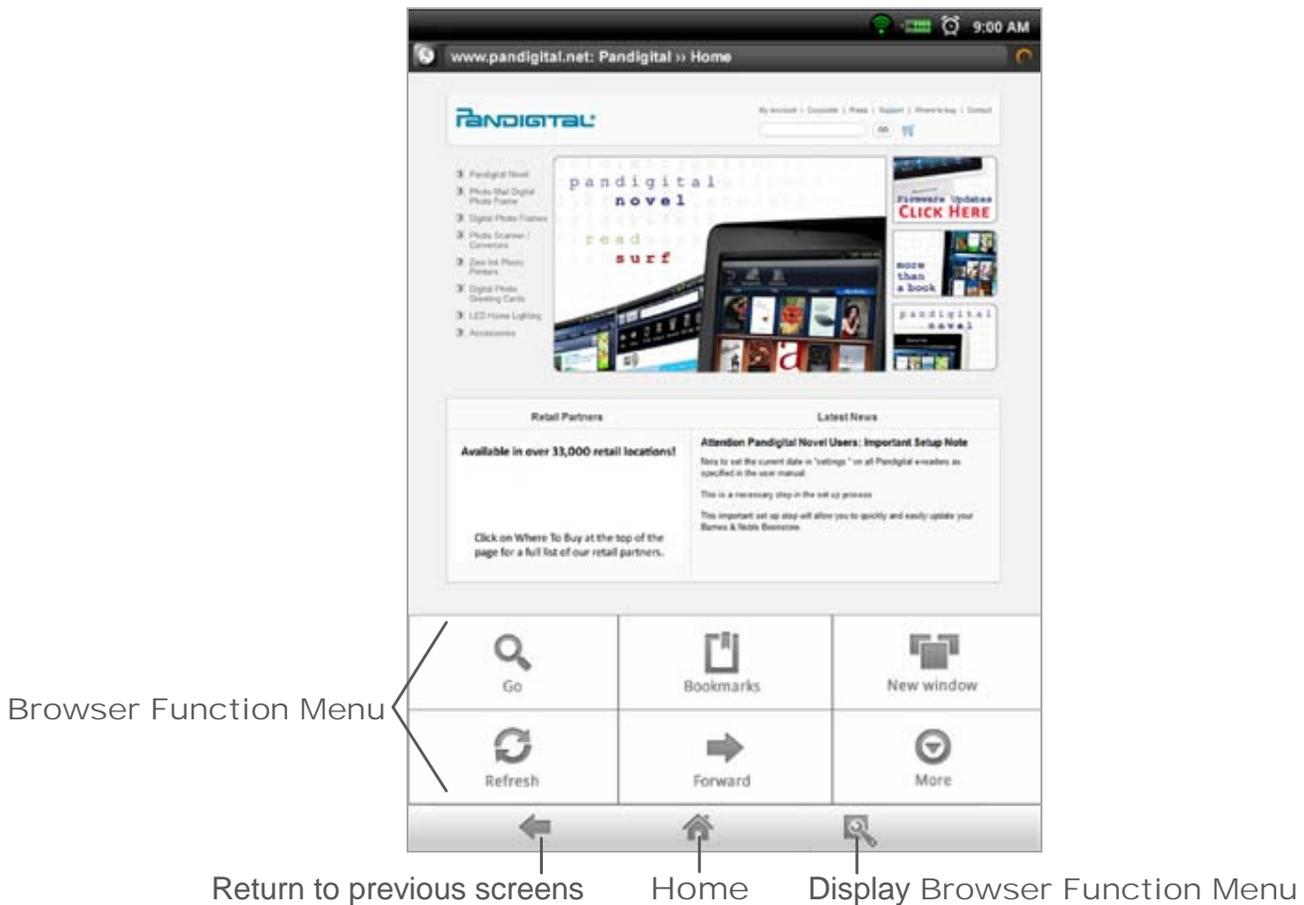

2. To go to a new website, tap **Go** in the Browser function Menu, → tap in the web address entry field at the top of the screen.
3. Enter the desired website address, → tap **Go**.

## Zoom Web Pages

Finger slide anywhere on the screen to display the zoom icons.



## Browser Function Menu

Tap  to display the Browser Function Menu.

Functions	
 Go	Enter a different website URL address.
 Bookmarks	Bookmark currently displayed web page, access list of all bookmarks, and manage bookmarks.
 Windows	Shows open browser windows. You can have up to 8 browser windows open at a time.
 Stop	<i>(Displays only when web page is in process of loading into browser)</i> Refreshes the screen by re-loading the current web page.
 Refresh	<i>(Displays only after web page is completely loaded in browser)</i> Refreshes the screen by re-loading the current web page.
 Forward	Returns to web page that was displayed before tapping  .
 More	Display <b>Menu page 2</b> .

Menu page 2

Functions	
Find on page	Search for string of text on the current web page.
Select text	Select text on the current web page and paste into web or other application entry fields.
Page info	View information including the web address of currently viewed page.
Share page	Send the URL address of the webpage you are viewing to others via email.
Downloads	Cancel or clear browser download history.
Settings	Set multiple browser settings as desired.



## Go To Website

Use **Go** to enter and go to a different website URL address.

1. In an open browser window, tap , → tap **Go**.
2. Tap into the URL address field to enter the desired website address.
3. Tap **Go**.



## Browser Bookmarks

Bookmarked web pages can be quickly launched to re-visit at any time.

### Bookmark a Web Page

1. In an open browser window, tap , → tap **Bookmarks**.
2. Tap **Add Bookmark**.
3. If you want to rename the bookmark, tap in the **Name** field and enter the desired name.
4. Tap **OK**.

### Go to Bookmarked Web Page

1. In an open browser window, tap , → tap **Bookmarks**.
2. In the Bookmarks window, tap on the desired web page.
3. The browser displays the selected web page.

### Manage Bookmarks

1. In an open browser window, tap , → tap **Bookmarks**.
2. In the Bookmarks window, touch & hold on a bookmark to display a Bookmark options menu.

#### *Open Bookmarked page*

1. To open web page in same browser window, tap **Open**.
2. To open web page in new browser window, tap **Open in new window**.

#### *Edit Bookmark*

Tap **Edit bookmark**, → make desired edits to the Name and Location address, → tap **OK**.

### Add Shortcut to Home Screen

Tap **Add shortcut to Home** to quickly add a shortcut to the bookmarked web page on the Home screen.

### Share Link

Tap **Share link** to email a bookmarked web page's URL address to someone. The email Compose window immediately opens with the URL already listed in the body of the message.

### Copy & Paste URL

Tap **Copy link URL** to copy the bookmarked web page's URL so you can paste it into an application's entry field. To paste, touch & hold in the entry field to display a pop-up menu, → tap Paste.

### Delete Bookmark

1. Tap **Delete bookmark**.
2. Tap **OK** to confirm deletion.



## Windows

Up to the last 8 websites you have visited are cached and shown in the Windows screen allowing you to quickly return to them.

### Open New Window

1. In an open browser window, tap , → tap **New Window**.
2. If only one window was open, the new window opens immediately. If you already have multiple windows open, tap  to open a new window.
3. Tap , → tap **Go** and enter the new website address.
4. Tap **Go**.

### Switch Windows

1. In an open browser window, tap , → tap **New Window**.
2. Tap on the window that you want to view.  
❖ *If more than 4 windows are open, finger slide vertically to view all windows.*

### Close Windows

1. In an open browser window, tap , → tap **New Window**.
2. Tap  on each window you want to close.

- ❖ *When you're in the Browser application, at least one window must be open, so if you close all windows, a new window automatically opens to your designated home web page.*



## Refresh

After a web page has completely loaded, you can tap **Refresh** to re-load it.

If you want to stop the reload, tap , → tap .

## Find on Page

You can search for a string of text within the currently displayed web page.

1. In an open browser window, tap , → tap  to display Menu page 2.
2. Tap **Find on page**.
3. Enter the desired string of text (*word, phrase, etc.*) in the entry field. All matching text is highlighted as you enter the text.
4. If you want to scroll through multiple matches, tap  .
5. Tap  to close the entry box and resume normal viewing.

## Select Text

You can select the text of a webpage address on the web page you're viewing, and then you can paste the text into web or other application entry fields.

1. On the browser window, tap , → tap  to display Menu page 2.
2. Tap **Select Text**.
3. Touch, hold & slide your finger across the text you want to copy. The text is copied to the clipboard.
4. Open an application with entry fields (*i.e., Email*), touch & hold in the desired entry field, → tap **Paste** from the pop-up Edit text window.
5. Tap **Go** on keypad.

## Share page

Use Share to send the URL address of the webpage you are viewing to others via email.

- ❖ *If you have not yet set up your email account, you are prompted to do so before using this feature.*

1. On the browser window, tap , → tap  to display Menu page 2.
2. Tap **Share page**.
3. Follow the prompts to enter the recipient's email address and your message.

4. Optional, add other email addresses as cc/bcc, or add attachment if desired.
5. Tap **Send**.

## Downloads

As you download files from websites, the download history is recorded in the device. You can cancel downloads or clear the history through this feature.

1. On the browser window, tap , → tap  to display Menu page 2.
2. Tap **Downloads**.
3. Tap **Clear download list** if you want to clear all download history.
4. Tap **Cancel all downloads** if you want to stop all pending downloads from downloading.



## Browser Settings

You can set browser settings to enhance your Internet browsing.

1. On the browser window, tap , → tap  to display Menu page 2.
2. Tap **Settings**.

❖ *Finger slide vertically to view all browser setting options.*

### Page content settings

Settings pertaining to viewing web pages.

### Privacy settings

Settings pertaining to your privacy level when viewing web pages.

### Security settings

Settings pertaining to the security level when logging into secure web pages.

### Advanced Settings

Set the following advanced options:

- Enable Gears (*set for applications that extend browser functionality*)
- Gears Settings (*settings for applications that extend browser functionality*)
- Reset to default (*clears all browser data and resets to default settings*)



## SETTINGS

Use the Settings feature to set various functions that affect the normal usage of your device. You can also set your personal preferences for some functions.

Tap the  **Settings** application icon, or the  on the Home screen, to access all setting functions.

### Wireless controls

In order to connect to the Internet, you must have a Wi-Fi network set up on your device.

#### Wi-Fi On/Off

Tap **Wi-Fi** to turn on so you can connect to Wi-Fi networks.

❖ *Turning Wi-Fi off here overrides the physical button if its in the on position.*

#### Wi-Fi settings

1. Tap **Wi-Fi settings** to select and connect to a local wireless network. The device automatically scans and lists local Wi-Fi Networks found. A  indicates secure networks that require login passwords to connect.
2. Tap the desired network to which you want to connect.
  - ❖ *If your Wi-Fi broadcast is set as hidden, it won't be found by the auto scan. Tap **Add Network** and then enter the network name and key, → tap **Save**.*
3. If the network is secure, tap in the password entry field to enter the **Network Password**.
4. Tap **Connect**.
5. Tap  to return to previous screens.
  - ❖ *The  on the top of screens indicates the Wi-Fi is connected, otherwise no icon is displayed.*
  - ❖ *(Advanced): After saving the Wi-Fi network, you can change your network settings by selecting **Manual Setup**, and then follow the prompts.*

### Connecting to Public Wi-Fi Hotspot

If you are connecting via a public Wi-Fi hotspot, it may be necessary to immediately launch the browser and provide the hotspot login information prior to having an active internet connection.

1. Follow step 1-4 above to select the hotspot Wi-Fi network.
2. Tap the  **Web** application icon.
3. Enter the hotspot login information.

### Wi-Fi Button on Device

You can prevent the device from connecting to any Wi-Fi network by turning the Wi-Fi & Low Power button on the top of the unit to the Off position.

- ❖ *For battery saving purposes, we recommend turning the Wi-Fi off when you're reading or performing functions that don't require a connection to the internet.*



### 'Forget' remembered Wi-Fi Network

When you connect to a Wi-Fi network, the device remembers the settings for future connections. If you have previously connected to networks that you no longer want 'remembered', tap on a network and select **Forget**.

### Airplane mode

When selected, all wireless connections are disabled, allowing you to safely use your `pandigital novel` while flying without interference to the airplane's operation.

## Sound & display

**Silent mode** When selected, all sounds except media & alarms are silenced (*i.e., keyboard click, end of row ding, warning ding, etc.*).

**Media volume** To adjust the music and video volume, tap & slide  and then tap **OK**.

**Audible selection** When selected, a sound is played when making screen selections.

**SD card notifications** When selected, a tone sounds when a SD card is inserted or removed from the device.

**Orientation** When selected, the orientation of the screen switches between Portrait (*vertical*) and Landscape (*horizontal*) automatically when you rotate the device.

**Animation** When selected, animations are shown when opening and closing windows.

**Brightness** Tap & slide  to adjust the screen brightness as desired, → tap **OK**.

**Screen timeout** Adjust the delay before the screen automatically turns off (*default = 10 minutes*).

## Applications

**Unknown sources** When selected, you are permitted to install other Android applications that you obtain from web sites, email, or other locations.

**Quick launch** This feature is not applicable to this device at this time.

**Manage applications** Manage and remove installed applications.

**WARNING!** Making changes to applications can result in errors and failed launches. If you aren't sure of what each setting is/does, we recommend not making changes.

**Development** Set options for application development.

**USB debugging** When selected the device is in debug mode when USB is connected.

**Stay awake** When selected the screen never goes into sleep mode while charging.

**Allow mock locations** *This feature is not applicable to this device at this time.*

## SD card & eReader storage

Use this feature to view available storage and to unmount SD cards.

**Unmount SD card** Tap to safely remove the SD card.

**Format SD card** Tap to format and erase the contents of the SD card. Tap

**Format SD** card to proceed with the format, or tap  to cancel and return to previous screen.

**Factory data reset** Tap to reset the eReader to its initial factory state, erasing all data and downloaded applications. Tap **Reset eReader** to proceed with reset, or tap  to cancel and return to previous screen.

**WARNING!** All Kobo account information will be deleted.  
All personalized data (*email accounts, contacts, etc.*) will be deleted.  
All eBooks **will be deleted**. We recommend that you **back up** all media to your computer **before** resetting the defaults.

**Note:** If you do not back up your Kobo eBooks, you can simply re-download them after you reset the device.

## Date & time

1. Tap **Set date**, and then use the + or – to set the current date; tap **Set**.
2. Tap **Select time zone**, and then select the correct time zone for your location. (*Finger slide vertically to scroll the list.*)
3. Tap **Set time**, and then use the + or – to set the correct time according to your location; tap **Set**.
4. Select your desired time format: **12** = 12:00am-12:00pm (*default*)  
**24** = 12:00-24:00
5. Tap  to return to the Settings screen.

## Locale & text

**Select locale** Select the language and region according to your location.

**Android keyboard** Select to use the Android keyboard for entering application data. If not selected, no keypad is presented for entering data.

**Android keyboard settings** Select multiple settings to customize your keyboard behavior.

**Device keyboard** Not applicable for this device.

**User dictionary** You can add words to a personal dictionary, words that may not be included in the default dictionary.

## About eReader

**Status** Check the battery and Wi-Fi status.

**Legal Information** View the Open source licenses.

**Technical information** The Model number, Firmware version, Kernel version, and Build number is information that may be asked for if you contact Customer Support.



---


## MUSIC

These audio file formats are supported: MP3, WAV and AAC

To add audio files to your Music Library, copy them from your computer into the **Music** folder on your device (*via USB connection, pg. 54*).

## Play Music

1. Tap the  **Music** application icon to display the Music screen.

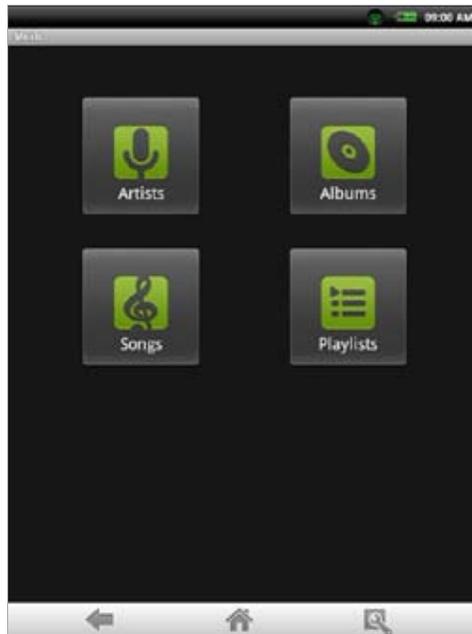

2. Select the desired sort format:
  - Artists** Lists all artists. Tap individual artist, → tap on an album to display songs on album, → tap on song to play it.
  - Albums** Lists all albums. Tap individual album to display songs from that album, → tap on a song to play it.
  - Songs** Lists all songs. Simply tap on a song to play it.
  - Playlists** Lists all songs that you've added to the Playlist (pg. 42).
3. To search for a specific song title, tap , → tap **Search**, → tap into search entry field, → enter text string, → tap . Titles with matching text string are listed.
4. To leave the music playing and return to previous screens, tap , or tap  to return to the Home screen.
5. To stop the music, tap the **Pause**  icon.

## Music Play Screen

When you select a song to play, the Music Play screen is displayed:



-  **List view** View currently selected song list. Tap on any song to play it immediately.
-  **Shuffle** Play songs in random order. When off, songs play in the order listed in the Music Library.
-  **Repeat** Play songs continuously until you stop them. When off, songs play through once and then stop.
- Use the audio control panel to pause/play, and play previous/next song.
- Use the volume buttons on the top of the device to adjust the volume.

## Music Control Options

When the Music Play screen is displayed, tap  to display music control options.

-  **Library** Return to the main Music screen.
-  **Party Shuffle** Play songs from your SD card in random order, until you turn **Party Shuffle** off.
-  **Add to playlist** Add the currently playing song to a playlist.
-  **Delete** Permanently delete the currently playing song from the media source (*internal memory or SD card*).

## Delete Music Files

You can delete music files using the following methods.

In a Music Library screen, touch & hold on an item, → tap **Delete**.

When the Music Play screen is displayed, tap  to display music control options, tap  **Delete**.

## Playlist

You can create individual playlists of selected audio files from your Music Library, allowing you to play a selected list at any time (*i.e., your favorites, specific genre, specific artist, etc.*).

### Create New Playlist

1. When viewing songs in the library, touch & hold on the song you want to add to a playlist.
2. Tap **Add to Playlist**, → tap **New**.
3. Tap in the Playlist name entry field → enter desired name, → tap **Save**.  
The new playlist is added to the Playlist library.

You can also add the song that is playing in the Playback screen as the first song in a playlist by tapping  and then **Add to playlist**.

### Add Songs to Playlist

1. When viewing a list of songs in the library, touch & hold on a listing you want to add to a playlist.
2. Tap **Add to Playlist**.
3. Tap the name of the desired playlist.  
The song is added to the playlist.

You can also add the song that is playing in the Playback screen as the first song in a playlist by tapping  and then **Add to playlist**.

### Play songs in Playlist

1. In the Music Library screen, tap **Playlists**, → tap desired playlist.
2. Tap on desired song title to play.

### Remove songs from Playlist

1. In a Playlist screen, touch & hold on a song you want to remove.
2. Tap **Delete**, → tap **OK** to confirm deletion.

- ❖ *Deleting songs from a playlist also deletes them from the main Music Library.*

### Rename or Delete a Playlist

1. Open the Playlist library.
  2. Touch & hold on the playlist name, → tap **Rename** or **Delete**.
  3. If renaming, tap in the Playlist name entry field → enter desired name change, → tap **Save**.
- ❖ *You can't delete or rename the Recently Added playlist.*
  - ❖ *Deleting playlists does not delete songs from the main Music Library.*



---

## GALLERY

The Gallery is used for viewing both photos and videos.

To add photo and video files to your device, connect to your computer (*via USB connection, pg. 54*) and copy the files into the appropriate folders, Photos or **Videos**.

- ❖ *Photo file formats supported: JPEG, BMP, PNG, and non-animated GIF*
- ❖ *Video file formats: H.264 AVC and Mp4 SP*

## PHOTOS

- ❖ *While viewing your photos, you can turn the device to rotate the orientation of the screen from vertical to horizontal.*
  - ❖ *Scroll through multiple pages of photos in a photo collection by finger sliding **vertically** from top or bottom of screen.*
1. Tap the  **Gallery** icon.
  2. Tap on the photo collection you want to open. The collections are titled by the folder name containing the photo files, so the internal memory collection is titled **Photos**. If you have a SD card inserted, your SD card collection's title is based on what you have named the folder containing your photos (*i.e., images, At Zoo 2010, Vacation, etc.*).
    - ❖ *If you title your SD folder "Photos", the first Photo collection shown in the Gallery is the internal memory, the second Photo collection is your SD card.*
    - ❖ *If you have multiple folders on your SD card containing photos, each folder is shown as a separate collection.*

3. To view a single photo, tap on the desired photo.
  4. To view a slideshow of all photos, tap  , → tap **Slideshow**.
- ❖ *With a photo displayed, tap on the screen to display zoom in/out icons.*

### Photo Function Menu

When a photo is displayed individually or during a slideshow, tap  to display the Photo Function Menu.

 <b>Slideshow</b>	Display photos in slideshow
 <b>Share</b>	Email the displayed photo
 <b>Rotate</b>	Rotate photo 90 degrees clockwise; tap multiple times until desired orientation is achieved. Rotated version is saved.
 <b>Delete</b>	Delete the displayed photo
 <b>Crop</b>	Crop the photo as desired
 <b>More</b>	Display additional options
<b>Set as</b>	Set the displayed photo as a Contact icon or Wallpaper
<b>Details</b>	View photo file name, size, and resolution
<b>Settings</b>	Access the photo and slideshow settings ( <i>i.e., transition speed, transition animation, etc.</i> )

❖ *In a Photo Collection screen, touch & hold on a photo to display a similar function menu.*

### Delete Photos

1. Tap the  **Gallery** icon.
2. Select desired photo collection.
3. Touch & hold on the photo you want to delete, → tap **Delete**.
4. Tap **OK** to confirm the deletion.

## VIDEOS

- ❖ *Videos default to fixed landscape (horizontal) viewing mode. The orientation does not change if you turn the device.*
- ❖ *Scroll through multiple pages of videos in a video collection by finger sliding **vertically** from top or bottom of screen.*

1. Tap the  **Gallery** icon.
2. Tap on the video collection you want to open. The collections are titled by the folder name containing the video files, so the internal memory collection is titled **Videos**. Your SD card collection's title is based on what you have named the folder containing your videos (*i.e., movies, Kids at Grams, Vacation, etc.*).
  - ❖ *If you title your SD folder "Videos", the first Videos collection shown in the Gallery is the internal memory, the second Videos collection is your SD card.*
  - ❖ *If you have multiple folders on your SD card containing videos, each folder is shown as a separate collection.*
3. Tap on a video to play it.
4. Tap on the screen to display the video controls.



 Pause,  Play,  skip back or  skip forward in the video.

- ❖ *Use the volume buttons on the top of the device to adjust the volume.*

5. Tap  to return to the Videos screen.

### Delete Videos

1. Tap the  **Gallery** icon.
2. Select desired video collection.
3. Touch & hold on the video you want to delete, → tap **Delete**.
4. Tap **OK** to confirm the deletion.



---

## EMAIL

- ❖ *POP3, SMTP and IMAP accounts are supported.*
- ❖ *While viewing your email, you can turn the device to rotate the orientation of the screen from vertical to horizontal.*

### Add Email Accounts

You can enter one or more personal email addresses that you would like to access through your `pandigital novel`.

1. Tap the **Email** application icon.
  2. On the Your Accounts screen, tap **Next**.
  3. On the Set up email screen, tap in the **Email** address entry field, → enter your email address.
  4. Tap in the **Password** entry field, → enter your email password, → tap **Done** on the keypad.
  5. **Manual Setup** (*optional*): The server settings are automatically populated based on your email account provider (*i.e., gmail.com, etc.*). However, if you need to change the server settings tap **Manual Setup** and make necessary changes.
  6. Tap **Next**.
  7. *Optional*: Enter a name for the account.
  8. Enter name for outgoing messages, → tap **Done**.
- ❖ *After setup, if you are unable to connect to a free email account, check with your email provider to make sure their servers support free accounts on Post Office Protocol (POP) or Simple Mail Transfer Protocol (SMTP).*

### Set up Yahoo! Plus Account

- ❖ *Your `pandigital novel` does not support free Yahoo email accounts.*

Yahoo! Plus accounts must use the following data when setting up your email account.

- Incoming Mail Server Settings
- POP server: plus.pop.mail.yahoo.com
- Use **SSL**
- Port: **995**
- Outgoing Mail Server Settings

- SMTP server: plus.smtp.mail.yahoo.com
- Use **SSL**
- Port: **465**
- Use Authentication
- Account Name/Login Name: Your Yahoo! Mail ID (your email address without the “@yahoo.com”, for example “testing80”)
- Email Address: Your Yahoo! Mail address (for example, testing80@yahoo.com)
- Password: Your Yahoo! Mail password

### Set up Juno Platinum or Turbo Account

❖ *Your pandigital novel does not support free Juno email accounts.*

Platinum or Turbo Juno accounts must use the following data when setting up your email account.

- Incoming Mail Server Settings
- POP server: pop.juno.comnovel
- Outgoing Mail Server Settings
- SMTP server: authsmtp.juno.com

### Email Inbox

1. Tap the  **Email** application icon.
2. If you set up only one email account, it opens immediately. If you set up multiple accounts, they are listed in the Accounts screen.
3. Tap on the desired email account, → tap **Inbox**.

### Open Email Message

1. On the Inbox screen, tap on an email to open it.
2. For attachments, tap **Open** to open the attachment, or tap **Save** to save the attachment to the device.
  - ❖ *Attachments must be of a supported format in order to be opened in your pandigital novel (i.e., epub, pdf, jpg, mp3, mp4, etc.).*
3. To reply, tap **Reply** or **Reply all**.
  - a. Tap in the **Compose Mail** entry field to enter your reply message.
  - b. Tap **Send** to send immediately, **Save as draft** to save without sending, or **Discard** to discard without saving or sending.
4. To delete the email immediately, tap **Delete**.

## Compose New Email Message

1. On the Inbox screen, → tap , → tap **Compose**.
2. Tap in the **To** entry field and then enter the recipient's email address.
3. Optionally, if you want to add Cc or Bcc recipients, → tap , → tap **Add Cc/Bcc**, and then enter the recipient's email address.
4. Tap in the **Subject** entry field to enter your desired subject title.
5. Tap in the **Compose Mail** area to enter your personal message.
6. If desired, tap , → tap **Add Attachment** to attach a file.
7. Tap **Send** when ready to send your email.
8. You can save your message without sending it by tapping **Save as Draft**.
9. If you do not want to send or save the message, tap **Discard**.

## Edit Email Account

1. Tap the  **Email** application icon.
2. On the Inbox screen, → tap , → tap **Account settings**.
3. Set your desired preferences to customize your email account.
4. Tap  to return to the Inbox screen.
5. Tap  or  to return to the Home screen.

## Delete Email Accounts

❖ *If you have multiple accounts, and you delete the account designated as the default account, the next email listed is automatically set as the default.*

1. Tap the  **Email** application icon.
2. On the Inbox screen, → tap , → tap **Accounts**.
3. Touch & hold on the account you want to delete.
4. In the pop-up Account options window, tap **Remove account**.
5. Tap **OK** to confirm the deletion.

## Set Default Email Account

You must always have one account designated as the default account, so if you have multiple email accounts, you can select any one as the default.

1. Tap the  **Email** application icon.
2. On the Inbox screen, → tap , → tap **Account Settings**.

3. Tap **Default Account** to select it.

If you delete the account that was designated as the default account, the next email listed is automatically designated as the default.



## ALARM

You can use your `pandigital novel` as an alarm clock by setting multiple alarms.

❖ *This clock icon  displayed at the top of screens indicates that one or more alarms have been set and are active.*

### Add Alarm

1. Tap the  **Alarm Clock** application icon.
2. Tap , → tap **Add Alarm**.
3. Tap **Time**, → tap + and - and **AM/PM** to set the desired time, → tap **Set**.
4. Tap **Ringtone** to select the desired alarm alert sound, → tap **OK**.
5. Tap **Repeat** if you want the alarm to repeat on specific days, → tap  on each desired day.  
❖ *If you don't select a repeat, the alarm is automatically deleted after it is activated.*
6. Tap **Label** to add a title for your alarm, → tap into the label entry field, → enter the desired title (*i.e., lunch with friend, meeting, etc.*), → tap **OK**.
7. Tap  to return to previous screens.

### Shut Off Alarm Alert

When a scheduled alarm is activated, a pop-up window with the alarm title appears.

Tap **Snooze** if you want to be reminded again in 10 minutes.

Tap **Dismiss** to cancel the alert.

### De-Activate Alarms

On alarms that you have set to repeat, you may want to temporarily de-activate alarms rather than delete them.

1. In the Alarm screen, tap  on the alarm(s) you want to de-activate.
2. Tap  to re-activate.

## Edit Alarm

1. Tap the  **Alarm Clock** application icon.
2. Tap on the alarm you want to edit, → make desired edits.
3. Tap  to return to previous screens.

## Delete Alarm


1. Tap the  **Alarm Clock** application icon.
2. Tap on the alarm you want to delete.
3. Tap , → tap **Delete Alarm**.



## CALENDAR

Tap the  **Calendar** application icon.

The calendar screen is displayed in full month view. To change to a different view, tap  and select desired view (*Day, Week*).

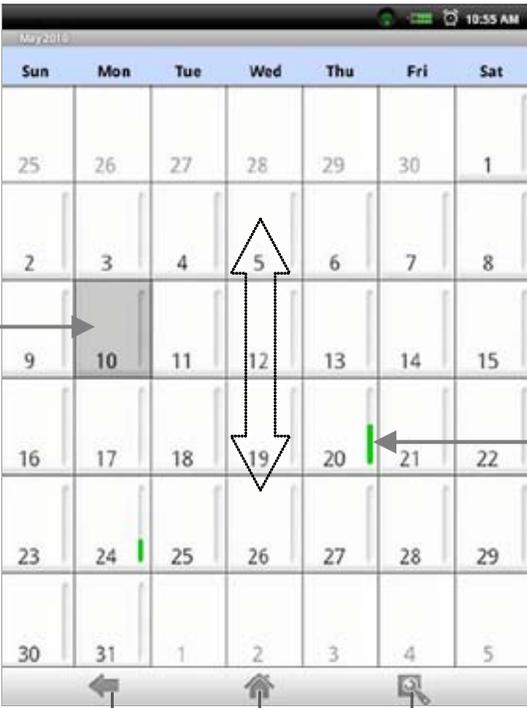

The shaded date is current date.

Finger slide vertically from top or bottom to display other months.

Green tabs indicate scheduled events.

Return to previous screens      Home      Display option menu

## Add Event

1. On the Calendar screen, → tap .
2. Tap **New Event**.

3. Tap in each entry field to enter the desired event information, → tap **Save**.
4. Tap  to return to the Calendar screen or  to return to the Home screen.

## Edit Event

1. On the Calendar screen, tap on the date with the event you want to edit.
2. Tap on the event you want to change, → tap , → tap **Edit event**.
3. Make desired changes, → tap **Save**.
4. Tap  or  to return to the Home screen.

## Event Reminder Alerts

### Single Reminder

If you assigned one event reminder, a pop-up alert appears before the event by the number of minutes you selected.

Tap **Snooze** if you want to be reminded again in 5 minutes, or tap **Dismiss** to cancel the alert.

### Multiple Reminders

If you assigned multiple event reminders, the first pop-up alert appears before the event by the number of minutes you selected for the first reminder.

Tap **Dismiss** to cancel the first alert.

Subsequent pop-up alerts appear before the event by the number of minutes you selected for each reminder.

Tap **Dismiss** to cancel the alert.

If you tap **Snooze**, multiple alerts appear every 5 minutes until you tap **Dismiss**.

## Delete Events

1. On the Calendar screen, tap on the date with the event you want to delete.
2. Tap on the event you want to delete, → tap , → tap **Delete event**.
3. Tap **OK** to confirm delete.
4. Tap  or  to return to the Home screen.



---

## CONTACTS

You can create an address eBook of your personal contacts, including personal notes as desired.

### Add New Contacts

1. Tap the  **Contacts** application icon.
2. Tap , → tap **New Contact**.
3. Tap in each entry field to enter your contact information.
4. Tap **Done**.

### Add Contact to Favorites

1. In the Contacts screen, tap on the desired contact name.
2. Tap  in the upper right corner.
3. Tap  to return to the Contacts screen.
4. Tap Favorites to view list of favorites contacts.

### Edit Contacts

1. In the Contacts screen, tap on the desired contact name that you want to edit.
2. Tap , → tap **Edit contact**.
3. Make desired changes, → tap **Done**.

### Email Contacts

- ❖ *You must have a default email account set up before using this feature. If you have not yet set up your account, do so now (pg. 46).*
1. In the Contacts screen, touch & hold on a contact that you want to email.
  2. In the pop-up, tap **Send email**.
  3. Tap in the **Subject** and **Compose Mail** fields to enter your message.
  4. Optionally, if you want to add Cc or Bcc recipients, → tap , → tap **Add Cc/Bcc**, and then enter the recipient's email address.
  5. Tap **Send**.

## Delete Contacts

1. In the Contacts screen, tap on the contact you want to delete.
2. Tap , → tap **Delete contact**.
3. Tap **OK** to confirm the deletion.

---

## Installing Android Applications

Your `pandigital novel` is an Android open platform model, allowing you to download Android applications.

### Windows System Requirements

Windows XP (32-bit),  
Windows Vista (32- or 64-bit)  
Windows 7 (32- or 64-bit)

1. Download Android SDK and USB driver to your PC.  
Use the following download links: <http://code.google.com/android/intro/installing.html>  
[http://dl.google.com/android/android\\_usb\\_windows.zip](http://dl.google.com/android/android_usb_windows.zip)
2. Unzip the folder and double-click on **SDK Manager.exe**, → select **Extract all**.
3. Follow the prompts to install the Android SDK.
4. In the environment variables section, you need to add the path to the folder where you installed your Android SDK as follows:

### Setting Path on Windows XP

- a) Click **Start**, → **Control Panel**, → **System**, → **Advanced**.
- b) Under System Variables, click on **Environment Variables**, → click on **PATH**.
- c) In the Edit window, modify **PATH** by adding the location of the ADB folder you installed in step 1. If you do not have the item **PATH**, you may select to add a new variable and add **PATH** as the name and the location of the ADB folder you installed in step 1.  
*Example: If your path is c:\windows;c:\windows\system32, and you installed the Android SDK to C:\AndroidSDK, you would add c:\AndroidSDK\ADB to the path as c:\windows;c:\windows\system32;c:\AndroidSDK\ADB*
- d) Close the window.

### Setting Path on Windows Vista or Windows 7

- a) Click **Start**, → right click **Computer**, → click **Properties**.
- b) Click **Advanced system settings** (Vista) or **Advanced tab** (Win 7).

- c) Click **Environment Variables...**
  - d) In the **System variables** area, select **PATH** and then **Edit** to add the location of the ADB folder you installed in step 1.  
*Example: If your path is c:\windows;c:\windows\system32, and you installed the Android SDK to C:\AndroidSDK, you would add c:\AndroidSDK\ADB to the path as c:\windows;c:\windows\system32;c:\AndroidSDK\ADB*  
*❖ If you do not have the item PATH, you may select to add a new variable and add PATH as the name and the location of the ADB folder you installed in step 1.*
  5. Click **Start** → open command prompt (Vista and 7, enter “cmd”).
  6. Change to the directory where you installed the Android application (i.e., `cd C:AndroidSDK`).
  7. Connect the device to your PC via USB cable.
  8. Enter the following at the command prompt: `adb install appsname`  
*Example: For an application titled “game.apk”, you would enter `adb install game`.*
- 

## Connect to Computer

You can connect your `pandigital novel` to a Windows or Macintosh computer via a USB cable to copy files between the two devices.

### PC System Requirements

Operating Systems: WINDOWS XP / VISTA / 7  
MAC OSX

USB Port Supported: USB 2.0 port

### Connect to Windows PC

1. Connect the small end of the USB cable to the `pandigital novel` mini USB port, and the larger end to an available USB port on your computer.
2. Windows Explorer opens with the list all drives connected to your computer; the `pandigital novel` drive is listed as **PD\_Novel**.
3. To copy files into your `pandigital novel`, select and drag the desired files into the appropriate pre-assigned folder based on file type.

- **eBooks** (*EPUB, PDF*)  
Separate cover images files:
    - must be named the same as the eBook files, (for example, **mybook.pdf, mybook.jpg**)
    - must be copied into the **eBooks>.thumbnail** folder
    - must not be larger than 10KB
  - **Photos** (*JPG, JPEG, BMP, PNG, non-animated GIF*)
  - **Music** (*MP3, WAV, AAC*)
  - **Videos** (*MPEG4*)
  - ❖ *File names should NOT include special characters; otherwise they are not recognized by the device.*
4. To copy files from your `pandigital novel` into your computer, select and drag the desired files to any desired location on your computer.

## Disconnect

It is important to always perform a safe PC 'release' before disconnecting the USB cable from the `pandigital novel` and computer.

- ❖ *After disconnecting the USB cable from your `pandigital novel`, the device shuts down and automatically restarts, which may take up to 20 seconds. Please wait and allow the Home screen to be displayed again.*

## Windows 7

1. On the Windows System Tray, click the hardware removal icon.
2. Click the **Eject Removable Disk** message corresponding with the `pandigital novel` device drive.
3. When the message "Safe to Remove Hardware" appears, you can disconnect the USB cable from your `pandigital novel` and computer.

## Windows VISTA

1. On the Windows System Tray, click the hardware removal icon.
2. Click the **Safely remove USB mass Storage** device message corresponding with the `pandigital novel` device drive.
3. When the message "This device can now be safely removed from the computer" appears, you can disconnect the USB cable from your `pandigital novel` and computer.

## Windows XP

1. On the Windows System Tray, click the hardware removal icon.
2. Click **Remove Hardware Safely**.

3. Select the storage device corresponding with the `pandigital novel`, and then click **Stop** to disconnect. A final dialog box opens.
4. Click **Close**.
5. When the message ***“It is now Safe to Disconnect Hardware”*** appears, you can disconnect the USB cable from your `pandigital novel` and computer.

## Connect to Macintosh Computer

- ❖ *eBooks downloaded from Kobo to a Macintosh computer are saved in an unsupported .pdb format. If you copy the .pdb formatted eBooks into your device, they will not be recognized. You should always use the **Purchase History** feature to download eBooks directly from your Kobo account into the device. Music, Video and Photo files can be copied from a Macintosh computer into your device as long as they are in a supported file format.*
1. Connect the small end of the USB cable to the `pandigital novel` mini USB port, and the larger end to an available USB port on your computer.
  2. Macintosh recognizes the `pandigital novel` as an external storage device titled **PD\_Novel**.
  3. To copy files into your `pandigital novel`, select and drag the desired files into the appropriate pre-assigned folder based on file type.
    - **eBooks** (EPUB, PDF)  
Separate cover images files:
      - must be named the same as the eBook files, (for example, **mybook.epub**, **mybook.jpg**)
      - must be copied into the **eBooks>.thumbnail** folder
      - must not be larger than 10KB
    - **Photos** (JPG, JPEG, BMP, PNG, non-animated GIF)
    - **Music** (MP3, WAV, AAC)
    - **Videos** (MPEG4)
    - ❖ *File names should NOT include special characters; otherwise they are not recognized by the device.*
  4. To copy files from your `pandigital novel` into your computer, select and drag the desired files to any desired location on your computer.
    - ❖ *See **Read Copied eBooks** to read books you copy into the eBooks folder (pg. 57).*

## Disconnect

- ❖ *After disconnecting the USB cable from your pandigital novel, the device shuts down and automatically restarts, which may take up to 20 seconds. Please wait and allow the Home screen to be displayed again.*
1. To safely disconnect from your Macintosh, select the **PD\_Novel** icon on your desktop and click **Command-e** to eject the disk.
  2. When the icon is no longer on the desktop, it is safe to unplug the USB cable.

## Read Copied eBooks

Follow these steps to access and open eBooks that you have copied into the device from your computer via USB connection.

1. Tap the  application icon, → tap **My Library**.
2. Tap on **Date**, **Title** or **Author** and then select **Local** from the drop-down list.
3. Tap on an eBook cover to open it in the Reader.



---

## USER GUIDE

To view the full pandigital novel User Guide, tap the  **User Guide** application icon. The User Guide opens in the Reader.



Once open, you can use the standard **Reader** functions to search and navigate through the document in the same manner as your downloaded eBooks.

If you want to print the User Guide, copy it to your computer using the **Connect to Computer** instructions (pg. 54).

The User Guide is also posted on our website: [www.pandigital.net/downloads](http://www.pandigital.net/downloads).

---

## UPDATE FIRMWARE

**WARNING!** Performing a firmware update resets all settings to factory defaults, and all your personalized data (email accounts, contacts, etc.) **is deleted**.

Your **Kobo eBooks are deleted**, so you must re-download them to My Library after the update is complete. **IMPORTANT:** You must use the same Adobe account that was used to originally download the eBooks.

The local media that you imported from SD card or copied from computer remains in the device.

**IMPORTANT:** This firmware update procedure is only available for **Windows PC** users at this time. We recommend Mac users to locate a Windows PC that can be used for the firmware update at this time. Mac based update procedures will be available in future.

❖ *If the device has a low battery charge, you may not be able to perform a successful update. It is recommended that you connect the device to the power adapter before performing the firmware upgrade.*

1. Back up all your media files to your computer.
2. On your computer, go to [www.pandigital.net/downloads](http://www.pandigital.net/downloads).
3. Choose the **Update with Your PC** option.
4. When prompted, you can either **Save** the program or **Run** it from the website. *(The Run method may result in a slower process than saving & running the program directly from your computer).*
5. Follow the prompts in the Upgrader window to connect your device and install the firmware into your device.
6. After the download is complete, turn your device off.
7. Press the **Volume +** button and then the **power key** and hold both approximately 10 seconds until you see the upgrade text appear on the screen, and then release both buttons immediately.
8. Your device updates and restarts automatically.
9. Reset the **Date** and **Time** and set up your **Wi-Fi network** again by following the initial setup instructions beginning on page 12.
10. You must re-download your Kobo eBooks to re-populate My Library. When you download the first eBook, you are prompted for your Kobo and Adobe login information.

---

## Frequently Asked Questions

### ADOBE ACCOUNT

**Q: Do I need an Adobe account to download Kobo eBooks?**

A: Yes, Kobo requires you to provide your Adobe account information before you can download eBooks from your Kobo online account.

**Q: How do I register my Adobe account in my pandigital novel?**

A: The first time you attempt to download a purchased eBook through the **Purchase History** feature, you are prompted for your Adobe login information. If you haven't yet registered an account, you can tap "Adobe web" to do so immediately.

**Q: How can I switch Adobe accounts in my device?**

A: **WARNING!** All downloaded Kobo eBooks are associated with your Adobe account. If you switch to a different Adobe account you are no longer allowed to open the eBooks already in My Library or re-download those eBooks from your Kobo online account! *Pandigital will not be held liable in any way for loss of any data or loss of use of your Kobo eBooks as a result of performing an Adobe account switch.*

If you are sure you want to switch accounts, tap

**Settings>Applications>Manage applications>Reader>Clear data.**

### BASIC FUNCTIONALITY

**Q: Do I have to charge the battery before use?**

A: You should charge the battery for at least 4 hours, but you can use the device while it's charging. Use the included power adapter to charge; this device does not charge via the USB cable.

**Q: My unit seems to be frozen and is un-responsive. What do I do?**

A: Reset the device by pressing and holding the power button for 10 seconds.

**Q: I have attempted to perform a firmware update but it consistently fails.**

A: If the device has a low battery charge, you may not be able to perform a successful update. Connect the device to the power adapter and then try again.

**Q: Why do I see references to "phone" and "camera" in some of the setup screens and various pop-up messages?**

A: This is a result of the Android OS framework and should be ignored as it does not affect the intended operation of your `pandigital novel`.

**Q: Why does text appear in some entry dialog boxes (i.e., email address, password, etc.) that has to be erased before I enter my personal information?**

A: The pre-loaded text that appears in some entry dialog boxes does not need to be manually erased before entering user information. Simply tap in the

entry box and begin entering your personal information. The pre-loaded text disappears as soon as you enter the first character.

**Q: How do I contact Customer Support?**

A: If this FAQ section doesn't answer your questions, you can contact Customer Support at 1-800-715-5354.

## COMPUTER COMPATIBILITY

**Q: Which media cards are compatible with my pandigital novel?**

A: SD/MMC Cards.

**Q: Which Operating Systems are compatible with my pandigital novel?**

A: Microsoft Windows XP / VISTA / 7, MAC OS.

**Q: How do I connect my pandigital novel with my computer?**

A: Use the USB cable included with the device, or any standard USB cable. Refer to the **Connect to Computer** function (pg. 54).

## EMAIL

**Q: Can I use any of my personal email addresses to send/receive email?**

A: Your pandigital novel supports POP3, SMTP and IMAP accounts. Some free email accounts are not supported on mobile devices. Check with your email provider to see if your account is supported.

## KOBO BOOKSTORE and eBooks

**Q: How do I log into my Kobo account through my pandigital novel?**

A: The first time you attempt to purchase an eBook in the Kobo Bookstore or tap on **Purchase History**, you are presented with a Sign In dialog box. Enter your account information, and then tap **Remember** if you want the login information saved for future logins (*recommended*).

**Q: What types of eBooks files are compatible with my pandigital novel?**

A: EPUB and PDF formats only.

**Q: Are digital books other than from Kobo compatible with the pandigital novel?**

A: Yes, as long as the eBook is in .epub or .pdf format.

**Q: Can I download eBooks from my Kobo account directly onto a SD card?**

A: No. All eBooks are downloaded directly into the internal memory.

## MUSIC

**Q: What type of audio files can I play on my pandigital novel?**

A: MP3, WAV and AAC

**Q: How do I add audio files to my pandigital novel?**

A: You can copy audio files from your computer (pg. 54).

**Q: Can I create a separate list of my favorite songs?**

A: Yes. Use the **Playlist** feature (pg. 42).

## MY LIBRARY

**Q: How do I add eBooks to My Library?**

A: You can download them from your Kobo account (*using the **Purchase History** feature*) or copy them from your computer via USB connection.

**Q: Why can't I find books I've copied from my computer?**

A: Copied books can be accessed in My Library by tapping on **Date**, **Title** or **Author** and then select **Local** from the drop-down list.

**Q: Why can't I see my Kobo eBooks in My Library anymore?**

A: You may be displaying "Local" eBooks instead. Tap **Date**, **Title** or **Author** and then select **Kobo** from the drop-down list.

**Q: I performed a firmware update and now my Kobo books are not displayed in My Library.**

A: Performing a firmware update deletes all Kobo eBooks. Re-download them from your Kobo account using the **Purchase History** feature (pg. 21). Be sure you use the same Adobe account information that you used to download the eBooks originally.

**Q: Can I create personal bookshelves for organizing my eBooks?**

A: Yes. In My Library, tap **Bookshelves** (pg. 23).

**Q: Do I need an account with Kobo to download from their site?**

A: Yes. You do need an account to download sample eBooks or purchased eBooks from their site into the device. Note that you also need an Adobe account in order to download eBooks from your Kobo account.

## PHOTOS

**Q: What type of photo files can I view on my pandigital novel?**

A: JPG, JPEG, BMP, PNG, non-animated GIF

**Q: How do I add photo files to my pandigital novel?**

A: You can copy photo files from your computer (pg. 54).

## READER

**Q: Can I view media files in either vertical or horizontal orientation?**

A: Yes, to automatically switch viewing orientation, simply turn the device while viewing.

**Q: Can I change the size of the displayed text?**

A: Yes. Tap on the top of the screen to display the Reader Function Menu, → tap **Font Size** and then select the desired size from the drop-down list.

**Q: Can I easily jump to a specific page?**

A: Yes. Use either **Bookmarks** (pg. 25) or the **Go To** function (pg. 27).

**Q: Can I play music and read at the same time?**

A: Yes. You can tap the  icon in the upper left corner to display the music navigation bar, and then tap .

**Q: How do I display the Reader Function Menu while reading?**

A: Simply tap on the **top of the screen**.

**Q: How do I bookmark a page?**

A: Tap the  in the upper right corner of the page (pg. 25).

**Q: Can I highlight text on a page?**

A: Yes. On a page, touch, hold & slide your finger across the text that you want to highlight. Tap **Highlight** in the Reader options window that appears (pg. 26).

**Q: Can I add a note to a page?**

A: Yes. On a page, touch & hold on a word that is related to the note. Use the Reader options window that appears (pg. 26).

**Q: Does the Reader have a built-in Dictionary?**

A: Yes. On a page, touch & hold on the word you want to look up. Tap **Dictionary** in the Reader options window that appears (pg. 24).

**Q: Can I read books stored on my SD card?**

A: No, you must import the eBook into your `pandigital novel` first.

**Q: Why doesn't my `pandigital novel` read my SD card?**

A: If you create a SD card using a Macintosh computer, you must use the FAT32 option when formatting the SD card, otherwise the device will not read the card.

## VIDEO

**Q: What type of video files can I play on my `pandigital novel`?**

A: MPEG4

**Q: Can I stream videos on my `pandigital novel`?**

A: No. Only MPEG4 formats are compatible.

**Q: Can I play YouTube videos on my `pandigital novel`?**

A: No, the file format is not supported.

**Q: How do I add video files to my `pandigital novel`?**

A: You can copy video files from your computer (pg. 54).

## WEB

**Q: Do I need a Wi-Fi adapter to connect to the Internet?**

A: No. The Wi-Fi adapter is built-in to your `pandigital novel`.

**Q: Can I have multiple browser windows open at the same time?**

A: Yes, up to 8 windows (pg. 33).

**Q: Can I change browser settings?**

A: Yes. There are multiple settings you can set as desired, including privacy & security options (pg. 35).

**Q: Can I search a web page for specific text?**

A: Yes. Use the **Find on Page** function (pg. 34).

**Q: Can I bookmark web pages?**

A: Yes. Use the browser **Bookmarks** function (pg.32).

---

## Battery Management

The `pandigital novel` battery is not fully charged out of the box, so it is recommended that you charge the battery for at least 4 hours before you start to use the device.

The rechargeable battery is designed and manufactured to be used and recharged frequently. As with all batteries, the capacity of the battery reduces each time it is charged/depleted. However, you can still try to prolong the battery's lifetime by following the suggestions below:

- Use the device at least once a week.
- Charge the battery regularly and fully. Never leave the battery fully discharged for a long period of time.
- Always keep the device and the battery away from heat.

### Charge Battery

Plug the power adapter into an electrical wall outlet, and then connect to the device to fully charge the battery before use (*approx. 4 hours*).

❖ *You can not use the USB cable to charge the battery.*

While charging, the battery icon displays as: .

When fully charged, the battery icon displays as: .

A fully discharged battery takes approximately 5 hours to fully charge, but you can use the device while plugged in when desired.

---

## Important Safety Precautions

Always follow these basic safety precautions when using your `pandigital novel`. This reduces the risk of fire, electric shock, and injury.

- Do not expose this product to rain or moisture.
- Keep your pandigital novel out of direct sunlight and heat sources.
- Protect the power cord. Route power cords so that they are not likely to be walked on or pinched by items placed on or against them. Pay particular attention to the point where the cord attaches to the device.
- Only use the AC adapter included with the pandigital novel. Using any other power adapter voids your warranty.
- Do not remove the cover. There are no user-serviceable parts inside.

## Cleaning the device

Treat the screen gently. To clean fingerprints or dust from the screen, we recommend using a soft, non-abrasive cloth such as a camera lens cloth.

---

## Technical Specifications

Product Specs	<b>7" Digital TFT LCD Display</b> 600x800 pixels	
Compatible Media Sources	Secure Digital™ (SD), MMC	
Features	Display eBooks Play digital Audio and Video files Display digital Photo files individually or as slideshow Alarm Clock and Calendar Connect to Wi-Fi networks Send and Receive Email Automatic rotation of screen orientation Earphone jack included Stylus and Tabletop stand included	
Compatible File Formats	eBooks	EPUB, PDF
	Photo	JPG, JPEG, BMP, PNG, non-animated GIF
	Audio	MP3, WAV, AAC
	Video	H.264 AVC and Mp4 SP
USB Ports	Mini USB 2.0	
Internal Memory	2GB	
Wi-Fi Compatible	Yes, built-in Wi-Fi adapter	
Audio output	Built-in stereo speakers Stereo-mini earphone jack	
Power Adapter	5V, 2A	
Battery	Rechargeable 2800mAh, 3.7V	

---

## Limited Warranty

The limited warranty set forth below is given by Pandigital with respect to the Pandigital Novel™ line of products (the “Device”) purchased and used in the United States of America. Pandigital warrants this product as follows:

**LABOR:** For a period of one (1) year from the date of purchase, if this Device is found to be defective, Pandigital will repair or replace the Device, at its sole option, at no charge. After this one (1) year period, labor charges will be charged on a case by case basis. If your Device is repaired or replaced during the Warranty Period, it will be covered by this Limited Warranty for the remainder of the original Warranty Period or ninety (90) days from the date of shipment of the replaced Device, whichever is longer.

**PARTS:** For a period of one (1) year from the date of purchase, if this Device is found to be defective, Pandigital will supply at no cost, new or rebuilt replacement parts, at its option, at no charge. After this one (1) year period, parts will be charged for on a case by case basis. Modifications not approved by the party responsible for compliance will void user’s authority to operate the equipment. If your Device is repaired or replaced during the Warranty Period, it will be covered by this Limited Warranty for the remainder of the original Warranty Period or ninety (90) days from the date of shipment of the replaced Device, whichever is longer

This Limited Warranty does not cover damage or malfunctions caused by accident, disaster, misuse, abuse, negligence or other external causes; third-party products; Internet or telecommunications failures; commercial use; unauthorized opening, use, service, tampering, alteration, repair or modification; or inadequate packing or shipping procedures. This Limited Warranty also does not cover cosmetic damage or normal wear and tear. This Limited Warranty does not apply to Devices sold as used, refurbished or reconditioned. This Limited Warranty will be void if the Serial Number on your Device has been removed, tampered with or defaced or if your Device has been opened or serviced without authorization, tampered with, altered or modified. This Limited Warranty applies to your Device only (i.e., the hardware), and not to the software within your device. Similarly, this Limited Warranty does not cover downloaded data or materials, or accessories and peripherals, except as expressly provided above. This warranty is valid only in the United States.

The Device must be accompanied by a copy of the original retail purchase receipt for the warranty to be valid. If no proof of purchase is attached, the warranty will not be honored and repair costs incurred will be the responsibility of the end user. This warranty is only valid with written documentation detailing the complaint attached to the outside or inside of the carton. This warranty is invalid if the factory applied serial number has been altered and or removed from the product. This warranty does not provide protection for the loss of data, regardless of format. Pandigital reserves the right to modify and change the design of this Device without prior notice, written or otherwise.

**Limitations.** TO THE EXTENT PERMITTED BY LAW, THE WARRANTY AND REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES AND REMEDIES, AND WE SPECIFICALLY DISCLAIM ALL STATUTORY OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND AGAINST HIDDEN OR LATENT DEFECTS. IF WE CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES, THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS LIMITED WARRANTY AND TO REPAIR OR REPLACEMENT SERVICE.

SOME JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG A STATUTORY OR IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. WE ARE NOT RESPONSIBLE FOR DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF

WARRANTY OR UNDER ANY OTHER LEGAL THEORY. IN SOME JURISDICTIONS THE FOREGOING LIMITATION DOES NOT APPLY TO DEATH OR PERSONAL INJURY CLAIMS, OR ANY STATUTORY LIABILITY FOR INTENTIONAL AND GROSS NEGLIGENT ACTS AND/OR OMISSIONS, SO THE ABOVE EXCLUSION OR LIMITATION MAY NOT APPLY TO YOU. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF DIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE EXCLUSION OR LIMITATION MAY NOT APPLY TO YOU.

All content included on the Pandigital website as well as Pandigital Devices, including pre-loaded demonstration images, digital media, digital cookbooks, text, graphics, logos, designs, photographs, button icons, images, audio/video clips, digital downloads, data compilations, and software, are the property of Pandigital or its suppliers and is protected by United States and international copyright laws or other intellectual property laws and treaties. Said content shall not be reproduced or used without express written permission from Pandigital and its suppliers respectively.

Use of this product constitutes acceptance of these terms and conditions of warranty.

To obtain warranty service, refer to Customer Support section at [www.pandigital.net](http://www.pandigital.net).

Technical support telephone number: 1-800-715-5354.

## FCC Notices

### FCC ID: POTPRD07T

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## Federal Communications Commission (FCC) Statement Information to the User

**WARNING!** Changes or modifications to this device not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the Federal Communication Commission (FCC) Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This device is designed for hand-held operation only. The antenna(s) used for this transmitter must not

be collocated or operating in conjunction with any other antenna or transmitter within a host device, except in accordance with FCC multi-transmitter product procedures.

---

## Disclaimers

Kobo and the Kobo logo are registered trademarks of Kobobooks.com. All rights reserved.

Facebook and the “f” logo are registered trademarks of Facebook Inc. All rights reserved.

Yahoo!® is a registered trademark of Yahoo!

Contains Reader® Mobile technology by Adobe Systems Incorporated.

---

## License Agreement and Terms of Use

By activating and using the `p a n d i g i t a l n o v e l`, you hereby consent and agree to our License Agreement and Terms of Use.

### The Device and Related Services

The Pandigital Novel (the "Device") is a portable electronic reading device that utilizes wireless connectivity to enable users to shop for, download, browse, and read books, newspapers, magazines, blogs, access websites, e-mail and other materials, all subject to the terms and conditions of this Agreement. The "Service" means the wireless connectivity, provision of digital content, software and support, and other services and support that Pandigital provides Device users.

### Wireless Connectivity

Coverage and Service Interruptions: You acknowledge that if your Device is located in any area without applicable wireless connectivity, you may not be able to use some or all elements of the wireless services. We are not responsible for the unavailability of wireless service or any interruptions of wireless connectivity.

### Digital Content

The Kobo Store: The Kobo Store enables you to download, display and use on your Device a variety of digitized electronic books as determined by Kobo from time to time (individually and collectively, "Digital Content").

Use of Digital Content: Upon your payment of the applicable fees set by Kobo, Kobo grants you the non-exclusive right to keep a permanent copy of the applicable Digital Content and to view, use, and display such Digital Content an unlimited number of times, solely on the Device or as authorized by Kobo as part of the Service and solely for your personal, non-commercial use. Digital Content will be deemed licensed to you by Kobo under this Agreement unless otherwise expressly provided by Kobo.

Restrictions: Unless specifically indicated otherwise, you may not sell, rent, lease, distribute, broadcast, sublicense or otherwise assign any rights to the Digital Content or any portion of it to any third party, and you may not remove any proprietary notices or labels on the Digital Content. In addition, you may not, and you will not encourage, assist or authorize any other person to, bypass, modify, defeat or circumvent security features that protect the Digital Content.

## Software

**Definitions:** The following terms apply to the Device and to (a) all software (and the media on which such software is distributed) of Pandigital or third parties that is pre-installed on the Device at time of purchase or that Pandigital provides as updates/upgrades to the pre-installed software (collectively, the "Device Software"), unless you agree to other terms as part of an update/upgrade process; and (b) any printed, on-line or other electronic documentation for such software (the "Documentation"). As used in this Agreement, "Software" means, collectively, the Device Software and Documentation.

**Use of the Device Software:** You may use the Device Software only on the Device. You may not separate any individual component of the Device Software for use on another device or computer, may not transfer it for use on another device or use it, or any portion of it, over a network and may not sell, rent, lease, lend, distribute or sublicense or otherwise assign any rights to the Software in whole or in part.

**No Reverse Engineering, Decompilation, Disassembly or Circumvention:** You may not, and you will not encourage, assist or authorize any other person to, modify, reverse engineer, decompile or disassemble the Device or the Software, whether in whole or in part, create any derivative works from or of the Software, or bypass, modify, defeat or tamper with or circumvent any of the functions or protections of the Device or Software or any mechanisms operatively linked to the Software, including, but not limited to, augmenting or substituting any digital rights management functionality of the Device or Software.

**Automatic Updates:** In order to keep your Software up-to-date, Pandigital may automatically provide your Device with updates/upgrades to the Software.

**Export Regulations:** You agree to comply with all export and re-export restrictions and regulations of the Department of Commerce and other United States agencies and authorities, and not to transfer, or encourage, assist or authorize the transfer of the Software to a prohibited country or otherwise in violation of any such restrictions or regulations.

## General

**No Illegal Use and Reservation of Rights:** You may not use the Device, the Service or the Digital Content for any illegal purpose. You acknowledge that the sale of the Device to you does not transfer to you title to or ownership of any intellectual property rights of Pandigital or its suppliers. All of the Software is licensed, not sold, and such license is non-exclusive.

**Information Received:** The Device Software will provide Pandigital with data about your Device and its interaction with the Service (such as available memory, up-time, log files and signal strength) and information related to the content on your Device and your use of it (such as automatic bookmarking of the last page read and content deletions from the Device). Information we receive is subject to the Pandigital Privacy Notice.

**Patents:** The Device and/or methods used in association with the Device may be covered by one or more patents or pending patent applications.

**Termination:** Your rights under this Agreement will automatically terminate without notice from Pandigital if you fail to comply with any term of this Agreement. Pandigital's failure to insist upon or enforce your strict compliance with this Agreement will not constitute a waiver of any of its rights.

**Disclaimer of Warranties:** YOU EXPRESSLY ACKNOWLEDGE AND AGREE THAT USE OF THE SERVICE, DEVICE, DIGITAL CONTENT AND SOFTWARE IS AT YOUR SOLE RISK. EXCEPT FOR THE ONE-YEAR LIMITED WARRANTY, THE SERVICE, DEVICE, DIGITAL CONTENT AND SOFTWARE ARE PROVIDED "AS IS" WITH ALL FAULTS AND WITHOUT WARRANTY OF ANY KIND AND PANDIGITAL AND ITS SUPPLIERS AND LICENSORS DISCLAIM ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, ACCURACY, QUIET ENJOYMENT AND NON-INFRINGEMENT OF THIRD-PARTY RIGHTS. NO ORAL OR WRITTEN INFORMATION

OR ADVICE GIVEN BY PANDIGITAL OR AN AUTHORIZED REPRESENTATIVE OF PANDIGITAL SHALL CREATE A WARRANTY. THE LAWS OF CERTAIN JURISDICTIONS DO NOT ALLOW THE DISCLAIMER OF IMPLIED WARRANTIES. IF THESE LAWS APPLY TO YOU, SOME OR ALL OF THE ABOVE DISCLAIMERS, EXCLUSIONS OR LIMITATIONS MAY NOT APPLY TO YOU, AND YOU MAY HAVE ADDITIONAL RIGHTS.

Limitation of Liability: TO THE EXTENT NOT PROHIBITED BY LAW, NEITHER PANDIGITAL NOR ITS SUPPLIERS OR LICENSORS SHALL BE LIABLE TO YOU FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, BREACH OF CONTRACT, NEGLIGENCE, STRICT LIABILITY OR ANY OTHER LEGAL THEORY RELATED TO THE SERVICE, DEVICE, DIGITAL CONTENT OR SOFTWARE, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES ARISING OUT OF LOSS OF PROFITS, REVENUE, DATA OR USE OF THE DEVICE OR SOFTWARE OR ANY ASSOCIATED PRODUCT, EVEN IF PANDIGITAL HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN ANY CASE, PANDIGITAL'S AGGREGATE LIABILITY UNDER THIS AGREEMENT SHALL BE LIMITED TO THE AMOUNT ACTUALLY PAID FOR THE DEVICE. THE LAWS OF CERTAIN JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. IF THESE LAWS APPLY TO YOU, SOME OR ALL OF THE ABOVE EXCLUSIONS OR LIMITATIONS MAY NOT APPLY TO YOU, AND YOU MAY HAVE ADDITIONAL RIGHTS.

Disputes: ANY DISPUTE ARISING OUT OF OR RELATING IN ANYWAY TO THIS AGREEMENT SHALL BE SUBMITTED TO CONFIDENTIAL ARBITRATION IN ALAMEDA COUNTY, EXCEPT THAT, TO THE EXTENT YOU HAVE IN ANY MANNER VIOLATED OR THREATENED TO VIOLATE PANDIGITAL'S INTELLECTUAL PROPERTY RIGHTS, PANDIGITAL MAY SEEK INJUNCTIVE OR OTHER APPROPRIATE RELIEF IN ANY STATE OR FEDERAL COURT IN THE COUNTY OF ALAMEDA, AND YOU CONSENT TO EXCLUSIVE JURISDICTION AND VENUE IN SUCH COURTS. The arbitrator's award shall be binding and may be entered as a judgment in any court of competent jurisdiction. To the fullest extent permitted by applicable law, no arbitration under this Agreement shall be joined to an arbitration involving any other party subject to this Agreement, whether through class arbitration proceedings or otherwise.

Severability: If any term or condition of this Agreement shall be deemed invalid, void, or for any reason unenforceable, that part shall be deemed severable and shall not affect the validity and enforceability of any remaining term or condition.

Amendment: Pandigital reserves the right to amend any of the terms of this Agreement at its sole discretion by posting the revised terms on the Pandigital.net website. Your continued use of the Device and Software after the effective date of any such amendment shall be deemed your agreement to be bound by such amendment.

Contact Information: For communications concerning this Agreement, you may contact Pandigital by writing to Pandigital, Attn: Legal Department, 6375 Clark Avenue, Suite 100, Dublin, CA 95468.

© 2010 Pandigital, Inc. or its affiliates. All rights reserved. Pandigital, the Pandigital logo, Pandigital Novel, are trademarks of Pandigital Inc. Kobo and the Kobo logo are registered trademarks of Kobobooks.com. All rights reserved. Facebook and the "f" logo are registered trademarks of Facebook Inc. All rights reserved. Java and all Java based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

Pandigital Novel contains Adobe® Reader® Mobile software under license from Adobe Systems Incorporated, Copyright © 1995-2009 Adobe Systems Incorporated. All rights reserved. Adobe and Reader are trademarks of Adobe Systems Incorporated.

## CE Notice

Pandigital hereby declares that the essential requirements set out in the R&TTE Directive 99/5/EC have been fully fulfilled on our product with indication below:

Product Name: Pandigital Novel Mule-Rader

Model Name: PRD07T20WBL1

Brand Name: Pandigital

The following standards have been applied for the investigation of compliance:

EN 300 328 V1.7.1:2006

EN 301489-1 V1.8.1 2008-04

EN 301489-17 V2.1.1 2009-05

EN 62311:2008

EN 60950: 2006+A11: 2009

EN55022:2006+A1:2007/ EN 55024:1998+A1:2001+A2:2003



## Battery Statement

CAUTION: Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

## Radiation Exposure Statement

$E=6.62782$  V/m is the maximum E-Field strength when safety distance between the EUT and human body is maintained at least 20cm, which is below 61V/m as required in Annex III table 2 of EC Council Recommendation (1999/519/EC). This proves that the unit complies with the EN 62311 for RF exposure requirement.

## IC Notice

Product Name: Pandigital Novel Mule-Rader

Model Name: PRD07T20WBL1OP2

IC: 4773A-PRD07T

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

“Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (EIRP) is not more than that required for successful communication.