

QUICK START GUIDE


LG V40 ThinQ™



MBM66957101 (1.0) G

Parts overview

To turn on the device, press and hold the **Power key** for a few seconds.

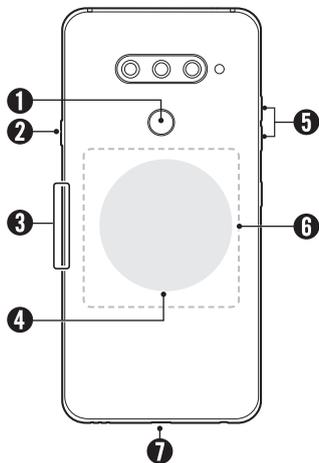


- | | |
|----------------------------------|--------------------------|
| ① Fingerprint sensor | ⑤ Volume keys (+/-) |
| ② Power/Lock key | ⑥ NFC antenna area |
| ③ Nano SIM/Memory card tray | ⑦ Charger/USB cable port |
| ④ Wireless charging antenna area | |

⚠ Warning


- Your device has an internal rechargeable battery. For your safety, do not remove the embedded battery.

Installing the SIM card and memory card

- Turn the phone off, insert the ejection pin into the hole on the card tray and push until the tray pops out. Then, carefully pull out the card tray.

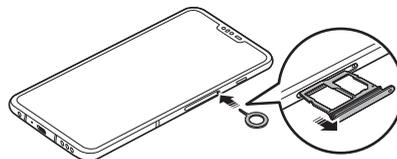

- Place the Nano SIM card or memory card on the card tray with the gold contacts facing downwards. Make sure that card is positioned as shown below.

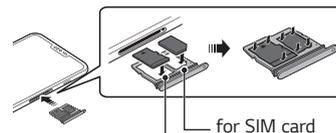

📌 NOTE

- Always use a Nano SIM card supplied by your service provider.
- For problem-free performance, it is recommended to use the phone with the correct type of SIM card. Always use a factory-made SIM card supplied by your service provider.

- The memory card can be easily damaged by improper operation. Please be careful when inserting, removing, or handling it.
- In order for the water-resistant and dust-resistant features to work effectively, the card tray must be inserted correctly.

⚠ Warning

- Some memory cards may not be fully compatible with the device. If you use an incompatible card, it may damage the device or the memory card, or corrupt the data stored in it.
- Be careful with the ejection pin since it has a sharp edge.
- If you insert the card tray into your device while the card tray is wet, your device may be damaged. Always make sure the card tray is dry.

Emergency Alerts

You can choose which emergency alerts to receive by changing the settings as follows.

- Tap > or tap > **Settings** > **Network** > **Wireless Emergency Alerts**.
- Tap > **Settings** to customize the emergency alert features.

All materials in this QSG including, without limitation, the design, the text, and any images are the property of LG Electronics MobileComm U.S.A., Inc. Copyright © 2018 LG Electronics MobileComm U.S.A., Inc. ALL RIGHTS RESERVED. LG, LG Life's Good and the LG logo are registered trademarks of LG Corp. Google and Android are trademarks of Google Inc. **Bluetooth**® is a registered trademark of Bluetooth SIG, Inc. worldwide. Wi-Fi® and the Wi-Fi logo are registered trademarks of the Wi-Fi Alliance. All other trademarks and copyrights are the property of their respective owners. Unless otherwise specified herein, all accessories referenced herein are sold separately. All features, functionality, and other product specifications are subject to change.


Visit www.lg.com to view the user guide and more information.

Some content and illustrations may differ from your device depending on the region, service provider, software version, or OS version, and are subject to change without prior notice.

BC

Charging the battery

Charge the device with the USB Type-C cable.

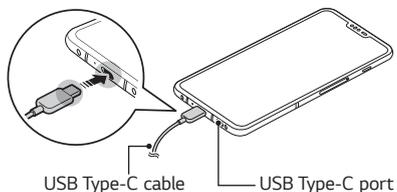

⚠ Warning

- Do not charge while the device or charging cable is wet or contains moisture. This can cause fire, electric shock, injury or damage to device.

📌 NOTE

- A charging adapter that supports fast charging is included with your device.
- Do not use third-party chargers with your device as they may not support fast charging and may cause damage to your device.
- This device is compatible with wireless charging devices approved by LG, which are sold separately.

Precautions when using the device

- Make sure to use the USB cable provided; do not use third party USB cables or chargers with your device. The LG limited warranty does not cover the use of third party accessories.
- Failure to follow the instructions in this guide and improper use may damage the device.

Using the battery efficiently

Battery lifespan may decrease if you keep many apps and functions running simultaneously and continuously. Cancel background operations to increase battery life.

To minimize battery consumption, follow these tips:

- Turn off the Bluetooth® or Wi-Fi network function when not using them.
- Set the screen timeout to as short a time as possible.
- Minimize the screen brightness.
- Set a screen lock when the device is not in use.
- Check the battery usage details and close any downloaded apps that are draining the battery.

Notes on Water Resistant Properties

This product is water and dust resistant in compliance with the Ingress Protection rating IP68. Your product has undergone testing in a controlled environment and is proven to be water and dust resistant in certain circumstances (meets the requirements of classification IP68 as described by the international standard IEC 60529 - Degrees of Protection provided by Enclosures [IP Code]; test conditions: 15-35°C, 86-106kPa, 1.5 meter, for 30 minutes). Do not expose the device in conditions that are different from the test conditions. Results may vary in actual use.

⚠ Warning

- Despite a rating of IP68, your device is not impervious to conditions not tested in LG's controlled environment. Please note that any damages that occur due to such causes make you ineligible for any free-of-charge repair services provided under the product's limited warranty.

Important information about the device

- Device apps and services are subject to change or cancellation without notice.
- When the device is turned on for the first time, an initial configuration takes place. The first time the device boots up may be longer than usual.