





## Parts overview

To turn on the device, press and hold the **END/ Power key** for a few seconds.

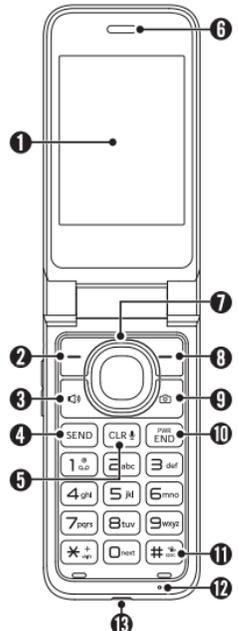

- 1 Home screen
- 2 Left soft key
- 3 Speakerphone key
- 4 Send key
- 5 Clear key/  
Voice commands key
- 6 Earpiece
- 7 OK key /  
Navigation key
- 8 Right soft key
- 9 Camera key
- 10 End/Power key
- 11 Vibrate mode key
- 12 Microphone
- 13 USB/Charger port

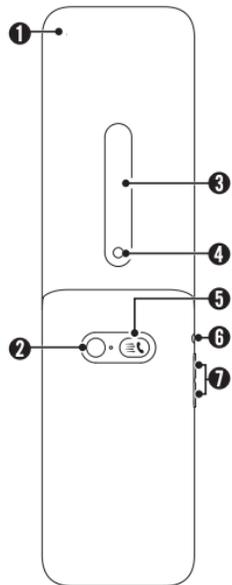

- 1 Microphone
- 2 Speaker
- 3 LED
- 4 Camera lens
- 5 SOS key
- 6 Headset jack
- 7 Volume keys

## Quick Start Guide

All materials in this QSG including, without limitation, the design, the text, and any marks are the property of LG Electronics USA, Inc. Copyright © 2020 LG Electronics USA, Inc. ALL RIGHTS RESERVED. LG, LG Life's Good and the LG logo are registered trademarks of LG Corp. **Bluetooth®** is a registered trademark of Bluetooth SIG, Inc. worldwide. All other trademarks and copyrights are the property of their respective owners. Unless otherwise specified herein, all accessories referenced herein are sold separately. All features, functionality, and other product specifications are subject to change.


Visit [www.lg.com](http://www.lg.com) to view the user guide and more information.

Some content and illustrations may differ from your device depending on the region, service provider, software version, or OS version, and are subject to change without prior notice.




## Installing the SIM card and battery


- 1 With the phone facing down, insert your fingernail into the cutout located on the bottom of the back cover and gently lift the cover.

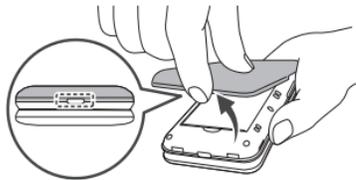


- 2 Slide the SIM card into the SIM card slot with the gold-colored contacts facing down as shown.

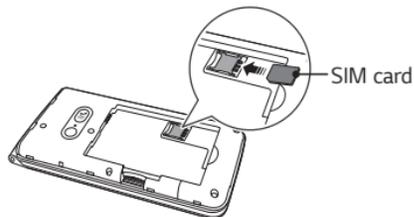

- 3 Insert the battery, making sure the gold contacts line up. Press down gently to secure.

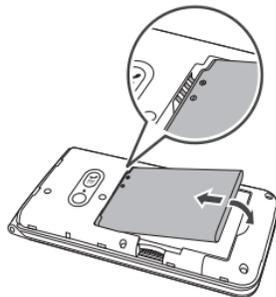

- 4 Place the back cover over the back of the phone and then press down along the edges to secure.

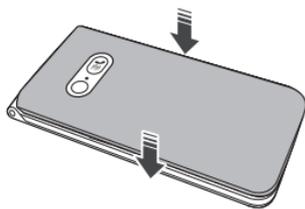

- Follow the instructions in this start guide cautiously when handling the device. Failure to do so may damage the device or cause injury to yourself or others.




- Always use a Nano SIM card supplied by your service provider.
- For problem-free performance, it is recommended to use the phone with the correct type of SIM card. Always use a factory-made SIM card supplied by your service provider.
- The SIM card can be easily damaged by improper operation. Please be careful when inserting, removing, or handling it.

## Charging the battery

Before turning on your phone, charge it fully.

Insert the small end of the USB cable into the phone. Insert the larger end into the charger and plug the charger into an outlet.

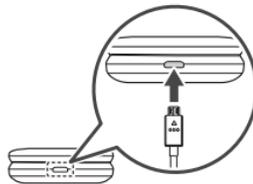

- Do not charge while the device or charging cable is wet or contains moisture. This can cause fire, electric shock, injury or damage to device.
- Make sure to use the USB cable provided with your device.
- Make sure to use an LG-approved charger, battery and charging cable. Charging the battery with a third-party charger may cause the battery to explode or may damage the device.
- Using the device when it is charging may cause electric shock. To use the device, stop charging it.

## Emergency Alerts

You can choose which emergency alerts to receive by changing the settings as follows.

- 1 From the Home screen, press the **OK key** [Menu].
- 2 Press the **9 key** [Settings].
- 3 Press the **1 key** [Wireless & networks].
- 4 Press the **7 key** [Emergency alerts].
- 5 Press the **Right soft key** [Settings] and adjust the settings as desired.

## Important information about the device

- Device apps and services are subject to change or cancellation without notice.
- When the device is turned on for the first time, an initial configuration takes place. The first time the device boots up may be longer than usual.