# ALCATEL mobile phones

www.alcatel-mobilephones.com



mobile phones

# **Table of Contents**

Sa	fety	and use	4
G	ener	al information	9
r	You	ır cellphone	12
	1.1	Keys and connectors	
	1.2	Getting started	14
	1.3	Home screen	18
2	Text input		
	2.1	Using Hardware Keyboard	
	2.2	Using Onscreen Keyboard	28
	2.3	Text editing	28
3	pho	ne call, Call log and Contacts	29
	3.1	Phone	
	3.2	Call log	33
	3.3	Contacts	34
4	Goo	gle Messaging, Gmail/Email, Google Talk and Google Voice.	42
	4.1	Google Messaging	42
	4.2	Gmail/Email	47
	4.3	Google Talk	52
5	God	ogle Calendar & Alarm clock & Calculator	56
	5.1	Google Calendar	56
	5.2	Alarm Clock	58
	5.3	Calculator	59
6	Get	ting connected	61
	6.1	Connecting to the Internet	
	6.2	Browser	64
	6.3	Connecting to Bluetooth devices	72
	6.4	Connecting to a computer via USB	
	6.5	Connecting to virtual private networks	75

7	And	roid Market	77
	7.1	Locate the item you want to download and install	77
	7.2	Download and install	78
	7.3	Manage your downloads	80
8	Mul	timedia applications	82
	8.1	Camera/Camcorder/	82
	8.2	Gallery	85
	8.3	YouTube	87
	8.4	Music	88
9	Goo	gle Maps	91
	9.1	Get My Location	91
	9.2	Search for a location	92
	9.3	Star a location	93
	9.4	Get driving, public transport or walking directions	94
	9.5	Arrangement of Layers	96
	0.7	The trace of a control of the fifth and a control of the control o	07
	9.6	Join Latitude to see your friends' locations and share yours with them	97
10		ers	
10			101
10	Oth	ers	<b>101</b> 101
10	<b>Oth</b> 10.1	ers	101 101 102
10	Oth 10.1 10.2	ers	101 102 102
10	Oth 10.1 10.2 10.3	FileManager	101 102 102
10	Oth 10.1 10.2 10.3 10.4	FileManager	101 102 102 102
10	Oth 10.1 10.2 10.3 10.4 10.5	FileManager Notes	101 102 102 102 102
10	Oth 10.1 10.2 10.3 10.4 10.5 10.6	FileManager  Notes  TaskManager  Videos  Voice Recorder  SyncMLClient	101 102 102 102 104 104
10	Oth 10.1 10.2 10.3 10.4 10.5 10.6 10.7	FileManager  Notes  TaskManager  Videos  Voice Recorder  SyncMLClient  TSCalibration	101 102 102 102 102 104 104
	Oth 10.1 10.2 10.3 10.4 10.5 10.6 10.7	FileManager Notes TaskManager Videos Voice Recorder SyncMLClient TSCalibration Other applications	101 101 102 102 102 104 104 105
	Oth 10.1 10.2 10.3 10.4 10.5 10.6 10.7 10.8 Sett	FileManager  FileManager  Notes  TaskManager  Videos  Voice Recorder  SyncMLClient  TSCalibration  Other applications  ings	101 101 102 102 102 104 104 105
	Oth 10.1 10.2 10.3 10.4 10.5 10.6 10.7 10.8 Sett	FileManager Notes TaskManager Videos Voice Recorder SyncMLClient TSCalibration Other applications ings Wireless & networks	101 102 102 102 104 104 105 <b>106</b>

	11.5	Applications	.114
	11.6	Accounts & sync	.116
	11.7	Privacy	.118
	11.8	SD card, USB Mass Storage & phone storage	.119
	11.9	Search	.120
	11.10	Language & keyboard	.121
	11.11	Accessibility	.122
	11.12	Text-to-speech	.123
	11.13	Date & time	.124
	11.14	About cellphone	.125
12	Mak	ing the most of your cellphone	126
	12.1	PC suite	.126
13	Alca	tel Mobile Phones Limited Warranty	127
14	Acce	essories	129
15	Trou	ıbleshooting	130
16	Spec	cifications	134

# Safety and use.....

We recommend that you read this chapter carefully before using your cellphone. The manufacturer disclaims any liability for damage, which may result as a consequence of improper use or use contrary to the instructions contained herein.

#### TRAFFIC SAFETY:

Given that studies show that using a cellphone while driving a vehicle constitutes a real risk, even when the hands-free kit is used (car kit, headset...), drivers are requested to refrain from using their cellphone when the vehicle is not parked. Check the laws and regulations on the use of wireless telephones and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas.

When driving, do not use your cellphone and headphone to listen to music or to the radio. Using a headphone can be dangerous and forbidden in some areas.

When switched on, your cellphone emits electromagnetic waves that can interfere with the vehicle's electronic systems such as ABS anti-lock brakes or airbags. To ensure that there is no problem:

When switched on, your cellphone emits electromagnetic waves that can interfere with the vehicle's electronic systems such as ABS anti-lock brakes or airbags. To ensure that there is no problem:

- do not place your cellphone on top of the dashboard or within an airbag deployment area,
- check with your car dealer or the car manufacturer to make sure that the car's electronic devices are shielded from cellphone RF energy..

#### CONDITIONS OF USE:

You are advised to switch off the cellphone from time to time to optimize its performance.

Remember to abide by local authority rules of cellphone use on aircrafts.

Switch the cellphone off when you are in health care facilities, except in designated areas. As with many other types of equipment now in regular use, cellphones can interfere with other electrical or electronic devices, or equipment using radio frequency.

Switch the cellphone off when you are near gas or flammable liquids. Strictly obey all signs and instructions posted in a fuel depot, gas station, or chemical plant, or in any potentially explosive atmosphere.

When the cellphone is switched on, it should be kept at least 15 cm from any medical device such as a pacemaker, a hearing aid or insulin pump. In particular when using the cellphone you should hold it against the ear on the opposite side to the device, if any.

To avoid hearing impairment, answer the call before holding your cellphone to your ear. Also move the handset away from your ear while using the "hands-free" option because the amplified volume might cause hearing damage.

It is recommended to have proper supervision while small children use your cellphone.

When replacing the cover please note that your cellphone may contain substances that could create an allergic reaction.

Always handle your cellphone with care and keep it in a clean and dust-free place.

Do not allow your cellphone to be exposed to adverse weather or environmental conditions (moisture, humidity, rain, infiltration of liquids, dust, sea air, etc.). The manufacturer's recommended operating temperature range is -10°C to +55°C (the max value depends on device, materials and housing paint/texture).

Over 55°C the legibility of the cellphone's display may be impaired, though this is temporary and not serious.

Do not open or attempt to repair your cellphone yourself.

Do not drop, throw or try to bend your cellphone.

Do not paint it.

Use only batteries, battery chargers, and accessories which are recommended by TCT Mobile Limited and its affiliates and are compatible with your cellphone model.TCT Mobile Limited and its affiliates disclaim any liability for damage caused by the use of other chargers or batteries.

Your cellphone should not be disposed of in a municipal waste. Please check local regulations for disposal of electronic products.

Remember to make back-up copies or keep a written record of all important information stored in your cellphone.

Some people may suffer epileptic seizures or blackouts when exposed to flashing lights, or when playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout. If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult your doctor before playing video games on your cellphone or enabling a flashing-lights feature on your cellphone. Parents should monitor their children's use of video games or other features that incorporate flashing lights on the cellphones. All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. To limit the likelihood of such symptoms, please take the following safety precautions:

- Play at the farthest distance possible from the screen.

When you play games on your cellphone, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow these instructions to avoid problems such as tendinitis, carpal tunnel syndrome, or other musculoskeletal disorders:

- Take a minimum of a 15-minute break for every hour of game playing.
- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.
- If you continue to have sore hands, wrists, or arms during or after playing, stop the game and see a doctor.



Prolonged exposure to music at full volume using the music player may damage your hearing. Set your cellphone's volume to it's lowest setting prior to inserting headphones in your ears and adjust the volume to your preference. Only use headphones that are recommended by TCT Mobile Limited and it's affiliates.

#### • PRIVACY:

Please note that you must respect the laws and regulations in force in your jurisdiction or other jurisdiction(s) where you will use your cellphone regarding taking photographs, recording sounds and recording videos with your cellphone. Pursuant to such laws and regulations, it may be strictly forbidden to take photographs, record the voices and/or record video of other people or any of their personal attributes, and reproduce or distribute them, as this may be considered to be an invasion of privacy.

It is the user's sole responsibility to ensure that prior authorization be obtained, if necessary, in order to record private or confidential conversations, take a photograph or record a video of another person; the manufacturer, the seller or vendor of your cellphone (including the operator) disclaim any liability which may result from the improper use of the cellphone.

#### BATTERY AND ACCESSORIES:

Before removing the battery from your cellphone, please make sure that the cellphone is switched off. Observe the following precautions for battery use:

- Do not attempt to open the battery (due to the risk of toxic fumes and burns).
- Do not puncture, disassemble or cause a short-circuit in a battery,
- Do not burn or dispose of a used battery in the garbage or store it at temperatures above 60°C.
   Batteries must be disposed of in accordance with locally applicable environmental regulations. Only use the battery for the purpose for which it was designed. Never use damaged batteries or those area. In the commended by TCT Mobile Limited and/or its affiliates.

This symbol on your cellphone, the battery and the accessories means that these

roducts must be taken to collection points at the end of their life:

- Municipal waste disposal centers with specific bins for these items of equipment
- Collection bins at points of sale.

They will then be recycled, preventing reusable material from being disposed of in landfill, so that their components can be reused.

#### In European Union countries:

These collection points are accessible free of charge. All products with this sign must be brought to these collection points.

#### In non European Union jurisdictions:

Items of equipment with this symbol are not be thrown into ordinary bins if your jurisdiction or your region has suitable recycling and collection facilities; instead they are to be taken to collection points for them to be recycled.

In the United States you may learn more about CTIA's Recycling Program at www. recyclewirelessphones.com

**CAUTION:** RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

#### CHARGERS

Home A.C./ Travel chargers will operate within the temperature range of: 0°C to 40°C.

The chargers designed for your cellphone meet with the standard for safety of information technology equipment and office equipment use. Due to different applicable electrical specifications, a charger you purchased in one jurisdiction may not work in another jurisdiction. They should be used for this purpose only.

Characteristics of power supply (depending on the country): Travel charger: Input: 100-240 V, 50/60 Hz, 0.15 A

Output: 5 V, 500 mA
Battery: Lithium 1150 mAh

#### RADIO WAVES:

THIS CELLPHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES

Your cellphone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio-frequency (RF) energy. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. These guidelines include a substantial safety margin designed to ensure the safety of all persons, regardless of age and health.

The exposure standard for cellphones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by public authorities such as the Federal Communications Commission of the US Government (FCC), or by Industry Canada, is 1.6 W/kg averaged over I gram of body tissue. Tests for SAR are conducted using standard operating positions with the cellphone transmitting at its highest certified power level in all tested frequency bands.

Although the SAR is determined at the highest certified power level, the actual SAR level of the cellphone while operating can be well below the maximum value. This is because the cellphone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output of the cellphone Before a cellphone model is available for sale to the public, compliance with national regulations and standards must be shown.

The highest SAR value for this model cellphone when tested is 0.883 W/Kg (OT-980A), 0.701 W/Kg (OT-981A) for use at the ear and 1.11 W/Kg (OT-980A), 1.16 W/Kg (OT-981A) for use close to the body.

While there may be differences between the SAR levels of various cellphones and at various positions, they all meet the government requirement for RF exposure. For body-worn operation, the cellphone meets FCC RF exposure guidelines provided that it is used with a non-metallic accessory with the handset at least 1.5 cm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

The World Health Organization (WHO) considers that present scientific information does not indicate the need for any special precautions for use of cellphones. If individuals are concerned, they might choose to limit their own or their children's RF exposure by limiting the length of calls, or using "hands-free" devices to keep cellphones away from the head and body. (fact sheet n° 193). Additional WHO information about electromagnetic fields and public health are available on the following website: http://www.who.int/beh-emf.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

For the receiver devices associated with the operation of a licensed radio service (e.g. FM broadcast), they bear the following statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

For other devices, they bear the following statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Your cellphone is equipped with a built-in antenna. For optimal operation, you should avoid touching it or degrading it.

As cellphone devices offer a range of functions, they can be used in positions other than against your ear. In such circumstances the device will be compliant with the guidelines when used with headset or usb data cable. If you are using another accessory ensure that whatever product is used is free of any metal and that it positions the cellphone at least 2cm away from the body.

#### LICENCES



microSD Logo is a trademark.



The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by TCT Mobile Limited and its affiliates is under license. Other trademarks and trade names are those of their respective owners.

#### OT-980A/OT-981A Bluetooth QD ID B016877



The Wi-Fi Logo is a certification mark of the Wi-Fi Alliance.

Google, the Google logo, Android, the Android logo, Google Search, Google Maps, Gmail, YouTube, Android Market, Google Latitude and Google Talk are trademarks of Google Inc.

#### **Hearing Aid Compatibility**

Your cellphone is rated: "For Hearing Aid", to assist hearing device users in finding phones that may be compatible with their hearing devices.

This device is HAC M3 compatible.

For more information please refer to "Hearing Aid Compatibility with Mobile Phones" leaflet or visit our website http://www.alcatel-mobilephones.com/

# General information .....

- · Website: www.alcatel-mobilephones.com
- Hot Line Number: In the United States, call 877-702-3444 for technical support.

On our Internet site, you will find our FAQ (Frequently Asked Questions) section. You can also contact us by e-mail to ask any questions you may have.

An electronic version of this user guide is available in English and other languages according to availability on our server: www.alcatelmobilephones.com

Your cellphone is a transceiver that operates on following networks:

OT-980A: GSM/GPRS/EDGE networks in quad-band (850/900/1800/1900 MHz) UMTS in dual-band (850/1900 MHz)

OT-981A: GSM/GPRS/EDGE networks in quad-band (850/900/1800/1900 MHz) UMTS in dual-band (1700/2100 MHz)

# Protection against theft (1)

Your cellphone is identified by an IMEI (cellphone serial number) shown on the packaging label and in the product's memory. We recommend that you note the number the first time you use your cellphone by entering \*#06# and keep it in a safe place. It may be requested by the police or your operator if your cellphone is stolen.

#### Disclaimer


There may be certain differences between the user manual description and the cellphone's operation, depending on the software release of your cellphone or specific operator services.

TCT Mobile shall not be held legally responsible for such differences, if any, nor for their potential consequences, which responsibility shall be borne by the operator exclusively.

This handset may contain materials, including applications and software in executable or source code form, which is submitted by third parties for inclusion in this handset ("Third Party Materials"). All third party materials in this handset are provided "as is", without warranty of any kind, whether express or implied, including the implied warranties of merchantability, fitness for a particular purpose or use/third party application, interoperability with other materials or applications of the purchaser and non-infringement of copyright. The purchaser undertakes that TCT Mobile has complied with all quality obligations incumbent upon it as a manufacturer of mobile devices and handsets in complying with Intellectual Property rights, TCT Mobile will at no stage be responsible for the inability or failure of the Third Party Materials to operate on this handset or in interaction with any other devices of the purchaser. To the maximum extent permitted by law, TCT Mobile disclaims all liability for any claims, demands, suits or actions, and more specifically - but not limited to - tort law actions, under any theory of liability, arising out of the use, by whatever means, or attempts to use, such Third Party Materials. Moreover, the present Third Party Materials, which are provided free of charge by TCT Mobile, may be subject to paid updates and upgrades in the future; TCT Mobile waives any responsibility regarding such additional costs, which shall be borne exclusively by the purchaser. The availability of the applications may vary depending on the countries and the operators where the handset is used; in no event shall the list of possible applications and software provided with the handsets be considered as an undertaking from TCT Mobile; it shall remain merely as information for the purchaser. Therefore, TCT Mobile shall not be held responsible for the lack of availability of one or more applications wished for by the purchaser, as its availability depends on the country and the operator of the purchaser. TCT mobile reserves the right at any time to add or remove Third Party Materials from its handsets without prior notice; in no event shall TCT Mobile be held responsible by the purchaser for any consequences that such removal may have on the purchaser regarding the use or attempt to use such applications and Third Party Materials.

# Your cellphone .....

# I.I Keys and connectors

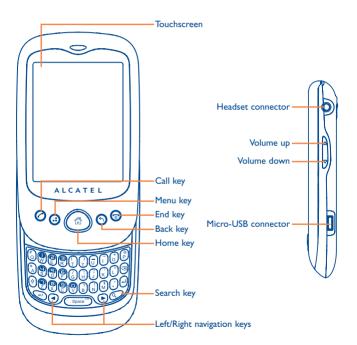

- Answer/Send a call
  - Enter Call Log
  - Return to current call screen if the user navigates to other applications during call.
- On Home screen, press to quickly access Settings menu or Notification panel; to launch quick search; to customize your Home screen by adding applications or changing wallpaper.
  - On other screens, press to view options list.
- Short press: Return to the Home screen or back to the central Home screen if it is extended.

Long press: Enter the recently used applications list.

- 6 Go back to the previous menu or screen.
- Short press: End a call Lock the screen

Long press: When cellphone is off, power on the cellphone.
When cellphone is on, enter Phone options: Silent mode, Airplane mode, Power off.

Press to adjust the Volume (in call/media playing mode)

- Open Search bar for searching within an application, the cellphone or web.
- Press to go left/right
- ALT+ Press to go up/down

# I.2 Getting started

# I.2.I Set-up

# Removing or installing the back cover



# Installing or removing the battery



- Insert and click the battery into place, then close the cellphone cover.
- Unclip the cover, then remove the battery.

#### Inserting or removing the SIM card (1)

You must insert your SIM card to make phone calls. Please power off your cellphone and remove battery before inserting or removing the SIM card.



Place the SIM card with the chip facing downwards and slide it into its housing. Make sure that it is correctly inserted. To remove the card, press and slide it out.

# Installing and removing the memory card (MicroSD card)



 
Insert the MicroSD card with golden contact facing downwards into the slot until it is locked. Gently push the memory card until it is unlocked.



To remove the microSD card while the cellphone is on, you must unmount the storage card (Settings\SD card, USB Mass Storage & phone storage\Unmount SD card) from the cellphone first, to prevent corrupting or damaging the storage card.

<sup>(1)</sup> Check with your network operator to make sure that your SIM card is 3V or 1.8V compatible. The old 5 volt cards can no longer be used.

#### Charging the battery





Inserting the USB connector incorrectly or with excessive force may damage the connector and/or the cell phone. This may void your warranty.

Connect the battery charger.

- Charging may take about 20 minutes to start if the battery is dead.
- · Be careful not to force the plug into the socket.
- · Make sure the battery is correctly inserted before connecting the charger.
- The mains socket must be near to the cellphone and easily accessible (avoid electric extension cables).
- · When using your cellphone for the first time, charge the battery fully (approximately 3 hours).

You are advised to fully charge the battery (



Charging is complete when the animation stops **[[[2**].



# **1.2.2** Power on your cellphone

Hold down the **End** key until the cellphone powers on, type in your PIN code if necessary and then confirm. The Home screen is displayed.

If you do not know your PIN code or if you have forgotten it, contact your network operator. Do not leave your PIN code with your cellphone. Store this information in a safe place when not in use.

#### Set up your cellphone for the first time

The first time you power on the cellphone, you are required to touch the Android logo to begin and then sign into your Google Account to synchronize email, contacts, calendar and other Google applications <sup>(1)</sup>.



- Enter your user name and password, then touch Sign in. If you forget your password, you can go to http://www.google.com/ to retrieve it. If you don't own a Google Account, you are prompted to create one by touching Create.
- · Read the setup information on the screen, then touch Next.
- Set up the date and time, then touch Next.
- Touch Finish setup.

In power on screen without SIM card inserted, you can also connect to a Wi-Fi network (refer to section 6.1.2 Wi-Fi) to sign into your Google Account and to use some features.

<sup>(1)</sup> Application availability depends on country and operator.



Data charge may apply for accessing your Google account via your carrier's network. Please consult your carrier for an appropriate data plan suitable for your need. This initial set up can be skipped and enable via **Settings\Accounts & sync**.

# **1.2.3** Power off your cellphone

Hold down the **End** key from the Home screen until the cellphone options appear, select **Power off**.

#### 1.3 Home screen

You can bring all the items (applications, shortcuts, folders and widgets) you love or use most frequently to your Home screen for quick access. Press **Home** key to switch to Home screen.



Home screen consists of multiple pages to allow more space for adding applications, shortcuts etc. Slide the Home screen horizontally left and right to view different pages.

Small dots at the lower left and right corner of each page indicate which page you are viewing.

# I.3.1 Using the touchscreen

#### Touch

To access an application, touch it with your finger.

#### Touch and Hold

To enter the available options for an item, touch and hold the item. For example, select a contact in Directory, touch and hold this contact, an option list will then appear on screen.

#### Drag

Place your finger on the screen to drag an object to another location.

#### Slide/Swipe

Slide the screen to scroll up and down the applications, images, web pages... at your convenience.

#### **Flick**

Similar to swiping, but flicking makes it move quicker.

#### Rotate(1)

Automatically change the screen orientation from portrait to landscape by turning the cellphone sideways to have a better screen view.

#### 1.3.2 Status bar

From status bar, you can view both cellphone status (to the right side) and notification information (to the left side). When the status bar is full, "G" icon will appear, touch to display hidden icons.

<sup>(1)</sup> Not all applications support screen rotation.

# Status icons

Ģ	GPRS connected	<b>C</b> v	Speakerphone is on
G ++	GPRS in use	fil	Roaming
E	EDGE connected	×	No signal
	EDGE in use		No SIM card installed
36	3G connected		Vibrate mode
===	3G in use	⊫×	Ringer is silenced
ø	HSPA (3G+) connected	¥	Cellphone microphone is mute
1	HSPA (3G+) in use		Battery is very low
(11)	Connected to a Wi-Fi network		Battery is low
*	Bluetooth is on	•	Battery is partially drained
*	Connected to a Bluetooth device		Battery is full
¥	Airplane mode	Œ	Battery is charging
Ó	Alarm is set	•	GPS is on
E	Signal strength	<b>S</b> 20	Receiving location data from GPS
(3)	Headset connected		

#### **Notification icons**

M	New Gmail message	G	More notifications are hidden
<b>9</b>	New text or multimedia message	C	Call in progress (green)
<b>F</b>	Problem with text or multimedia message delivery	C	Call in progress using Bluetooth headset (blue)
talk (	New Google Talk message		Missed call
ಹ	New voicemail	G	Call on hold
1	Upcoming event	C.	Call forwarding is on
0	Data is synchronizing	<u>û</u>	Uploading data
<b>Q</b>	Problem with sign-in or synchronization	<u> </u>	Downloading data
<b>B</b> j	microSD card is full		Download finished
<b>193</b>	An open Wi-Fi network is available	<b>©</b>	Connected to VPN
Ψ	Cellphone is connected via USB cable	<u>c</u> -	Disconnected from VPN
	Song is playing	<u>.</u>	System update available

# **Notification panel**

Touch and drag down the Status bar or press **Menu** key and touch **Notifications** to open the notification panel. Touch the bottom of the screen and drag up to close it. From Notification panel, you can open items and other reminders indicated by notification icons or view wireless service information.



Touch clear all event-based notifications (other ongoing notifications will remain).

#### 1.3.3 Search bar

The cellphone provides a Search function which can be used to locate information within applications, the cellphone or the web.



## Search by text

- Touch from Home screen or press Search key from other applications screen.
- Enter the text/phrase you want to search for.

#### Search by voice

- Touch from Search bar to display a dialog screen.
- Speak the word/phrase you want to search for. A list of search results will display for you to select from.

# 1.3.4 Lock/Unlock your screen

To protect your cellphone and privacy, you can lock the cellphone screen by creating a variety of patterns.

To create a screen unlock pattern (refer to section II.4.2 for detailed settings)

- Press Menu key from the home screen, touch Settings, then touch Location & Security\Screen unlock pattern.
- Draw your own pattern, you can also press Menu key for help.



# To lock cellphone screen

Press End key once to lock the screen.

#### To unlock cellphone screen

Draw the unlock pattern you have created to wake up the screen. If you did not set the unlock screen, drag the green lock icon to the right to unlock it.



# 1.3.5 Personalize your home screen

#### Add

Touch and hold an empty area or press **Menu** key and touch **Add** on the Home screen. The **Add to Home screen** will appear, offering a range of options.

• **Shortcuts** To add a shortcut to Home screen, such as

applications, bookmark, contact, etc.

• Widgets To add a widget to Home screen, such as clock,

music player, etc.

• Folders To add a folder to Home screen, such as new

folder, contact folder, etc.

To improve the organization of the Home screen items (shortcuts, widgets), you can add them to a folder by touching and dragging them onto the folder of your choice. To rename a folder, open it, touch and hold the folder's title bar to open the Rename folder dialog box, then enter the new folder name and confirm with **OK**.

#### Reposition

Touch and hold the item to be repositioned to activate the Move mode, drag the item to the desired position and then release. Hold the icon on the left or right edge of the screen to drag the item to another Home screen page.

#### Remove

Touch and hold the item to be removed to activate the Move mode, drag the item to the top of the Application tab, which will then turn red, and release

# Wallpaper customization

Touch and hold an empty area or press Menu key and touch Wallpaper on the Home screen, a popup window named Select wallpaper from will appear, offering a range of options. Pictures includes pictures you have taken, cropped or downloaded. Wallpaper gallery includes all preset wallpapers in the cellphone. Slide left and right to locate a desired image, touch Set wallpaper to confirm.

# 1.3.6 Application tab

Touch or drag up the on Home screen to enter applications list.

To close it, touch or drag it down.

#### Consult recently-used applications

To consult recently-used applications, you can press and hold the **Home** key from Home screen. Touch an icon in the window to open the related application.



# 1.3.7 Volume adjustment

# Using volume key

Press **Volume up/down** key to adjust the volume. While in the lowest volume level (Silent mode), press **Volume down** key once, your cellphone will now be switched to Vibration mode. Press **Volume up** key once in Vibration mode and it will change to silent mode.

## **Using Settings menu**

Press **Menu** key from Home screen, then touch **Settings\Sound & display**, you can set ringer, media and cellphone ringtone volume to your preference.

Besides the above two ways, you can also switch between silent mode and normal mode easily, refer to section 1.3.4.

# **2** Text input ......

Your cellphone is equipped with two kinds of keyboard: Hardware Keyboard and Onscreen Keyboard.

# 2. I Using Hardware Keyboard

Slide up the cellphone to enable the Hardware Keyboard. Please avoid pressing on the screen when slide up the cellphone.




- Press once: Input a capitalized character (cursor shape: 人)
  Shift+Space: to select input method
  Press twice: Lock the keyboard in capital letter input mode (cursor shape: 人).
- Press once: Input a top-half character (cursor shape: \(\forall \))

  Press twice: Lock the keyboard in top-half key input mode (cursor shape: \(\forall \)).
- Enter a space

  ALT+Space: to enter symbol table
  - Confirm an option
    Enter the next line
  - Delete a word or character

# 2.2 Using Onscreen Keyboard<sup>(1)</sup>

Onscreen keyboard will display automatically when a program requires entering text or numbers.

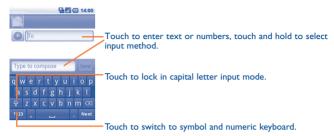

#### Onscreen keyboard settings

Press Menu key from Home screen, select Settings\Language & Keyboard settings\Android keyboard, a series of settings are available for your selection.

## Adjust the onscreen keyboard orientation

Turn the cellphone sideways or upright to adjust the onscreen keyboard orientation. You can also adjust it by settings (Press **Menu** key on Home screen\**Settings\Sound & display**).

# 2.3 Text editing

You can edit the text you have entered.

- · Touch and hold text you have entered
- · An option list pops up
- Select the operation you need (Select all, Select text, Cut all, Copy all, etc.)
- (1) The onscreen keyboard will not show if the cellphone is in the slide up position.

# 3 Phone call, Call log and Contacts.....

# 3.1 Phone .....



#### 3.1.1 Placing a call

The user can easily start a call using Phone.

Enter this menu using one of the following two ways:

- Touch Application tab from Home screen and select Phone.
- Press Call key, then select Phone tab.



Enter the desired number from the keyboard directly or select a contact from Contacts, Call log or Favorites by touching tabs, then press Call key or touch to place the call. The number you entered can be saved to Contacts by pressing Menu key and touching Add to contacts.

If you make a mistake, you can delete the incorrect digits by touching a.

To hang up a call, press End key.

#### International call

To dial an international call, touch and hold to enter "+", then enter the international country prefix followed by the full cellphone number and finally touch or press Call key.

# **Emergency call**

If your cellphone has network coverage, dial emergency number and press Call key or touch to make an emergency call. This works even without a SIM card and without typing the PIN code.

# 3.1.2 Answering or rejecting a call



When you receive an incoming call, drag the green cellphone icon to the right or press **Call** key to answer. Hang up the call by pressing **End** key.

When you receive an incoming call, but don't want to answer, you may decline it by dragging the red cellphone icon to the left. The caller is sent directly to your voicemail box to leave a message.

To reduce the ringtone volume of an incoming call, press **Volume down** key.

# 3.1.3 Calling your voicemail

Your voicemail is provided by your network to avoid missing calls. It works like an answering machine that you can consult at any time.

To access your voicemail, touch on Phone tab.

To set your voicemail number, enter **Settings\Call settings\Voicemail settings**.

If you receive a voicemail, a voicemail icon appears on the Status bar. Open the Notification panel, touch **New voicemail**.

# 3.1.4 During a call

When a call is in progress, press **Menu** key to open the call options. To adjust the volume during a call, press **Volume Up/Down** key.



Hold	Touch to hold the current call. Touch this icon again to release the call.
Mute	Touch to mute the current call. Touch this icon again to unmute the call.

Touch to activate the speaker during the current call. Touch this icon again to deactivate the speaker.

Touch to switch between Bluetooth headset and the cellphone.

Touch to end the current call.

# 3.1.5 Managing multiple calls

With this cellphone you can handle multiple calls at the same time.

## Swap calls

When you accept two calls, press **Menu** key to open option list, and touch icon . You can now switch between two lines. The current call is put on hold and you have joined in the other call.

#### Conference calls (1)

You can set up a conference call.

- Place a call to the first participant of the conference call.
- Press Menu key to display the option list, touch icon
- Enter the cellphone number of the person you want to add to conference and press Call key. You can also add participants from Contacts, Call log or Favorites.
- Press Menu key again, then touch icon to start conference call.
- During a conference call, touch Manage to drop a participant or to talk privately to one of the participants. Touch not to drop the participant from the conference, touch to talk privately to the participant and hold on other participants.
- Touch and or press End key to end the conference call and disconnect all callers.

Depending on your network operator.

# 3.2 Call log

You can access your call memory by pressing **Call** key from the Home screen and touching **Call** log tab. Touch to the right side of contact/ number to place a call directly. There are three kind of calls in **Call** log:

Missed calls

Dialled calls

Received calls

Touch or touch & hold a contact or number to view information or further operations.

You can view detailed information of a call, launch a new call or send message to a contact or number, or add number to Contacts (only available for cellphone numbers), etc.

To clear the entire call memory, press **Menu** key then touch **Clear call log**.

# 3.3 Contacts.....



**Contacts** enables quick and easy access to the people you want to reach.

 
You can view and create contacts on your cellphone and synchronize these with your Gmail contacts or other applications on the web or on your cellphone.



When using **Contacts** for the first time you are required to add new contacts, import contacts from SIM card (please refer to section 3.3.5 for detailed information), or synchronize contacts from other application accounts to your cellphone.

## 3.3.1 Consult your Contacts

To access the **Contacts**, touch **Application tab** on the Home screen, then select **Contacts**. You can also access this feature by pressing **Call** key, then selecting the **Contacts** tab.



You can also press Menu key to display contact list option menu.

Following actions are enabled:

Search

Now contact

More\Delete contacts

New Contact	Add new contact to celiphone.
Display options	Choose contacts to display, for example only contacts with cellphones, other application contacts if any, etc.
• Accounts	Manage the synchronization settings for different accounts.
• Import/export	Import or export contacts between cellphone, SIM card, and MicroSD card.
• More\Sync	Launch synchronization with the account you set.

Search for a contact in cellphone.


Add now contact to collabora

Select and delete unwanted contacts.

## 3.3.2 Adding a contact

Press Menu key from contact list screen and touch New contacts.

You are required to enter the contact's name and other contact information. By scrolling up and down the screen, you can move from one field to another easily.

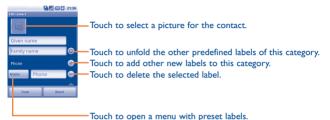

When finished, touch **Done** to save.

#### Add to/remove from favorites

To add a contact to favorites, touch and hold a contact to display the contact's option menu, then touch **Add to favorites**. Or you can also touch a contact to view details then touch to add the contact to favorites (the star will turn gold in color).

To remove a contact from favorites, select **Remove from favorites** on the contact's option menu or touch gold star on contact details screen.

## 3.3.3 Editing your contacts

To edit contact information, touch and hold the contact whose information is to be edited, then touch **Edit contact**. When finished, touch **Save**.

## Change a contact's default cellphone number

The default cellphone number (the number which has priority when making a call or sending a message) will always be displayed under the contact name. To change the default cellphone number, touch and hold the number you want to set as the default number from the contact's details screen, then select **Make default number**. A ppears after the number.

### Divert calls to voicemail/Set ringtone for a contact

On the contact's detail screen, press **Menu** key to display contact list option menu, and touch **Options**, then select **Incoming calls** or **Ringtone**.

When one contact has been set to send calls directly to voicemail, if he/she calls, your cellphone doesn't ring and the caller will be sent directly to your voicemail.

#### Delete a contact

To delete a contact, press **Menu** key and touch **Delete contact** from contact details screen or directly touch & hold a contact from Contacts screen to display contact list option menu then touch **Delete contact**. Touch **OK** to confirm.



The contact you have deleted will also be removed from other applications on cellphone or web the next time you synchronize your cellphone.

## 3.3.4 Communicating with your contacts

From the contacts list, you can communicate with your contacts by making a call or exchanging messages.

To launch a call to a contact, locate the contact or number your want to call, then press **Call** key or touch . You can also touch & hold the contact or number, then touch **Call contact**.

To send a message to a contact, touch & hold the contact or number you want to send a message to, then touch **Text contact**. You can also touch to the right side of the contact from contact details screen.

#### Use Quick contact for Android

Touch a contact's picture to open Quick Contact for Android, you can touch the icon for the way you want to connect.



The icons available on Quick contact bar depend on the information you have for the contact and the applications and accounts on your cellphone.

## 3.3.5 Contacts importing, exporting and sharing

This cellphone enables you to import contacts from a SIM card/MicroSD card and export contacts to a MicroSD card which can then be used to back up your information.

From Contacts screen, press **Menu** key to open contact list option menu, touch **Import/Export**, then select **Import from SIM**, **Import from SD card**<sup>(1)</sup> or **Export to SD card**<sup>(2)</sup>.

To import/export a single contact, touch the contact your want to import/export, then **Done**.

To import/export all contacts, press **Menu** key, then touch **Import all/ Export all**.

You can share a contact with others by sending the contact's vCard to them via Bluetooth, MMS, Email, etc.

Touch a contact you want to share, press **Menu** key and touch **Share** from contact details screen, then select the application to perform this action.

## 3.3.6 Displaying contacts

You can configure which groups of contacts, for each account, you want to display in the Contacts list. To hide/display contacts that don't have cellphone numbers, press **Menu** key from contacts list screen, touch **Display options**, then activate or deactivate **Only contacts with phones** by touching it. Finally, touch **Done** to save.

<sup>(1)</sup> The vCard file should be placed in the root directory for the handset software to locate it quickly.

When exporting contacts to the memory card, the saved vCard file will reside in root directory and you can back up the file by copying the file from that directory to a safe location.

## 3.3.7 Joining/Separating contacts

To avoid duplication, you can add any new contact information to existing contacts in a single action.

Touch the contact which you want to add information to, press **Menu** key and touch **Edit contact**, then press **Menu** key again and touch **Join**.

At this time, you are required to select the contact whose information you want to join with the first contact. The information from the second contact is added to the first one, and the second contact will on longer be displayed in the Contacts list.

To separate contact information, touch the contact whose information you want to separate, press **Menu** key and touch **Edit contact**, then press **Menu** key again and touch **Separate contact**.

#### 3.3.8 Accounts

Contacts, data or other information can be synchronized from multiple accounts, depending on the applications installed on your cellphone.

To add an account, press **Menu** key from Contacts list, touch **Accounts**, then touch **Add account** tab; or access it by pressing **Menu** key from Home screen, touch **Settings**, then selecting **Accounts & Sync** and finally touching **Add account** tab.

You are required to select the kind of accounts to add, like Google, Facebook, etc.

As with other account set-ups, you need to enter detailed information, like username, password, etc.

You can remove an account to delete it and all associated information from the cellphone.

Open the **Accounts & Sync Settings** screen, touch the account you want to delete, then touch **Remove account** and confirm.

#### Useful icons:



Indicates that the account is configured to synchronize automatically with your cellphone.



Indicates that the account is not configured to synchronize automatically with your cellphone.

#### **Background data**

Activate or deactivate **Background data** to control whether applications or services data can be transmitted when they are running in the background. Applications can synchronize, send, and receive data at any time if activated.

For example, if deactivated, Gmail will stop receiving new emails until you touch the **Refresh** or send an email.

### **Auto-sync**

When activated, all changes to information on the cellphone or online will be automatically synchronized to each other.

## Sync manually

You can synchronize an account manually on **Accounts & Sync Settings** screen by pressing **Menu** key and touching **Sync now**.

## Google Messaging, Gmail/ Email, Google Talk and Google Voice .....

#### Google Messaging ..... 4.1



You can create, edit and receive SMS and MMS with this cellphone.

To access this feature, touch Application tab from Home screen, then select Messaging.



All messages you receive or send out can only be saved in cellphone memory. To consult messages stored in SIM card, press Menu key from Messaging screen, then touch Settings\Manage SIM card message.

#### 4.1.1 Create message

On message list screen, touch New message to create text/multimedia messages.

## Sending a text message

Enter cellphone number of the recipient on To bar, touch Type to compose bar to enter the text of the message. When finished, touch Send to send the text message.

An SMS message of more than 160 characters will be charged as several SMS. When the total number of characters you have entered is approaching the 160-character limit, a counter will appear on the top right corner of the text box to remind you how many characters are allowed to be entered in one message.

## Sending a multimedia message

MMS enables you to send video clips, images, photos, animations, slides and sounds to other compatible mobiles and e-mail addresses.

An SMS will be converted to MMS automatically when media files (image, video, audio, slides, etc.) are attached or Subject or email addresses added.

To send a multimedia message, enter the recipient's cellphone number in the **To** bar, touch **Type to compose** bar to enter the text of the message. Press **Menu** key to open the option menu, touch **Add subject** to insert a subject, and touch **Attach** to attach picture, video, audio or slide. When finished, touch **Send** to send the multimedia message.

select a picture as attachment.

Access Gallery application or File manager to

Access Camera to capture a new picture for

Enter voice message recorder to record a voice

Access Callery application or File manager

### Attach options:

Capture picture

Record audio

Pictures


• Vidoos

Videos	select a video as attachment.
• Capture video	Access Camcorder to record a new video for attaching.
• Audio	Access to select an audio file as attachment.

attaching.

message for attaching.
 Contact Access Contacts to attach a vCard of a contact.
 Appointment Access Calendar to attach an appointment.

Slide show
 Enter Edit slide show screen, touch Add slide to create a new slide, and touch currently existing slide to edit it (see following picture). Press Menu key to get more actions, like setting the slide duration, adding music, etc.

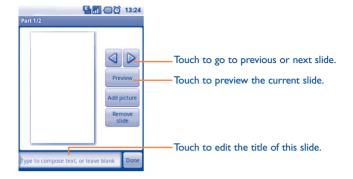

## 4.1.2 Manage messages

When receiving a message, an icon will appear on status bar as notification. Drag down the status bar to open Notification panel, touch the new message to open and read it. You can also access the Messaging application and touch the message to open.

Messages are displayed in conversational order.

To reply to a message, touch the current message to enter message-composing screen, enter the text, then touch **Send**.

To return to the message list from a text message thread, press **Menu** key and then touch **All threads**.

Touch and hold a message in message details screen. The following message options are available for selection:

**Forward** Touch to forward the message to another recipient.

Lock/Unlock message

Touch to lock/unlock the message so it can/can't be deleted if you reach maximum number of

stored messages.

View message

Touch to view details of the message.

details

**Delete message** Delete the current message.

Copy message text Copy the current message content. You can paste

it to the enter bar of the new message you are

going to compose.

## 4.1.3 Adjust message settings

You can adjust a set of message settings. From Messaging application screen, press **Menu** key and touch **Settings**.

## Storage settings

Delete old Select to delete old messages when the maximum messages number of stored messages is reached.

• Text message limit Touch to set number of text messages to save.

 Multimedia message limit

Service center

Touch to set number of multimedia messages to save.

illessage illilic save

Touch to view service center number.

### Text message settings

 Delivery reports Select to request a delivery report for each text message you send.

Manage SIM card messages
 Touch to manage text messages stored on your SIM card.

## Multimedia message settings

 Delivery reports Select to request a delivery report for each multimedia message you send.

 Read reports
 Select to request a report on whether each recipient has or has not read a multimedia message sent by you.

 Auto-retrieve Select to download the full MMS message (including message body and attachment) automatically to your cellphone. Otherwise, download only the MMS message header.

 Roaming autoretrieve
 Select to download the full MMS message (including message body and attachment) automatically when roaming. Otherwise, download only the MMS message header to avoid extra charges.

• Maximum message Touch to set maximum message size.

#### **Notification settings**

 Notifications Select to display message notifications in status bar.

• Select ringtone Touch to select a ringtone as a new message notification tone

 Vibrate Select to have cellphone vibrate as a notification when receiving a new message.

#### 4.2 Gmail/Email

The first time you set up your cellphone, you can select to use an existing Gmail or to create a new Email account.

## 4.2.1 Gmail .....

As Google's web-based email service, Gmail is configured when you first set up your cellphone. Gmail on your cellphone can be automatically synchronized with your Gmail account on the web. Unlike other kinds of email account, each message and its replies in Gmail are grouped in your inbox as a single conversation; all emails are organized by labels but not by folders.

#### To access Gmail

From Home screen, touch the Application tab to enter the application list, then touch **Gmail**.

Gmail displays messages and conversations from one single Gmail account at a time, if you own more than one account, you can switch to another by pressing **Menu** key from Inbox screen, touching **Accounts**, then touching the account your want to view.

#### To create and send emails

- Press Menu key from Inbox screen, and touch Compose.
- Enter recipient(s)'s email address in To field, and if necessary, press Menu key and touch Add Cc/Bcc to include a copy or a blind copy to the message.
- · Enter the subject and content of the message.
- Press Menu key, touch Attach to send an attachment to the receiver.
- Finally, touch Send.

 If you do not want to send the mail out right away, you can touch Save as draft to save copy. To view the draft, press Menu key and touch View labels, then select Drafts.

If you do not want to send or save the mail, you can touch **Discard**.

To add a signature to emails, press **Menu** key from inbox screen, and touch **Settings**, then select **Signature**.

#### To receive and read your emails

When a new email arrives, you will be notified by a ringtone or vibration, and an icon will appear on Status bar.

Touch and drag down the Status bar to display the Notification panel, touch the new email to view it. Or you can also access the Gmail Inbox label and touch the new mail to read it.

If you want to go back to the Inbox label while reading a new message, you can press **Back** key or press **Menu** key and touch **Back to inbox**.

The Google Talk online status is shown next to the name of the sender of each email. Touch this indicator to open Quick Contact.

You can search for an email by sender, by subject, by label, etc.

- from inbox screen, press Menu key and then touch Search
- enter the keyword you want to search for in the searching box and touch search icon.

## To reply or forward emails

When viewing an email, you will see three icons offering further options at the bottom of the conversation.

• Reply/ Reply to all Touch to enter text-inputting mode, enter the message you want to reply, then touch **Send** to send this message to one single recipient or all people in a mail loop.

Forward

Touch to forward the message to another person. You are required to enter the new recipient's email address and then touch **Send**.

### Managing Gmails by Label

To conveniently manage conversations and messages, you can organize them using a Label.

To label a conversation when reading a conversation's messages, press **Menu** key and touch **Change Labels** and select the label to assign to the conversation.

To view conversations by label when viewing your inbox or another conversation list, press **Menu** key and touch **View labels**. Touch a label to view a list of conversations with that label.

#### Touch and hold an email to produce the following options:

• Archive	To archive the email message. To display the
	archived messages, you can press <b>Menu</b> key in inbox screen and touch <b>View labels</b> , then <b>All mail</b> .

 Mute To mute the entire conversation. When muted, new mails related to this conversation will not be displayed in Inbox, but archived.

• Mark read/Mark To mark an email message as read or unread.

• **Delete** To delete the email message.

Add star/Remove To assign a star or remove the star from the star
 conversation.

• **Report spam** To report the email message/conversation as spam.

 Change labels To add or change the label of the email message or conversation.

## **G**mail settings

To manage Gmail settings, press Menu key in Inbox screen and touch Settings.

Signature	To add a signature text to the end of each mail you send.
• Confirm delete	Select to activate a query when deleting a message or conversation, for double confirmation.
• Batch operation	Select to add conversation to a batch for further operation, like archive, delete, change label, etc.
• Clear search history	Touch to remove the search history.
• Labels	Touch to open the Label screen, where you can manage conversation synchronization.
• Email notifications	Select to activate notification when a new email arrives.
• Select ringtone	Touch to select a ringtone as notification tone when a new email arrives.
• Vibrate	Select to activate vibration as notification method when a new email arrives.

## 4.2.2 Email.....



Besides your Gmail account, you can also set-up external POP3 or IMAP email accounts in your cellphone.

To access this function, touch Application tab from Home screen, then select **Email**.

An email wizard will guide you through the steps to set-up an email account

- Enter the email address and password of the account you want to setup.
- Touch Next. If the account you entered is not provided by your service
  provider in the cellphone, you will be prompted to go to the email
  account settings screen to enter settings manually. Or you can touch
  Manual setup to directly enter the incoming and outgoing settings for
  the email account you are setting up.
- Enter the account name and display name in outgoing emails.
- Touch Done.
- To add another email account, you can press Menu key and touch Add account to create.

#### To create and send emails

- Press Menu key from Inbox screen, and touch Compose.
- Enter recipient(s)'s email address in To field, and if necessary, press Menu key and touch Add Cc/Bcc to include a copy or a blind copy to the message.
- · Enter the subject and content of the message.
- Press Menu key, touch Attach to send an attachment to the receiver.
- · Finally, touch Send.
- If you do not want to send the mail right away, you can touch Save as draft or press Back key to save a copy.

## 4.3 Google Talk.....



Google's instant messaging service, Google Talk, lets you communicate with your friends whenever they are connected to this service.

To access this feature and sign in, touch Application tab from Home screen, then touch **Talk**. All friends added by using Google Talk from the web or cellphone will be displayed in your friends list.

Touch on to set your online status.

Available

Busy

Away

X

Signed out

Invisible

Touch the text box on the left of your online status icon and then enter your status message.

To sign out, press **Menu** key from Friends list to display options, touch **More** and then select **Sign out**.

## 4.3.1 Chatting with your friends

To start a chat, touch the name of a friend in your Friends list, then enter your message and finally touch **Send**.

You can invite other friends to join in a group chat by pressing **Menu** key, touching **Add to chat** and then select the friend you want to add.

When chatting with more than one friend, you can switch screens by pressing **Menu** key, then touching **Switch chats**.

To return to Friends list screen, press **Menu** key, then touch **Friends list**.

#### 4.3.2 To add a new friend

From Friends list, press **Menu** key to open Option list and touch **Add Friend** to add a new friend. Enter the Google Talk ID or Gmail address of the friend you want to add, and then touch **Send invitation**.

A notification with this invitation will be received by the friend. By touching the invitation, the friend can select **Accept** or **Cancel** in response.

You can also check all invitations you have sent or received by pressing **Menu** key from Friends list and touching **Invites**.

#### 4.3.3 To close a chat

When you want to end a chat, the following two ways are available:

- From Friends list screen, touch and hold the friend you want to stop chatting with to open Option menu, touch End chat.
- Press Menu key from chatting screen directly, and then touch End chat.

## 4.3.4 To manage your friends

Besides adding new friends to your friends list, the following actions are available for your choice:

most popular friends

• To view all friends/ By default, only friends that you frequently communicate with are displayed in Friends list. To view all friends, press Menu key, then touch All friends. To return to displaying most popular friends screen, press Menu key again, then touch Most popular.

 To make a friend popular

To ensure a friend is always displayed in your Most popular list, touch and hold the friend's name until the options menu pops up, then touch Always show friend. To remove a friend from Always show friend, touch and hold the friend, and touch Auto show friend

To block a friend

To block a friend from exchanging messages and remove them from your friends list, touch and hold the friend, then touch Block friend. All blocked friends can be viewed by pressing Menu key and touching **Blocked**. To unblock a friend, touch the name of this friend and touch **OK** when prompted.

## 4.3.5 Settings

A series of settings are available for your selection by pressing **Menu** key from Friends list screen, touch **More** and then **Settings**.

• IM notifications	Select to activate notification function on status bar when a new message arrives. You can also set a notification ringtone by touching <b>Select ringtone</b> or select <b>Vibrate</b> to activate vibration alert for this service.
Mobile indicator	Select to display an indicator icon along with your name in other people's Friends list.
<ul> <li>Automatically sign-in</li> </ul>	Select to sign in to your Google Talk account automatically every time you turn on your cellphone.

Automatic away-	Select to set status as Away when the screen is
status	turned off.

• Clear search history Touch to clear previous chat searches history from showing up in the Search box.

# Google Calendar & Alarm clock & Calculator....

## 5.1 Google Calendar.....




Use Google Calendar to keep track of important meetings, appointments, etc.

To access this function, touch Application tab from Home screen, then touch Calendar.

## 5.1.1 Multimode view

You can display the Calendar in daily, weekly, monthly, or agenda view.

To change your Calendar view, press **Menu** key, then touch **Day**, **Week**, **Month** or **Agenda**.

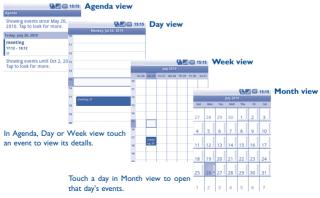

#### 5.1.2 To create new events

You can add new events from any Calendar view.

- Press Menu key from Calendar screen, and touch New event to access new event edit screen.
- Fill in all required information for this new event. If it is a whole-day event, you can select All day.
- Invite guests to the event. Enter the email addresses of the guests you want to invite with commas to separate. If the guests use Google Calendar, they will receive an invitation from Calendar and email.
- When finished, touch **Done** from the end of the screen.

To quickly create an event from Day, Week or Month view screen, touch and hold an empty spot or an event to open Option menu, then touch **New event** to enter the event details screen of the time you have previously selected.

#### 5.1.3 To delete or edit event

To delete or edit an event, touch the event to enter details screen, press **Menu** key, touch **Edit event**, or **Delete event**.

#### 5.1.4 Event reminder

If a reminder is set for an event, the upcoming event icon 1 appears on Status bar as a notification when the reminder time arrives.

Touch and drag down the status bar to open notification panel, touch event name to view Calendar notification list.

Touch Snooze all to turn off all event reminders for 5 minutes.

Touch Dismiss all to delete all reminders from the list.

Press **Back** key to keep the reminders pending in the status bar and notification panel.

Important options by pressing Menu key from Calendar main screen:

More	My calendars	To show or hide, remove or add calendars
More	Settings	To set a series of Calendar settings

## 5.2 Alarm Clock.....



Your cellphone has a built-in alarm clock.

To access this function, touch the Application tab from Home screen, then touch **Alarm Clock**.

A clock graphic will display on the main screen of this application by default, you may select to hide it by pressing **Menu** key and touching **Hide clock**.

#### 5.2.1 To set an alarm

From Alarm clock screen, touch a currently existing alarm or press **Menu** key and touch **Add alarm** to enter the alarm editing screen.

• **Time** Touch to set time.

• Ringtone Touch to select a ringtone for the alarm

Vibrate Select to activate vibration

Repeat Touch to select days you want alarm to sound

• Label Touch to set a name for the alarm

When finished touch **Done** to confirm.

## 5.2.2 To adjust alarm settings

Press **Menu** key from main screen, then touch **Settings**. The following options can now be adjusted:

• Alarm in silent Select to play alarm with sound or vibration even when the cellphone is in Silent mode

• Alarm volume Touch to set volume of alarms

• Snooze duration Touch to set temporary turn off time of an alarm

• Side button Touch to set side Volume up/down key behaviors behavior when alarm sounds: None, Snooze or Dismiss

## 5.3 Calculator.....



With Calculator, you can solve many mathematical problems.

To access this function, touch Application tab from Home screen, then touch **Calculator**.

There are two panels available: Basic panel and Advanced panel.

To switch between panels, select one of the following two ways:

- Touch and drag the basic screen to the left to open the Advanced panel.
- Or press Menu key from basic panel to open option menu and touch Advanced panel.





Enter a number and the arithmetic operation to be performed, and enter the second number, then touch "=" to display the result. Touch **CLEAR** to delete digits one by one, touch and hold **CLEAR** to delete all at one time. You can clear the calculator's history by pressing **Menu** key and touching **Clear History**.

When some number or operations have been entered, touch and hold the entering bar to open a menu offering these further operations:

Select all To select all entered text

Select text To select what you want to select from entered text

Cut all To delete all entered text

Copy all To copy all entered text

Input method To select your preferred input method

• Paste (1) To paste what you have previously copied to the

entering bar

<sup>(1)</sup> Option will not appear unless copy or cut operation has been made.

## 6 Getting connected.....

To connect to the internet with this cellphone, you can use GPRS/EDGE/3G networks or WI-FI, whichever is most convenient.

## 6.1 Connecting to the Internet

#### 6.1.1 GPRS/EDGE/3G

The first time you turn on your cellphone with SIM card inserted, it will automatically configure network service: GPRS, EDGE or 3G.

To check the network connection you are using, press Menu key on Home screen, then touch Settings\Wireless & networks\Mobile networks\GSM/UMTS options\Network operators or Access Point Names.

#### To create a new access point

A new GPRS/EDGE/3G network connection can be added to your cellphone with the following steps:

- Press Menu key from Home screen.
- Touch Settings\Wireless & networks\Mobile networks\GSM/ UMTS options\Access Point Names.
- Then press Menu key again and the touch New APN.
- Enter the required APN information.
- · When finished, press Menu key and touch Save.

## To activate/deactivate Data roaming

When roaming, you can decide to connect/disconnect to a data service.

- Press Menu key from Home screen.
- Touch Settings\Wireless & networks\Mobile networks\Data roaming.
- Mark/Unmark the checkbox to activate or deactivate data roaming.
- When Data roaming is deactivated, you can still perform data exchange with a Wi-Fi connection (refer to section 6.1.2 Wi-Fi).

## To limit your data connection to 2G networks only

To save battery and extend battery life, you can set to activate 2G networks (GPRS or EDGE) only.

- Press Menu key from Home screen.
- Touch Settings\Wireless & networks\Mobile networks\GSM/ UMTS options\Use only 2G networks.
- Mark/Unmark the checkbox to activate/deactivate this function.

#### 6.1.2 Wi-Fi

Using Wi-Fi, you can connect to the Internet when your cellphone is within range of a wireless network. Wi-Fi can be used on cellphone even without a SIM card inserted.

#### To turn Wi-Fi on and connect to a wireless network

- Press Menu key from Home screen.
- Touch Settings\Wireless & networks\Wi-Fi.
- · Mark/Unmark the checkbox to turn on/off Wi-Fi.
- Touch Wi-Fi settings. The detailed information of detected Wi-Fi networks is displayed in the Wi-Fi networks section.
- Touch a Wi-Fi network to connect. If the network you selected is secured, you are required to enter a password or other credentials (you may contact network operator for details). When finished, touch Connect.

#### To activate notification when a new network is detected

When Wi-Fi is on and network notification is activated, the Wi-Fi icon will appear on the status bar whenever the cellphone detects an available wireless network within range. The following steps activate the notification function:

- · Press Menu key from Home screen.
- Touch Settings\Wireless & networks\Wi-Fi settings\Network notification.
- Mark/Unmark the checkbox to activate/deactivate this function.

#### To add a Wi-Fi network

When Wi-Fi is on, you may add new Wi-Fi networks according to your preference.

- Press Menu key from Home screen.
- Touch Settings\Wireless & networks\Wi-Fi settings\Add Wi-Fi network.
- Enter the name of the network and any required network information.
- Touch Save.

When successfully connected, you cellphone will be connected automatically the next time you are within range of this network.

#### To a Wi-Fi network

The following steps prevent automatic connection to networks which you no longer wish to use.

- · Turn on Wi-Fi, if it's not already on.
- In the Wi-Fi settings screen, touch & hold the name of the network.
- Touch Forget network in the dialog that opens.

## 6.2 Browser.....



Using Browser, you can enjoy surfing the Web.

To access this function, touch Application tab from Home screen, then touch **Browser**.

#### To go to a web page

On Browser screen, touch the URL box at the top, enter the address of the web page, then touch **Go**.

## To set home page

- Press Menu key from Browser screen to display option menu, touch More\Settings\Set home page.
- Enter the URL of the website you want to set as your home page.
- Finally touch **OK** to confirm.

## 6.2.1 Viewing web pages

When opening a website, you can navigate on web pages by sliding your finger on the screen in any direction to locate the information you want to view.

## To zoom in/out of a web page

Zoom controls will be activated when scrolling the screen using your finger. Touch the plus or minus to the side of the Zoom control to zoom in or out.

To quickly zoom into a section of a web page, double-tap on the section you want to view. To return to normal zoom level, double-tap again.

#### To find text on a web page

- Press Menu key from web page screen, then touch More\Find on page.
- Enter the text or phrase you want to find.
- The first word with matching characters will be highlighted on the screen, and subsequent matches are boxed.
- Touch the left or right arrow to switch to the previous or next matching items.
- When finished, you can touch to close the search bar.

#### To copy text on a web page

You can copy text from a web page and paste it into emails or SMS/MMS messages.

- Press Menu key from web page screen, then touch More\Select text.
- Place your finger at the start of the text you want to copy and then drag it to the end of the text.
- · Selected text is copied and highlighted in color.
- Release your finger.

To paste the copied text into an email or SMS/MMS message, touch and hold the enter box and then touch **Paste** on the options menu.

## To open new window/switch between windows

Multiple windows can be opened at the same time for your convenience.

- Press Menu key from web page screen, and touch New window.
- To view all currently open windows, press Menu key then touch Windows.
- · Touch a window you want to view.

To close a window, touch X on the window you want to close.

## Other options:

 Refresh To refresh the current page (press **Menu** key on web page screen, then touch Refresh).

Exit To close all tabs (press Menu key on web page screen, then touch Exit).

 Page info To view more information about the current page (press Menu key on web page screen, then touch More\Page info).

 Forward To forward the pages you have opened (press Menu key on web page screen, then touch More\Forward).

• Share page To share the current page with your friends via various ways, like Message, Email, Bluetooth, etc. (press Menu key on web page screen, then touch More\Share page).

## 6.2.2 Manage links, history, downloads

To manage a link, cellphone number or address displayed on a web page

Link Touch the link to open the web page. Touch and hold the link to open options for further operation, like open in new window, save link, share link, copy link, etc.

 Cellphone number Touch to call the cellphone number.

 Address Touch to open Google Maps and locate the address

## To view Browser history

- Press Menu key from Browser screen
- Touch Bookmarks
- Touch **History** tab to view browser history.

## To view your most frequently visited pages

- Press Menu key from Browser screen
- Touch Bookmarks
- Touch **Most visited** tab to view your most frequently visited pages.

## To download a web application/view your downloads

Before downloading a web application, you need to enable your cellphone to download web applications (press **Menu** key from Home screen, touch **Settings\Applications**, mark check box of **Unknown sources**, finally touch **OK** to confirm).

To download a file, touch and hold the item you want to download, then touch **Save** on the menu that opens.

To cancel a download, press **Menu** key and touch **More\Downloads**, then touch **Menu** key again and finally touch **Cancel all downloads**.

To view items you have downloaded, press **Menu** key and touch **More**\ **Downloads**. You can clear the downloaded item list by pressing **Menu** key and touching **Clear list**.

## 6.2.3 Manage bookmarks

## To bookmark a web page

- · Open the web page you want to bookmark.
- Touch the bookmark icon at the top of the screen, or press Menu key and touch Bookmarks.
- Touch Add Bookmark
- Enter the name and location if needed and touch **OK** to confirm.

## To open a bookmark

- Touch the bookmark icon at the top of the screen, or press Menu key and touch Bookmarks.
- On the **Bookmarks** tab, touch the bookmark you want to open.
- You can also touch and hold to display the options screen, then touch Open or Open in new window.

#### To edit a bookmark

- Touch the bookmark icon at the top of the screen, or press Menu key and touch Bookmarks.
- On the Bookmarks tab, touch and hold the bookmark you want to edit.
- Touch Edit bookmark.
- · Enter your changes.
- When finished, touch **OK** to confirm.

## Touch and hold a bookmark in the bookmark list to view these additional options:

- Share link To share the bookmark.
- Shortcut To add a bookmark shortcut to the Home screen.
- Delete bookmark To delete a bookmark.

## 6.2.4 Settings

A series of settings are available for your adjustment. To access Browser settings, press **Menu** key from Browser screen, and touch **More**\ **Settings**.

## Page content settings

• Text size	Touch to select the size of the text display: Tiny, Small, Normal, Large, or Huge.
• Default zoom	Touch to select the magnification level by default.
• Open pages in overview	Mark the checkbox to open web pages zoomed out, in an overview.
• Text encoding	Touch to select the character-encoding standard.
Block pop-up windows	Mark the checkbox to prevent pop-up windows.
<ul> <li>Load images</li> </ul>	Mark to display images on web pages.
<ul> <li>Auto-fit pages</li> </ul>	Mark to format web pages to fit the screen.
<ul> <li>Landscape only display</li> </ul>	Mark to display pages only in landscape screen orientation.
• Enable JavaScript	Mark to enable JavaScript.
• Enable plug-ins	Mark to enable plug-ins.
• Open in background	Mark to open new windows behind the current one.
• Set home page	Touch to set home page.

Privacy settings	
Clear cache	Touch to clear locally cached content and databases.
• Clear history	Touch to clear the browser history.
<ul> <li>Accept cookies</li> </ul>	Mark to allow sites to save and read cookie data.
Clear all cookie data	Touch to clear all browser cookies.
• Remember form data	Mark to remember data in forms for later use.

• Clear form data Touch to clear all the saved form data.

Enable location Mark to allow sites to request access to your location.

• Clear location Touch to clear location access for all websites. access

## **Security settings**

Remember Mark to remember username and passwords for passwords websites.

• Clear passwords Touch to clear all saved passwords.

## **Advanced settings**

 Website settings Touch to view advanced settings for individual websites.

• Reset to default Touch to clear all browser data and reset all settings to default.

## 6.3 Connecting to Bluetooth devices

Bluetooth is a short-range wireless communications technology that you can use to exchange data, or connect to other Bluetooth devices for various uses.

To access this feature, press **Menu** key from Home screen, touch **Settings\ Wireless & Networks\Bluetooth** or **Bluetooth settings**.

#### To turn on Bluetooth

- · Press Menu key from Home screen,
- Touch Settings\Wireless & networks\Bluetooth or Bluetooth settings.
- Mark/Unmark the checkbox to activate/deactivate this function.

#### To change device name

To make your cellphone more recognizable, you can change your cellphone name which is visible to others.

- · Press Menu key from Home screen,
- Touch Settings\Wireless & networks\Bluetooth settings\Device name
- · Enter a name, and touch OK.

#### To make device visible

- Press Menu key from Home screen,
- Touch Settings\Wireless & networks\Bluetooth settings\ Discoverable.
- Mark/Unmark the checkbox to activate/deactivate this function.

#### To pair/connect your cellphone with a Bluetooth device

To exchange data with another device, you need to turn Bluetooth on and pair your cellphone with the Bluetooth device with which you want to exchange data.

- Press Menu key from Home screen,
- Touch Settings\Wireless & networks\Bluetooth settings
- Touch Scan for devices
- · Select a Bluetooth device you want to be paired with in the list.
- Enter a passcode (0000 or 1234)
- If the pairing is successful, your cellphone connects to the device.

#### To disconnect/unpair from a Bluetooth device

- Touch & hold the device in the Bluetooth settings screen.
- Touch **Unpair** or **Disconnect & Unpair** in the menu that opens.

## **6.4** Connecting to a computer via USB

With the USB cable, you can transfer media files and other files between your cellphone's MicroSD card and the computer.

#### To connect/disconnect your cellphone to/from the computer

To connect your cellphone to the computer:

- Download PC suite from website (www.alcatel-mobilephones.com) and install it on your computer.
- Use the USB cable that came with your cellphone to connect the cellphone to a USB port on your computer. You will receive a notification that the USB is connected.
- Open the Notifications panel and touch **USB connected**.

 Touch Mount in the dialog that opens to confirm that you want to transfer files.

#### To disconnect:

- Unmount the microSD card on your computer.
- Open the Notifications panel and touch Turn off USB storage.
- · Touch Turn off in the dialog that opens.

### To safely remove the microSD card from your cellphone

The MicroSD card can be removed from your cellphone any time the cellphone is powered off. To remove the microSD card while the cellphone is on, you must unmount the storage card from the cellphone first, to prevent corrupting or damaging the storage card.

- · Press Menu key from Home screen,
- Touch Settings\SD card, USB Mass Storage & phone storage.
- Touch Unmount SD card.

You can now safely remove the microSD card from the cellphone.

#### To format a microSD card

- · Press Menu key from Home screen,
- Touch Settings\SD card, USB Mass Storage & phone storage.
- Touch Unmount SD card. You can format a microSD card only when it is unmounted.
- Touch Format SD card. On the screen that warns you that formatting the microSD card will erase its contents, touch Format SD card

## 6.5 Connecting to virtual private networks

Virtual private networks (VPNs) allow you to connect to the resources inside a secured local network, from outside that network. VPNs are commonly deployed by corporations, schools, and other institutions so that their users can access local network resources when not on campus, or when connected to a wireless network.

#### To add a VPN

- · Press Menu key from Home screen,
- Touch Settings\Wireless & networks\VPN settings\Add VPN.
- Touch the type of VPN to add.
- In the screen that opens, follow the instructions from your network administrator to configure each component of the VPN settings.
- Press Menu key and touch Save.

The VPN is added to the list on the VPN settings screen.

#### To connect/disconnect to a VPN

To connect to a VPN:

- · Press Menu key from Home screen,
- Touch Settings\Wireless & networks\VPN settings.
- VPNs you have added are listed; touch the VPN you want to connect with.
- In the dialog that opens, enter any requested credentials and touch
   Connect

#### To disconnect:

 Open the Notifications panel and touch the resulting notification for the VPN connection.

#### To edit/delete a VPN

### To edit a VPN:

- Press Menu key from Home screen,
- Touch Settings\Wireless & networks\VPN settings.
- VPNs you have added are listed; touch & hold the VPN you want to edit.
- Touch Edit network.
- After finishing, press **Menu** key and touch **Save**.

#### To delete:

- Touch and hold the VPN you want to delete, in the dialog that opens, touch Delete network.
- Touch **OK** to confirm.

## 7 Android Market (1).



Android Market is an online software store, where you can download and install applications and games to your Android Powered Phone.

To open Android Market:

- Touch Application tab from Home screen, and then touch Market.
- For the first time you access Android Market, a screen with terms of service pops up for your attention, touch **Accept** to continue.

Press **Menu** key, then touch **Help** to enter Android Market help page for more information on this function.

# 7.1 Locate the item you want to download and install

Android Market home page provides several ways to find applications. It showcases applications and games in categorized listings, and a link to all your downloads.



Touch **Apps** or **Games** on Android Market screen to browse its contents, and then select subcategory. Within each subcategory you can select to view items sorted by **Top paid**, **Top free**, or **Just in**.



To return to Android Market Home screen, do one of the following:

- Touch the Market icon to the top left of the screen
- Press Menu key to display options list, then touch Home.

#### 7.2 Download and install

#### To download & install:

- Navigate to the item you want to download, and select to enter the details screen from which you can read its overall rating or comments, view developer's information, etc.
- Press Menu key and touch Security to preview the functions and data the application can access on your cellphone if you install it.
- · Touch Install.
- Be especially cautious with applications that have access to many functions or to a significant amount of your data. Once you touch **OK** to continue, you are responsible for the results of using this item on your cellphone.

- To check the progress of the download, open the Notification panel. To stop the downloading of the item, touch the progress bar and Cancel download on the screen that opens.
- After download and installation have finished, you will see a notification icon on the status bar.

### To open the application you have downloaded:

- On Android Market screen, touch **Downloads**.
- Touch the installed application in the list, then touch **Open**.

#### To buy an application

On Android Market, some applications are labeled as free, while some of them are to be paid for before downloading and installing.

- · Touch the application you want to buy.
- Touch Buy on the bottom of the screen.
- When making your first purchase, you are prompted to log in to Google Checkout payment and billing service.
- If your Google Checkout account has multiple credit card accounts, select one to proceed.
- Select the Terms of service link and read the document. When finished, press Back key.
- · Mark the check box if you agree with the terms of service.
- Touch Buy now at the bottom of the screen.

When finished, Android downloads the application.

#### To request a refund

If you are not satisfied with the application, you can ask for a refund within 24 hours of the purchase. Your credit card will not be charged and the application will be removed. If you change your mind, you can install the application again, but you will not be able to request a refund.

- Touch My downloads in Android Market Home.
- Touch the application that you want to uninstall.
- Touch OK in the Uninstall & refund dialog box. If the dialog box does not appear, your trial period has expired.
- In the survey form, select the answer that best matches your reason, and touch OK.

## 7.3 Manage your downloads

After you downloaded and installed an application, the following further operations are available for your selection.

#### **View**

On Android Market screen, press Menu key and touch Downloads.

#### Uninstall

On Android Market screen, press **Menu** key and touch **Downloads**. Touch the application you want to uninstall to enter the details screen, touch **Uninstall**, and finally touch **OK** to confirm.

#### Refund

On Android Market screen, press **Menu** key and touch **Downloads**. Touch the application you want to uninstall for a refund, touch **Uninstall & refund**, and finally touch **OK** to confirm.

### **Update notification**

On Android Market screen, press **Menu** key and touch **Downloads**. Press **Menu** key and touch **Notification**, select whether or not to be notified of updates, and finally touch **OK** to confirm.

#### Rate

Open the details screen for an application, touch the stars under **My review**, touch the number of stars to award and confirm by touching **OK**.

#### Flag

You can report an inappropriate application to Android Market by flagging it. Open the details screen for the application, scroll to the bottom and touch **Flag as inappropriate**, enter the reason and finally touch **Submit**.

# 8 Multimedia applications

 
## 8.I Camera/Camcorder ......



Your cellphone is fitted with a Camera and Camcorder for taking photos and shooting videos.

Before using Camera or Camcorder, please ensure one MicroSD card where all pictures and videos are stored is correctly installed. Also, be sure to open the protective lens cover before use to avoid it affecting your picture quality.

To access this function, touch Application tab from Home screen and then touch **Camera** or **Camcorder**.



### To take a picture

The screen acts as the viewfinder. First position the object or landscape in the viewfinder, and touch e icon to take the picture, which will be automatically saved.

#### Zoom in/zoom out

Touch anywhere on the screen to open the Zoom control and then touch the plus or minus icons to zoom in or out gradually. Touch the screen twice to zoom all the way in or out.

#### To shoot a video

Switch Camera mode to Video mode or access Camcorder directly from the application list. First position the object or landscape in the viewfinder, and touch icon to start recording. Touch icon to stop shooting. The video will be automatically saved.

## Further operations when viewing a picture or a video you have taken:

- Touch to delete the picture or video you have just taken or shot.
- Touch to share the picture or video you have just taken or shot by MMS, Email, etc.
- Touch to set the picture as contact ID, wallpaper, etc.
- Touch to come back to frame mode after taking a picture or shooting a video.
- Touch to play the video you have just shot.

## 8.1.1 Settings in framing mode

Before taking a photo/shooting a video, you can adjust a number of settings by pressing **Menu** key in framing mode and touching **Settings**.

## Camera settings:

<ul> <li>White balance</li> </ul>	Touch to adjust color in different lights: Incandescent,
	Daylight, Fluorescent or Cloudy.

• Anti Banding Touch to set the banding value.

 Color effect Touch to select a color effect: Mono, Sepia, Negative, etc.

• **Picture size** Touch to adjust the size of the picture.

• **Brightness** Touch to adjust the brightness.

• **Night mode** Touch to activate/deactivate night mode.

### Video/Camcorder settings:

<ul> <li>White balance</li> </ul>	Touch	to	adjus	t	color	in	different	lights:
	Incande	esce	nt, Dayl	igh	t, Fluor	esce	nt or Clou	ıdy.
<ul> <li>Color effect</li> </ul>	Touch	to	select	a	color	effe	ct: Mono,	Sepia,

Negative, etc.

• Video quality

Touch to set the quality of the video.

• Video Encoder Touch to select video encoder format: MPEG4,

H263, H264.

• Audio Encoder Touch to select audio encoder format: AMRNB,

QCELP, EVRC.

• Video duration Touch to set the duration of the video to be shot.

#### 8.2 Gallery .....



Gallery acts as a media player for you to view photos and playback videos. In addition, a set of further operations to pictures and videos are available for your choice (refer to page 83).

To access this function, touch Application tab from Home screen, then touch Gallery. Alternatively you can access it from Camera/Camcorder framing mode by pressing Menu key and touching Gallery.

From this menu, you can access Camera or Camcorder for taking a picture or video.



#### To view a picture/play a video


Pictures and videos are displayed by albums in Gallery.

- Touch an album, and scroll up or down to locate the picture/video you want to view or play.
- Touch the picture/video directly to view or play it.
- Touch screen to display | icon to view previous or next pictures/ videos.

#### Working with pictures

You can work with pictures by rotating or cropping them, sharing them with friends, setting them as contact ID or wallpaper, etc.

Locate the picture you want to work on, press  $\mbox{\bf Menu}$  key from full-screen picture view.

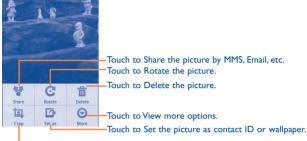

Touch to Crop the picture. Drag the four sides of the rectangle that appears in or out to set the desired cropping size, then touch **Save** to save as a new picture.

#### **Batch operation**

Gallery provides multi-select function, so that you can work with pictures/ videos in batches.

Press **Menu** key from Gallery screen, touch **Multiselect**, mark the checkbox before the file you want to work on, then perform further actions, like delete, share, etc.

### 8.3 YouTube .....



YouTube is an online video-sharing service where the user can download, share and view videos. It supports a streaming function that allows you to start watching videos almost as soon as they begin downloading from the Internet.

To access this function, touch Application tab from Home screen, then touch **YouTube**.



As an online video service, your cellphone must have a network connection to access YouTube.

All videos in YouTube are grouped into several categories, like Most popular, Most viewed, Top rated, and etc.



By pressing **Menu** key from YouTube screen, you can rate, share, label as favorite, etc. For details about these features, please visit the YouTube website: www.YouTube.com

#### 8.3.1 Watch videos

Touch a video to play it.

Touch video playing screen to display playback controls with which you can pause, skip forward or backward, or drag the progress bar to the point you want to watch.

To exit video playing screen, press **Back** key to return to video list.

## 8.4 Music .....



Using this menu, you can play music files stored on the MicroSD card in your cellphone. Music files can be downloaded from computer to MicroSD card using a USB cable.

To access this function, touch Application tab from Home screen, then touch  ${\bf Music}.$ 

You will find four libraries in which all songs are classified: **Artists**, **Albums**, **Songs**, and **Playlists**. Touch a category and view the list.

With the help of **Search** key on the keyboard, you can easily search for songs you want to play in libraries.

To delete a song, press **Menu** key from playback screen and then touch **Delete** to remove it from the MicroSD card.

You can also set a song as a ringtone, press **Menu** key from playback screen to display option menu, then touch **Use as phone ringtone**.

### 8.4.1 Playing music

From any of the four library screens, touch a song to play it back.



#### Adjust volume

To adjust the volume, you can press Volume up and Volume down key.

## 8.4.2 Using Party shuffle

All songs will be displayed in order by default. When Party shuffle is activated, all songs will be played randomly. Press **Menu** key, then touch **Party shuffle** to turn on this function. To turn it off, press **Menu** key again, then touch **Party shuffle off**.

## 8.4.3 Working with playlists

Playlists allow you to conveniently organize all the songs stored in the card.

You can create a new playlist, add a song to the list, rearrange the order of the list, and delete or rename a playlist.

#### To create a playlist

Press Menu key from playback screen to display the option menu, touch Add to playlist, then touch New, enter the name and finally touch Save

## To change the order of songs in a playlist

Enter a playlist, drag a song up or down to change the order within the playlist.

#### To delete a song or a playlist

Locate the song or playlist you want to delete, touch and hold or press **Menu** key from playback screen to display option menu, then touch **Delete**.

#### To rename a playlist

Locate the playlist you want to rename, touch and hold to display option menu, then touch **Rename**. When finished, touch **Save**.

# 9 Google Maps.....



## 9.1 Get My Location

## 9.1.1 Choose a data source to decide My Location

Press Menu key from Home screen, touch Settings\Location & Security.

- Mark the check box of Use wireless networks to set Wi-Fi and/or mobile networks as My Location data source.
- Or mark the check box of Use GPS satellites to set GPS as My Location data source.

### 9.1.2 Open Google Maps and view My Location

Press Menu key from Home screen, touch Maps.

Press Menu again and touch My Location.

The map will then center on a blue dot with a blue circle around. Your actual position is within the blue circle.



To move the map, drag the map with your finger.

To zoom in and out of a map, touch the plus or minus side of the zoom control ( ) or you can also zoom in/out by double-tapping a location on screen.

To clear the map history, press **Menu** key and touch **More\Clear Map**.

#### 9.2 Search for a location

- While viewing a map, press Menu key and touch Search, or you can directly press Search key on keyboard to activate search function.
- In the search box, enter an address, a city or a local business.
- Touch the search icon and in a while your search results will appear on the map highlighted by markers with letter labels.



You can touch a marker to open a balloon that contains a label. Touch the balloon to open a screen with more handy information about the location.

## 9.3 Star a location

Just like bookmarking a web address on the Internet, you can star any position on the map for later use.

### 9.3.1 How to star (or unstar) a location

- Touch & hold a location on a map
- · Touch the address rectangle that opens
- Touch the gray star at the top of the screen to star the location. (Or touch a gold star to unstar that location.)



## 9.3.2 View a list of starred items

- Press Menu key from maps screen and touch More\Starred items.
- The list of your starred items and their addresses opens.
- · Touch a location in the list to view it .

Press Menu key and touch Refresh to update the list.

# 9.4 Get driving, public transport or walking directions

## 9.4.1 Get suggested routes for your trip

· Press Menu key from maps screen and touch Directions.



- Touch enter bar or to edit your start point by one of the following methods: entering an address, using My Location, selecting a start point on a map, selecting a starred item, selecting an address from your contacts or using search history.
- · Do likewise for your end point.
- To reverse directions, press **Menu** key and touch **Reverse Start & End**.
- Then select a transport mode: driving by car, using public transport, or walking directions.
- · Finally touch Go.
- A couple of suggested routes will appear in a list. Touch any routes to view their respective detailed directions.

To get reverse directions for a route you've already made, simply open that route's directions window and select **Reverse**. No need to enter your start point and end point again.

# 9.4.2 Preview suggested routes and decide on a route more preferable or feasible to you

You can preview each turn in your route in Navigation, Satellite, and other views.

- Touch a left or right arrow to preview the next or previous leg of your route.
- You can view turn-by-turn directions in a list by touching , press Back key to return to previous view.

When selecting a more preferable or feasible route, distance and time will be the two most important factors for your evaluation. Distance and estimated time will be displayed at the top of the directions screen.

## 9.4.3 Search for locations along your route

Please refer to section 7.2 for detailed information.

## 9.4.4 View route progress and calculate estimated arrival time

To view your route progress, pinpoint My Location, zoom out until the whole route goes into one screen, with both finished and unfinished miles in sight.

Start another Directions screen based on your current and intended destination locations. Estimated arrival time will be shown in the results. Please note that the estimated arrival time is not available for the public transport mode.

### 9.4.5 View traffic conditions on your route

At the lower-left corner of navigation view, a traffic light indicates the overall traffic conditions on your route, next to the estimated time of arrival at your destination. You can also view the traffic conditions on each segment of your route.

Touch the traffic light at the lower left of the Navigation View. Your route opens in Traffic View, with color coding to indicate the traffic along the way. Touch the navigation icon to return to your current location in Navigation View

## 9.4.6 Get an alternative route to your destination

If traffic is slow on your current route, or if you just want to try a different route, you can request an alternative route from Google Maps with turn-by-turn Navigation service.

Press **Menu** key and touch **Route information**. Touch the alternative route icon. An alternative route is drawn on the map.

## 9.5 Arrangement of Layers

Layers allow you to view locations and additional information overlaid on the map. You can add multiple layers or remove only certain layers so you control exactly what information you want visible on the map at one time.

### 9.5.1 To view multiple layers

- · Press Menu key from maps screen.
- · Touch Layers.
- All available layers are listed (like Traffic, Satellite, Latitude, etc), select one to view.

## 9.5.2 To open Street View for a location

- Touch and hold a location to display a balloon with the address and a Street View thumbnail.
- Touch the balloon and touch Street view.

## 9.5.3 To clear the map

After you get directions or search on a map, you can clear the markers/ layers that have been drawn: press **Menu** key on maps screen and touch **More\Clear Map**, or you can also touch **Clear Map** on Layers screen.

### 9.5.4 To view more layers

You can browse more layers to add to the map such as My Maps, Transit Lines or Wikipedia, etc.

- Press Menu key from maps screen.
- Touch Layers.
- Touch More layers to the bottom of the screen.
- · All available layers are listed for your selection.

# 9.6 Join Latitude to see your friends' locations and share yours with them

With Google Latitude, you can:

- · see your friends' locations on a map or in a list.
- quickly contact your friends with a text message, instant message, or phone call.
- you can share, set, hide your location, or sign out of Google Latitude.
- · control who sees your location, and at what level of detail.
- add Latitude widget to home screen to see nearby friends at a glance.

## 9.6.1 To join Latitude

- · Press Menu key from maps screen.
- Touch Join Latitude.

When you joined Latitude, the menu item changes to Latitude.

To open Latitude, press Menu key from maps screen, then touch Latitude.

#### 9.6.2 How to invite friends to share their locations

- Press Menu key from Latitude screen, touch Add friends.
- Touch Select from Contacts or Add via email address.
- After selecting your chosen contacts touch Add friends at the bottom of the screen.

When finished, an invitation will be sent to the friends you have invited.

To respond to an invitation, you can select one of the following:

back	each other.
<ul> <li>Accept, but hide my location</li> </ul>	You can view your friend's location, but they can not view yours.
<ul> <li>Don't accept</li> </ul>	No locations can be shared between you and

· Accept and share You and your friend can share locations with

## 9.6.3 To view your friends' location

You can view your friends' locations on a map or in a list.

your friend.

• Map view	When Google Maps is opened, your friends' locations will display with their photo icon for identification.
• List view	Press <b>Menu</b> key from maps screen, then touch Latitude. Your friends are displayed in a list.

## 9.6.4 To connect with your friends

Select a contact, you can communicate with your friend and set privacy options.

• **Show on map** Locate the friend's position on the map.

• Chat using Google Send instant message to the friend.

Talk

• **Send email** Send email to the friend.

• **Directions** Get directions to this friend's location.

• **Hide from** Set to hide your location from this friend.

this friend

 Share only Set to share only locations at city level, but not city level location street level, etc.

Remove Remove this friend from your list and stop sharing

information with him or her.

### 9.6.5 To control what you share

You can control the information you want to share with your friends.

Press **Menu** key from maps screen, touch **Latitude**, touch your own name and then touch **Edit privacy settings**.

The following options are available to choose from:

• Detect your Enable Latitude to detect your location automatically location when you move around.

Set your location Select a location on the map manually.

• Hide your location Hide your location from all friends.

Turn off latitude Deactivate Latitude and stop sharing.

# **Others.....**

## 10.1 FileManager.....



To access this function, touch Application tab from Home screen, then touch **FileManager**.

**FileManager** works with your memory card instead of your cellphone memory. To use it, you have to install your memory card first. See page 14 for instructions on inserting the memory card.

FileManager displays all data stored on the MicroSD card, including applications, media files downloaded from Android Market, YouTube or other locations; video, pictures or audios you have captured; other data transferred via Bluetooth, USB cable, etc.

When you download an application from PC to MicroSD card, you can locate the application on FileManager, then touch it to install it in your cellphone.

FileManager allows you to perform and be really efficient with the following common operations: create (sub) folder, open folder/file, view, rename, move, copy, delete, play, share, etc.

### 10.2 Notes.....



To access this function, touch Application tab from Home screen, then touch **Notes**.

Use **Notes** to note down inspirations, ideas, excerpts, things to do and all those things you may want to keep for future reference.

Existing notes can be sent via Bluetooth, Message or Email.

## 10.3 TaskManager .....



To access this function, touch Application tab from Home screen, then touch **TaskManager**.

**TaskManager** allows you to view or terminate running processes and applications and to schedule tasks.

## 10.4 Videos .....



To access this function, touch Application tab from Home screen, then touch **Videos** 

Videos is a small built-in video player that lists all your videos.

Touch an item from the list to play. While playing, use Pause, Forward and Back functional icons as required, press **Menu** key to go to full screen, or touch a point on the timeline to jump to and play from.

## 10.5 Voice Recorder.....



To access this function, touch Application tab from Home screen, then touch Voice Recorder

**Voice Recorder** allows you to record voice/sound for seconds/hours.

To view all recordings you have made, press **Menu** key from recording screen, then touch **All Records**.

When recording is finished, press **Menu** key to display option menu, you can touch **Share** to send the recording to your friends via Bluetooth, Messaging, etc.; and touch **Set as ringtone** to set the recording as your incoming call ringtone.

Recording

Bano 1821

Voice recording

Recording

- Touch to start recording
- Touch to end recording, a popup window will display for you to rename, save or discard the recorded file
- Touch to play the files you have recorded.
- Touch to play the previous file.
- Touch to play the next file.

## 10.6 SyncMLClient.....



To access this function, touch Application tab from Home screen, then touch **SyncMLClient**.

You have to configure your own sync-hosting server account to locate the synchronization source at the other side. Also you might be asked to decide on the following options:

Who to sync: account name, username and password are needed to authenticate your identity

**How to sync:** available synchronization types are two-way synchronization, backup to server, restore from server, export to server, and import from server

What to sync: supported synchronization applications are Directory and Calendar, each with an independent secure database that doesn't allow anonymous access

When to sync: synchronize when roaming, synchronize when data is modified, synchronize when cellphone is turned on or synchronize at a regular basis (daily, weekly, and monthly)

## 10.7 TSCalibration.....



Follow the onscreen guide to go through the process: press **Menu** key to continue. Tap red circle several times. Press **Back** key to quit.

## 10.8 Other applications (1).....

The previous applications in this section are preinstalled to your cellphone. To read a brief introduction of the preinstalled 3rd party applications, please refer to the leaflet provided with the cellphone. You can also download thousands more 3rd party applications by going to Android Market on your cellphone.

# Settings.....



To access this function, touch Application tab from Home screen, and touch **Settings** on applications list, or you can also press **Menu** key from Home screen and touch **Settings**.

#### II.I Wireless & networks

## II.I.I Airplane mode

Mark the check box of **Airplane mode** to simultaneously disable all wireless connections including Wi-Fi, Bluetooth and more.

#### 11.1.2 Wi-Fi

Using Wi-Fi you can now surf the Internet without using your SIM card whenever you are in range of a wireless network. The only thing you have to do is to enter the **Wi-Fi settings** screen and configure an access point to connect your cellphone to the wireless network.

For detailed instructions on using Wi-Fi, please refer to section **6.1.2** Wi-Fi.

#### II.I.3 Bluetooth

Bluetooth allows your cellphone to exchange data (videos, images, music and more) over short distances with another Bluetooth supported device (cellphone, computer, printer, headset, car kit and more).

For more information on Bluetooth, please refer to section **6.3 Connecting** to Bluetooth devices.

# II.I.4 VPN settings

A mobile virtual private network (mobile VPN or mVPN) provides mobile devices with access to network resources and software applications on their home network, when they connect via other wireless or wired networks. Mobile VPNs are used in environments where workers need to keep application sessions open at all times, throughout the working day, as the user connects via various wireless networks, encounters gaps in coverage, or suspend-and-resumes their devices to preserve battery life. A conventional VPN cannot survive such events because the network tunnel is disrupted, causing applications to disconnect, time out, fail, or even the computing device itself to crash.

For more information of VPN, please refer to section **6.5 Connecting to virtual private networks**.

#### 11.1.5 Mobile networks

#### **Data roaming**

If you don't need to transmit data on other carriers' mobile networks, unmark the check box of **Data roaming** to avoid incurring significant roaming charges.

#### **Network Mode**

You can select your preferred network with this menu.

Note: If the phone operates in manual network selection mode and has been powered off, upon power on, you will need to either change the network selection mode back to automatic or perform another manual search to select the network you want your phone to use.

# **GSM/UMTS** options

Touch to enter GSM/UMTS options, where you can view Access point names, you can select to use only 2G networks or select a network operator.

# Cell broadcast/Cell broadcast settings

Enable receipt of CB messages by marking the check box of Cell broadcast.

You can access a series of adjustable CB settings by touching Cell broadcast settings.

# 11.2 Call settings

Use Call settings to configure normal phone call settings and other special features offered by your carrier. You can also use Call settings to configure the cellphone so that it can place outgoing calls only to a fixed set of cellphone numbers.

#### **11.2.1** Fixed Dialing Numbers

Fixed Dialing Number (FDN) is a service mode of SIM, where outgoing calls are restricted to a set of cellphone numbers. These numbers are added to the FDN list. The most common practical application of FDN is for parents to restrict the cellphone numbers to which their children can dial.

For security reasons, you'll be prompted to enable FDN by entering SIM PIN2 which is usually acquired from your service provider or SIM maker.

#### 11.2.2 Voicemail

#### Voicemail service

Opens a dialog where you can select your carrier's voicemail service or another service.

#### **Voicemail Settings**

If you are using your carrier's voicemail service, this opens a dialog where you can enter the cellphone number to use for listening to and managing your voicemail. You can enter a comma (,) to insert a pause into the number—for example, to add a password after the cellphone number.

## 11.2.3 Other call settings

#### TTY mode

TTY mode can be used by people who are deaf, have bad hearing or speech impairments.

After connecting the cell phone and TTY machine it connects to a relay service, which converts incoming speech to text for the person using the TTY and converts outgoing text from the TTY machine to a spoken voice for the person on the other end of the conversation.

#### **DTMF Tones**

Set the length of DTMF tones.

#### **GSM** call settings

Additional GSM only call settings.

#### **CDMA** call settings

Additional CDMA only call settings.

# II.3 Sound & display

Use the Sound & Display settings to configure many aspects of call and notification ringtones, music, and other audio, as well as brightness and other screen settings.

modia & alarms

Mark the check box to silence all sounds except

# • Silent mode

notifications

	media & alarms.
• Ringer volume	Touch to set volume for incoming calls and notifications.
• Media volume	Touch to set volume for music and videos.
• Phone ringtone	Touch to set your default incoming call ringtone.
• Phone vibrate	Mark the check box to vibrate cellphone for incoming calls.
<ul> <li>Notification ringtone</li> </ul>	Touch to set your default notification ringtone.
<ul> <li>Audible touch tones</li> </ul>	Mark the check box to enable playing tones when using dial pad.
• Audible selection	Mark the check box to enable playing sound when making screen selection.
Haptic feedback	Mark the check box to activate vibration when pressing soft keys and on certain UI interactions.
• SD card	Mark the check box to activate playing sound for

MicroSD card notifications.

#### **Display settings**

 Orientation Mark the check box to activate automatic orientation switch when rotating cellphone.

• **Animation** Touch to show all window animations.

• **Brightness** Touch to adjust the brightness of the screen.

• Screen timeout Touch to set screen timeout.

#### Slider settings

 Slider sound Mark the check box to activate playing sound when opening the slider.

• Slide ringtone Touch to set your default slider ringtone.

• Slide opens to Mark the check box to activate answering an incoming call when slider opens.

Slide opens to Mark the check box to activate unlocking the screen when slider opens.

 Slide closes Mark the check box to activate locking the screen to lock when slider closes.

# 11.4 Location & security

Use the Location & Security settings to set your preferences for using and sharing your location when your search for information and use location-aware applications, such as Google Maps. You can also configure settings that help secure your cellphone and its data.

#### 11.4.1 My Location

#### Use wireless networks

Mark the check box to use information from Wi-Fi and mobile networks to determine your approximate location, for use in Google Maps, when you search, and so on. When you select this option, you're asked whether you consent to sharing your location anonymously with Google's location service.

#### Use GPS satellites

Check to use your cellphone's global positioning system (GPS) satellite receiver to pinpoint your location within an accuracy as close as several meters ("street level"). The process of accessing the GPS satellite and setting your cellphone's precise location for the first time will require up to 5 minutes. You will need to stand in a place with a clear view of the sky and avoid moving. After this, GPS will only need 20-40 seconds to identify your precise location.

#### Use assisted GPS

Mark the check box to use a server to assist GPS.

#### 11.4.2 Screen unlock pattern

• Set unlock pattern Touch to open a set of screens that guide you through drawing a screen unlock pattern.

• Require pattern Mark the check box to set the requirement to draw a pattern when unlocking screen

 Use visible pattern Mark the check box to draw lines between points in the unlock pattern you draw.

Use tactile feedback
 Mark the check box to have the cellphone vibrate briefly as you touch each dot when you draw an unlock pattern.

#### 11.4.3 SIM/RUIM card lock

#### Set up SIM/RUIM card lock

Opens a screen where you can configure the PIN required to use the cellphone, and where you can change the SIM/RUIM PIN.

#### 11.4.4 Passwords

#### Visible passwords

Mark the check box to show password as you type.

# 11.4.5 Credential storage

#### Use secure credentials

Mark the check box to allow applications to access your cellphone's encrypted store of secure certificates and related passwords and other credentials. Credential storage is used to establish some kinds of VPN and Wi-Fi connections. If you have not set a password for the credential storage, this setting is dimmed.

#### Install from SD card

Touch to install encrypted certificates from the MicroSD card.

#### Set password

Touch to set a password for the credential storage (at least 8 characters).

#### Clear storage

Touch to clear credential storage of all contents and reset its password.

# 11.5 Applications

You use the Applications settings to view details about the applications installed on your cellphone, to manage their data and force them to stop, and to set whether you want to permit installation of applications that you obtain from web sites and email.

#### **Unknown sources**

Mark the check box to permit installation of applications that you obtain from web sites, email, or other locations other than Android Market.

To protect your cellphone and personal data, download applications only from trusted sources, such as Android Market.

#### **Quick Launch**

Touch to set keyboard shortcuts to launch applications.

#### **Manage applications**

Touch to manage and remove installed applications.

#### **Running services**

Touch to open a list of services—applications or parts of applications that provide services to other applications, or that run even when their main application isn't running. Examples include the Android onscreen keyboard and the small portion of Google Talk that always listens for incoming messages. Above each service, one or more gray bars show what processes the running service needs and how much memory they're using (how much memory you would recover if you stopped the service). Depending on the service, when you touch it in the list it either opens a dialog in which you can stop it or opens its Settings screen.

#### **Development**

The Development screen contains settings that are useful for developing Android applications. For full information, including documentation of the Android applications and development tools, see the Android developer web site (http://developer.android.com).

- USB debugging: mark the check box to permit debugging tools on a computer to communicate with your cellphone via a USB connection.
- Stay awake: mark the check box to prevent the screen from dimming and locking when the cellphone is connected to a charger or to a USB device that provides power. Don't use this setting with a static image on the cellphone for long periods of time, or the screen may be marked with that image.
- Allow mock locations: mark the check box to permit a development tool on a computer to control where the cellphone believes it is located, rather than using the cellphone's own internal tools for this purpose.

# 11.6 Accounts & sync

Use the Accounts & Sync settings to add, remove, and manage your Google and other supported accounts. You also use these settings to control how and whether all applications send, receive, and synchronize data on their own schedules, and whether all applications can synchronize user data automatically.

Gmail, Google Calendar, and other applications may also have their own settings to control how they synchronize data; see the sections on those applications for details.

#### 11.6.1 General synchronization settings

#### **Background data**

Mark the check box to permit applications to synchronize data in the background, whether or not you are actively working in them. Unmarking this setting can save battery power and lowers (but does not eliminate) data use.

#### **Auto-sync**

Mark the check box to permit applications to synchronize data on their own schedule. If you unmark this setting, you must touch an account in the list on this screen, press **Menu** key, and touch **Sync now** to synchronize data for that account.

Synchronizing data automatically is disabled if **Background data** is unchecked. In that case, the **Auto-sync** checkbox is dimmed.

#### 11.6.2 Manage accounts

The rest of this screen lists the Google Accounts and other accounts you've added to the cellphone. If you touch an account in this screen, its account screen opens.

This screen contains different options, depending on the kind of account. For Google Accounts, it lists the kinds of data you can synchronize to the cellphone, with checkboxes so you can turn synchronizing on and off for each kind. You can also press **Menu** key and touch **Sync now** to synchronize data. Touch **Remove Account** to remove the account along with all its data (contacts, mail, settings, and so on).

# 11.7 Privacy

You use the Privacy settings to manage your personal information.

#### **Use My Location**

Mark the check box to include your position when using Google Search and other Google services. When you check this option, you're asked whether you consent to allowing Google to use your location when providing these services.

#### Back up my settings

Mark the check box to back up your cellphone's settings to Google Servers, with your Google Account. If you replace your cellphone, the settings you've backed up are restored onto the new cellphone the first time you sign in with your Google Account. If you mark this option, a wide variety of settings are backed up, including your Wi-Fi passwords, bookmarks, a list of the applications you've installed, the words you've added to the dictionary used by the onscreen keyboard, and most of the settings that you configure with the Settings application. If you unmark this option, you stop backing up your settings, and any existing backups are deleted from Google Servers.

#### Factory data reset

Erase all of your personal data from internal cellphone storage, including information about your Google Account, any other accounts, your system and application settings, and any downloaded applications. Resetting the cellphone does not erase any system software updates you've downloaded or any files on your microSD card, such as music or photos. If you reset the cellphone in this way, you're prompted to re-enter the same kind of information as when you first started Android.

# 11.8 SD card, USB Mass Storage & phone storage

Use the MicroSD card, USB Mass Storage & Phone Storage settings to monitor the used and available space on your cellphone and on your MicroSD card; to manage your MicroSD card; and if necessary, to reset the cellphone, erasing all of your personal information.

#### 11.8.1 SD card

#### Total space/Available space

Lists the amount of space on any MicroSD card installed in your cellphone and the amount you have used to store photos, videos, music, and other files

#### **Unmount SD card**

Unmounts the MicroSD card from your cellphone so that you can format the card or safely remove it when the cellphone is on. This setting is dimmed if there is no MicroSD card installed, if you have already unmounted it, or if you have mounted the MicroSD card on your computer.

#### Format SD card

Permanently erases everything on a MicroSD card and prepares it for use with your cellphone. You must unmount a MicroSD card before you can format it.

#### 11.8.2 Internal phone storage

#### Available space

Touch to display the amount of internal phone storage used by the operating system, its components, applications (including those you downloaded), and their permanent and temporary data.



If a warning message comes up saying that cellphone memory is limited, you are required to free up space by deleting some unwanted applications, downloaded files etc.

#### 11.8.3 USB Mass Storage

#### **Unmount/Eject UMS device**

Touch to list available UMS Mount Points.

#### 11.9 Search

You use the Search settings to configure Google Search, Quick Search Box, and the data on the cellphone that you want to include in searches.

#### 11.9.1 Web Search

#### Google Search settings

Touch to adjust a range of settings to show web suggestions from Google as you type, to view and manage search history if any.

#### 11.9.2 Quick Search Box

#### Searchable items

Touch to open a screen where you can check and uncheck the kinds of data to include in cellphone searches.

#### Clear search shortcuts

Touch to erase the list of search results that you touched below Quick Search Box

# II.I0 Language & keyboard

Use the Language & Keyboard settings to select the language for the text on your cellphone and for configuring the onscreen keyboard, including words that you've added to its dictionary.

#### II.I0.I Select Locale

Touch to select language and region you want.

# 11.10.2 Android keyboard

For cellphones with physical keyboards, unmark to disable the onscreen keyboard

The Android keyboard settings apply to the onscreen keyboard that is included with your cellphone. The correction and capitalization features affect only the English version of the keyboard. Available options are as follows:

#### Vibrate on keypress

Mark the check box to have the cellphone vibrate briefly each time you touch a key on the onscreen keyboard.

#### Sound on keypress

Mark the check box to play a brief sound each time you touch a key on the onscreen keyboard.

#### Auto-capitalization

Mark the check box to have the onscreen keyboard automatically capitalize the first letter of the first word after a period, the first word in a text field, and each word in name fields.

#### Quick fixes

Correct commonly typed mistakes.

#### Show suggestions

Display suggested words while typing.

#### Auto-complete

Spacebar and punctuation automatically insert highlighted word.

#### 11.10.3 Device keyboard

This setting is available only if your cellphone has a physical keyboard

# 11.10.4 User dictionary

Touch to open a list of the words you've added to the dictionary. Touch a word to edit or delete it. Press **Menu** key and touch **Add** to add a word.

# II.II Accessibility (1)

You use the Accessibility settings to configure any accessibility plug-ins you have installed on your cellphone.

#### **Accessibility**

Mark the check box to enable all installed accessibility plug-ins.

#### **KickBack**

Mark the check box to have the cellphone vibrate briefly as feedback as you navigate the user interface, press buttons, and so on.

#### **TalkBack**

Mark the check box to have an installed speech synthesizer speak the labels or names of items as you navigate the cellphone's user interface.

#### SoundBack

Mark the check box to play a sound as you navigate to the cellphone's user interface.

<sup>(1)</sup> Availability depending on your country and network operator.

# II.I2 Text-to-speech (I)

You use the Text-to-Speech settings to configure the Android text-tospeech synthesizer, for applications like TalkBack that can take advantage of it.

If you don't have speech synthesizer data installed, only the Install voice data setting is available.

#### Listen to an example

Touch to play a brief sample of the speech synthesizer, using your current settings.

#### Install voice data

If your cellphone does not have speech synthesizer data installed, connect to Android Market and find yourself guided through the process of downloading and installing the data. This setting is not available if the data is already installed.

#### Always use my settings

Mark the check box to use the settings on this screen in place of speech synthesizer settings available in other applications.

#### Speech rate

Touch to open a dialog where you can select how quickly you want the synthesizer to speak.

# Language

Touch to open a dialog where you can select the language of the text you want the synthesizer to read. This is particularly useful in combination with Always Use My Settings, to ensure that text is spoken correctly in a variety of applications.

<sup>(1)</sup> Availability depending on your country and network operator.

#### II.I3 Date & time

Use Date & Time settings to customize your preferences for how date and time are displayed.

#### **Automatic**

Mark the check box to use network-provided values. Or unmark to set all values manually.

#### Set date

Touch to open a dialog where you can manually set the cellphone's date.

#### Select time zone

Touch to open a dialog where you can set the cellphone's time zone.

#### Set time

Opens a dialog where you can set the cellphone's time.

#### Use 24-hour format

Mark the check box to display the time using 24-hour clock format.

## Select date format

Touch to open a dialog where you can select the format for displaying dates.

# **II.I4** About cellphone

Actually this contains information about a lot of things ranging from Legal information, Model number, Firmware version, Baseband version, Kernel version, Build number to those listed below:

#### **Status**

This contains the status of the Battery charging level, My cellphone number, Network, Signal strength, Mobile network type, Service state, Roaming, Mobile network state, IMEI, IMEI SV, Wi-Fi MAC address, Bluetooth address, Up time.

#### **Battery use**

Touch to open a list of the applications and operating system components you have used since you last connected the cellphone to a power source, sorted by the amount of power they have used. Touch an application in the list to view details about its power use and, if available, touch a button to open a settings or information screen for that component or application.

#### **Legal information**

Touch to view legal information.

#### User manual (1)

This is where you can read the user manual in the cellphone. It opens with PDF viewer by default.

# 2 Making the most of your cellphone ......

#### 12.1 PC suite

You can download software upgrade for free from the website: www. alcatel-mobilephones.com. The PC suite includes:

#### Contacts

It allows you to back up contact entries so that you don't have to worry about losing, breaking, switching cellphone or changing service providers.

#### Message

It frees you from painstakingly inputting text on the keypads. All of your messages are easily accessible and well-organized.

#### • File Manager

It allows you to organize Handset files with just a few clicks and files on the Handset can be at where you want them to be.

#### SyncManager

It allows you to synchronize the Contacts and Calendar in Outlook/ Outlook Express and handset.

#### Internet Modem

Use your cellphone to connect a PC to the internet.

#### **Supported Operating Systems**

Windows 2000/XP/Vista/Windows 7.

# 3 Alcatel Mobile Phones Limited Warranty......

TCT Mobile North America LTD warrants to the original retail purchaser of this wireless device, that should this product or part thereof during normal consumer usage and condition, be proven to be defective in material or workmanship that results in product failure within the first twelve (12) months from the date of purchase as shown on your original sales receipt. Such defect(s) will be repaired or replaced (with new or rebuilt parts) at the company's option without charge for parts or labor directly related to the defect(s).

Batteries, power adapters, and other accessories sold as in box items are also warranted against defects and workmanship that results in product failure within the first six (6) months period from the date of purchase as shown on your original sales receipt. Such defect(s) will be repaired or replaced (with new or rebuilt parts) and the company's option without charge for parts or labor directly related to the defect(s).

The limited warranty for your wireless device will be voided if any of the following conditions occur:


- Non-compliance with the instructions for use or installation, or with technical and safety standards applicable in the geographical area where your phone is used;
- Connection to any equipment not supplied or not recommended by TCT Mobile;
- Modification or repair performed by individuals not authorized by TCT Mobile or its affiliates:
- Acts of god such as Inclement weather, lightning, power surges, fire, humidity, infiltration of liquids or foods, chemical products, crash, high voltage, corrosion, oxidation:
- · Removal or altering of the wireless devices event labels or serial numbers (IMEI);
- Damage from exposure to water or other liquids, moisture, humidity, excessive temperatures or extreme environmental conditions, sand, excess dust and any condition outside the operating guidelines;

 Defects in appearance, cosmetic, decorative or structural items such as framing and non-operative parts.

There are no express warranties, whether written, oral or implied, other than this printed limited warranty or the mandatory warranty provided by your jurisdiction. In no event shall TCT Mobile or any of its affiliates be liable for incidental or consequential damages of any nature whatsoever, including but not limited to commercial loss, to the full extent those damages can be disclaimed by law. Some provinces/territories do not allow the exclusion or limitation of incidental or consequential damages, or limitation of the duration of implied warranties, so the preceding limitations or exclusions may not apply to you.

# 4 Accessories (1).....

The latest generation of Alcatel GSM cellphones offers a built-in handsfree feature that allows you to use the cellphone from a distance, placed on a table for example. For those who prefer to keep their conversations confidential, an earpiece is also available known as the headset.

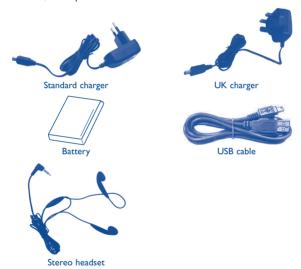

**છે**-

Only use your cellphone with the Alcatel batteries, chargers and accessories in your box.

# 5 Troubleshooting.....

Before contacting the aftersales department, you are advised to follow the instructions below:

- You are advised to switch off the cellphone from time to time to maintain optimal performance.
- You are advised to fully charge ( ) the battery for optimal operation.
- Avoid storing large amounts of data in your cellphone as this may affect the performance of your cellphone.

and carry out the following checks:

#### My cellphone can not switch on

- Press until the screen comes on
- · Check the battery charge level
- Check the battery contacts, remove and reinstall your battery, then turn your cellphone back on

# My cellphone has not responded for several minutes

- Press the key
- · Remove the battery and re-insert it, then switch the cellphone back on

#### My cellphone turns off by itself

- · Check that your keypad is locked when you are not using your cellphone
- · Check the battery charge level

#### My cellphone will not charge properly

- · Make sure you are using an Alcatel battery and charger provided in the box.
- Make sure your battery is inserted. It must be inserted before plugging in the charger
- Make sure that your battery is not completely discharged; the battery charge indicator can take several minutes
- Make sure charging is carried out under normal conditions (0°C +40°C)
- · When abroad, check that the electrical current is compatible

#### My cellphone can not connect to a network

- · Try connecting in another location
- · Verify the network coverage with your operator
- · Check with your operator that your SIM card is valid
- · Try selecting the available network(s) manually
- Try connecting at a later time if the network is overloaded

#### SIM card error

- Make sure the SIM card has been correctly inserted
- Make sure the contact on the SIM card is clean and free of contaminants or physical damage
- Verify with your operator that your SIM card is 3V, I.8V compatible; the old 5V SIM cards cannot be used
- · Make sure the chip on your SIM card is not damaged or scratched

#### Unable to make outgoing calls

- Make sure you have dialled a valid number and press the key
- For international call, please verify what is the proper dialing sequence to reach your desired destination
- Make sure your cellphone is connected to a network, and that the network is not overloaded or unavailable
- Check your subscription status with your operator (credit, SIM card valid, etc.)
- · Make sure you have not barred outgoing calls
- · Verify if FDN is on and the number is in the FDN list

#### Unable to receive incoming calls

- Make sure your cellphone is switched on and connected to a network (check for overloaded or unavailable network)
- Check your subscription status with your operator (credit, SIM card valid, etc.)
- Make sure you have not forwarded incoming calls
- · Make sure that you have not barred certain calls

# The caller's name or number does not appear when a call is received

- · Check that you have subscribed to this service with your operator
- · Your caller has concealed his/her number

#### I cannot find my contacts

- · Make sure your SIM card is correctly inserted
- · Import all contacts stored in SIM card to cellphone

# The sound quality of the calls is not optimal

- You can adjust the volume during a call by means of the **Volume** key
- Check the signal strength level ......, low signal will impede the audio quality

#### I am unable to use the features described in the manual

 Check with your operator to make sure that your subscription includes this service

#### I am unable to add a contact to my directory

 Make sure that your cellphone memory is not full; delete some contacts or save the contacts in the cellphone directory (i.e. your professional or personal directories)

#### My callers are unable to leave messages on my voicemail

· Contact your network operator to check service availability

#### I cannot access my voicemail

- · Make sure your operator's voicemail number is correctly entered
- Try later if the network is busy

#### I am unable to send and receive MMS

- · Check your cellphone's available memory as it might be full
- Contact your network operator to check service availability and check MMS parameters
- Verify the server centre number or your MMS profile with your operator
- · The server centre may be swamped; try again later

#### "No service" is displayed

· You are outside of the network coverage area

#### I have already entered 3 incorrect PIN codes

 Contact your network operator to obtain the PUK code (Personal Unblocking Key)

#### I am unable to connect my cellphone to my computer

- · Install Alcatel's PC suite first of all
- Open Notification panel to check if the PC Suite Agent has activated
- Check that you have marked the checkbox of USB debugging in Settings\ Applications\Development\USB debugging
- Check that your computer system meets the requirements for Alcatel's PC Suite installation

#### Lam unable to download new files

- · Check for free space of your MicroSD card
- Delete some files
- Check your subscription status with your operator

#### The cellphone can't be detected by others via Bluetooth

 Make sure that Bluetooth is turned on and your cellphone is visible to other users

#### How to make your battery last longer

- Make sure you followed the complete charge time (minimum 3 hours)
- After a partial charge, the battery level indicator may not be exact. Wait for at least 20 minutes after removing the charger to obtain an exact indication
- Turn on the backlight only when needed and adjust other parameters in Settings -> Sound & Display menu to minimize power usage.
- Extend email auto-check interval as long as possible
- Exit background-running applications if they are not being used for a long time
- · Deactivate Bluetooth, Wi-Fi, or GPS when not in use

# Specifications

Processor	Qualcomm <sup>®</sup> MSM7227™
Platform	Android™ 2.I
Memory	ROM: 512 MB
	RAM: 256 MB
Dimensions (LxWxT)	112.5×60.4×15.9 mm
Weight	Around 152 grams with battery
Display	2.8-inch TFT-LCD touchscreen with 240×320 QVGA resolution
Network	UMTS: Dual-band 850/1900 MHz (OT-980A), 1700/2100 MHz (OT-981A) GSM/GPRS/EDGE: Quad-band 850/900/1800/1900 MHz (Band frequency and data speed are operator dependent.)
GPS	Assisted GPS/Internal GPS antenna
Connectivity	Bluetooth® 2.0 A2DP Wi-Fi®: IEEE 802.11 b/g 3.5 mm audio jack Micro-USB
Camera	2.0 megapixel color camera

Audio supported formats	MP3, AAC (AAC, AAC+), AMR-NB, MIDI, Ogg vorbis
Video supported formats	MPEG-4 (playback only), H.263, H.264 (playback only)
Battery	Rechargeable Lithium-ion battery     Capacity: 1150 mAh
Expansion Slot	MicroSD™ memory card (Availability of MicroSD card depends on market)
Special Features	G-sensor     Digital Compass

Note Specifications are subject to change without prior notice.

## ALCATEL is a trademark of Alcatel-Lucent and is used under license by TCT Mobile Limited.

© Copyright 2010 TCT Mobile Limited All rights reserved

> TCT Mobile Limited reserves the right to alter material or technical specification without prior notice.