

TABLE OF CONTENTS

CHAPTER 1 BEFORE USING YOUR PHONE	.1
Package Includes	.2
Handset Description	.3
Basic Functions	.4
The Function Keys	.4
Display Indicators	.5
Screen Status, Display and Function	.5
Using the Battery	.6
Using the Battery	.6
Removing the Battery	.6
Charging the Battery	.7
Power Connection	.7
Charging the Battery Only	.7
Charging the Battery with the Handset	.9
Charging Completion	.9
Status of Charger LED	.9
Important Battery Information	.10
CHAPTER 2 BASIC OPERATION	.11
Turning the Phone On and Off	.12
Turning the Phone On	.12
Turning the Phone Off	.12
How to Use the Menu	.13
Menu Summary	.14
Basic Functions	.16
Making a Call	.16
Pause Feature	.17
How to Answer Calls	.18
Caller ID Function	.18
Call Waiting Function	.18
Missed Call Display	.19
How to Adjust Volume	.19
Vibrate	.19
Functions During a Call	.20
Sending Your Number to a Pager	.20
Scratch Pad	.20
Mute	.21
CHAPTER 3 MEMORY FUNCTION	.23
How to Store a Phone Number	.24
How to Enter Letters and Characters Using the Dial Buttons	.25
How to Make a Call Using A Stored Phone Number	.26
One-Touch/Two-Touch Dialing	.26

TABLE OF CONTENTS (CONT'D.)

How to Find Your Call Logs	27
Missed Calls	27
Answered Calls	28
Dialed Calls	28
How to Find Your Phone Book	29
Recalling by Memory Location Number	29
Recalling by Name	30
CHAPTER 4 MENU	31
Settings	32
Auto Retry	32
Auto Answer	33
One-Touch Dialing	34
Voice Privacy	34
Backlight	35
Lighting Length	35
Display	36
LCD Contrast	36
Logo Display	36
Tone	37
Ring Mode	37
Ring Type	37
Keypad	38
Call Timers	39
Last Call	39
All Calls	39
Home Calls	39
Roam Calls	39
Alert	40
Min Alert	40
Roam Alert	40
Fade Alert	41
Low Signal Alert	41
Connect Alert	41
Change System	42
Preferred System	42
Change NAM	42
Auto NAM	43
Preferred Roaming List ID	43
Force Analog	43
Phone Info	44
Checking My Number	44
Checking the Phone Version	44

TABLE OF CONTENTS (CONT'D.)

CHAPTER 5 SECURITY FEATURES	45
How to Lock Your Phone	46
Auto Lock	46
Lock Code Change	47
How to Change Your Banner	48
Banner Change	48
How to Restrict Your Phone	49
Restriction Functions	49
Restricting Incoming Calls	49
Restricting Outgoing Calls	50
Restricting the Phone Book	50
Restricting Long Distance Calls	51
Restricting Calls to 900 Numbers	51
How to Reset Your Phone	52
How to Clear Your Phone Memory	53
Clearing Stored Phone Numbers	53
Memory Clearing Function	54
Clearing Schedule	54
Clearing Dialed Numbers in Call Logs	54
Clearing Air Time In Home Service Area	54
Clearing Roam Calls	55
CHAPTER 6 SUPPLEMENTARY FUNCTIONS	57
Schedule	58
Input Schedule List	58
View Schedule List	59
Pause All Schedule	59
Stopwatch	60
Calculator	61
Bio-Rhythm	62
CHAPTER 7 VOICE MAIL AND TEXT MESSAGE	63
Receiving a Message	64
Direct View Set	64
Direct View Release	64
New Message(Sending Message)	65
Sending Message to Mobile	65
Sending Message to Internet	66
Sending Message to Multi Number	66
Inbox(Checking Received Message)	67
Checking Received Voice Mail Message	67
Checking Received Text Message	67
Store/Forward/Reply/Save Address Text message	68
Outbox(Sent Message)	70
Checking Sent Text Mail Message	70

TABLE OF CONTENTS (CONT'D.)

Setting71
Save Sent SMS71
Default Call Back Number71
Direct View Setting72
Message Alert72
Delivery ACK73
Erase All Mail73
Reference74
CHAPTER 8 EMERGENCY CALL81
Making an Emergency Call82
E911 In Lock Mode82
E911 Using Any Available System83
CHAPTER 9 INTERNET BROWSER85
Start Internet Browser86
Access Wireless Internet86
Browser Menu87
Reroad87
Home87
Bookmarks88
Mark Site88
About Phone.Com89
Advanced89
Show URL90
Homepage90
Set UP.Link91
Offline Services91
Outbox92
Restart Up.Browser92
Encryption93
CHAPTER 10 SAFETY95
Safety Information for Wireless Handheld Phones96
Driving Safety97
Electronic Devices98
Other Safety Guidelines100
Precautions101
Warning102
Safety Information for FCC RF Exposure103
Cautions103
CHAPTER 11 WARRANTY105
Protect Your Warranty106
12 Month Limited Warranty107

CHAPTER 1

BEFORE USING YOUR PHONE

Please read this chapter before using this product.

- ❶ Package Includes
- ❷ Handset Description
- ❸ Basic Functions
- ❹ Display Indicators
- ❺ Using the Battery
- ❻ Charging the Battery
- ❼ How to Use the Battery More Efficiently

PACKAGE INCLUDES

Thank you for purchasing this product. Please check the product contents by comparing them with the following pictures.

Handset



Standard Battery



Extended Battery (optional)



User Manual



Handstrap



Desktop Charger



In case there are any product defects, please report them to the place of purchase immediately.

HANDSET DESCRIPTION



BASIC FUNCTIONS

THE FUNCTION KEYS



This key is used to make or receive a call.



This key is used to terminate a call or exit the current menu. This key is used to turn the handset on or off. It also releases the Key Lock function.



These keys (also called as the Navigation keys) are used to scroll through the contents of the menu.



(Soft 1) This key is used to access the Menu when pressed and held for more than 1 second.



(Soft 2) This key is used to access voice or text messages.



This key is used to access the web.



This key is used to clear character.

DISPLAY INDICATORS

SCREEN STATUS, DISPLAY AND FUNCTION



Signal Strength

Indicates current signal strength. More lines mean better signal strength.






Roaming

Indicates the phone is outside of its home area.



Service Indicator

When a call is in progress,  is displayed. When  is displayed, the phone is in idle mode. When  is displayed, the phone is not receiving a signal from the system.



Message

Indicates a text message or voice mail message is waiting.



Digital mode

Indicates the phone is operating in digital mode.



 
Battery

Indicates battery charge level status. The more black you see, the greater the charge.

USING THE BATTERY


INSTALLING THE BATTERY

- 1 Insert the bottom of battery into the groove at the bottom of the handset. Then 2 press in the top of the battery until it snaps.

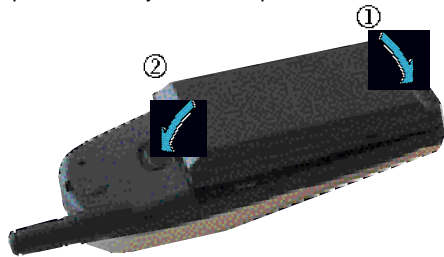

REMOVING THE BATTERY

 - 1 Push the tab 1 with one hand and lift the top of the battery 2 to separate.

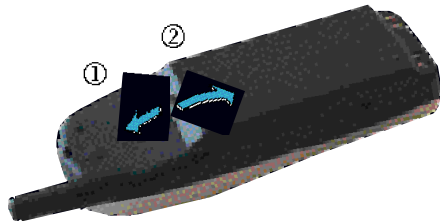

The battery must be correctly placed in the battery compartment. If battery is incorrectly inserted, the handset will not turn on or the battery may slip out during use.

[6]

CHARGING THE BATTERY

POWER CONNECTION

- 1 Connect the charger to a standard 120V AC outlet.



CHARGING THE BATTERY ONLY

- 1 To charge the battery only, insert the battery pack into the charging slot on the charger. The LED will indicate charging status. Red indicates charging, Green indicates charging is complete.



- Battery is not charged when you purchase the product.
- Fully charge the battery before use.

[7]

CHARGING THE BATTERY

TIME TO COMPLETE BATTERY CHARGING (ONLY FOR ITS TURN OFF CONDITION)

Battery Type	Standard Battery(Min) (1000 mAh)	Extended Battery(Min) (1600 mAh)
Charging Time	300	400

BATTERY LIFE (FOR NEW BATTERY)

Status	Type	Standard Battery (1000 mAh)	Extended Battery (1600 mAh)
	Talk (min)	CDMA	180
AMPS		60	120
Stand by (hrs)	CDMA	130	200
	AMPS	8 ~ 10	12 ~ 15

CHARGING THE BATTERY

CHARGING THE BATTERY WITH THE HANDSET

- 1 To charge the battery with the handset, insert the handset into the charger.



Charging the battery with the handset on is less efficient than charging it with the handset off.



CHARGING COMPLETION

- 1 Charging is completed when the green-colored LED stays on.



STATUS OF CHARGER LED

Charging Slot	Charging in Progress (Red Color On)	Charging Completion (Green Color On)
Front Charging Slot (Charging Slot for Handset Only)		



- It is recommended that you have to check out cleanness of the battery's contact surface if the LED has a flickering.
- LED may change from red to green back and forth after battery is full charged, but it doesn't mean any problem with charging battery.

IMPORTANT BATTERY INFORMATION

Use only batteries and chargers approved by the phone manufacturer.

When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for longer than a week; overcharging may shorten its life.

Never use any charger or battery that is damaged or worn out.

Use the battery only for its intended purpose.

Do not short circuit the battery. Accidental short circuiting can occur when a metallic object (e.g. coin, clip or pen) causes direct connection of the two terminals of the battery (metal strips on the back of the battery), for example, when you carry a spare battery in your pocket or purse. Short circuiting the terminals may damage the battery or the connecting object.

Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, reduces the capacity and lifetime of the battery. Always try to keep the battery between 41°F and 95°F (5°C and 35°C). A phone with a hot or cold battery may temporarily not work (or charge) even if the battery is fully charged.

Temperature extremes affect the ability of your battery to charge; allow it to cool down or warm up first.

When the battery is not in use, store it uncharged in a cool, dark and dry place.

The battery is a sealed unit with no serviceable parts. Do not attempt to open the case.

The battery can be charged and discharged hundreds of times but will eventually wear out. When the operating time is shorter than normal, it is time to buy a new battery.

Do not dispose of a battery in a fire!

Dispose of used batteries in accordance with local regulations.

Recycle!


CHAPTER 2

BASIC OPERATION

- 1 Turning the Phone On and Off
- 2 How to Use the Menu
- 3 Menu Summary
- 4 Basic Functions
- 5 Functions During a Call

TURNING THE PHONE ON AND OFF

TURNING THE PHONE ON

- 1
 - Press [].
 - The phone is locked if "PASSWORD" is displayed on the screen. When "PASSWORD" is displayed, enter the 4-digit password to unlock the phone.
 - The default password is the last 4 digits of your phone number.







TURNING THE PHONE OFF

 
- 1
 - Press [] until "Power Off" is displayed.



- If the "LOW BATTERY WARNING POWER OFF" is displayed and the power goes off, there is a possibility of damaging the memory. Change or charge the battery immediately.
- If the battery is removed while the phone is on, it may erase last call information.

HOW TO USE THE MENU

- 1 In the standby screen, press and hold [].
- 2 Use the navigation keys or the volume keys to view the menu.
Press and hold down the keys to scroll through the menu.
- 3 To go back to previous screen, press [],
To the exit menu, press [].
- 4 To go into submenu, press the corresponding number or select the desired item using the scroll key.
- 5 [], [], and [] can be used while using the menu.



MENU SUMMARY

1 : PHONE BOOK ▶

- 1 : CALL LOGS
 - 1 : MISSED CALL
 - 2 : ANSWERED CALL
 - 3 : DIALED CALL
- 2 : BY LOCATION
- 3 : BY NAME

2 : SETTING ▶

- 1 : AUTO RETRY
- 2 : AUTO ANSWER
- 3 : ONE-TOUCH
- 4 : VOICE PRIVACY
- 5 : BACKLIGHT
- 6 : LCD CONTRAST
- 7 : LOGO DISPLAY
- 8 : LINGER TIMER

3 : TONE ▶

 
- 1 : RING MODE
- 2 : RING TYPE
- 3 : KEYPAD

4 : TIMER ▶

- 1 : LASTCALL
- 2 : ALL CALLS
- 3 : HOME CALLS
- 4 : ROAM CALLS

5 : SPECIAL ▶

- 1 : SCHEDULE
 - 1 : LIST ALL
 - 2 : INPUT SCHEDULE
 - 3 : PAUSE ALL
- 2 : STOPWATCH
- 3 : CALCULATOR
- 4 : BIORHYTHM
 - 1 : TODAY
 - 2 : SOMEDAY
 - 3 : BIRTHDAY



MENU SUMMARY

6 : ALERT ▶

- 1 : MIN ALERT
- 2 : ROAM ALERT
- 3 : FADE ALERT
- 4 : LOW SIG ALERT
- 5 : CONNECT ALERT

7 : DATA SERVICE ▶

- 1 : FLOW CONTROL
- 2 : RECEIVE MODE

 
8 : CHANGE SYSTEM ▶

- 1 : PREF SYSTEM
- 2 : CHANGE NAM
- 3 : AUTO NAM
- 4 : PRL ID
- 5 : FORCE ANALOG

9 : MY NUMBER

0 : SECURITY ▶

- 1 : AUTO LOCK
- 2 : CHANGE CODE
- 3 : CHANGE BANNER
- 4 : RESTRICT
 - 1 : INCOMING
 - 2 : OUTGOING
 - 3 : MEMORY
 - 4 : LONG DISTANCE
 - 5 : 900#S
- 5 : RESET
- 6 : CLEAR
 - 1 : CLR PHONEBOOK
 - 2 : CLR SCHEDULE
 - 3 : CLR CALL LOGS
 - 4 : CLR HOME CALLS
 - 5 : CLR ROAM CALLS
- 7 : VERSION



BASIC FUNCTIONS

MAKING A CALL

1

Enter the phone number.
To modify the phone number you have entered:



- To erase the last number entered: Press [*].
- To erase all numbers entered and start again: Press [*] and hold for more than half of a second.



2

Press [*].

- "CALL FAILED" message is displayed when the call does not connect.
- If the line is busy, press [*]. Retry by pressing [*].
- If you select the AUTO RETRY function, the call will be retried automatically for the time you have selected.

Press [*] to end the call.

BASIC FUNCTIONS

PAUSE FEATURE

Pauses are used for automated systems (i.e., voice mail and calling cards). To insert pauses:

1

Enter phone number, then press [*].



2

Select desired pause.

- When idling status:

- 1 : STORE
- 2 : BY NUMBER
- 3 : HARD PAUSE
- 4 : ONE HYPHEN

- When receiving call status:

- 1 : STORE
- 2 : SEND PHONE#
- 3 : SCRATCH PAD
- 4 : MUTE
- 5 : VIEW PHONE#
- 6 : HARD PAUSE
- 7 : ONE HYPHEN
- 8 : VOICE PRIVACY

Pause Definitions:



- HARD PAUSE:** If you enter the pause character (P), the number entered after the Pause character will be sent after the number dialed.

3

- Press [*] to dial or press [*] then [1] to store.

BASIC FUNCTIONS

HOW TO ANSWER CALLS

- 1 When phone rings or LED blinks, press any key except Volume Up or Down and [] key.
- 2 To end the call, press [].



If you set up the AUTO ANSWER function in advance, the call will be answered after the selected number of rings. (Refer to page 33)



CALLER ID FUNCTION

When there is an incoming call, the caller's phone number is displayed on the screen.





The Caller ID number is saved in the call log.

CALL WAITING FUNCTION

- 1 This function notifies you there is an incoming call when you are on the phone.
 - To answer the call, press [] when you hear the beep.
 - To switch back to the first caller, press [] again.

BASIC FUNCTIONS


MISSED CALL DISPLAY

- 1 Displays the number of missed calls.
 - The message will be cleared when you press the [] or [] key.




HOW TO ADJUST VOLUME

You can adjust the volume in two ways: by using the volume control keys on the side of the handset, or by using the menu.

- 1 Adjust volume by using the volume control keys during the following operation.
 - During a Call : Earpiece volume adjustment.
 - Standby Status : Ringer volume adjustment.
 - When the Phone Rings : Ringer volume adjustment.
 - Call status in hands-free : Hands-free volume adjustment. Press [] when the phone rings and it will mute the ringer.


VIBRATE

This function disables the ringer and vibrates the phone any time an incoming call is in process. To enable this function press [], [3],[1] and select VIBRATE or by pressing the "up" and "down" keys at the left upper side of the phone.



FUNCTIONS DURING A CALL

SENDING YOUR NUMBER TO A PAGER

This function enables the phone number of the handset to be transmitted automatically to a pager, depending on pager service.


- 1 After calling a pager, when you are asked to enter your number, press and hold [] then [1] "SEND PHONE #".

SCRATCH PAD

- 1 While on a call, press and hold [], then [2] "SCRATCH PAD".
- 2 Enter the phone number, then press [].

 
FUNCTIONS DURING A CALL

MUTE

- 1 While on a call, press [], then [3] "Mute".





To unmute, press [], then [3] "Mute" again.



CHAPTER 3

MEMORY FUNCTION

  
- ① How to Store a Phone Number
- ② How to Make a Call Using a Stored Phone Number
- ③ How to Find Your Call Logs
- ④ How to Find Your Phone Book



HOW TO STORE A PHONE NUMBER


You can store up to 100 frequently used phone numbers in memory.

 1 Enter the phone number (more than 3 digits) you want to store and press [], then [1] "Store".



- The first available empty memory location number is displayed. If there are no empty locations, "MEMORY IS FULL!" is displayed with a warning sound.
- If there is a desired memory location number, enter the number.

 2 If the "XX LOCATION IS USED" message appears after entering the memory location number, it means there is another stored phone number in that location already.



3 Enter the person's name and press [].



4 To make a secret, select Yes. The number will be displayed only after entering the lock code.



HOW TO STORE A PHONE NUMBER

How To Enter Letters And Characters Using The Dial Buttons

1. Select characters you wish to enter using the key pad.

Key Pad	1 Repetition	2 Repetitions	3 Repetitions	4 Repetitions	5 Repetitions
1	1				
2ABC	A	B	C	2	
3DEF	D	E	F	3	
4GHI	G	H	I	4	
:	:	:	:	:	:
9WXYZ	W	X	Y	Z	9

- When entering special characters such as 0, ., ? ! @ _ + = () * # : ; % / , press [MODE] repeatedly. The special characters will be displayed in order.

2. Press [] to enter the next character.

- Cursor moves to the next column automatically in two seconds after the next character.

3. Repeat until all the characters you want are entered.

- You can store up to 16 characters.

4. Erasing Entry.

- To erase one letter, press [].
- To erase the entire entry, press and hold [].

HOW TO MAKE A CALL USING A STORED PHONE NUMBER

ONE-TOUCH/TWO-TOUCH DIALING

This feature allows the phone book entries to be dialed via the keypad.

ONE-TOUCH DIALING:

1-9 : Press corresponding memory number and hold for more than 1 second.

TWO-TOUCH DIALING:

00, 10-99 : press the first digit and second digits of the memory number short and long respectively.

- If no phone number is stored in the location depressed, "Empty Location" will appear on the screen.
- If a phone number is stored in secret, the number is not displayed when making a call.



 
One-touch dialing must be turned on in the handset. See page 34.

HOW TO FIND YOUR CALL LOGS

Your phone can display the 10 most recent missed, incoming, outgoing calls. You can call those numbers without dialing their whole number.

MISSED CALLS


- 1 Press [], then [1], then [1], then [1].



- 2 Press [] to check the detail information about phone number.

- The last missed call, its phone number, time and date are displayed.

 - 3 To check your missed calls using the scroll keys:





- [▲ / ▼] Scrolls up the phone numbers.
- [▼ / ▲] Scrolls down the phone numbers.

- 4 Press [] to dial desired missed call number.

HOW TO FIND YOUR CALL LOGS


ANSWERED CALLS


Press [], then [1], then [1], then [2]. (Refer to previous page)

Press [] to dial desired answered call number.
(Refer to previous page)

- The last answered call, its phone number, time and date are displayed.

DIALED CALLS


Press [], then [1], then [1], then [3].

Press [] to dial desired dialed call number.
(Refer to previous page)

- The last outgoing call, its phone number, time and date are displayed.

HOW TO FIND YOUR PHONE BOOK

RECALLING BY MEMORY LOCATION NUMBER


 




1 Press [], then [1], then [2].


2 Enter the memory location number.

 
- If you don't enter a specific memory location number, use the scroll key to search from the first memory location number.



3 Search phone numbers using scroll key.

- []/[] scrolls up the phone numbers.
- [] edit the phone#.
- [] erase the phone#.
- []/[] search phone number/e-mail address.

4 Press [] to dial desired phone book number.




HOW TO FIND YOUR PHONE BOOK

RECALLING BY NAME

1 Press [], then [1], then [3].

 
2 Enter the alpha (or part of the alpha).
Then press [].



3 To locate the phone number using the scroll key.

- []/[] search phone number.
- [] edit the phone#.
- [] erase the phone#.
- []/[] search phone number/e-mail address.

 4 Press [] to dial desired phone book number.




CHAPTER 4

MENU

Please read this chapter before using this product.

 - ① Settings
- ② Backlight
- ③ Display
- ④ Tone
- ⑤ Call Timers
- ⑥ Alert
- ⑦ Change Systems
- ⑧ Phone Info





SETTINGS

AUTO RETRY

When a call is not connected, this function retries the call automatically at a set interval or amount of retries.


INTERVAL


1 Press [], then [2], then [1], then [1].

 
2 Select the parameter (OFF, 3, 5, 7, 10 SECONDS) by using the scroll keys. Press [].



REPEAT

1 Press [], then [2], then [1], then [2].

2 Select the parameter (1, 3, 5 TIMES) by using the scroll keys. Press [].




SETTINGS

AUTO ANSWER

This function answers an incoming call automatically after a number of rings that the user sets.

1 Press [], then [2], then [2].

2 Select the parameter (OFF, 1, 3 RINGS) by using the scroll keys. Press [].




Auto answer function does not work if you select silent and slide bell.

SETTINGS

ONE-TOUCH DIALING

This function allows the phone book entries to be dialed via the keypad.


1 Press [], then [2], then [3].

2 Select the parameter (NO, YES) by using the scroll keys. Press [].



VOICE PRIVACY

1 Press [], then [2], then [4].

2 Select the parameter (STANDARD, ENHANCED) by using the scroll keys. Press [].




BACKLIGHT

 
LIGHTING LENGTH

This function allows you to adjust time to light up the screen, so that you can conveniently use the phone even in dark places.

1 Press [], then [2], then [5].

2 Select the parameter (OFF, OFF IN DAY, 10 SECS, 20SECS, 30SECS) by using the scroll keys. Press [].





DISPLAY

LCD CONTRAST

This function adjusts the LCD screen contrast.

1 Press [], then [2], then [6].



2 Select the contrast level by using the scroll keys. Press [].

LOGO DISPLAY

1 Press [] then [2], then [7].



2 Select the parameter Banner (Date,World Map) by using the scroll keys. Press [].

TONE

RING MODE

1 Press [], then [3], then [1].

2 Select the parameter (RINGER, SLIDE BELL,VIBRATE,SILENT, BELL AFTER VIB) by using the scroll keys.



3 Press [].

RING TYPE

 
 
 
1 Press [], then [3], then [2].

2 Select the parameter (1-13) by using the scroll keys.

- Different tones (1-6).
- Different melodies (7-13).








3 Press [].



TONE

KEYPAD

- 1 Press [], then [3], then [3].
 - If the warning alarm sounds because of low battery, the sound will not be heard even if the user presses the button.

- 2 Select the volume level by using the scroll keys.
 - []/[] scroll up to increase volume.
 - []/[] scroll down to lower volume, or setting to Silent.

- 3 Press [].

CALL TIMERS

LAST CALL

- 1 Press [], then [4], then [1].

ALL CALLS

- 1 Press [], then [4], then [2].

HOME CALLS

- 1 Press [], then [4], then [3].

ROAM CALLS

- 1 Press [], then [4], then [4].


ALERT

MIN ALERT

This function sounds an alert every minute, letting you know the call elapse time.

- 1 Press [], then [6], then [1].




- 2 Select the parameter (OFF, ON) by using the scroll keys. Press [].

ROAM ALERT

This function sounds an alert and gives out a message when the handset enters a new service area, when it enters another service area, or when it leaves the user service area.

- 1 Press [], then [6], then [2].



- 2 Select the parameter (OFF, ON) by using the scroll keys. Press [].

[40]


ALERT

FADE ALERT

This function sounds an alert when the phone can not make calls due to poor signal strength during an idle state.

- 1 Press [], then [6], then [3].




- 2 Select the parameter (OFF, ON) by using the scroll keys. Press [].

LOW SIGNAL ALERT

This function sounds an alert when the signal of a received call is weak during a call.

- 1 Press [], then [6], then [4].




- 2 Select the parameter (OFF, ON) by using the scroll keys. Press [].

CONNECT ALERT

This function sounds an alert when the signal of a received call is weak.

- 1 Press [], then [6], then [5].



- 2 Select the parameter (OFF, ON) by using the scroll keys. Press [].

 
[41]


CHANGE SYSTEMS

PREFERRED SYSTEM

This is a function to select the Preferred System.

- 1 Press [], then [8], then [1].






- 2 Select the system (AUTOMATIC A, AUTOMATIC B, Home only) by using the scroll keys. Press [].

CHANGE NAM

This is a function to change NAM.

- 1 Press [], then [8], then [2].



 
- 2 Select the NAM (NAM 1, NAM2) by using the [] or [] keys. Press [].

CHANGE SYSTEMS

AUTO NAM

This is a function to activate AUTO NAM.

- 1 Press [], then [8], then [3].



PREFERRED ROAMING LIST ID

This function identifies the current Preferred Roaming List ID.

 
- 1 Press [], then [8], then [4].



FORCE ANALOG

This is a function to change FORCE ANALOG.


- 1 Press [], then [8], then [5].



PHONE INFO

CHECKING MY NUMBER


This function checks the telephone number of the handset currently in use.

- 1** Press [], then [9].

*DIGITAL XXX
XXX-XXXX*
OK PREV

CHECKING THE PHONE VERSION

This function checks the version of the handset currently in use.

- 1** Press [], then [0], then enter [PASSWORD], then [7].

*VERSION(VER)
SW : XXXXXX
HW : XXXXXX*
OK PREV

CHAPTER 5

SECURITY FEATURES

 
- ① How to Lock Your Phone
- ② How to Change Your Banner
- ③ How to Restrict Your Phone
- ④ How to Reset Your Phone
- ⑤ How to Clear Your Phone Memory
- ⑥ Memory Clearing Function

HOW TO LOCK YOUR PHONE


AUTO LOCK

This function prevents any other person from using the handset without permission. When it is locked, the handset can not be used to dial or use any other function.

- 1 Press [], then [0], then enter [PASSWORD], then [1].



- The default password is the last 4 digits of your phone number.

- 2 Select the parameter (OFF, POWER ON, ON) by using the scroll keys. Press [].

- "POWER ON" locks the handset upon powering on the handset each time.
- "OFF" unlocks the handset and leaves it unlocked.



Incoming calls, emergency dialing and alarm functions are enabled when the handset is locked.

HOW TO LOCK YOUR PHONE

LOCK CODE CHANGE


This function is used to change the 4-digit lock code.

- 1 Press [], then [0], then enter [PASSWORD], then [2].



- The default password is the last 4 digits of your phone number.

- 2 Enter a new 4-digit "PASSWORD".


- 3 Re-enter the new "PASSWORD". Press [].

 
- 4 The display will read "PASSWORD" changed.

HOW TO CHANGE YOUR BANNER

BANNER CHANGE

This function changes the banner displayed on the LCD. You can enter a banner up to 16 characters long.

- 1 Press [], then [0], then [PASSWORD], then [3].
 - The default password is the last 4 digits of your phone number.




- 2 Enter a banner using instructions for alpha keys on page 25.


HOW TO RESTRICT YOUR PHONE

RESTRICTION FUNCTIONS

You can restrict five different functions.

- 1 Press [], then [0], then enter [PASSWORD], then [4].
 - The default password is the last 4 digits of your phone number.

 


- 2 Using the scroll buttons, select "YES".
Press [].


RESTRICTING INCOMING CALLS

When this function is enabled, the phone does not respond to incoming calls. However, outgoing calls can still be made.

- 1 Press [1] "INCOMING".



- 2 Select the parameter by using the scroll keys.
RESTRICT: restricts incoming calls.
ALLOW: allows incoming calls.


- 3 Press [].

HOW TO RESTRICT YOUR PHONE

RESTRICTING OUTGOING CALLS

When this function is enabled, incoming calls can be answered, but outgoing calls cannot be made. It is still possible to make emergency calls.

1 Press [2] "OUTGOING".



2 Select the parameter by using the scroll keys.


RESTRICT: restricts incoming calls.
ALLOW: allows incoming calls.

3 Press [].

RESTRICTING THE PHONE BOOK

This function blocks the storage of phone numbers or the use of stored phone numbers.

1 Press [3] "MEMORY".



2 Select the parameter by using the scroll keys.

RESTRICT: restricts phone book use.
ALLOW: allows phone book use.


3 Press [].

[50]

HOW TO RESTRICT YOUR PHONE

RESTRICTING LONG DISTANCE CALLS

1 Press [4] "LONG DISTANCE".




2 Select the parameter by using the scroll keys.

RESTRICT: restricts long distance calls.
ALLOW: allows long distance calls.

3 Press [].

RESTRICT CALLS TO 900 NUMBERS

1 Press [5] "900#'s".



2 Select the parameter by using the scroll keys.

RESTRICT: restricts 900 service.
ALLOW: allows 900 service.

3 Press [].




The message "THIS PHONE RESTRICTED" is displayed on the screen.

[51]

HOW TO RESET YOUR PHONE

This function resets each value set in the memory to its default value.


1

Press [], then [0], then enter [PASSWORD], then [5].

- The default password is the last 4 digits of your phone number.



2

Select the parameter by using the scroll keys. Press [].


- If you select "YES", the following screen is displayed, and then the phone will be automatically turned off.

HOW TO CLEAR YOUR PHONE MEMORY

 
CLEARING STORED PHONE NUMBERS

This function clears all stored numbers.


1

Press [], then [0], then enter [PASSWORD], then [6], then [1].

The default password is the last 4 digits of your phone number.




2

 
Select the parameter (NO, YES) by using the scroll keys. Press [].


MEMORY CLEARING FUNCTION

CLEARING SCHEDULES

This function clears stored schedule lists.


- 1 Press [], then [0], then enter [PASSWORD], then [6], then [2].
The default lock code is the last 4 digits of your phone number.





- 2 Select the parameter (NO, YES) by using the scroll keys. Press [].

CLEARING DIALED NUMBERS IN CALL LOGS

This function clears dialed numbers in the call logs.

 
- 1 Press [], then [0], then enter [PASSWORD], then [6], then [3].
The default password is the last 4 digits of your phone number.




- 2 Select the parameter (NO, YES) by using the scroll keys. Press [].

CLEARING AIR TIME IN HOME SERVICE AREA

This function clears air time used in home service area.

- 1 Press [], then [0], then enter [PASSWORD], then [6], then [4].
The default password is the last 4 digits of your phone number.




- 2 Select the parameter (NO, YES) by using the scroll keys. Press [].


MEMORY CLEARING FUNCTION

 
CLEARING ROAM CALLS

This function clears air time used in other service areas.

- 1 Press [], then [0], then enter [PASSWORD], then [6], then [5].
The default password is the last 4 digits of your phone number.





- 2 Select the parameter (NO, YES) by using the scroll keys. Press [].



CHAPTER 6

SUPPLEMENTARY FUNCTIONS

  - ① Schedule
- ② Stopwatch
- ③ Calculator
- ④ Bio-Rhythm





SCHEDULE

INPUT LIST

1 Press [], then [5], then [1], then [2].

2 Select the date in calendar and press the [].

[] []-month input.

[] [], numeric key
-day input.

3 Press [1], and select the parameter (one time or daily).
To set alarm, press [2] and input the schedule title.
To set reserved call, press [3] and input the phone number.
Press [].

4 Input the time and press [].



SCHEDULE

VIEW SCHEDULE LIST

 
1 Press [], then [5], then [1], then [1].

By pressing the [] you can view the more details about each item.

PAUSE ALL SCHEDULE

1 Press [], then [5], then [1], then [3].

2 Select the parameter (NO,YES) by using the scroll keys. Press [].





STOPWATCH


STOPWATCH

- 1** Press [], then [5], then [2].



- 2** Press [ / ] to control the stopwatch.

 
- [] controls Start/Stop/Split.
- [] controls Split/Split Release /Reset.
- The time unit displayed on the LCD in 1/100 of a second.

- 3** Press [] to exit and return to the initial display.









CALCULATOR

CALCULATOR

 - 1** Press [], then [5], then [3].



- 2** Using the calculator.


- Definitions:
 $+$: [], $-$: [], \times : []
 \div : [], $=$: [], \cdot : []
- Up to 7 integer digits and up to 2 decimals can be displayed. If the calculated result has more than 7 digits, the result is displayed in 7 digit logarithm.
- There is no (-)sign. To express a negative number, use '0-value'
- EXAMPLE
 To calculate $128 \times 32 =$
 1. Enter 128.
 2. Press [].
 3. Enter 32.
 4. Press [].

BIO-RHYTHM

This function identifies the bio-rhythms of today or a specific day using solar calendar.

1 Press [], then [5], then [4].

2 Press [3] "BIRTHDAY?".

- Enter your solar calendar birthday in year/month/date, and then press [].

1: TODAY
2: SOMEDAY
3: BIRTHDAY

PREV

3 To find out today bio-rhythm, select TODAY and to find out bio-rhythm of a specific day, select SOMEDAY.

- Bio-rhythm function is available only when the phone can register the current time from the network system.
- For Some Day Bio, you cannot enter the dates before your birthday.
- For Birthday, you cannot enter the dates later than today date.

- Physical, Emotional and Intelligent quotients appear with a number showing how many days have passed since your birth date for the date you want to find out. Bio-rhythm displayed on the top portion of the screen.
- What is Bio-rhythm?
Bio-rhythm is a life rhythm which is governed by three rhythm curves called physical, emotional, and intelligent and starts from our body from our birth to death.
 - Physical rhythm
 - This rhythm controls wide-ranging physical elements related to resistance to diseases, physical strength, adjustment of muscle exercise, speed, physiology and other basic physical functions with a cycle of 23 days.
 - Emotional rhythm.
 - This rhythm adjusts creativity, sensitivity, mental health and recognition about world and humans with a cycle of 28 days.
 - Intelligent rhythm.
 - This rhythm affects our memory, susceptibility to fright, acceptance of knowledge and logical and analytic power with a cycle of 33 days.

CHAPTER 7

VOICE MAIL AND TEXT MESSAGE

This chapter describes convenient functions that allow you to check voice mail and receive text messages with the handset.

 
- Receiving a Message
- New Message(Sending Message)
- INBOX(Checking Message)
- OUTBOX(Checking Received Message)
- SETTINGS
- REFERENCE

RECEIVING A MESSAGE

DIRECT VIEW SET

- 1 When a message is received, it is displayed.

[] -display text
 [] -delete message



DIRECT VIEW RELEASE

- 1 When message is received, displays the following message.

 
You can view the message in the SMS menu.



NEW MESSAGE(SENDING MESSAGE)

SENDING MESSAGE TO MOBILE


- 1 Press [], then press [1] "New Message"




- 2 For sending the message to mobile, press [1], then input phone number. Then, press [].



 
- 3
 - To create new message, press [1] or to send canned message, press [2].



 
- If you pressed [1], input new message. Then press [].



 - If you pressed [2], select the canned message by using scroll keys. Then press [].
 - You can modify the selected canned message.



 - Select priority of new message or canned message.




NEW MESSAGE(SENDING MESSAGE)

SENDING MESSAGE TO INTERNET

- 1** Press [], then press [1] "New Message".

1:TO MOBILE
2:TO INTERNET
3:TO MULTI NO.
PREV


- 2** For sending the message to email, press [2], then input email address, then press [].

SEND TO T9Abc
STO **MODE**


SENDING MESSAGE TO MULTI NUMBER

- 1** Press [], then press [1] "New Message".

1:TO MOBILE
2:TO INTERNET
3:TO MULTI NO.
PREV

- 2** For sending the mobile with Plural number, press [3]. Then input the plural number. Then, press [].


SEND TO 1
NEXT **PHONEBOOK** **PREV**

- 3** Select the parameter(NO, YES) by using scroll keys. Press [].


NEXT ADDRESS?
NO
SEL **PREV**

INBOX(CHECKING RECEIVED MESSAGE)

CHECKING RECEIVED VOICE MAIL MESSAGE


- 1** Press [], then press [2] "Inbox".

1:VOICE MAIL
2:XX NEW MAIL
3:XX READ MAIL
PREV

- 2** Press [1] "VOICE MAIL". The number of voice mail messages currently received in your voice mailbox is displayed. To access your voice mailbox, press [].

0 VOICE MAIL
TO LISTEN
PRESS [SEND]
PREV



CHECKING RECEIVED TEXT MESSAGE

- 1** Press [], then press [2] "Inbox".

1:VOICE MAIL
2:XX NEW MAIL
3:XX READ MAIL
PREV

- 2** To read new mail, press [2]. To read stored mail, press [3].

01: 22222
02: ABCDE
03: 12345
DTAL **DEL**

Select the new mail or stored mail by using scroll keys.
Press [], then you can read detail content
Press [], then you can drase selected mail.

INBOX(CHECKING RECEIVED MESSAGE)

STORE/FORWARD/REPLY/SAVE ADDRESS TEXT MESSAGE

1 Press [], then press [2].

1:VOICE MAIL
2:XX NEW MAIL
3:XX READ MAIL
PREV

2 To read new mail, press [2].
To read stored mail, press [3].

F 01 : 222222
02 : ABCDEF
03 : 111111
DTAL **DEL**

3 Press [], then press [].

1:REPLY
2:FORWARD
3:STORE
PREV

4 • To reply new message, press [1].

1:CREATE DATA
2:CANNED DATA
PREV

• To forward new message, press[2].

SEND TO
NEXT PHONE BOOK **PREV**

INBOX(CHECKING RECEIVED MESSAGE)

- To store new message, press [3].



TEXT STORED!!
1:LOCK
2:UNLOCK

 
- To save address of new message, press [4].


LOCATION: XX
XXX-XXXX-XXXX
STO **MODE**


OUTBOX(SENT MESSAGE)


CHECKING SENT TEXT MAIL MESSAGE

- 1** Press [], then press [3] "outbox".
Select the stored message, by using scroll keys then press [].




- 2** To send the message, press [].

 

- 3** Input the phone number,
then press [].



- 4** You can modify selected message,
then press [].





- 5** Select priority of message.

 


SETTINGS


SAVE SENT SMS


- 1** Press [], then press [4] "SETTINGS".

- 2** Press [1] "SAVE SENTSMS".
Select the parameter(NO/YES) by using the scroll keys.
Press [].



DEFAULT CALL BACK NUMBER

- 1** Press [], then press [4] "SETTINGS".


- 2** Press [2] "DEFAULT CB#".
Write Call Back number.
Then press [].




SETTINGS

DIRECT VIEW SETTING


When text message is received, text is displayed directly on the screen.


1 Press [], then press [4] "SETTINGS".

 
2 Press [3] "DIRECT VIEW".
Select the parameter(ON/OFF) by using the scroll keys.
Press [].



MESSAGE ALERT


1 Press [], then press [4] "SETTINGS".

2 Press [4] "MESSAGE ALERT".
Select the parameter(VIBRATE, SILENT, KINGER)
Then press [].




SETTINGS

DELIVERY ACK

 
1 Press [], then press [4] "SETTINGS".



2 To delivery ack, press[5], then select the parameter(NO/YES).


ERASE ALL MAIL

1 Press [], then press [4] "SETTINGS".

2 To erase all mail, press [6].



 - 3
- To erase inbox message, press [1].
Select the parameter(NO/YES) by using the scroll keys.
Press [].
 - To erase outbox message, press [2].
Select the parameter(NO/YES) by using the scroll keys.
Press [].



REFERENCE(WRITING MESSAGE)

You can enter letters and numbers into your phone for a person's name and phone number, writing a text message, and so on. There are two ways to do this:

1. Using standard text input
2. Using T9 mode text input

USING STAND TEXT INPUT

1 Select the Abc mode, by using the [ABC] keys.

- When you select this mode, the ABC icon appears as visual confirmation.

- "Find the key that corresponds to the letter you want to enter."
- Press it as many times as needed for the letter to appear on the screen.

- For example, to enter the name John:

- Press [5] J
- Press [6] [6] [6] o
- Press [4] [4] h
- Press [6] [6] n



REFERENCE(WRITING MESSAGE)


USING T9 MODE TEXT INPUT

KEY	FUNCTION
Mode	Press to change mode. [T9Abc][Abc][123][Special characters mode]
[0] Next	Press to view the next matching word if the underlined word is not the word you intended.
[#] Space	Press once to accept a word and add a space.
[*] Shift	Press to select standard text input or T9 mode text input. [Abc], [ABC], and [abc] indicate stand text input. [T9Abc], [T9ABC], and [T9abc] indicate predictive text input.
Clear	Press once to delete the character to the left of the cursor.
Left, Right	To move cursor.

REFERENCE(WRITING MESSAGE)

USING T9 MODE TEXT INPUT

 
1 T9 mode is the default mode.

2 Select the T9Abc mode, by using the [] keys.


- This method allows you to write using a built-in dictionary.
- With predictive text input, you only need to press each number key once for each letter.

-For example, to write **John** with the English dictionary selected:


-[5] (for J)




-[6] (for o)

 

-[4] (for h)

 


-[6] (for n)

 

<The display shows the above words for each key pressed.>

REFERENCE(WRITING MESSAGE)

WRITE WITH T9 MODE TEXT INPUT

Select the T9 Abc mode, by using the [] keys.

 
1 Press each key once for each letter.

-For example, to write "John" press.
[5] [6] [4] [6]



2 Press to view the next matching word if the underlined word is not the word you intended.


If the word is correct
- then press [#]




If the word is not correct
- then press [0]



  - then press [0],
the word is correct,
then press [#]






REFERENCE(WRITING MESSAGE)

3 Insert number

 
- To add a number to the message.
 - Press [] key until 123 appears.
 - To select the numbers you want.




4 Insert Symbols

- Press [] key until symbol screen appears.
 - Use numeric keys to select the character you want, then press insert.

 
Press [],



Press [],

 

Press [],
then press insert

 

REFERENCE(WRITING MESSAGE)

5 Write compound words

- Write the first part of the word and press [] key to accept it.
- Write the last part of the compound word and press [#] key to enter the word in memory.

- For example, to write "Whitehouse"

 
[9] [4] [4] [8] [3] []

 


[4] [6] [8] [7] [3]





Then press [#] key.





CHAPTER 8

  MAKING AN EMERGENCY CALL



[80]


[81]

 


MAKING AN EMERGENCY CALL

This is the enhanced 911 feature.

E911 IN LOCK MODE


- 1 Enter 911 and press[].



 - When a call ends, the phone returns to the Emergency Mode.




 
- 2 Reserve Emergency Mode during 5 minutes.



MAKING AN EMERGENCY CALL

E911 USING ANY AVAILBLE SYSTEM

- 1 Enter 911 and press[].

 


- When a call ends, the phone returns to the Emergency Mode.
- The phone tries to make an emergency call using any available system.



- 2 Reserve Emergency Mode during 5 minutes.








CHAPTER 9

INTERNET BROWSER

This chapter describes convenient functions that allow you to access Wireless internet with the handset.

   - ① Start Internet Browser
- ② Browser Menu






START INTERNET BROWSER

ACCESS WIRELESS INTERNET

 - 1 To access wireless internet network, press [] key. Then internet browser start.




BROWSER MENU

The browser menu is a list of actions necessary for full operation of the browser.

REROAD

Selectine the reroad item from the browser menu reloads the current deck the first time.


 
- 1 Press [], Then press [1].




HOME

When the home item is selected from the browser menu, the phone displays the home deck.

   - 1 Press [], Then press [2].







BROWSER MENU

BOOKMARKS

When the bookmarks item is selected from the browser menu, the browser displays the user's books.

  1 Press [], Then press [3].




MARK SITE

When the mark site item is selected from the browser menu, the browser add the current deck to the user's bookmark list.

1 Press [], Then press [4].



 "No bookmarks service site" is displayed, when the site cannot support bookmarks service.



BROWSER MENU

ABOUT PHONE.COM

When the about phone.com item is selected from the browser menu, the browser is displayed with the browser version and copyright information. The device layer version is also displayed.

 
1 Press [], Then press [5].

 


ADVANCED...

Selecting the advanced item in the browser menu displays the advanced menu items.

1 Press [], Then press [6].





BROWSER MENU

SHOW URL

Selecting the show URL action displays the URL of the current deck.

- 1 Press [], Then press [6], then press [1].

 


HTTP://www.
Hyundai.com/index

HOMEPAGE

Selecting the homepage item from the browser menu, enables the user to change the homepage.

- 1 Press [], Then press [6], then press [2].





BROWSER MENU

SET UP.LINK

Selecting set UP.link item from the browser menu displays a screen that allows the user to select an alternate UP.Link.

  
- 1 Press [], Then press [6], then press [3].




OFFLINE SERVICES

Selecting the offline services item from the browser menu navigates the user to a list of installed channel application. Selecting a particular application navigates the user to the entry point of the application.

 - 1 Press [], Then press [6], then press [4].



OFFLINE SERVICES
(EMPTY)


 


BROWSER MENU

OUTBOX

When the outbox item is selected from the browser menu, a status screen is displayed that shows the user how many items are pending delivery and the age of the oldest item.

  - 1 Press [MENU], Then press [6], then press [5].



RESTARTUP.BROWER

Selecting restart from the browser menu causes the deck history and deck cache to be cleared and a new session with the UP.Link to be started.

- 1 Press [MENU], Then press [6], then press [6].

 


 
BROWSER MENU

ENCRYPTION

Selecting the encryption item from the browser menu displays a list of security-related items.

- 1 Press [MENU], Then press [6], then press [7].







CHAPTER 10



SAFETY

  - ① Safety Information for Wireless Handheld Phones
- ② Safety Information for FCC RF Exposure



SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

Read This Information Before Using Your Handheld Portable
Cellular Telephone

EXPOSURE TO RADIO FREQUENCY SIGNALS

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals.

In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

ANSI C95.1 (1992) *
NCRP Report 88 (1986) *
ICNIRP (1996) *

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C951).

The design of your phone complies with the FCC guidelines (and those standards).

*;

American National Standards Institute;
National Council on Radiation Protection and Measurements;
International Commission on Nonionizing Radiation Protection.

ANTENNA CARE

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

[96]

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

DRIVING SAFETY

Talking on the phone while driving is extremely dangerous and is illegal in some states. Remember, safety comes first. Check the laws and regulations on the use of phones in the areas where you drive. Always obey them.

Also, if using your phone while driving please:

- Give full attention to driving. Driving safely is your first responsibility.
- Use hands-free operation, if available.
- Pull off the road and park before making or answering a call, if driving conditions require.

If you must use the phone while driving, please use one-touch, speed dialing, and auto answer modes.

An airbag inflates with great force. DO NOT place objects, including both installed or portable wireless equipment, in the area over the airbag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

WARNING: Failure to follow these instructions may lead to serious personal injury and possible property damage.

[97]

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

ELECTRONIC DEVICES

Most modern electronic equipment is shielded from RF energy. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of six (6") inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

If you have a pacemaker:

- ALWAYS keep the phone more than six inches from your pacemaker when the phone is turned on.
- Do not carry the phone in a breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- If you have any reason to suspect that interference is taking place, turn your phone OFF immediately.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider (or call the customer service line to discuss alternatives).

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

ELECTRONIC DEVICES

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Turn your phone OFF in healthcare facilities when any regulations posted in these areas instruct you to do so. Hospitals or healthcare facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Turn your phone OFF where posted notices so require.

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

OTHER SAFETY GUIDELINES

Aircraft

FCC Regulations prohibit using your phone while in the air. Switch OFF your phone before boarding an aircraft.

Blasting Areas

To avoid interfering with blasting operations, turn your phone OFF when in a "blasting area" or in areas posted: "Turn off two-way radio." Obey all signs and instructions.

Potentially Explosive Atmospheres

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include fueling areas such as gas stations; below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or articles, such as grain, dust, or metal powders; and any other area where you would normally be advised to turn off your vehicle's engine.

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

PRECAUTIONS

Your Handheld Portable Telephone is a high quality piece of equipment. Before operating the equipment, read all instructions and cautionary markings on (1) AC Adaptor (2) Battery and (3) Product Using Battery.

1. DO NOT use this equipment in an extreme environment where high temperature or high humidity exists.
2. DO NOT abuse the equipment. Avoid striking, shaking or shocking. When not using the unit, lay down the unit to avoid possible damage due to instability.
3. DO NOT expose this equipment to rain or spilled beverages.
4. DO NOT use unauthorized accessories.
5. DO NOT disassemble the phone or its accessories. If service or repair is required, return unit to an authorized Audiovox cellular service center. If unit is disassembled, the risk of electric shock or fire may result.
6. DO NOT short-circuit the battery terminals with metal items etc.

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

WARNING

The following offenses are punishable by fine, imprisonment, or both:

- Using obscene, indecent, or profane language.
- Using the unit to give off false distress calls.
- Wiretapping or otherwise intercepting a telephone call, unless that person has first obtained the consent of the parties participating in the call.
- Making anonymous calls to annoy, harass, or molest other people.
- Charging to an account without authorization to avoid payment for service.
- Refusing to yield a party line when informed that it is needed for an emergency call (It is also unlawful to take over a party line by stating falsely that it is needed for an emergency).

SAFETY INFORMATION FOR FCC RF EXPOSURE



WARNING! Read this Information before using your phone

CAUTIONS

In August 1996 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

 
Body-worn Operation

This device was tested for typical body-worn operation with the back of the phone kept 0.5 inches (1.27cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.5 inches (1.27cm) must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. All belt-clips, holsters and similar accessories used by this device must not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with FCC RF exposure limits and should be avoided.

Vehicle Mounted External Antenna(optional, if available)

A minimum separation distance of 7.9 inches (20cm) must be maintained between the user/bystander and the vehicle mounted external antenna to satisfy FCC RF exposure requirements.




Note: For more information about RF exposure, please visit the FCC website at www.fcc.gov



CHAPTER 11

WARRANTY

   - ① Protect Your Warranty
- ② 12 Month Limited Warranty



PROTECT YOUR WARRANTY

Read your Warranty carefully, with the special consideration to paragraph seven of the Limited Warranty for your unit.

“Warranty does not apply to... or to any product or part thereof which has suffered through alteration... mishandling misuse, neglect or accident”.

Many companies are making look alike accessories and in some cases, promoting that their product is equal to or better than the Audiovox product. Be careful. Some of these products may not be compatible to use with your Audiovox product and may damage the unit or cause it to malfunction. If service is required on your unit and it is determined that a non-Audiovox accessory has created the problem with your unit the Warranty will not apply. In addition if the unit has already suffered irreversible damage by reason of a non-compatible accessory the Warranty will be voided. To protect your Warranty use only compatible accessories which cannot damage or interfere with the functioning of your Audiovox product.



AUDIOVOX COMMUNICATIONS CORP.

555 Wireless Blvd., Hauppauge, New York 11788, 631-233-3300
16808 Marquardt Avenue, Cerritos, California 90703, 562-802-5100
Audiovox Canada
405 Britannia Rd, East, Ste 101, Mississauga, Ontario,
Canada L4Z3E8, 905-712-9299

[106]

12 MONTH LIMITED WARRANTY

AUDIOVOX COMMUNICATIONS CORP.(the Company). warrants to the original retail purchaser of this Audiovox Handheld Portable Cellular Telephone, that should this product or any part thereof(except the items listed below), under normal use and conditions, be proven defective in material or workmanship within the first twelve (12)month period from the date of purchase, such defect(s) will be repaired or replaced (with new or rebuilt parts)at the Company's option, without charge for parts or labor directly related to the defect(s).

The keypad and display are similarly warranted for ninety (90) days from date of purchase.

The accessories consisting of the antenna and rechargeable battery pack, desktop charger are similarly warranted for twelve (12) months from original purchase.

This Warranty does not apply to batteries, fuses, or costs incurred for testing or checking, or to any product or part hereof which has suffered through alteration, serial number defacement, improper installation, excessive temperature or humidity, environmental conditions, mishandling misuse, neglect or accident. This Warranty is not assignable or transferable.

To obtain repairs or replacement within the terms of this Warranty, the product should be delivered with proof of warranty coverage, specification of defect(s), transportation prepaid, to the Company at the address shown below. For TRAVELERS WARRANTY SERVICE.

[107]

12 MONTH LIMITED WARRANTY

Call toll free to (800) 229-1235 (in N. Y. State. (631)233-3410) for reference to an Authorized Warranty Station in your area.

THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

The Company disclaims liability for geographic coverage, inadequate signal to antenna, communications range or operation of the Cellular System as a whole.

ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 24 MONTHS FROM DATE OF ORIGINAL PURCHASE IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.

[108]

12 MONTH LIMITED WARRANTY

No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitation or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

IN U.S.A.: Audiovox Communications Corp.
555 Wireless Blvd.
Hauppauge, NY 11788
(631)233-3300

IN CANADA: Audiovox Canada Ltd.
405 Britannia Rd East,
Mississauga, Ontario L4Z3E6
(905)712-0299

[109]