


nextbook™ 7" Multi Media Android Tablet with Digital *open*



Manual Instruction


Safety Precautions

- Do not subject the device to severe impact or drop it from heights.
- Do not use the device in extreme hot or cold, dusty or damp conditions. Do not expose it to direct sunlight.
- Avoid using the device near strong magnetic fields.
- Keep the device away from water and other liquids. In the event that water or other liquids enter the device, power off the product immediately and clean the device.
- Do not use chemicals to clean the device in order to avoid corrosion. Clean it with a dry cloth.
- We are not responsible for damage or lost data caused by malfunction, misuse, modification of the device or battery replacement.
- Do not attempt to disassemble, repair or modify the product. This will invalidate the warranty.
- If the device will not be used for an extended period of time, please charge the battery at least once per month to maintain battery life.
- Charge the battery if:
 - a) The battery level icon displays  (An empty battery)
 - b) The device powers off automatically when restarted.
 - c) There is no response when pressing keys with keys unlocked and battery full.
- When the device is being formatted or transferring a file, do not interrupt the connection. Otherwise, data may be corrupted or lost.
- When the device is used as a portable HD, please use only per the instructions. Otherwise, permanent data loss could occur.
- Please use and install data using the attachments/accessories provided and only according to the manufacturer's instruction.
- Please refer to the information on the bottom of the device for electrical and safety information before installing data or operating the device.
- To reduce the risk of fire or electric shock, do not expose this device to rain or moisture. The device should not be exposed to dripping or splashing. Never place objects filled with liquids, such as vases, on the device.
- There is danger of explosion if the battery is replaced incorrectly. Replace only with the same or equivalent type.
- The battery (battery or batteries or battery pack) should not be exposed to excessive heat such as sunlight, fire or the like.
- Please follow responsible procedures for battery disposal.
- If the power adaptor is disconnected from the device, the device will remain

operable as long as the battery has sufficient charge.

- The power adaptor is a CLASS II apparatus with double insulation, and no external ground is provided.
- Safety symbol explanation:



- The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock.
 - To reduce the risk of electric shock, do not remove the cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.
 - The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the device.
 -  Correct Disposal of this product. This marking indicates that this product should not be disposed of with other household waste in the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To dispose of your used device, please use the return and collection systems available in your area or contact the retailer where the product was purchased. They can take this product for safe environmental recycling.
- Do not leave the device on in a confined space such as a book case or similar. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains, etc.
 - No open flames, such as lighted candles, should be placed on the device.
 - Use the device in moderate climates.

Listening Cautions

- Do not listen to your earphones or headphones at a high volume. Hearing expert advice against continuous extended play.
- Excessive volume through earphones and headphones can cause hearing loss.
- If you experience a ringing in your ears, reduce volume or discontinue use.
- Do not use while operating a motorized vehicle. It may create a traffic hazard and is illegal in many areas.
- You should use extreme caution or temporarily discontinue use in potentially hazardous situations created by obstructed hearing.
- Even if your headphones or earphones are the open-air type designed to let you hear outside sounds, don't turn up the volume so high that you can't hear what's around you.
- Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. What sounds "normal" can actually be loud and harmful to your hearing. Guard against this by setting the volume of your device at a safe level BEFORE your hearing adapts.

To establish a safe volume level:

- a. Start your volume control at a low setting.
- b. Slowly increase the sound until you can hear it comfortably and clearly, and without distortion. Once you have established a comfortable sound level, leave it there.

This manual may not reflect your actual device's operation. All information is subject to change without prior notification. Please follow your actual device's operational procedures.

Table of Content

Safety Precautions.....	1
Listening Cautions.....	3
Feature Summary.....	5
Accessories	5
Buttons & Ports.....	5
Charging Battery.....	6
Installing Memory Card	6
Transferring Files.....	6
Turning On/Off.....	7
Home Screen.....	8
Unlocking the Screen.....	9
Touch Screen & Buttons Usage	9
Accessing Internet	10
Take Handwritten Notes.....	13
Reading E-Books.....	16
Accessing Borders.....	20
Playing Music	22
Playing Video.....	26
Viewing Photos.....	27
Voice Recording	28
Connecting to TV.....	29
File Explorer	29
Using the E-mail Application	31
Managing 3 rd Party Applications.....	33
Managing Tasks.....	33
System Settings.....	34
Troubleshooting	35
Specifications.....	35
FCC Statement	37

Feature Summary

7.0" Touch Screen

Touch or slide your finger on the screen, the screen responds instantly.

Wi-Fi Connectivity

With the latest Wi-Fi technology, this device can connect you to the Internet wherever you are.

Ink Compatibility

With the built-in ultrasound and infrared technologies and a digital pen, you can take handwritten notes or drawings on the device.

Third-party Application Support

With the built-in Android TM OS, you can install a large number of third-party applications in this device.

Built-in G-sensor

The screen changes to landscape or portrait automatically when the device rotates.

 
Entertainment

You can enjoy music, movies, pictures and e-books with the Mobile Tablet.


Accessories

- | | | |
|--------------|---------------------|---------------------|
| ● USB Cable | ● Power Adaptor | ● Pouch |
| ● Ink Refill | ● Pen Batteries (2) | ● Refill Extractor |
| ● Notebook | ● User Manual | ● Quick Start Guide |

Buttons & Ports

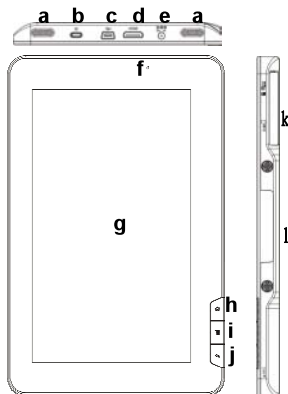

- a. Built-in Speakers**
- b. Power Button** – press and hold to turn on or off the device; briefly press to turn the screen on or off.
- c. USB Port** – connects to a computer through the USB cable.
- d. HDMI Interface** – connects to TV set with high definition (HDMI cable not included).
- e. DC-IN port** – connects to any standard electric source through the provided AC adaptor.
- f. Charge Indicator** – red for charging; green for full charge.
- g. Touch Screen**
- h. Home** – Go to the Home Screen.
- i. Menu** – Display menu options.
- j. ESC** – Return to the previous screen or directory.
- k. SD Card Slot** – accommodates any standard SD memory card.
- l. Ultrasound and Infrared Sensor** – capture handwritten notes or drawings.

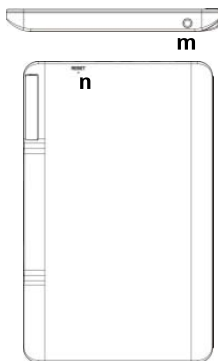 

- m. **Earphone Port** – connects to stereo earphones (earphones not included).
- n. **Reset pin hole** – reset your device if the device freezes.

Charging Battery

The device has a built-in rechargeable battery. No extra battery installation is required. Just charge the device when it indicates low battery.

To charge the battery, connect the device to any standard wall outlet via the DC-IN port using the power adaptor. It takes about 5 hours to fully charge the battery. When the battery is fully charged, the charge indicator at the left bottom should light up in green. During charging, the indicator lights up in red.

Note:

- a. *You can operate the device even when it is being charged. But for extended battery life, it is suggested NOT to use the device when it is charging.*
 - b. *It is recommended to charge the battery before you use the device for the first time.*
 - c. *For maximum performance, lithium-ion batteries need to be used often. If you don't use the device often, be sure to recharge the battery at least once per month.*
-

Installing Memory Card

This device can read files directly from memory card.

To use a memory card, find the card slot at the bottom of the device and then insert the memory card into the slot in the correct orientation. To access the files stored in the memory card, enter the **Explorer** mode by tapping the Explorer icon and select the "SD Card" directory.

Transferring Files

Before reading or playing files, you need to transfer media files from a computer to the device.


- (1) Connect the device to a computer with the supplied USB cable.
- (2) Once connected, two removable disk drives will show on your computer. One represents the internal memory of the device, and the other represents the

memory card inserted into the device. Now you can copy files from or to these disk drives just as you would on your hard drive.

- (3) Once the data transfer completes, drag from the top bar downwards to display the USB notification message as shown.



Drag downwards

- (4) Choose “Turn off USB Storage” and then tap “Turn Off” to disconnect the device from computer.
- (5) Disconnect the device from the PC safely.
- Left-click the  icon at the right bottom corner of the computer desktop.
 - Click the pop-up mini-window message of “Stop the USB Mass Storage Device – Drive (X).”
 - Disconnect the device from the computer.

Note: The pre-installed applications and Android OS occupy a considerable part of capacity – nearly more than 1GB, it is normal that you see huge difference between available memory space and total capacity.

Turning On/Off

To turn on the device, press and hold the **Power** button on the unit until you see the boot-up screen then release. It may take a few minutes to start up the system, please wait before you proceed.



To turn off the device, press and hold the **Power** button until you see the option “Power Off”, tap on “Power Off” and then tap on “OK”.

 
Tip: This device will sleep with the screen off if it stays inactive for a few seconds. You can briefly press the Power button to turn on the screen and wake it up.

Home Screen

Weather forecast – worldwide cities (required Wi-Fi connection)

- You can change the city by tapping the city name.
- You can change the temperature unit by tapping the temperature.


Default shortcuts
Tap on an icon to open the corresponding application.
You can add or remove shortcuts, see "Customizing the Home Screen items" on the next page.

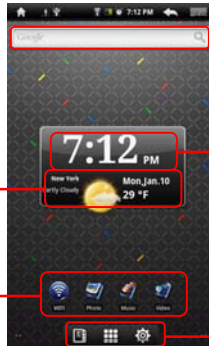

Quick Internet Search - You can input anything you wish you search on the searching bar (required WIFI connection)

Current Time

 Ebook Reader / Applications Setting icon
Shortcuts to system settings, applications or

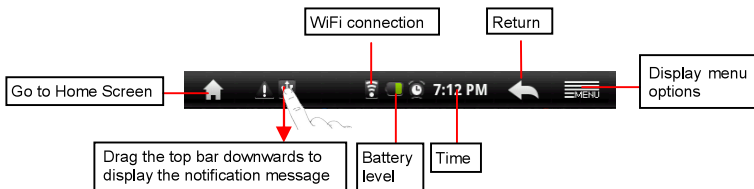


Customize the Home Screen




You can customize the Home Screen by adding/removing shortcuts and widgets, changing the wallpaper.

- To add a Home Screen item (shortcuts, widgets, folders etc.), tap on the Menu icon and then select "Add" . You can also hold your finger on the screen and then choose an item from the list.
- You can add a folder onto the Home Screen by holding your finger on the screen and then choose Folders → New Folder. You can drag shortcuts or widgets to the folder.

 To rename the folder, a) tap to open the folder, b) hold your finger on the title bar of the opened folder until the Rename window pops up, c) input folder name.

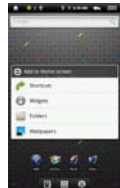- To move a Home Screen item, hold your finger onto it until it is highlighted, then drag it to the desired location, and release it.
- To remove a Home Screen item, hold your finger onto it until it is highlighted, drag it to the recycle bin which turns from the **Application Tab**, and then release your finger.




- To change the wallpaper, from the Home Screen, tap on the Menu icon , a list of options appears. Tap on "Wallpaper" and then choose a picture as the desktop wallpaper.
- To change the System Settings, from the Home Screen, tap on the Menu icon , and then tap on "Settings" . Choose a category: "Wireless & Networks", "Sound & Display", "Date & Time", etc. For more information on the different settings, see the System Settings section.

Weather Forecast Setting

- You can choose a worldwide city you are interested in by tapping the weather forecast indicator. Locate the city by selecting the state where the city is and then selecting the city, or inputting the city name directly in the "Search City" field.
- You can change the default temperature unit by checking or unchecking the "Use Celsius" option.




Display all Applications


The device has many useful applications pre-installed. You can tap the Application Tab  to display them.



Unlocking the Screen


The screen will lock itself after standing by for a few seconds. You need to unlock the screen by dragging the lock icon  to the arrow direction before you continue to use the device.







Note: Dragging the  icon to the arrow direction will mute the sound.


Touch Screen & Buttons Usage

Main Touch Screen Actions

- In different applications, you can go back one level in the interface by tapping on the Back icon  (in the top right corner of the screen).

- Wherever you are in the interface, you can go back directly to the Home screen by tapping on the Home icon  (in the top left corner of the screen).
- In different applications, you can tap the Menu icon  to display menu options.
- While playing a video or song, you can pause/resume it by tapping on the Pause  / Play  icon.

Other Touch Screen Actions

- When watching a video or listening to music, you can tap on the progression bar  to go directly to a different location in the video or song. You can also use your finger to drag the cursor in the progression bar to another location in the video or song.
- In different browsers (File, Music, Video, Photo, etc.), you can hold your finger on the screen and then drag up and down to scroll the file list up and down.
- In some browsers (File, Music, Video, Photo, Web etc.), you may hold your finger on an item to display options.



 
Accessing Internet

Your NextBook features built-in Wi-Fi technology so that you can access the internet over Wi-Fi network.

First of all, you need to configure a Wi-Fi network. For the Wi-Fi configuration procedure to work, you need to be in a Wi-Fi zone that will allow you to connect to it. Every time your NextBook is in range of a network that you have already configured once, it will attempt to make a connection.

Making WIFI Connection

- (1) In the Home screen, tap on the WiFi icon.

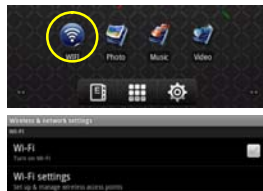

- (2) Tap on the “Wi-Fi” setting to turn on the Wi-Fi.
- (3) Tap the “Wi-Fi settings”, your NextBook will scan automatically for available WiFi networks and display them. The list of available networks shows all the wireless networks in range of your device.


Note:


- a) The available network list is constantly refreshed automatically.
- b) When the Wi-Fi is enabled, your NextBook will connect automatically to your configured networks when they are in range.
- c) If your NextBook finds a network that has never been configured, it will display a notification

- (4) Tap on the network you want to connect to, enter the required network information (password) and then tap on "Connect". Your NextBook will now attempt to establish a connection to that WiFi hot spot with the network parameters you entered. If the connection is successful, the message Connected to XXX will appear under the WIFI setting.

Advanced Connection

To manually scan for available Wi-Fi networks,

- (1) In the "Wi-Fi settings" screen, tap the **Menu icon** , and then tap "Scan."
- (2) If the Wi-Fi network you want to connect to does not appear in the list, scroll down the screen, then tap "Add a Wi-Fi network." Enter the required information, and then tap "Save."


To set up IP address manually, tap the **Menu icon** , tap "Advanced" and then input all required network parameters ("Regulatory domain," "IP address," etc). You can obtain these parameters from the network administrator.

Launching the Web browser

Tap the Applications icon to display all applications, and then tap the Browser icon



to launch the Web browser.

If you are already connected to a network, the Web browser will simply open and you can start browsing the Web. To access a new website, tap the **Menu icon**  to display the menu, and then select "Go" to input another address.

Note: Not all wireless networks offer access to the Internet. Some Wi-Fi networks only link several computers together, without any Internet connection.

Using the Virtual Keyboard


Tapping on any text input field can open the virtual board. With the virtual keyboard, you can enter a website address or any text required.

Indications






- a. Caps Lock
- b. Backspace.
- c. Number and Characters
/Letter Keyboard Switch.
- d. Space
- e. Enter

Selecting Input Method


If you have installed more than one input method in this device, you can select one method by a) holding the  button until the Android keyboard settings appear; b) choosing "Input Method" and then choosing your desired one.



Using the Web Browser

- You can scroll the screen up and down by tapping on the page and dragging it up or down (be careful not to tap a link until you are ready!).
- To open a link, simply tap it.
- You can open several web pages at a time, view them all at once on the screen, and then tap one of them to view it in full screen.
- To go back to the previous page that you browsed, tap the Back icon .
- To display the available menu items, tap the Menu icon .
- To go back directly to the Home screen, tap the Home icon .
- Depending on where you are in the web browser, holding down on an item will give you access to more options.
- To fill in a text field, tap in the field, then use the virtual keyboard to type in the required text.



Web Browser Menu Items

When you are viewing a page, you can tap the menu icon  to display the menu items.

New window	Allows you to open new windows.
Bookmarks	<p>Will open the "Bookmarks" manager. You will see three tabs: "Bookmarks," "Most visited," and "History."</p> <p>"Bookmarks" shows you a list of bookmarks. Just tap one of them to open it in the current window. Holding down a bookmark will give you access to several options (you will be able to edit it, rename it, delete it, etc.). You can also use the Menu icon  which will allow you to bookmark the last-viewed page.</p> <p>"Most visited" and "History" allow you to access your "Most visited" sites and your visit history. In the "History" tab, the Menu icon  allows you to clear the history.</p>
Refresh/ Stop	<p>"Stop" will stop loading the web page, if it is currently loading.</p> <p>"Refresh" will refresh the current web page, if it has stopped loading.</p>
Windows	When you have several windows currently opened, tap "Windows" to display them all at once on the screen. Just tap one of the small windows to view it in full screen, or tap the Close icon in the small window to close the window.
Forward	Will go to the next page that you browsed.

More	Will give you access to other options ("Find on page," "Select text," "Page info," "Downloads," "Settings" etc.).
-------------	---

Take Handwritten Notes

The Tablet consists of a digital pen and a built-in receiving unit which combines ultrasound and infrared technologies to enable an accurate tracking and positioning system that tracks the movement of the pen tip on any surface and converts the movement into a vector image of the user's handwriting, so that you can write notes or make drawings directly on the device.

Installing Pen Batteries

- Remove the battery compartment cover.
- Install two SR41 batteries, with the positive poles facing up as shown (Use the enclosed SR41 batteries).
- Replace battery compartment cover.



WARNING:

Do not attempt to open the pen. This may cause the pen to malfunction.



Installing Ink Refill

- Slide the new refill into the tip of the pen.
- Gently press the new refill until it is lodged securely in place.



Note: Be sure to use the provided ink refill or refill with similar standard.

To replace the ink refill,

- Detach the cap from the digital pen.
- Clamp the ink refill with the refill extractor. Hold the pen firmly, and apply pressure with the extractor against it.
- Pull the used refill out.



Writing Correctly



When you pick up the pen, find a position that is comfortable for you. Hold the pen firmly and write normally.

 
When you are writing with the pen, make sure its inclination to the paper surface is between 45° and 90°.

Note: Be careful to hold the pen in a way that does not block the signals sent from the tip of the pen to the Tablet.



Create New Note

- Choose the iNote icon  from applications to run the application.
- Tap the Pen icon  to open the drawing board and start drawing or writing.

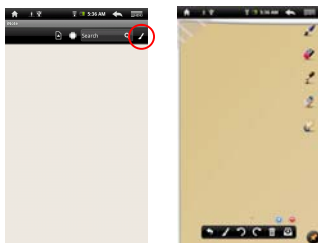


- (3) Tap the Pen icon , and then set up the pen width and color.



- (4) Lay out the Tablet flat on the surface, pick up the pen and find a position that is comfortable for you, and then start writing on the notepad. Also, you can slide your finger on the screen to make drawings. Be careful NOT to block signals sent from the tip of the pen to the Tablet.





- (5) After you have done, click  to exit and save your note. Select "SD Card" to save your note to memory card or select "Internal Memory" to save your note the internal memory of the device.

View Note

 
You should see a list of notes when you start up the iNote application.

You can tap a note to view it.

To view notes stored in the memory card, tap .



To view notes stored in the internal memory, tap .

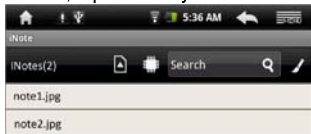To search for a note by its name, input the key words in the “Search” filed.




Add/Delete Note

You can work on multiple pictures/notes at the same time.


- (1) Click the Add icon  to open a new page for another picture. You can add up to 5 pages.
- (2) When multiple pages are opening, you can click the white dot  to go to the corresponding page.
- (3) To delete one page, click the Minus icon .

Change Pen Width / Color

Before you start drawing, you can change the pen width or pen color by tapping the pen icon , sliding the dot icon to adjust the width and selecting a color from the color matrix.

Erase Sketches

You can erase the sketches you have added.

- (1) Select the “Eraser” tool .
- (2) Use your finger to wipe the location you want to erase, or use your Digital Pen to hover to the location and then erase it.

Clear Sketches


You can clear all sketches from the palette by clicking the  icon.

Change Background


You can change the background of the palette.

- (1) Select the  icon.
- (2) Click the Left and Right Arrow to change the background.

Hide/Display the Toolbar

You can hide or display the tools (Pen, Eraser and Color Picker etc.) by clicking the  icon.

Save Note





When you are satisfied with your picture, you can click the  icon and then choose “save picture” to save the picture.

Annotate/Sketch on Picture

You can edit an existing picture by adding annotations or sketching on the picture.

- (1) Make sure you have notes or pictures in the “iNote” folder. You can check it using the Explorer. If not, create or transfer pictures/notes to the folder (see “Transfer Notes” section as below).

Note: *a. Pictures must be in format of JPG, BMP, GIF and PNG; b. Picture resolution should not exceed 778*1102.*

- (2) Click the Open icon  on the bottom toolbar.
- (3) Choose memory device by tapping . A list of notes and drawings should display.
- (4) Choose a note or drawing file from the list and open it.
- (5) Tap the Pen icon , and then sketch on the picture or add annotations.
- (6) After you have done, click  to exit and save the picture.


Transfer Notes

Your notes are saved as JPEG files to the iNote folder. You can locate the folder with the Explorer. You can transfer these notes to or from your computer.

- (1) Connect your device to computer through USB cable.
- (2) Locate the removable disk drive for the device and double click to open it.
- (3) Double click the “iNote” folder.
- (4) Copy notes from the “iNote” folder from or to your computer.

Send Note

You can send your pictures or notes with your friends by e-mail.

- (1) After you finished your picture, click the  icon.
- (2) Input the e-mail address you'd like to send to.
- (3) Click “Send”.

Note: *Be sure to turn on the Wi-Fi and open your e-mail box before you send picture.*

Reading E-Books

Transfer E-books from Computer

Before reading, you need to transfer or download e-books to the device. You can copy e-books from your computer's local drive to the device by USB connection (see the “Transferring files” section mentioned before).

Note: *Make sure your e-books are in format of PDF, EPUB, TXT, FB2, RTF or PDB supported by the device.*

Download E-books with Adobe Digital Editions

The Adobe Digital Edition application allows you download e-books protected by DRM to your NextBook.

- (1) Access the website <http://www.adobe.com/products/digitaleditions/>, and then

install the Adobe Digital Editions software following the instructions.



- (2) Authorize your computer with your Adobe ID and Password.



 
- (3) Activate your NextBook.

Connect your NextBook to computer with the USB cable and start up the Adobe Digital Editions. Click “Authorize Device” to authorize your NextBook.


- The Adobe ID can be used only for six times. It should expire after 6 tries of authorizing device. Later on, you need to delete the expired ID by pressing CTRL+SHIFT+D on the computer keyboard or using the **Erase Activation Record** setting on the device and then get a new one.
- The device remembers the ebooks downloaded with the latest Adobe ID only, and will overwrite the eBooks downloaded with the previous Adobe ID.

- (4) Download DRM-protected PDF files to your computer.


Access an online bookstore and search for e-books. Choose your favorite e-books and download them. If the e-book is protected by DRM, you should be prompted by DRM license information. Click “Open” to start downloading the DRM-protected e-book.

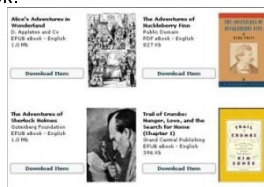

  - (5) Click “Purchase”, and then you should see your downloaded e-book at the right panel of the Adobe Digital Editions user interface.

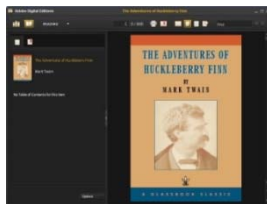

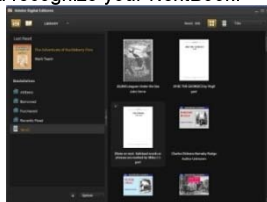

- (6) Connect your NextBook to the computer with the USB cable, and the Adobe Digital Editions should recognize your NextBook.



- (7) Click "Purchase" to see your downloaded e-book and then drag it to your NextBook.

Start Reading

- (1) In the Home Screen, tap the E-book Reader shortcut to enter the e-book reader mode.
- (2) Tap on the Left Arrow  or Right Arrow  to scroll left or right through e-books.
- (3) Tap an e-book to start reading immediately.



 
History and My Library

You can tap "History" to view your reading history or tap "My Library" to enter the e-book library. "History" shows all of the e-books that you have read by date. "My Library" shows all of e-books stored in the device.

Note: E-book cover will show as defaulted cover by the device if the e-book has no cover data. That's why you see some e-book covers are the same.

View e-book Information

In the history or e-book library, you can view information about an e-book before you start reading it. Tap an e-book, and the book name; author or publication year of the e-book should display at the top screen.

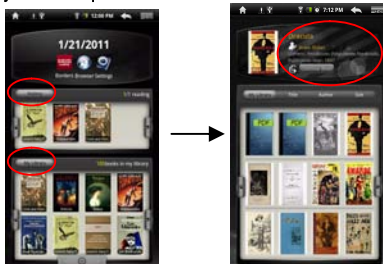


Sort e-books

In the history or e-book library, you can sort e-books by title, author or file size by tapping on Title, Author or Size.



Start Reading

 To start reading an e-book, tap “Continue Read”.

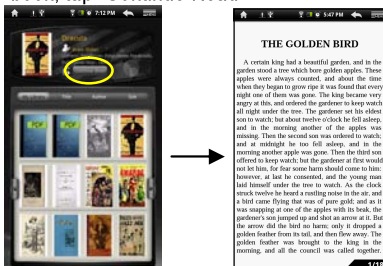


Page Up/Down

When you are reading the e-book, you can slide your finger on the screen left and right OR press the **PREVIOUS/NEXT** buttons on the device to page up or down.




Increase Font Size

- (1) When you are reading, tap the **Menu icon**  to display e-book settings.
- (2) Tap "Font Size" to adjust the font size.
- (3) Tap a size that you want, and then tap "OK" to confirm.


Jump to a Page

You can directly go to a page that you have specified.

- (1) When you are reading, tap the **Menu icon**  to display e-book settings.
- (2) Tap "Go to".
- (3) Tap the page number input field to display the virtual keyboard.
- (4) Tap the numbers to input the page number.
- (5) Once you finish inputting the page number, tap "OK" to jump to the specified page.


Use Bookmarks

You can add, delete or load bookmarks on the page.

- (1) When you are reading, tap the **Menu icon**  to display e-book settings.
- (2) Tap "Bookmarks" to display a bookmark menu. Use the menu to add, delete or display bookmarks.

Show Outline of the e-book

You can view the outline of the e-book and then choose your desired chapter or section to read.

- (1) When you are reading, tap on the **Menu icon**  to display e-book settings.
- (2) Tap on "TOC" to display the outline of the e-book, and then tap the chapter that you want to read.

 
Accessing Borders

Your NextBook has a built-in online bookstore named Borders. You can purchase e-books or download free e-books directly from the Borders.


Note: Make sure you have configured the Wi-Fi network before accessing Borders.

Purchase e-books from Borders

- (1) In the Home Screen, tap the EbookReader icon.
- (2) Tap on the "Borders" icon to access Borders.

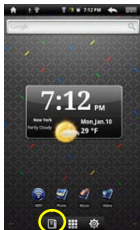

 - (3) Tap "SIGN IN" to log in with your account, and then input your account information.
- (4) Go to the book store and search for e-books. Tap the e-book that you want to buy.

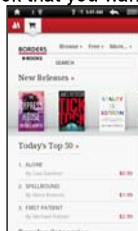


- (5) Tap on BUY NOW button to start the purchase process.
- (6) Input your payment account information to checkout.
- (7) Check your credit card information and the price.
- (8) Tap Buy Now to download the e-book.

Note: The ebook won't be downloaded to your NextBook. They are accessible only if you sign in with your Borders Account.

Read e-books in Borders Library

 
E-books from Borders are saved in Borders library. They are unable be synchronized to the Ebook Reader application.

To read e-books that you have purchased from Borders,

- (1) Tap  to enter the Borders library and you should see all of your purchased e-books.




- (2) Tap an e-book and tap “Start Reading” to read the e-book.

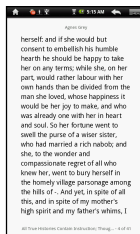

- (3) During reading, you can:

 
- Turn over pages by sliding your finger left and right.
- Tap on the screen to display the control bar. By sliding the control bar, you can go to any page in the e-book.
- Tap the Menu icon to display menu options. With these options, you can view outline of the e-book, change the view mode (day or night mode), change the font size or style.

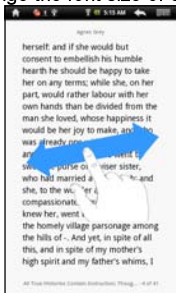

(previous/next page)



 (control bar)

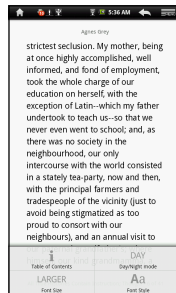

(options)




Playing Music

In the Home Screen, tap the Music icon to enter the music player mode. Optionally, you can tap the Applications shortcut to display all applications and then tap the Music icon to enter the music mode.

Music Library

You should enter the music library once you start the music player. The Music Library shows your music files sorted by categories (Artist, Album, Genre, etc.) if your music files contain these song information tags. If some of your music files do not contain










information tags, they will be classified as (Unknown) in the Music Library. When new music is copied to the device, the Music Library will be updated automatically.

- You can drag your finger up and down on the file list to scroll through the list.
- Tap a track to play a track.
- To return to the Home Screen, tap  /  / .






Music Library Menu

Once you enter the music library, you should see the toolbar at the bottom of the screen. Tap and hold your finger on the icon and you should see its name.

 All Music	List all music files.
 Internet Search	Allows you to search for a specific song on the Internet by entering a few letters or a word and download the song from the Internet.
 Artist	List music files by artist.
 Album	List music files by album.
 Genre	List music files by genre.
 Playlist	Display playlists.
 Directory Browsing	Navigate through music files and folders stored in the internal memory and memory card.
 Enter Play Interface	Go to the Now Playing screen.
 Return	Return to Home Screen.


Search for Tracks

You can search for tracks in the internal memory or memory card by inputting a few key words.

- (1) In the music library, tap the Directory Browsing icon  in the menu.
- (2) Choose the memory where you want to search for tracks.
- (3) Tap the Search icon , and then input a few key words of the track.
- (4) Tap  to start searching. The track should be listed if found.

Sort Tracks/Folders

You can sort all tracks/folders by their leading letters in order from A to Z, the creation time of the track/folder, the file size or the file type.

- (1) In the music library, tap the Directory Browsing icon  in the menu.
- (2) Choose the memory device to be sorted.

 
- (3) Tap the Sort icon (by file size) / (by file type) / (by leading letter) / (by creation time) to sort the tracks/folders stored in the selected memory device.

Set EQ Mode Manually

When you are listening to the music, tap the Menu icon which allows you to customize your equalizer setting. This device features a 7-band equalizer.

- (1) Select a band and then drag your finger up/ down on the band to change the gain level for the frequency range.
- (2) Tap "Save Effect" to confirm or tap to return.

Playback Screen

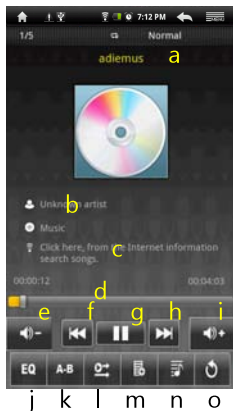

- Track title
- ID3 Information (artist, album etc.)
- Hold your finger to search for information about the track from Internet.
- Progression bar
- Decrease volume
- Previous track/Rewind
- Play/Pause
- Next track/Fast Forward
- Increase volume
- Change EQ mode
- A-B Repeat
- Change repeat mode
- Add the track to playlist
- Display lyric
- Return





- To pause or resume the playback, tap on the Pause / Play icon.
- To play the previous/next song, tap on / .
- You can tap on the progression bar to go directly to a different location in the song. You can also drag the cursor in the progression bar to another location in the song.
- Tap on / to adjust the volume.
- To change the EQ mode, tap on "EQ".
- To play the specified section from A to B, tap on "A-B".
- To change the repeat mode, tap on .
- To add current track to playlist, tap on .
- To display lyric/ID3 information, tap on .
- To define the equalizer mode manually, tap on .
- Tapping continuously on the ID3 information tag will search for the information about the track from the Internet.

- To go back to the music library, tap on .
- To go back directly to the Home screen, tap on the Home icon  or Return icon .

Playlist

A playlist is a list of audio tracks that the music player will automatically play one after the other. On this device, you can play, create and edit as many playlists as you want.




Create a Playlist

- (1) While you are in the music library, tap the Playlist icon , a playlist panel will open. You can now start modifying the playlist.
- (2) Tap the New Playlist icon  to create a new playlist.
- (3) Tap the Edit icon  beside the playlist name to add songs to the playlist.
- (4) Tap the songs you would like to add to your playlist. A check mark "✓" should appear before the song if selected.
- (5) When you are satisfied with your new playlist, tap the  icon to save the playlist.





Edit a Playlist

You can add tracks to or delete tracks from the playlist.


- (1) In the Music Library, tap the Playlist icon  to display the playlists.
- (2) Tap the  icon beside the playlist that you want to edit. You can now add tracks to or delete tracks from the playlist.
- (3) Tap the songs you would like to add or delete, a check mark should appear or disappear before the song. The song with check mark will be added to the playlist, while the song without check mark will be deleted from the playlist.
- (4) When you are satisfied with your playlist, tap the  icon to save the playlist.

Delete a Playlist

To delete an existing playlist,

- (1) In the Music Library, tap the Playlist icon  to display the playlists.
- (2) Tap the  icon beside the playlist that you want to delete, and then the playlist will be deleted.

Playing a Playlist



- (1) In the Music Library, tap the Playlist icon  to display the playlists.
- (2) Tap a playlist to open it. A panel showing the contents of the playlist will open.
- (3) Tap the first item in the playlist to start playing from the first track.

Playing Video

 
In the **Home Screen**, tap the Video Player icon to enter the video player mode. Optionally, you can tap the Applications shortcut to display all applications and then tap the Video Player icon to enter the video mode.

Navigate through Video Files





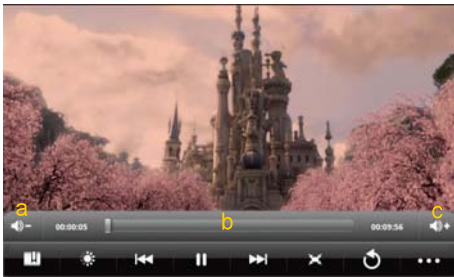



You should see the video list when you enter the video player.





- You can drag your finger up and down on the video list to scroll the video list up and down.
- Tap a video to start playing.
- You can go back directly to the **Home screen** by tapping on the Return icon  or Home icon .

Playback Screen

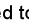


- a. VOL-
- b. Progression bar
- c. VOL+
- d. Bookmark
- e. Brightness
- f. Previous video/Rewind
- g. Play/Pause
- h. Next video / Fast forward
- i. View Mode
- j. Exit
- k. Video settings

- Tap on the  /  icon to pause/resume the video,
- Tap on  to display the menu items.
- Tap on the progression bar to go directly to a different location in the video. You can also use your finger to drag the cursor in the progression bar to another location in the video.
- Tap on  /  to adjust the volume.
- Tap on  to set a bookmark at the current spot in the video. Please note only one bookmark can be set for one video, and the new bookmark should cover the old one. To resume playing a video from the bookmark, go to the Home Screen, enter the Video Player, and tap on the bookmarked video. You should be prompted to "Play from beginning" and "Play from bookmark". Select "Play from bookmark". In default, the video plays from beginning. To remove the bookmark, tap on  to display the menu, and then choose "Delete Bookmark".
- Tap on  to adjust the brightness of screen.

- Tap on  /  to play the previous or next video.
- Tap on  to change the aspect ratio of screen.
- Tap on  to stop playing and return the video list.

Note: Some video files may not be played correctly with the device. Refer to the Technical Specifications at the end of the manual, and make sure the video resolution, encoding format or file type is supported.

Video Playback Settings

Tap on the  icon to display the video settings.

Play from beginning(this will delete bookmark)	Delete bookmark and play from beginning.
Delete Bookmark	Delete the video bookmark.
Help	Get instructions on playing video.
HDMI	Output video to HDMI display device (TV).
Play Mode	Single – plays the current video and then stops after playing. Repeat One – Repeat the current video. Repeat All – Repeat all videos.
Return	Exit from the menu.

Viewing Photos

Tap on the **Application Tab** to display all applications, and then select “**Photo Browser**” to enter the photo mode.

Photo Thumbnails

The first screen of the Photo mode shows all the photos and subfolders located in your Tablet or memory card in thumbnails.

To view a photo, tap on its thumbnail to open it.











If a photo is in a subfolder, open the subfolder and you will see it.



Viewing Photo



When you are viewing picture, you can tap on the screen to show a floating toolbar at the bottom of the screen.





- To start/pause a slideshow, tap on the Slideshow icon .
- To display the previous/next picture, tap on the left  / right  arrow beside the picture.
- To rotate the picture 90° counterclockwise, tap on the Rotate Left icon . To rotate the picture 90° clockwise, tap on the Rotate Right icon .
- To magnify the current picture, tap on the Zoom In icon . When the picture is enlarged, you can drag the picture vertically or horizontally to move the picture. To decrease the picture size, tap on the Zoom Out icon .
- To set brightness of the screen, tap on .
- To display the available menu items, tap on the Setting icon .
- To go back to the photo browser, tap on the Back icon .

Voice Recording

● Record

- (1) In the Home Screen, tap on the **Application Tap** to reveal all applications.
- (2) Tap on the “Sound Recorder” icon to enter the recorder mode.

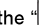


- (3) Tap on the “” icon to start recording.
- (4) Tap on the “” icon to stop recording.
- (5) Tap  to preview the recording if you want to.
- (6) Tap on “Use this recording” and then use the Audio Player to play the recording. To discard the recording, tap on “Discard”.
- (7) Tap on  to go back to the Home Screen.

Connecting to TV



The device features a HDMI interface with which you can connect the device to digital audio devices, computer monitors or digital televisions. HDMI connection can deliver high-definition audio and video quality.








To use the HDMI function on digital televisions,

 
- (1) Make sure the visual device like digital television that the device connects has a HDMI interface also.
- (2) Turn on the digital television, and switch its mode to HDMI.
- (3) Connect the HDMI cable to the HDMI interface of the device and the digital television.
- (4) Turn on the device, and play a video. When the video is playing, tap on the  button to display the overlay menu. Choose "HDMI" from the overlay menu, and then choose "Output to HDMI: 720p".
- (5) Enjoy the sharpest image quality on the wide screen of the connected visual device.
- (6) To switch the image display to the device screen, tap on the device screen.

File Explorer

In the Home Screen, tap the Applications shortcut to display all applications and then tap the Explorer icon to enter the file explorer mode.

Navigate through Files and Folders

- You can drag your finger up and down to scroll the file list up and down.
- To open a file or folder, tap the file/folder.
- Tap the menu icon , you can manage the applications (see details in the "Managing 3rd party Applications" section).
- You can go back or forward one level in the interface by tapping on the **Back** icon  or **Next** icon .
- You can go back one level in the directory by tapping on the LevelUp button .
- Wherever you are in the interface, you can go back directly to the Home screen by tapping on the Return icon  or Home icon .
- Tap the Home icon  to go to the root directory.

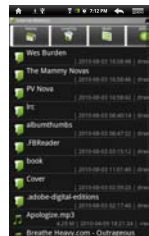

Using the Toolbar

You can use the toolbar to navigate through your device's internal memory/ memory card and delete or copy files.


Tapping on the grey area can hide/display the toolbar.




Sliding your finger on the toolbar can scroll through all tools.

Home	Go to the Home Screen.
LevelUp	Go back one level in the directory.
Multi	Select more than one file.
Editor	Copy, delete, move, paste or rename the file or folder.
Back	Go back one level in the interface.
Next	Go forward one level in the interface.

Copy/Move Files and Folders

 - (1) In the file list, scroll up and down by sliding your finger to select the file/folder that you want to copy or move.
- (2) Hold the selected file/folder until a pop-up menu appears.
- (3) Select "Copy" or "Move" from the pop-up menu.
- (4) Navigate to the location where you wish to copy or move the file/folder to.
- (5) Select the Editor icon  from the toolbar and then choose "Paste."



Delete Files and Folders



- (1) In the file list, scroll up and down the list by sliding finger to select the file/folder that you want to delete.
- (2) Hold the selected file/folder until a pop-up menu appears.
- (3) Select "Delete" from the pop-up menu, then select "Delete" to confirm or "Cancel" to quit.

Rename Files and Folders

- (1) In the file list, scroll up and down the list by sliding finger to select the file/folder that you want to rename.
- (2) Hold the selected file/folder until a pop-up menu appears.
- (3) Select "Rename" from the pop-up menu.
- (4) Tap the input field to display the virtual keyboard, and then choose letters from the virtual keyboard to rename the file/folders.
- (5) Tap "OK" to confirm the new name.

Select Multiple Items

You can select more than one file or folder together.

- (1) In the top toolbar, tap the Multi icon .
- (2) Tap the files/folders you want to choose. The file/folder name turns red when selected. (To deselect the file/folder, tap it again.)
- (3) Once you finished selection, you can delete, copy or move the selected files by tapping on the Editor icon .

Using the E-mail Application


This device has an E-mail application pre-installed. You can send or receive e-mails from the Internet at any time with this device. Make sure you have an Internet connection before using the email service.

In the Home Screen, tap the Applications shortcut to display all applications and then tap the Email icon to launch the e-mail application.

Setup Email Account

First you need to setup an E-mail account for receiving or sending emails.

- (1) Start up the email application by tapping the **Email** application icon and you are prompted to setup an account.
- (2) Input your email address and login password. You can set the account as default by selecting the option "Send email from this account by default".
- (3) Tap "Manual Setup" to set the email server information.
- (4) Choose the server type from POP3, IMAP or Exchange for incoming emails. To know what type of your email server is, you can consult the service provider, network administrator or search for information in the Internet.
- (5) Input required information (server, port etc.). You can obtain the information from the service provider, network administrator or the Internet.
- (6) Choose the server type for outgoing emails, and input required server information.
- (7) Click "Next" to continue. Your NextBook will check the server settings. When it prompts you that "Your account is set up, and email is on its way", your account is set up successfully.
- (8) Input your name and then tap on "Done" to finish.

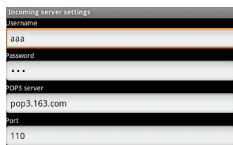

Incoming server settings	
Username	000
Password	***
POP3 server	pop3.163.com
Port	110



Note: If you have more than one account, every time when you start up the email application, you enter the default email account.

Manage Accounts


You can setup more than one account and manage these accounts by checking information about the account, adding another account or deleting an account.

Add another Account


Following these steps to add another account if you want.

- (1) Launch the email application and then tap on the Menu icon  to display the menu item. Choose "Accounts" to display accounts.
- (2) Tap on the Menu icon  to display the menu item, and then choose "Add account".
- (3) Follow the steps of setting up a Email Account to add an account.

Delete an Email Account

- (1) When you are in the email box, tap on the Menu icon  to display the menu items.
- (2) Tap on "Accounts" to display all email accounts.
- (3) Hold your tap on the account that you want to delete until a menu pop up.
- (4) Tap on "Remove Account", and then tap on "OK" to confirm.

Check the Account Setting


- (1) When you are in the email box, tap on the Menu icon  to display the menu items.
- (2) Tap on "Accounts" to display all email accounts.
- (3) Hold your tap on the account that you want to check until a menu pop up.
- (4) Tap "Account settings", and then you should see all setting information about the account. You can edit these settings as you want.

View Emails

You should enter your mailbox when you start up the email application.

- In the mailbox, you can slide your finger up and down to scroll through the email list.
- Tap on an email to open it.
- Holding your tap on the email can display a menu. With the menu, you can open, reply, forward or delete the email.

Email Menu Items


In the email list, tap on the Menu icon  to display the menu.

Refresh	Refresh the emails.
Compose	Compose a new email.
Folders	Go back to email box.
Accounts	View all email accounts.
Account Settings	Check your account settings.

Managing 3rd Party Applications

Your NextBook provides support to many useful third-party applications. You can purchase the applications to add more functions to your device. They are available online at the Internet or directly on your product.

Pre-installed Applications

The device has pre-installed applications when it was manufactured. You can see them by tapping the Applications icon . They are video player, audio player, photo browser, alarm clock, calculator etc.

Install Applications

You can install applications manually following these steps:

- (1) Download installation file from application library. Make sure the file is in format of .apk which is supported by your NextBook system.
- (2) Connect your NextBook to computer with the USB cable.
- (3) Copy the installation file to your NextBook.
- (4) Disconnect your NextBook from the computer.
- (5) Turn on your NextBook and enter the file explorer mode with the Explorer.
- (6) Locate the installation file and open it.
- (7) Follow the on-screen instructions to install the application.
- (8) Once the application is installed successfully, you can find it in the application tab.

Uninstall Applications

- (1) Tap the Settings shortcut in the Home Screen to display all system settings.
- (2) Select "Applications".
- (3) Select "Manage Applications".
- (4) Tap on the application that you want to uninstall.
- (5) Tap on "Uninstall" to uninstall the application.

Note:

- You cannot uninstall the pre-installed applications.
 - Some of the applications developed for Android mobile might not run properly in the NextBook. Please consult the respective software developer for further information.
-

Managing Tasks

Your NextBook can handle multiple tasks at the same time. For example, you can view photos while listening to music. Multitasking is helpful but inefficient if too many tasks are running. In order to save system memory and enhance system performance, you can end some tasks that you don't use for now.

(1) Tap “Advanced Task Killer” application.





(2) Tap the task that you want to end.



(3) Tap “KILL selected apps” to end the task.

System Settings

In the Home screen, tap “**Settings**” and choose a category: “**Wireless & Networks**,” “**Sound & Display**,” “**Date & Time**,” etc.

- When a down arrow appears on the right of a parameter, this means that this setting includes sub-parameters. Tap it to display the list of sub-parameters.
- When a check box appears on the right of a parameter, tap it to enable or disable this option.
- When it is possible, you can use your finger to scroll the screen up and down to reveal settings that you don’t initially see.
- When you have finished adjusting your settings, tap the Back icon  to go back to the list of settings, or tap the Home icon  to go directly to the Home screen.

Your settings are saved instantly.

Wireless & networks	Wi-Fi – tap on this line to enable or disable the Wi-Fi connection. Wi-Fi settings – allows you to set up and manage your Wi-Fi networks.
Sound & Display	Sound settings: Media volume –Sets the volume for music and videos. You can also adjust the sound by using the Volume buttons, on the top of the device. Notification Ringtone –Set your default notification ringtone. Audible selection –enables/disables the touch screen click sound. SD card notifications –Disable SD card notification sounds. Display settings: Orientation – switch the screen orientation automatically when the device rotates. Animation –enables/disables the display of animations when opening and closing applications. Brightness –allows you to adjust the brightness of the screen. Screen timeout –allows you to adjust the delay before the screen automatically turns off and locks itself. To turn the screen back on,

	press the Power button once, and press it again to unlock the screen.
Location & Security	This screen gives you the possibility to allow certain Android™ applications to determine your current location. You can also define a screen unlock pattern and other security parameters.
Applications	This screen allows you to manage your Android™ applications. You can view information about all the applications installed on your device.
Privacy	This setting allows you back up or restore your system settings or data.
SD card & device Storage	This setting allows you un-mount the SD card or check SD card and internal storage space.
Language & keyboard	Set your preferred language and region, and configure text settings for faster and more accurate text input.
Date & Time	This setting allows you set up the date, time, time zone and formats.
Touch Panel calibration	If the touch-screen is not responding properly, use this setting and follow the instructions on the screen.
USB Mode Select	Enable the USB HOST feature for accessing USB flash drives.
Update Media Library	Update the media library of your NextBook manually.
Erase activation record	Used to erase record of DRM activations.
About Device	Display information about your NextBook system.

Troubleshooting

Reset this device

- In the event that the device freezes, you can force the device to shut down by holding the **Power** button for 15 seconds.
- If the **Power** button does not reset your device, use the “pinhole reset” button, located on the back the device.

Touch-screen Problems

If the touch-screen is not responding properly, try using the “Touch-Screen Calibration” settings screen.

Specifications

Item	Description
CPU	Based on ARM926EJ (CPU+DPS) Main CPU frequency: 600MHz Auxiliary CPU Frequency(DSP digital command control): 560MHz
Built-in operating system	Android OS 2.1
Hardware	IBM PC or compatible PC, Note-book or Macintosh with USB port
Internal Memory	2GB(256MB for apps installation, 1.2GB for internal system use) or above

Memory Card type		SD card: 1GB, 2GB, 4GB (SDHC), 8GB (SDHC)	
Operation System		Windows2000/XP/Vista/windows 7/Linux2.4/ MAC OS 10.4 above	
USB Interface		USB2.0 High speed	
Output Port		3.5mm earphone port, built-in speakers	
E-book Format		EPUB, PDF, TXT, FB2, RTF, PDB	
Interface		USB2.0 High speed	
		SD (compatible SDHC)	
		3.5mm Earphone	
Connection Agreement		WiFi (802.11 b/g)	
G-sensor		Support 360 spin)	
E-Book	File Format	PDF/EPUB/TXT/FB2/PDB/RTF	
	Coding Format	PDF / EPUB Format: .Open; .Adobe DRM (For License)	
		TXT / FB2/PDB/RTF Format: .Open	
Photo Format		JPEG(Baseline) : 2Mpels (Max)	
		BMP	
		GIF (Static)	
		PNG	
Audio	File Format	MP3/WMA/WAV/OGG/FLAC/APE/AAC	
	Coding Format	MP3 (MPEG1/2/2.5 Audio Layer 1/2/3) : 8~48KHZ/8~320Kbps,CBR and VBR	
		WMA (Version 4, 4.1, 7, 8, 9) : 8~48KHZ/8~320Kbps	
		WAV (MS-ADPCM, IMA-ADPCM, PCM) : 8~48KHZ	
		OGG (Q1- Q10) : 8~48KHZ	
		FLAC (Q1- Q10) : 8~48KHZ	
		APE (Version 3.95,3.97,3.98,3.99,normal and fast) : 8~48KHZ	
AAC(ADIF, ATDS Header AAC-LC and AAC-HE) : 8~48KHZ			
Video	File Format	AVI, 3GP, MP4, RM, RMVB, FLV, MKV, MOV, WMV	
	Coding Format	AVI (MPEG4 ASP/XVID/DIVX3/4/5)	1280*720/25FPS (Max)
			Audio Codec: MP1/MP2/MP3/AC3/AAC
		3GP/MP4(H.264/H.263/MPEG4/XVID/DIVX3/4/5)	MPEG4/XVID/DIVX3/4/5:1280*720/25FPS (Max)
			H.264:1280*720/25FPS (Max)
			H.263:640*480/25FPS (Max)
		RM/RMVB(Real video 8/9/10)	Audio Codec: MP2/MP3/AC3/AAC/AMR
			1280*720/25FPS (Max)
		FLV(Sorenson H.263, H.264)	Audio Codec: MP3/AAC
			H.263: 720*480/25FPS (Max)
	H.264: 1280*720/25FPS (Max)		
MKV(H.264/MPEG4 ASP/XVID/DIVX3/4/5)		Audio Codec: MP3/AAC	
		MPEG4/XVID/DIVX3/4/5: 1280*720/25FPS (Max)	
		H.264: 1280*720/25FPS (Max)	

		MOV(MPEG4, H.264, H.263)	Audio Codec: MP1/MP2/MP3/AC3/AAC
			MPEG4:1280*720/25FPS (Max)
			H.264:1280*720/25FPS (Max)
		WMV	WMV v9: 1280*720/25FPS (Max)
Read speed	8.7-9MB/S (MLC flash)		
Write speed	4.5-4.8MB/S (MLC flash)		
Battery Charge Time	About 5 Hours		
Battery Life	About 7 hours of music playback; About 6 hours of video playback; About 6 hours of web browsing.		
Display	7.0-inch TFT LCD, Touchpad (capacitive touch pad), 800X600 pixels.		
SNR	90dB above		
Frequency Response Range	20Hz—20KHz		
Power Supply	Rechargeable lithium-ion polymer battery; AC Adapter: AC Input 100-240V~50/60Hz, DC Output 5V/2A		
Storage Temp.	-20℃ ~ +65℃		
Ambient Temp.	0℃ ~ +50℃		
Operation Relative Humidity	20% ~ 90% (40℃)		
Storage Relative Humidity	20% ~ 93% (40℃)		

FCC Statement

FCC Caution:

This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Compliance:

- To assure continued compliance, follow the attached installation instructions.
- Use only the provided shield interface cables when connecting to computer.

Any unauthorized changes or modifications to this equipment would void the user's authority to operate this device.

This device complies with part 15 subpart B of the FCC Rules. Operation is subjected to the following conditions: (1)This device may not cause harmful interference, and (2)

This device must accept any interference received, including interference that may cause undesired operation.

This product may receive radio interference caused by mobile telephones or other products during operation. If such interference is apparent, please increase separation between the product and the mobile telephone or other product.

Industry Canada Requirement:

This Class B apparatus complies with Canadian ICES-003.

Other names of systems and products mentioned in these instructions are usually the registered trademarks or trademarks of the manufacturers who developed the system or product concerned. The TM and ® marks are not used to identify registered trademarks and trademarks in these instructions.

This manual was correct and complete at the time of printing. However, new specifications and updates can occur at any time without prior notice. No part of this manual may be copied, republished, reproduced, transmitted or distributed in any way without prior written consent of E Fun. Any unauthorized distribution of this manual is expressly forbidden.

E Fun may find it necessary to modify, amend or otherwise change or update this manual. We reserve the right to do this at any time, without any prior notice. All specifications and features are subject to change without notice. All screen shots shown are simulated and may not represent the actual screen on production units sold to consumers.

For instruction manuals, updated drivers or other information, be sure to visit our website at:

www.nextbookusa.com

Or write to us at:

E Fun

136 N. Grand Avenue # 148

West Covina, CA 91791

USA

Copyright © 2010