

## Accessory List

- Main unit
- Digital Pen
- Note Pad
- Stylus
- Ink refill
- Refill Extractor
- 2 x Pen Batteries
- USB Cable
- Power Adaptor
- Pouch
- Quick Start Guide
- User Manual
- FAQ Sheet

## Step by Step to Get Started

## Step 1 Charge your Nextbook.

Plug the AC adaptor to any standard wall outlet and the DC-IN Port of the Nextbook. It takes about 5 hours to fully charge the battery.



## Step 2 Connect your Nextbook with Wi-Fi.

You can access the Internet with your portable Nextbook. Before launching an Internet application such as web browser, you first need to configure a network.

- (1) Tap the WIFI icon in the Home Screen.



- (2) Tap "Wi-Fi" to turn on the Wi-Fi.




- (3) Tap "Wi-Fi settings", your Nextbook will scan automatically for available WiFi networks and display them. The list of available networks shows all the wireless networks in range of your device.

- (4) Tap on the network you want to connect to, enter the required network information (password) and then tap on "Connect". Your Nextbook will now attempt to establish a connection to that WiFi hot spot with the network parameters you entered.

- (5) "Connected to...(Wi-Fi network name)" should appear under "WIFI" setting if the network connection is successful.

## Step 3 Enjoy your Nextbook!


## Home Screen

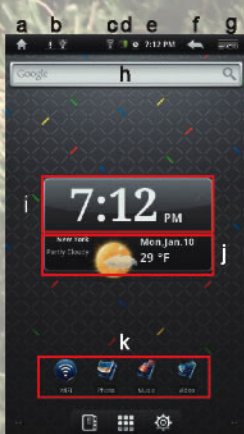

- a. **Home:** Go back to the Home Screen wherever you are in the interface.
- b. **Memory Card/USB connection indicator**
- c. **WiFi Connection**
- d. **Battery Level**
- e. **Current Time**
- f. **Return:** Return to the previous directory.
- g. **Menu:** Tap to display an overlay setting menu.
- h. **QuickInternetSearch**—You can input anything you wish to search on the searching Bar ( required WIFI connection)
- i. **Time**
- j. **Weather forecast - Worldwide Cities** (required Wi-Fi connection)
- k. **Default shortcut** – WiFi, Photo Viewer, Music Player, Video Player
- l. **E- Reader – Shortcut to E-Reader Page.**
- m. **Applications – Shortcut to Application Page.**
- n. **System – Shortcut to System Setting**

## Buttons &amp; Ports

- Built-in Speaker
- Power Button** – Press and hold for 4 seconds if you need to shut down the unit. Gently press once to enter Standby Mode; Press once again to exit Standby Mode.
- USB Port** – connects to computer through USB cable.
- HDMI Interface** – connects to TV set with high definition (HDMI cable not included).
- DC-IN port** – connects to any standard electric source through the provided AC adaptor.
- Charge Indicator** – red for charging; green for full charge.
- Touch Screen**
- Home** – Go to the Home Screen.
- Menu** – Display menu options.
- ESC** – Return to the previous screen or directory.
- SD Card Slot** – accommodates any standard SD memory card.
- Ultrasound and Infrared Sensor** – capture handwritten notes or drawings.
- Reset pin hole** – reset your device if the device freezes.
- Earphone Port** – connects to stereo earphones (earphone cable not included).

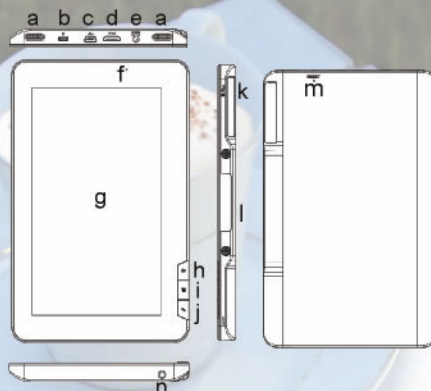


## Using the iNote Application

With the provided digital pen, you can write or make drawings directly into the device.

## Create Notes

- (1) Choose the iNote icon from applications to run the application, and then Tap the Pen icon to open the drawing board and start drawing or writing.

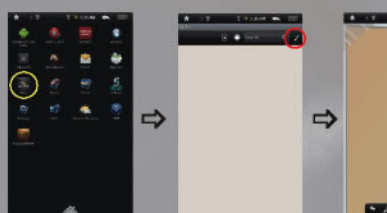

- (2)



Lay out the Nextbook flat on the surface. Pick up the pen, and find a position that is comfortable for you. Be careful NOT to block the signals sent from the tip of the pen to the Tablet.

Tap the Pen icon, choose a Pen color and then start drawing on the Note Pad with your Digital Pen. Also, you can slide your finger tip on the screen to make drawing. During drawing, you can:

- change the pen width or pen color by tapping the Pen icon
- erase sketches you have added by tapping the Eraser icon
- choose a color from the picture you are working on and then apply the color to new sketches by tapping the Color Picker icon
- change the background of the palette by tapping the Drawing Board icon



- (3) Click to exit and save your picture if you are satisfied with your picture. Your picture are saved in the iNote folder, you can find them with the Explorer.


## View Note

You should see a list of notes when you start up the iNote application. Tap a note to view it.

To view notes stored in the memory card, tap.

To view notes stored in the internal memory, tap.

To search for a note by its name, input the note name in the "Search" filed.

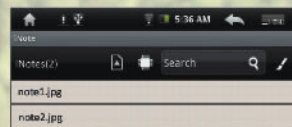


## Send Note

You can share your picture or note with your friends by sending them e-mail.

- (1) After you finished your picture, click the icon at the bottom bar.
- (2) Input the e-mail address you'll send to.
- (3) Click "Send".

**Note:** Be sure to turn on the Wi-Fi and open your e-mail box before you send picture.

## Bottom Bar

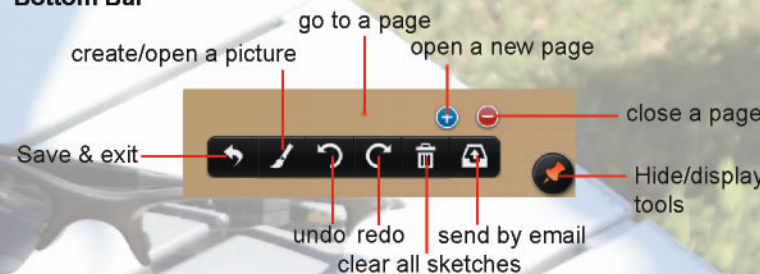


## Quick Tips

## How to use the Touch Screen

- When watching a video or listening to music, you can tap the progress bar to go directly to a different location in the video or song.

- In the file browsers (File, Music, Video, Photo, etc.), you can drag your finger up and down to scroll the file list up and down.

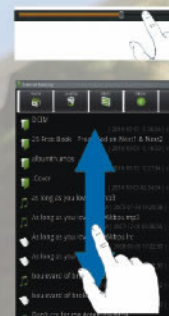

## Customize the Home Screen

You can customize the Home Screen by adding/removing shortcuts and widgets, changing the wallpaper.

- To add a Home Screen item (shortcuts, widgets, folders etc.), tap on the Menu icon and then select "Add". You can also hold your finger on the screen and then choose an item from the list.
- You can add a folder onto the Home Screen by holding your finger on the screen and then choose Folders → New Folder. You can drag shortcuts or widgets to the folder.

To rename the folder, a) tap to open the folder, b) hold your finger on the title bar of the opened folder until the Rename window pops up, c) input folder name.

- To move a Home Screen item, hold your finger onto it until it is highlighted, then drag it to the desired location, and release it.

- To remove a Home Screen item, hold your finger onto it until it is highlighted, drag it to the recycle bin which turns from the Application Tab, and then release your finger.

- To change the wallpaper, from the Home Screen, tap on the Menu icon, a list of options appears. Tap on "Wallpaper" and then choose a picture as the desktop wallpaper.

- To change the System Settings, from the Home Screen, tap on the Menu icon, and then tap on "Settings". Choose a category: "Wireless & Networks", "Sound & Display", "Date & Time", etc. For more information on the different settings, see the System Settings section.

## Transferring Files

 
## ● Connect your Nextbook to a Computer and Download Files

- (1) Connect your Nextbook to a computer with the supplied USB cable.
- (2) You should see two removable disk drives in your computer. One represents the internal memory of your Nextbook, and the other represents the memory card inserted into your Nextbook. Now you can copy files from or to them.

## ● Remove your Nextbook from computer safely

After you transfer files, disconnect your Nextbook from computer safely.

- (1) Left-click the icon at the right hand corner of the taskbar.
- (2) Click the pop-up mini-window with message of "Stop the USB Mass Storage Device – Drive (X)".
- (3) Drag the top bar downwards to reveal the USB notification message. Click "Turn off USB storage" and then click "Turn Off" to stop the connection.

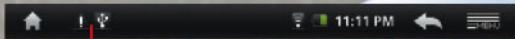

Drag down

- (4) Remove your Nextbook from the computer.

## Enjoy Music, Photo and Video

In the Home Screen, tap on the Application Tab to display all applications. Tapping on the music, photos or video icon can open the corresponding application.




## Access to Borders Store



Your NextBook has a built-in online bookstore - Borders. You can purchase or download free ebooks from Borders. **(Note: You first need to make WIFI connection before accessing Borders.)**

## Purchase e-books from Borders

- (1) In the Home Screen, tap the Borders icon.
- (2) Tap on the Borders icon to access Borders.

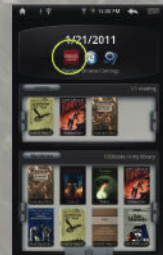

- (3) Tap "SIGN IN" to log in with your account.

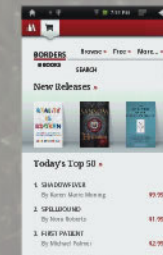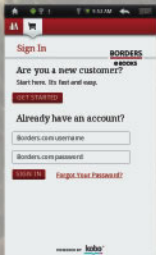



- (4) Choose the e-book that you want to buy.

- (5) Tap on BUY NOW button to start the purchase process.
- (6) Input your payment account information to checkout.
- (7) Check your credit card No. and the price.
- (8) Tap Buy Now to download. The downloaded e-books will be saved to the Borders library.

## Read e-books in Borders Library


E-books from Borders are saved in Borders library. They are unable to be synchronized to the Ebook Reader application. To read them, go to the Borders library. **(Note: Make sure the WIFI network connection turns on.)**

- (1) Tap to enter the Borders library.
- (2) Tap an e-book and then tap "Start Reading"

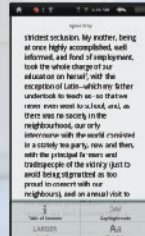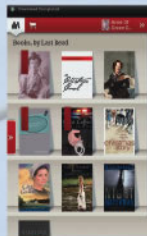


- (3) During reading, you can:


- Turn over pages by sliding your finger left and right.
- Tap on the screen to display the control bar. By sliding the control bar, you can go to any page in the e-book.
- Tap the Menu icon to display menu options. With these options, you can view outline of the e-book, change the view mode (day or night mode), change the font size or style.

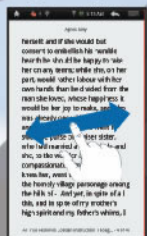

(previous/next page)

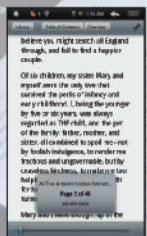

(control bar)

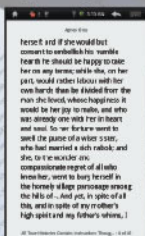

(options)

**Note:** The bookshelf page is only for ebooks downloaded from Borders. For ebooks transferred from Adobe Digital Editions, you need to launch the Ebook Reader application preset in the device before reading.

## Download e-books with the Adobe Digital Edition (ADE) via PC

Adobe Digital Editions software allows you to view and manage e-books protected by DRM license.

To download DRM-protected e-books,

1. Access the website <http://www.adobe.com/products/digitaleditions/>, and then install the Adobe Digital Edition software following the instructions online.



2. Authorize your computer with your Adobe ID and Password.

3. Activate your Nextbook. Connect your Nextbook to computer with the USB cable and start up the Adobe Digital Editions. Click "Authorize Device" to authorize your Nextbook.


**The Adobe ID can be used only for six times. It should expire after 6 tries of authorizing device. Later on, you need to delete the expired ID by pressing CTRL+SHIFT+D on the computer keyboard or using the Erase Activation Record setting on the device and then get a new one.**

**The device remembers the ebooks downloaded with the latest Adobe ID only, and will overwrite the eBooks downloaded with the previous AdobeID.**


4. Download DRM-protected PDF files to your computer. Access the Internet and search for e-books, choose your favorite e-books and download them. If the e-book is protected by DRM, you should be prompted by DRM license information. Click "Open" to start downloading the DRM-protected e-book.



5. Click "Purchase", and then you should see your downloaded e-book at the right panel of the Adobe Digital Editions user interface.

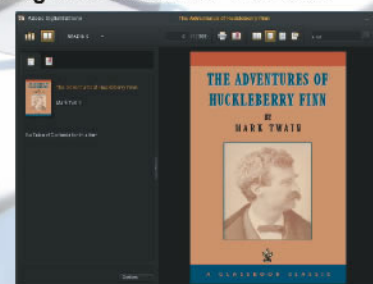

6. Connect your Nextbook to the computer with the USB cable, and the Adobe Digital Editions should recognize your Nextbook.

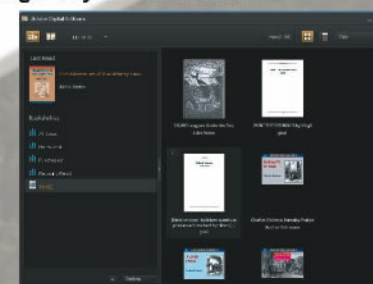

7. Click "Purchase" to see your downloaded e-book and then drag it to your Nextbook.

## Safety Advise



We strongly recommend that you observe the usage precautions laid out in this instruction. In no event will E Fun be liable for any indirect, incidental, special or consequential damages to any persons caused by E Fun's negligence, or for any lost profits, lost savings, loss of use, lost revenues or lost data arising from or relating to this device, even if E Fun has been advised of the possibility of such damages. In no event will E Fun's liability for damages to you or any other person ever exceed the amount paid by you for the device, regardless of the form of the claim. Some countries/states do not allow the limitations or exclusion of liability for incidental or consequential damages, so the above limitation or exclusion may not apply to you.