

Accessory List



USB Cable

 
AC Adaptor

Pouch

Step by Step to Get Started

Step 1 Charge your Nextbook.


Plug the AC adaptor to any standard wall outlet and the DC-IN port of the Nextbook. It takes about 5 hours to fully charge the battery.

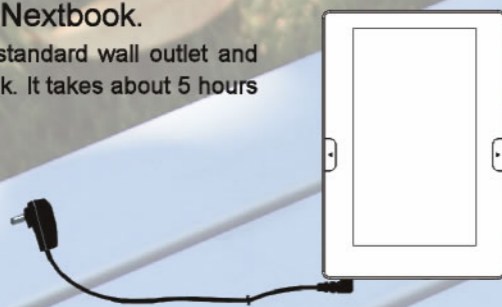


Step 2 Connect your Nextbook with Wi-Fi.

You can access the Internet with your portable Nextbook. Before launching an Internet application such as web browser, you first need to configure a network.

 (1) Tap the WiFi icon in the Home Screen.

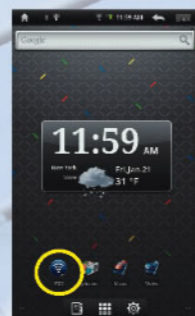

 (2) Tap "Wi-Fi" to turn on the WiFi.

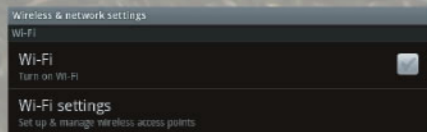


(3) Tap the "Wi-Fi settings", your Nextbook will scan automatically for available WiFi networks and display them. The list of available networks shows all the wireless networks in range of your device.

(4) Tap on the network you want to connect to, enter the required network information (password) and then tap on "Connect". Your Nextbook will now attempt to establish a connection to that WiFi hot spot with the network parameters you entered. If the connection is successful, the message Connected to... (Wi-Fi network name) will appear under the WiFi setting.


Step 3 Enjoy your Nextbook!

Buttons & Ports

 Front View

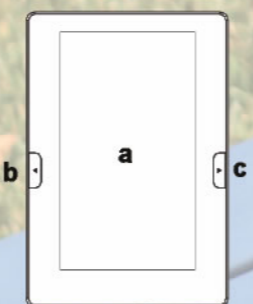


Bottom View

 


- d. **SD Card Slot** – accommodates any standard SD memory card.
- e. **USB Port** – connects to computer through USB cable.
- f. **DC-IN port** – connects to any standard electric source through the provided AC adaptor.
- g. **Earphone Port** – connects to stereo earphones (not included).
- h. **Power Button/Charge Indicator** – Press and Hold for 4 seconds if you need to shut down the unit. Gently press once to enter Standby Mode; Press once again to exit Standby Mode; lights in red during charging, lights in green when battery is full.

 Rear View

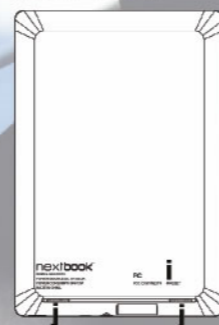

- i. **Reset pin hole** – Reset your device if the device freezes.
- j. **Built-in Speakers**

 Home Screen

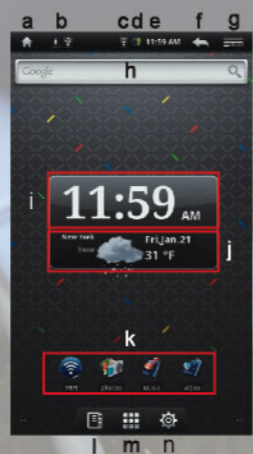


- a. **Home:** Go back to the Home Screen wherever you are in the interface.
- b. **Memory Card/USB connection indicator**
- c. **WiFi Connection**
- d. **Battery Level**
- e. **Current Time**
- f. **Return:** Return to the previous directory.
- g. **Menu:** Tap to display an overlay setting menu.
- h. **QuickInternetSearch**-You can input anything you wish to search on the searching Bar ( required WiFi connection)
- i. **Time**
- j. **Weather forecast - Worldwide Cities** (required Wi-Fi connection)
- k. **Default shortcut** – WiFi, Photo Viewer, Music Player, Video Player
- l. **E- Reader – Shortcut to E-Reader Page.**
- m. **Applications – Shortcut to Application Page.**
- n. **System – Shortcut to System Setting**

Quick Tips

How to use the Touch Screen

 - The touch screen is capacitive. Different from resistive touch screen, it does not respond to nails but requires you to touch with finger pulp.
- When watching a video or listening to music, you can tap the progress bar to go directly to a different location in the video or song.
- In the file browsers (File, Music, Video, Photo, etc.), you can drag your finger up and down to scroll the file list up and down.

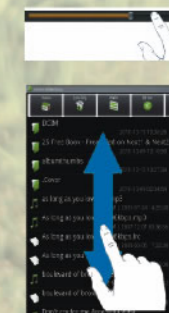

Customize the Home Screen

You can customize the Home Screen by adding/removing shortcuts and widgets, changing the wallpaper.

- To add a Home Screen item (shortcuts, widgets, folders etc.), tap on the Menu icon and then select "Add". You can also hold your finger on the screen and then choose an item from the list.
- You can add a folder onto the Home Screen by holding your finger on the screen and then choose Folders → New Folder. You can drag shortcuts or widgets to the folder. To rename the folder, a) tap to open the folder, b) hold your finger on the title bar of the opened folder until the Rename window pops up, c) input folder name.
- To move a Home Screen item, hold your finger onto it until it is highlighted, then drag it to the desired location, and release it.
- To remove a Home Screen item, hold your finger onto it until it is highlighted, drag it to the recycle bin which turns from the Application Tab, and then release your finger.
- To change the wallpaper, from the Home Screen, tap on the Menu icon, a list of options appears. Tap on "Wallpaper" and then choose a picture as the desktop wallpaper.
- To change the System Settings, from the Home Screen, tap on the Menu icon, and then tap on "Settings". Choose a category: "Wireless & Networks", "Sound & Display", "Date & Time", etc. For more information on the different settings, see the System Settings section.

 
Transferring Files

Connect your Nextbook to a Computer and Download Files

- (1) Connect your Nextbook to a computer with the supplied USB cable.
- (2) You should see two removable disk drives in your computer. One represents the internal memory of your Nextbook, and the other represents the memory card inserted into your Nextbook. Now you can copy files from or to them.

Remove your Nextbook from computer safely

- After you transfer files, disconnect your Nextbook from computer safely.
- (1) Left-click the icon at the right hand corner of the taskbar.
  - (2) Click the pop-up mini-window with message of "Stop the USB Mass Storage Device – Drive (X)".
  - (3) Drag the top bar downwards to reveal the USB notification message. Click "Turn off USB storage" and then click "Turn Off" to stop the connection.



- (4) Remove your Nextbook from the computer.

### Enjoy Music, Photo and Video

In the Home Screen, tap on the Application Tab to display all applications. Tapping on the music, photos or video icon can open the corresponding application.

 


### Access to Borders Store


Your NextBook has a built-in online bookstore - Borders. You can purchase or download free ebooks from Borders. **(Note: You first need to make WiFi connection before accessing Borders.)**

#### Purchase e-books from Borders

- (1) In the Home Screen, tap the EbookReader icon.
- (2) Tap on the "Borders" icon to access Borders.

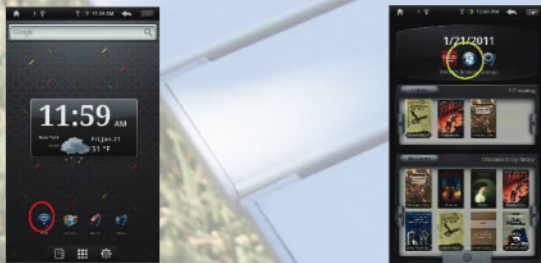

 - (3) Tap "SIGN IN" to log in with your account.
- (4) Choose the e-book that you want to buy.

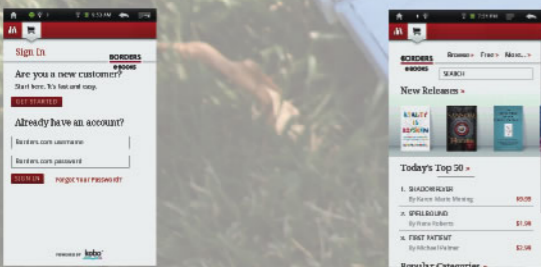


- (5) Tap on BUY NOW button to start the purchase process.
- (6) Input your payment account information to checkout.
- (7) Check your credit card No. and the price.
- (8) Tap Buy Now to download. The downloaded e-books will be saved to the Borders library.

#### Read e-books in Borders Library

 
E-books from Borders are saved in Borders library. They are unable be synchronized to the Ebook Reader application. To read them, go to the Borders library. **(Note: Make sure the WIFI network connection turns on.)**

- (1) Tap to enter the Borders library.
- (2) Tap an e-book and then tap "Start Reading".

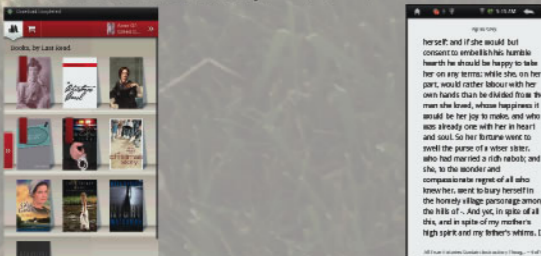

**Note:** The bookshelf page is only for ebooks downloaded from Borders. For ebooks transferred from Adobe Digital Editions, you need to launch the Ebook Reader application preset in the device before reading.

 - (3) During reading, you can:
  - Turn over pages by sliding your finger left and right.
  - Tap on the screen to display the control bar. By sliding the control bar, you can go to any page in the e-book.
  - Tap the Menu icon to display menu options. With these options, you can view outline of the e-book, change the view mode (day or night mode), change the font size or style.

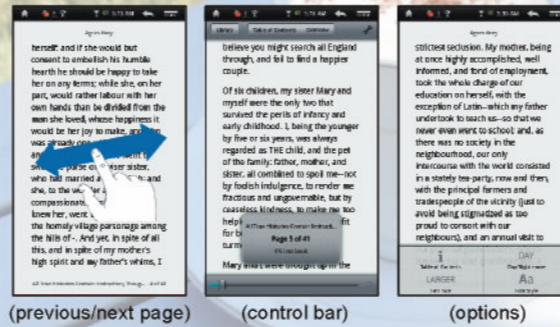

(previous/next page) (control bar) (options)

### Download e-books with the Adobe Digital Edition (ADE) via PC

 
For those ebooks protected by digital right (DRM), you need to sync them to the device with ADE (Adobe Digital Editions) before reading. Transferred ebooks from ADE can only be read by the E-book Reader application.

To transfer ebooks with ADE,

1. Access the website <http://www.adobe.com/products/digitaleditions/>, and then install the Adobe Digital Edition software following the instructions online.



2. Authorize your computer with your Adobe ID and Password.

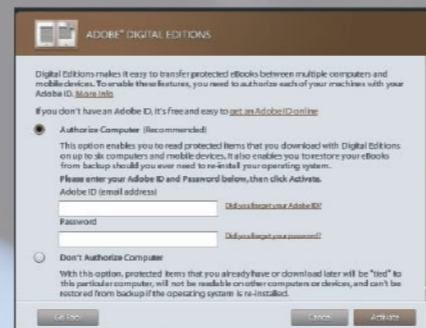


3. Activate your Nextbook. Connect your Nextbook to computer with the USB cable and start up the Adobe Digital Editions. Click "Authorize Device" to authorize your Nextbook.

- The Adobe ID can be used only for six times. It should expire after 6 tries of authorizing device. Later on, you need to delete the expired ID by pressing CTRL+SHIFT+D on the computer keyboard or using the Erase Activation Record setting on the device and then get a new one.
- The device remembers the ebooks downloaded with the latest Adobe ID only, and will overwrite the eBooks downloaded with the previous Adobe ID.


4. Download DRM-protected PDF files to your computer. Access the Internet and search for e-books, choose your favorite e-books and download them. If the e-book is protected by DRM, you should be prompted by DRM license information. Click "Open" to start downloading the DRM-protected e-book.



 5. Click "Purchase", and then you should see your downloaded e-book at the right panel of the Adobe Digital Editions user interface.

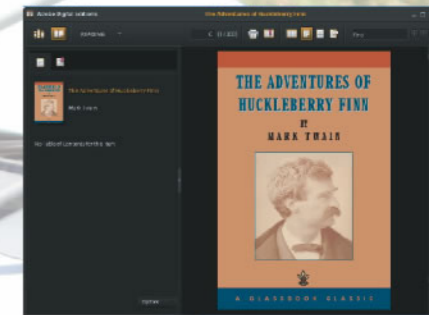

 6. Connect your Nextbook to the computer with the USB cable, and the Adobe Digital Editions should recognize your Nextbook.

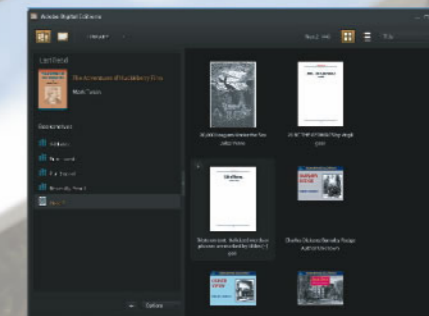

7. Click "Purchase" to see your downloaded e-book and then drag it to your Nextbook.

### Safety Advise



We strongly recommend that you observe the usage precautions laid out in this instruction. In no event will E Fun be liable for any indirect, incidental, special or consequential damages to any persons caused by E Fun's negligence, or for any lost profits, lost savings, loss of use, lost revenues or lost data arising from or relating to this device, even if E Fun has been advised of the possibility of such damages. In no event will E Fun's liability for damages to you or any other person ever exceed the amount paid by you for the device, regardless of the form of the claim. Some countries/states do not allow the limitations or exclusion of liability for incidental or consequential damages, so the above limitation or exclusion may not apply to you.