

## Accessory List



## Step by Step to Get Started

### Step 1 Charge your Nextbook.

Plug the AC adaptor to any standard wall outlet and the DC-IN port of the Nextbook. It takes about 5 hours to fully charge the battery.



### Step 2 Connect your Nextbook with Wi-Fi.

You can access the Internet with your portable Nextbook. Before launching an Internet application such as web browser, you first need to configure a network.

- (1) Tap the WIFI icon in the Home Screen.



- (2) Tap "Wi-Fi" to turn on the Wi-Fi.

 
- (3) Tap the "Wi-Fi settings", your Nextbook will scan automatically for available Wi-Fi networks and display them. The list of available networks shows all the wireless networks in range of your device.

- (4) Tap on the network you want to connect to, enter the required network information (password) and then tap on "Connect". Your Nextbook will now attempt to establish a connection to that Wi-Fi hot spot with the network parameters you entered. If the connection is successful, the message Connected to...(Wi-Fi network name) will appear under the WIFI setting.

### Step 3 Enjoy your Nextbook!


## Buttons & Ports

### Front and Rear View

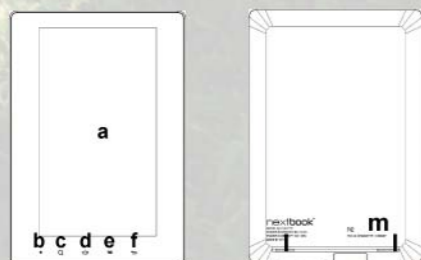

- a. Touch Screen
- b. Charge LED
- c. Search – Go to Google Search page
- d. Home – Go to the Home Screen.
- e. Menu – Display menu options.
- f. ESC – Return
- g. Built-in Speakers
- h. Reset pin hole – reset your device if the device freezes.

### Bottom View

 

- g. Power-IN port – connects to any standard electric source through the provided AC adaptor.
- h. SD Card Slot – accommodates any standard SD memory card.
- i. Earphone Port – connects to stereo earphones (not provided with the unit.)
- j. USB Port – connects to a computer through the USB cable.
- k. Power Button – press and hold to turn on or off the device; briefly press to turn the screen on or off.

## Home Screen



- a. Home: Go back to the Home Screen wherever you are in the interface.
- b. WiFi Connection
- c. Battery Level
- d. Current Time
- e. Volume up
- f. Volume down
- g. Return: Return to the previous directory
- h. Menu: Tap to display an overlay setting menu.
- i. Time
- j. Weather forecast - Worldwide Cities (require Wi-Fi connection)
- k. Default shortcut – WiFi, Gallery (photo), Music, Video Player
- l. System – Shortcut to system settings
- m. Applications – Shortcut to Applications page
- n. E-book Reader – Shortcut to E-book Reader page
- o. Help - Get more information about the device from FAQ sheet or user guide

## Customize the Home Screen

You can customize the Home Screen by adding/removing shortcuts and widgets, changing the wallpaper.

- To add a Home Screen item (shortcuts, widgets, folders etc.), tap on the Menu icon and then select "Add" . You can also hold your finger on the screen and then choose an item from the list.

- You can add a folder onto the Home Screen by holding your finger on the screen and then choose Folders → New Folder. You can drag shortcuts or widgets to the folder.

 
To rename the folder, a) tap to open the folder, b) hold your finger on the title bar of the opened folder until the Rename window pops up, c) input folder name.

- To move a Home Screen item, hold your finger onto it until it is highlighted, then drag it to the desired location, and release it.
- To remove a Home Screen item, hold your finger onto it until it is highlighted, drag it to the recycle bin which turns from the Application Tab, and then release your finger.
- To change the wallpaper, from the Home Screen, tap on the Menu icon , a list of options appears. Tap on "Wallpaper" and then choose a picture as the desktop wallpaper.
- To change the System Settings, from the Home Screen, tap on the Menu icon , and then tap on "Settings" . Choose a category: "Wireless & Networks", "Sound & Display", "Date & Time", etc. For more information on the different settings, see the System Settings section.

## Quick Tips

### How to use the Touch Screen


- The touch screen is capacitive. Different from resistive touch screen, it does not respond to nails but requires you to touch with finger pulp.
- When watching a video or listening to music, you can tap the progression bar to go directly to a different location in the video or song.
- In the file browsers (File, Music, Video, Photo, etc.), you can drag your finger up and down to scroll the file list up and down.

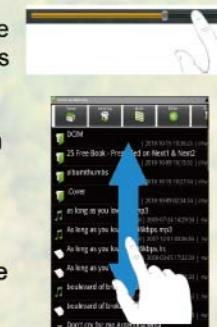

## Transferring Files

### Connect your Nextbook to a Computer and Download Files

 - (1) Connect your Nextbook to a computer with the supplied USB cable.
- (2) Drag from the top bar downwards to display the USB notification message as shown.



- (3) You should see two removable disk drives in your computer. One represents the internal memory of your Nextbook, and the other represents the memory card inserted into your Nextbook. Now you can copy files from or to them.

### Remove your Nextbook from computer safely

After you transfer files, disconnect your Nextbook from computer safely.

- (1) Left-click the icon at the right hand corner of the taskbar.
- (2) Click the pop-up mini-window with message of "Stop the USB Mass Storage Device – Drive (X)".
- (3) Drag the top bar downwards to reveal the USB notification message. Click "Turn off USB storage" and then click "Turn Off" to stop the connection.
- (4) Remove your Nextbook from the computer

## Enjoy Music, Photo and Video

In the Home Screen, tap on the Application tab to display all applications. Tapping on the music, photos or video icon can open the corresponding application.



## Read Office Documents

To read Office document in WORD, EXCEL, PPT etc.,

- (1) Copy Office documents to the device by USB connection.
- (2) Launch the OfficeSuite application.
- (3) Locate an Office document with the explorer.
- (4) Tap the document to open it. On the opening page, you can slide your finger up and down to turn over the page.



# nextbook™ 7.0 Inch Multimedia Android Tablet

## Quick Start Guide

ITEM# NEXT7P

### Download Applications with SLIDE ME

 
 
The device has a built-in application library - SLIDE ME for you to download in free or purchase applications. Go to the Applications page, tap SLIDE ME to enter and download application as instructed. You can find the downloaded applications by tapping the "Downloads" application.

**Note:** Application format should be .apk which is supported by the device.



### Explorer Files

You can explore files and folders with the Explorer and Astro application. In the Home screen, tap to display all applications and then tap the Explorer icon or ASTRO to enter the file explorer mode.

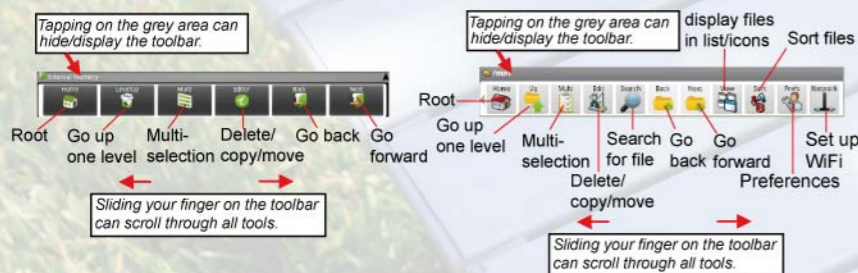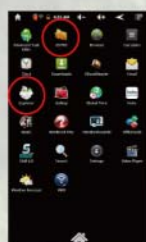

### Access to Online E-book Store

Your NextBook has a built-in online bookstore - KOBO. You can purchase e-books or download free e-books directly from the Kobo.

**Note:** Make sure you have configured the Wi-Fi network before accessing Kobo.

#### Purchase e-books from Kobo

 
(1) Go to the Applications page by tapping in the Home Screen and then choose "Kobo".




(3) Log in with your account, and then input your account information.



(2) Tap "SIGN IN OR CREAT AN ACCOUNT" to sign in.

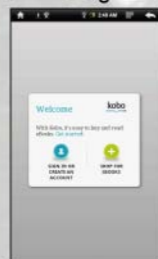

 (4) Go to the book store and search for e-books. Tap the e-book that you want to buy.

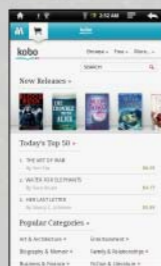

(5) Tap on BUY NOW button to start the purchase process.



(7) Check your credit card information and the price.


**Note:** The e-book is not downloaded to your NextBook's memory. It is accessible only if you sign in with your Kobo account.

#### Read e-books in Kobo Library

 E-books from Kobo are saved in Kobo library and unable to be synchronized to the device's memory.

To read e-books that you have purchased from Kobo,

(1) Tap to enter the Kobo library and you should see all of your purchased e-books.

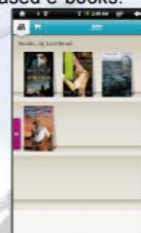

(3) During reading, you can:

- Turn over pages by sliding your finger left and right.
- Tap on the screen to display the control bar. By sliding the control bar, you can go to any page in the e-book.
- Press and hold the Next button on the device to display menu options. With these options, you can change the font size or style etc.
- Tap to return to the library.



(previous/next page)



(control bar)



(options)

(6) Input your payment account information to checkout.



2. Authorize your computer with your Adobe ID and Password.



3. Activate your Nextbook. Connect your Nextbook to computer with the USB cable and start up the Adobe Digital Editions. Click "Authorize Device" to authorize your Nextbook.

The Adobe ID can be used only for six times. It should expire after 6 tries of authorizing device. Later on, you need to delete the expired ID by pressing CTRL+SHIFT+D on the computer keyboard or using the Erase Activation Record setting on the device and then get a new one.

The device remembers the ebooks downloaded with the latest Adobe ID only, and will overwrite the eBooks downloaded with the previous Adobe ID.

 
4. Download DRM-protected PDF files to your computer. Access the Internet and search for e-books, choose your favorite e-books and download them. If the e-book is protected by DRM, you should be prompted by DRM license information. Click "Open" to start downloading the DRM-protected e-book.



5. Click "Purchase", and then you should see your downloaded e-book at the right panel of the Adobe Digital Editions.



6. Connect your Nextbook to the computer with the USB cable, and the Adobe Digital Editions should recognize your Nextbook.

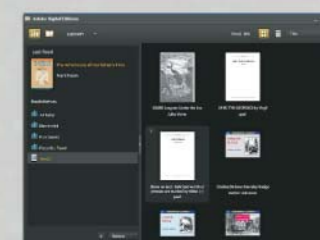

7. Click "Purchase" to see your downloaded e-book and then drag it to your Nextbook.

### Safety Advise



We strongly recommend that you observe the usage precautions laid out in this instruction. In no event will E Fun be liable for any indirect, incidental, special or consequential damages to any persons caused by E Fun's negligence, or for any lost profits, lost savings, loss of use, lost revenues or lost data arising from or relating to this device, even if E Fun has been advised of the possibility of such damages. In no event will E Fun's liability for damages to you or any other person ever exceed the amount paid by you for the device, regardless of the form of the claim. Some countries/states do not allow the limitations or exclusion of liability for incidental or consequential damages, so the above limitation or exclusion may not apply to you.

### Download e-books with the Adobe Digital Edition (ADE) via PC

For those ebooks protected by digital right (DRM), you need to sync them to the device with ADE (Adobe Digital Editions) before reading. Transferred ebooks from ADE can only be read by the E-book Reader application.

To transfer ebooks with ADE,

1. Access the website <http://www.adobe.com/products/digitaleditions/>, and then install the Adobe Digital Edition software following the instructions online.

