
 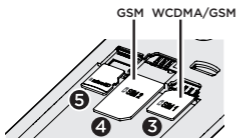

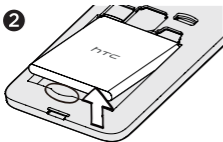


# HTC Desire 210 dual sim

## Inserting the SIM and storage cards

**IMPORTANT: USE A MICRO SIM IN SLOT 1 AND A REGULAR SIM IN SLOT 2.**

Inserting a smaller size SIM (such as a nano SIM with an adapter or a modified SIM) may damage the card slot or cause the card to not fit properly.

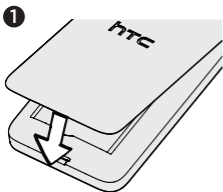

1. With the phone facing down, open the back cover from the small opening at the bottom.

2. Before inserting the cards into the slots, you need to remove the battery.

3. Insert a WCDMA or GSM micro SIM into the SIM 1 slot, with the card's gold contacts facing down and cut-off corner facing in.

4. Insert a GSM SIM in the SIM 2 slot, with the gold contacts facing down and cut-off corner facing out.

5. Insert a microSD™ card into the storage card slot


6



with its gold contacts facing down.

6. Reinsert the battery.

7

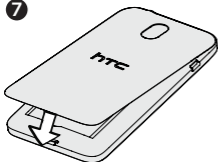

7. To replace the back cover, align the phone onto the top part of the back cover first. Then press the sides and the bottom part of the back cover down to lock the cover into place.

### Tip:

During a call if the screen is off, press the POWER button to turn the screen back on.

### Want some guidance on using your phone?

 
Go to [www.htc.com/support/](http://www.htc.com/support/) to find the user guide, latest news, and more.

© 2014 HTC Corporation. All rights reserved.

HTC, the HTC logo, and HTC Desire are trademarks of HTC Corporation. All other company, product and service names mentioned herein are trademarks, registered trademarks or service marks of their respective owners.

htc.com

Complies with  
IDA Standards  
DB 104368



91H0xxxx-xxM Rev.A