

HTC Desire 501 dual sim


Inserting your micro SIM and microSD cards

IMPORTANT: USE A STANDARD MICRO SIM ONLY.


Inserting a smaller size SIM (such as nano SIM with an adapter or a modified SIM) may damage the card slot or cause the card to not fit properly.




1. To remove the cover, press on the back cover and then carefully lift the cover open from the bottom corner.

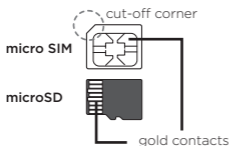

2. Insert a WCDMA/GSM micro SIM card into the SIM 1 slot, with its gold contacts facing down and cut-off corner facing in.
3. Insert a GSM micro SIM card into the SIM 2 slot.

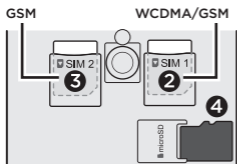

4. Insert a microSD card into the storage card slot with its gold contacts facing down and push it all the way in.

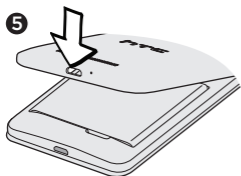

5. To replace the back cover, align the back cover onto the top part of the phone first, and then press the sides and the bottom part of the back cover down to lock the cover into place.

Want some guidance on using your phone?

Check out our friendly walkthroughs in the **Tips & Help** app. Or, go to www.htc.com/support/.

© 2013 HTC Corporation. All rights reserved. HTC, the HTC logo, and HTC Desire are trademarks of HTC Corporation. All other company, product and service names mentioned herein are trademarks, registered trademarks or service marks of their respective owners.

htc.com

Complies with
IDA Standards
DB 104368



91H0xxxx-xxM Rev.A