

IMPRESSION

ACCESSORIES INCLUDED

9.7" Device USB cable Power adapter Carry Pouch

CONTROLS AND CONNECTIONS

1. speaker	7. Camera Key	13. Mini USB jack
2. ON/OFF	8. " Menu"key	14. charge
3. Camera	9. "Home"key	15. Micro SD slot
4. Volume +/-	10. "Backspace"key	16. USB jack
5. Reset	11. "Search" key	17. HDMI jack
6. Indicator lights	12. MIC	18. USB jack
		19. earphone jack

9.7" ANDROID TABLET QUICK START GUIDE

INSERT MEMORY CARD

NOTICE Please pay attention to the direction you insert the card (see picture), or the device will be damaged. DO NOT take out the memory card when the tablet is on. Content may be lost.

CHARGING

NOTICE As shown in the diagram, make sure that the charge plug is inserted fully. ONLY use the supplied charger or you may damage the tablet.

IMPRESSION

INTERFACE INTRODUCTION

Screen Interface
Main screen interface is similar to a computer desktop. Place application shortcuts and widgets here. Touch and "swipe" to go to next page, move things on the screen, etc. Touch 2 fingers and spread apart or bring together to zoom pictures in and out.

Widgets
Press the screen for 1-2 seconds. The "Add to Home screen" menu will pop up offering you options to add widgets, change wallpaper, etc.

Reading Tips
When a prompt is displayed on the status bar, touch it to open the notification.
• Click selection window to open prompt message
• Click on the top of the column to read the full message
• Close the column

Status Bar
Pay attention to the status bar on the top of screen. If icons show on the left, it is a reminder that applications are running. On the right of the status bar, there are alarm settings, Wi-Fi connection, battery charge, etc.

9.7" ANDROID TABLET QUICK START GUIDE

> Application
Press and hold down the application icon to move. The Application List icon will change to a trash can if you want to drag it to the trash. The application will not be un-installed, just the shortcut.

Home key
Click to return to the home screen.

Click the application list key to pop up the application screen. Touch an application icon to start it up. Press and hold down the application icon and the shortcut will be added to the home screen. Press the "Home" key in the application list screen to return to the home screen.

Safety Advice

- If the product emits an unusual odor or excessive heat, or you notice anything else that seems unusual, do not use the product.
- Do not use the product near water.
- Do not try to open the device or attempt to open and repair the product yourself. It will be damaged.
- Please do not put the device near a magnetic field, it will be damaged.
- Avoid leaving the product in a hot or humid place. Avoid dropping the unit, it will be damaged.