



LG-C195 User Guide-English

This guide will help you understand your new mobile phone. It will provide you with useful explanations of features on your phone.

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provide



P/N· MFI 67525022(1.0)

www.la.com

Installing the SIM Card and Charging the Battery

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.

Important! The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card.

Illustrations

- 1 Remove the back cover
- 2 Remove the battery
- 3 Insert the SIM card 4 Insert the battery
- 5 Insert the back cover
- 6 Charging your phone

WARNING: Do not remove the battery when the phone is switched on. as this may damage the phone.

Menu 1. Games & apps.

received calls and missed calls.

sent or received messages.

Playing a song

Press OK key.

3 Select to pause the song.

Up/Down navigation keys.

4 Select to skip to the next song.

concerning the use of such material.

5 Select to skip to the previous song.

Games & apps..

Menu 2. Logs

have called.

Ouick feature reference

Press Menu and select Games & apps. You can install

new games and applications on your phone to keep you

amused when you have spare time. Press Menu and select

Press Menu and select Logs. You can check the record of

all logs, calls only, missed, outgoing, incoming logs and

messages only. The number and name (if available) are

displayed together with the date and time at which the

call was made. You can also view the number of times you

· All logs: View a complete list of all your dialled, received

and missed calls and also send and received messages.

• Messages Only: View a list of all the numbers you have

1 Press Menu and select Music, then choose MP3 player

2 Choose All songs then select the song you want to play.

TIP! To change the volume while listening to music, press

Note: The copyright of music files can be protected

in international treaties and national copyright laws.

Therefore, it may be necessary to obtain a permission or

a license to reproduce or copy music. In some countries

material. Before downloading or copying the file, please

check the national legistration of the applicable country

national law prohibits private copying of copyrighted

• Calls Only: View a list of all the numbers you have called.



· Missed logs: View a list of any calls you have missed.

- · Outgoing logs: View a list of all the numbers you have called.
- Incoming logs: View a list of all the numbers that have received

Menu 3. Camera

- 1 Press Menu and select Camera and choose Camera.
- 2 When the camera has focused on your subject, select the Capture icon on the bottom-centre of the screen and press OK to take a photo

Video camera

- 1 Press Menu and select Camera and choose Video camera. The video camera's viewfinder will appear on screen.
- 2 Focus the Video camera on what to record.
- 3 Select the Reci icon on the bottom-centre of the screen and press OK to take a video. Rec will appear at the bottom of the viewfinder. Press again to stop recording.

FM Radio

Your LG-C195 has an FM radio feature so you can tune into your favorite stations and listen on the move

- · Listening to the radio
- 1 Press Menu select Music and choose FM radio
- 2 Select the channel number of the station you would like to listen to.
- · Recording the Radio
- 1 Press Rec. during listening to the radio.
- If you want to stop the recording, press Stop. If recording is done, the recorded contents will be saved in My stuff -> Sounds as mp3 file.

View the pictures and videos you have taken in your Album.

Note: Insert handsfree connector to listen to a FM Radio.

- 2 The recording time is displayed on your phone.

Getting to know your phone

Soft keys (Left soft key / Right soft key) • These keys perform the function Indicated in Earpiece Main I CD -Confirm key / OK key @ LG Send kev · Dials a phone number and answers a call. Navigation key In standby mode: Shows the history of calls. SNS kev set. (Menu > Settings > Display > Homescreen > Alpha numeric keys Widaet settinas) Press Down Navigation Key: MP3 player In standby mode: Input numbers to dial. Hold down below keys. Press Right Navigation Key: Messaging - Insert '+' symbol to make international Press Left Navigation Key: My stuff calle In menu: Scroll up. down, Right & left. - Connect voice mail centre. End key 🖥 To 📓 - Speed dials. - SOS Mode. · Switch on/off (hold down) # - Hold the key down to activate or End or reject a call. deactivate silent mode. Lock/Customise key Short press to access customise key.

. In standby mode Press Un Navigation Key: Widget when it was

· In editing mode: Enter numbers &

Memory card

Installing a memory card

You can expand the memory available on your phone using a memory card.

Note: A memory card is an optional accessory Slide the memory card into the slot until it clicks into place. Make sure that the gold contact area is facing downwards.



WARNING: External memory can not exceed 8GB

Removing a memory card

Carefully remove the memory card by gently pulling it outside as shown in the above diagram.

Formatting the memory card

Your memory card may already be formatted. If your memory card isn't formatted, you will need to format it before you can

Long press to Lock/Unlock in any screen.

From the home screen press Menu then select Settings.

the bottom of the display.

Selects menu options and confirms actions.

- Choose Device then Memory info, and select External
- 3 Press Format and enter the password, which is set to 0000 as default. Your memory card will be formatted and ready to use.
- 4 To view the new formatted folders on your LG-C195 press Menu and select My stuff. Press right navigation key two

WARNING: When you format your memory card, all the content will be wiped. If you do not want to lose the data on your memory card, back it up first.

WARNING: Do not remove your MicroSD card during the data





Calling

Making a call

1 Make sure your phone is on.

3 Press == to begin the call.

- 2 You can use the keypad. To delete a digit press back arrow.
- 3 Press to begin the call
- 4 To end the call, press ===.

TIP! To enter + when making an international call, press and

Making a call from your Contacts It's easy to call anyone whose number you have stored in your

- 1 Press Menu to open the main menu. Select Phonebook
- 2 Using the keypad, enter the first letter of the contact you want to call and scroll to the Contacts.

Speed dialing

You can assign a speed dial number to a contact you call

Answering and rejecting a call

profile to silent for a meeting.

When your phone rings, press == to answer the call. While

ringing. This is useful if you have forgotten to change your

Press or select Reject in order to reject an incoming call.

deactivated speaker icon is displayed without red colour cross.

your phone is ringing you can press Silent to mute the

Note: In call when speaker is activated, the speaker icon

is displayed with red colour cross, when the speaker is

You can launch the internet browser and access the homepage of the activated profile on web settings. You can also manually enter a URL address and access the associated Web page.

- 1 In Menu mode, select Internet to launch your service provider's homepage.
- 2 Navigate web pages using the following keys: · Navigation - Scroll up or down on a web page.
- OK Key Select an item.

Menu 8. E-mail

window will open.

to send the email.

Menu 9. My stuff

Mv stuff.

press down navigation key.

Menu 4. Internet

- · Back Return to the previous page.
- Options Access a list of browser options

Note: You will incur extra cost by connecting to these services and downloading content. Check data charges with your network provider

Sending an email using your new account

To send/receive an email, you should set up an email

2 From Options choose Write e-mail and a new email

3 Enter address in To field then write a subject line and

View the images, sounds, videos and others in your

4 Enter your message using the keypad then Press Ok key

1 Press Menu, select E-mail and choose the account you

Menu 5. SNS (Social network services)

Your LG-C195 has SNS that lets you enjoy and manage your social network. You can update your own SN place status and view your friend's SN updates.

Note: SNS feature is a data intensive application. An additional costs may be incurred when connecting and using online services. Check your data charges with your network provider.

Menu 6. Messaging

Message Service), MMS (Multimedia Message Service) as well as the network's service messages.

Sending a message

- 1 Press Menu, select Messaging and choose Write message.
- 2 A new message editor will open. Message editor message editor is SMS mode.

Your LG-C195 includes functions related to SMS (Short

- combines SMS and MMS in one intuitive mode that is easy to switch between. The default setting of the

Menu 10. Phonebook

Searching for a contact

- 1 Press Menu and select Phonebook.
- 2 Using the keypad, enter the first letter of the name of the contact you want to call.
- 3 To scroll through the contacts, use the up and down navigation keys. And to scroll through their different numbers, use the left and right navigation keys.

Adding a new contact

- 1 Press Menu and select Phonebook.
- 2 Press Option and select New contact.
- 3 Enter the information you want in the fields provided and select Done

3 Enter your message using the keypad. See Entering text on the right for more information on how to enter text. 4 Select Ontions and choose Insert to add an Image Video, Sound, Text template, Multimedia template

- Emoticon, Name & Number, Slide, Subject or More (Business card/Schedule/Memo/Task/My profile). 5 Choose Send to 6 Choose a contact from the list of contacts or enter the
- phone number. 7 Select Send

WARNING: Image, Sound, Video, Slide, Subject, Business card, Schedule or My profile is added to the message editor, it will be automatically converted to MMS mode and you will be charged accordingly.

Entering text

You can enter alphanumeric characters using the phone's keypad. For example, storing names in contacts, writing a message and creating scheduling events in the calendar all require entering text. The following text input methods are available in the phone: Abc mode, and 123 mode

Note: Some fields may allow only one input mode (e.g. telephone number in contact fields).

Text input mode using the keypad

When you want to enter text, for example when writing a message, the keypad will default to Abc mode. If you are entering a number, for example when making a call, the keypad number keys will default to numbers. To change the mode press a key in editor screen.

Menu 7. Music

MP3 Player

Your LG-C195 has a built-in music player, so you can play all your favourite music.

Note: Before using music player, you will need to transfer music file onto your phone. Music player supports codec types as follows: MP3, WMA, AAC. Music player does not necessarily support all features and variations of file

Menu 11. Tools

- Ouick menu
- 1 Press Menu and select Tools, then choose Quick menu 2 Press Add and choose the menu you want to quickly
- approach. Organiser

You can access Calendar, Tasks, Memo, Calculate date

Alarm clock

You can set up to 5 alarm clocks to go on at a specified time Calculator

This contains the standard functions such as Addition Subtraction, Multiplication and Division.

 Voice recorder Use your Voice recorder to record voice memos or other

Stopwatch

This option allows you to use the function of a stopwatch. Unit converter

This converts many measurement into a unit you want.

World clock

Allows you to determine the current time in another time zone or country.

SIM services

This feature depends on SIM and the network services. In case the SIM card supports SAT (i.e. SIM Application Toolkit) services, this menu will be the operator specific service name stored on the SIM card

Menu 12. Settings

Press Menu and select Settings

Profiles

Choose the profile you want to edit. Using flight mode - Flight mode will not allow you to make

calls, connect to the internet or send message

> Date and time: In date and time settings select Auto update On and the phone will automatically update the date and time

- > Battery status: Choose to switch the factory set power save settings On or Off.
- > Languages: Change the language of your LG-C195 display.
- > Auto key lock: Lock the keypad automatically in
- > Security: Change your security to keep your LG-C195 important information to be protected
- > SOS service: This enables SOS service. After enabling if you press long key of 9 in Idle screen, the SOS message is sent and the phone stays in SOS Mode. In SOS mode. SOS message will be sent to the assigned receivers and incoming calls by them will be automatically accepted. All notification sound will be muted. To exit the SOS mode, press the End key in Homescreen.
- > Memory info: You can use the memory manager to determine how each memory is used and see how much space is available.
- > Primary storage setting: If you insert an external memory card in your phone, you can also select Primary storage settings then choose the default location you prefer items to be saved to.
- > Reset device: Use reset device to reset settings only or data & settings. You need the security code to activate

> Device info: View the technical information for your

Display

You can adjust settings for the phone display.

· Call

You can set the menu relevant to a call.

Connectivity

- > Bluetooth: Set up your LG-C195 for Bluetooth use. You can adapt your visibility to other devices or search through devices your phone is paired with. Note: Pair LG-C195 with any device supporting BT version above 2.0, then pass code is not asked, since pass code is auto generated. Pair I G-C195 with any device supporting lesser BT versions such as 1.2 etc, then pass code is asked.
- > USB connection mode: You can select the USB connection mode on your phone for several uses.
- > Network: You can choose Select network or Preferred

- Select Network

. Automatic: This function automatically searches for a network and registers the handset to that network.

☐ Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal

Exposure to radio frequency energy Radio wave exposure and Specific Absorption Rate (SAR)

This mobile phone model LG-C195 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health

The radio wave exposure quidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.

While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves

Potentially explosive atmospheres

• Do not transport or store flammable gas, liquid, or

Wireless devices can cause interference in aircraft.

Turn your mobile phone off before boarding any aircraft

• Do not use it on the aircraft without permission from the

Keep the phone in a safe place out of the reach of small

children. It includes small parts which may cause a choking

explosives in the same compartment of your vehicle with

· Do not use the phone at a refueling point

Do not use near fuel or chemicals.

your mobile phone and accessories

Children

hazard if detached.

on Non-Ionizing Radiation Protection (ICNIRP) is 2 W/Kg

The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.836 W/Kg (10g) and when worn on the body is 0.646 W/Kg (10g).

at least 1.5 cm away from the body. When a carry case, belt clip or holder is used for bodyworn operation, it should not contain metal and should position the product at least 1.5 cm away from your body. In order to transmit data files or messages, this device requires a quality connection to the may be delayed until such a connection is available. Ensure the above separation distance instructions are followed until

The SAR limit recommended by the International Commission

This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned network. In some cases, transmission of data files or messages

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- · Recharge the battery if it has not been used for a long time to maximise usability.
- · Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom

to that of the parts being replaced · Keep away from electrical appliances such as TVs, radios, and personal computers.

technician when repair work is required

phone, and may be dangerous

- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- . Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.

· Manual: This function allows you to search for

list to register with, if possible,

- Preferred lists

network list

access the Internet wirelessly

Profiles

A WARNING

• Wi-Fi

networks and specify which network in the network

Select preferred network lists to display and saves

in your SIM Card. You can edit the current preferred

*: Shown only if supported by the SIM Card.

> Internet Profiles : This menu shows the Internet

Wireless Manager allows you to manage Internet

connections via Wi-Fi (Wireless LAN) on your device. It

allows the phone to connect to local wireless networks or

Note: The LG-C195 supports WEP and WPAPSK/2 encryption.

but not EAP or WPS encryption. If your Wi- Fi service provider

or network administrator sets encryption for network security,

fill in the key in the pop-up window. If encryption is not set, this

popup window will not be shown. You can obtain the key from

Only use batteries, chargers and accessories approved for use

with this particular phone model. The use of any other types

may invalidate any approval or warranty applying to the

• Repairs under warranty, at LG's option, may include

replacement parts or boards that are either new or

• Do not disassemble this unit. Take it to a qualified service

reconditioned, provided that they have functionality equal

your Wi-Fi service provider or network administrator

Product care and maintenance

> Access Points . This menu shows the Access Points

You can register, delete and edit by using the Options

- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose off used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste · If you need to replace the battery, take it to the nearest
- authorised LG Electronics service point or dealer for · Always unplug the charger from the wall socket after
- the phone is fully charged to save unnecessary power consumption of the charger • Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental
- conditions. · Make sure that no sharp-edged items such as animal's teeth or nails, come into contact with the battery. This could

Phone Software update

LG Mobile Phone Software update from internet

For more information on using this function, please visit the http://update.lgmobile.com or http://www.lg.com/ common/index.isp → select country.

This feature allows you to update the Software of your phone to the latest version conveniently from the internet without the need to visit a service centre.

As the mobile phone Software update requires the user's full attention for the duration of the update process, please make sure to check all instructions and notes that appear at each step before proceeding. Please note that removing the USB data cable or battery during the upgrade may seriously damage your mobile phone

Synchronise your phone with your PC

You can synchronise your phone with your PC to make sure all your important details and dates match, but also to backup your files to put your mind at ease.

Do not handle the phone with wet hands while it is being

charged. It may cause an electric shock and can seriously

• Do not to charge a handset near flammable material as the

• Use a dry cloth to clean the exterior of the unit (do not use

Do not charge the phone when it is on soft furnishings.

The phone should be charged in a well ventilated area.

• Do not keep the phone next to credit cards or transport

tickets; it can affect the information on the magnetic strips.

Do not tap the screen with a sharp object as it may damage

Use the accessories like earphones cautiously. Do not touch

during normal operation. Extremely prolonged, direct skin

contact in the absence of adequate ventilation may result

handling your phone during or immediately after operation

in discomfort or minor burns. Therefore, use care when

Your phone is an electronic device that generates heat

· Do not subject this unit to excessive smoke or dust.

• Do not expose the phone to liquid or moisture.

the antenna unnecessarily

handset can become hot and create a fire hazard

solvents such as benzene, thinner or alcohol).

Efficient phone operation

All mobile phones may get interference, which could affect

performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving
- Use a hands-free kit, if available.
- if driving conditions so require.

- Viewing your phone files on your PC 1 Connect the USB cable to your phone and your PC.
- 2 Select the PC suite from the popup menu in your phone and run PC Suite Program in your PC.
- 3 Open LG PC Suite icon in your PC which is already installed, after searching the phone it will be connected
- TIP! Viewing the contents of your phone on your PC helps you to arrange files, organise documents and remove contents you no longer need

Installing "LG PC Suite IV" PC application

"LG PC Suite IV" PC application can be downloaded from the webpage of LG

- 1 Go to www.lg.com and select a country of your choice. 2 Go to Support > Mobile Phone Support > Select the
 - Model (LG-C195). 3 Click PC Sync from Download, and click WINDOW
 - PC Sync Download to download "LG PC Suite IV" PC software

Backing up and restoring your phone's

and run PC Suite Program in your PC.

Restore and Click Finish.

1 Connect the USB cable to your phone and your PC.

2 Select the PC suite from the popup menu in your phone

3 Click the "Phone Backup & Restore" in PC suite (Tools >

4 Mark the contents you would like to back up or restore.

to, or restore information from, Now select Backup or

5 Your information will be Backed up or Restored.

Phone Backup & Restore), and select Backup or Restore.

Select the location you would like to backup information

Flectronics devices

- Some hearing aids might be disturbed by mobile phones.

- Pull off the road and park before making or answering a call
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment

- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads

Avoid damage to your hearing Damage to your hearing can occur if you are exposed to loud

sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

NOTE: Excessive sound pressure from earphones can cause hearing loss.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

☐ Troubleshooting

Symptom	Possible causes	Possible Corrective measures
No connection to the network	Signal is weak or you're outside of the carrier network.	Move to a window or open space. Check service provider coverage map.
Codes do not match	When you want to change a security code you have to confirm the new code by entering it again. The two codes that you have entered do not match.	Contact your Service Provider.
Function cannot be set	Not supported by Service Provider or registration required.	Contact your Service Provider.
Calls not available	Dialing error or service limitations.	Check the number dialed and check the reception. Contact your service provider.
alls not available	Dialing error New SIM card inserted Prepaid Charge limit reached	New network not authorised. Check for new restrictions. Contact Service Provider or reset limit with PIN 2.

☐ Troubleshooting

Symptom	Possible causes	Possible Corrective measures
Phone cannot be switched on	On/Off key pressed too briefly. Battery is not charged. Battery contacts are dirty.	Press On/Off key for at least two seconds. Charge battery. Check charging indicator in the display. Clean the battery contacts.
Charging error	Battery totally empty. Contact problem. No power from outlet. Charger defective. Wrong charger. Battery defective.	Charge battery. Check power supply and connection to the phone. Check the battery contacts, clean them if necessary. Plug in to a different socket or check voltage. Test with another charger. Only use original LG accessories. Replace battery.
Network connection is lost.	Signal too weak.	Reconnection to another service provider if network mode is automatic.
Number not permitted	The Fixed Dial Number function is on.	Check the Settings menu and turn the function off.

☐ Accessories

Charge

Battery

User Guide

Various accessories are available for your mobile phone. These are detailed below









Stereo headset



NOTE

- Always use genuine LG accessories
- Failure to do so may invalidate your warranty
- Accessories may be different in different regions. Please check with our regional service company or agent for further

☐ Technical data

Ambient Temperatures Max: +55°C (discharging)

+45°C (charging) Min · -10°C

