

# LG MACH™

## User Guide



©2012 Sprint. Sprint and the logo are trademarks of Sprint. Other marks are trademarks of their respective owners.

All materials in this guide including, without limitation, the design, the text, and any marks are the property of LG Electronics, Inc. Copyright © 2012 LG Electronics, Inc. ALL RIGHTS RESERVED. LG and the LG logo are registered trademarks of LG Electronics, Inc. LG Mach™ is a trademark of LG Electronics, Inc. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. microSD™ is a trademark of SanDisk. LTE is a registered trademark of ETSI. Other trademarks and trade names are those of their respective owners. Unless otherwise specified herein, all accessories referenced herein are sold separately. All features, functionality, and other product specifications are subject to change. Screen shots are simulated and subject to change.



Manufactured under license from Dolby Laboratories.

Dolby and the double-D symbol are trademarks of Dolby Laboratories.

# Important Messages

**IMPORTANT:** If the account type you want to set up is not in the phone database, you will be asked to enter more details. You should get all pertinent information for the email account such as incoming and outgoing server settings before you proceed.

**WARNING:** Use only Sprint-approved or manufacturer-approved batteries and chargers with your phone. The failure to use a Sprint-approved or manufacturer-approved battery and charger may increase the risk that your phone will overheat, catch fire or explode, resulting in serious bodily injury, death or property damage.

**Notice:** NFC antenna for this model is on the battery cover and this battery cover is the only one that is offered with the model.

# Table of Contents

---

Get Started .....	1
Your Phone at a Glance.....	1
Set Up Your Phone.....	2
Activate Your Phone .....	2
Make Your First Call .....	3
Set Up Your Voicemail.....	3
Sprint Account Information and Help.....	4
Sprint Account Passwords .....	4
Manage Your Account .....	4
Sprint Support Services .....	5
Phone Basics.....	7
Your Phone Overview .....	8
Status Bar .....	10
Turn Your Phone On and Off .....	13
Lock and Unlock Your Phone .....	14
Battery and Charger.....	14
Extend Your Battery Life .....	16
Phone Function Keys.....	17
Menu Key .....	18
Work with Menus .....	18
Notifications Panel.....	20
Home Key.....	21
Back Key .....	21
Touchscreen Navigation .....	21
Your Home Screen .....	22
Home Screen.....	23
Extended Home Screens.....	24
Use the Applications Key.....	24
Applications: How to View, Open and Switch.....	24
Applications .....	26

Customize Your Home Screen.....	29
Add and Remove Widgets on the Home Screen.....	30
Change the Phone's Wallpaper .....	31
Customize Applications Icons on the Home screen .....	31
Access Recently-Used Applications.....	32
Home Screen Clean View.....	32
Change the Screen Orientation.....	33
Enter Text.....	33
Slide-out QWERTY Keyboard.....	33
LG Keyboard Types.....	35
Tips for Editing Text.....	39
Search Your Phone and the Web.....	39
Phone and Web Search Using Text Entry.....	39
Phone and Web Search Using Voice Command.....	41
Phone Calls .....	42
Make Phone Calls.....	42
Call Using the Phone Dialer.....	43
Dialing Options .....	43
Missed Call Notification .....	44
Call Emergency Numbers .....	44
In-Call Options.....	45
Dial and Save Phone Numbers With Pauses .....	45
Dial From the Contacts List.....	46
Use Direct Dialing .....	46
Plus (+) Code Dialing.....	46
Receive Phone Calls.....	47
Visual Voicemail .....	48
Set Up Visual Voicemail.....	49
Review Visual Voicemail.....	49
Listen to Multiple Voicemail Messages .....	50
Configure Visual Voicemail Options.....	50
Configure Visual Voicemail Settings .....	51
Change Your Main Greeting via the Voicemail Menu.....	52

Edit the Display Name via the Voicemail Menu .....	52
Voicemail(Traditional) .....	52
Set Up Voicemail .....	52
Voicemail Notification .....	53
Retrieve Your Voicemail Messages .....	53
Phone Call Options .....	54
Caller ID .....	54
Call Waiting .....	55
3-way Calling .....	55
Call Forwarding .....	55
In-call Options.....	56
Set Up Speed Dialing.....	58
Call Logs.....	58
Save a Phone Number.....	60
Find a Phone Number.....	61
Voice Dialer .....	61
Text-to-Speech .....	62
Settings.....	64
Wireless & Networks Settings .....	64
Wi-Fi Settings .....	64
Bluetooth Settings.....	65
Data Usage.....	65
Airplane Mode .....	65
Wi-Fi Direct.....	66
Portable Wi-Fi Hotspot.....	66
Bluetooth Tethering .....	66
NFC Settings .....	66
Android Beam.....	67
VPN Settings .....	67
Mobile Networks Settings .....	67
Call Settings .....	67
Quick Messages .....	68
North American Dialing .....	68

International Dialing .....	68
TTY mode.....	68
Proximity Sensor .....	69
Noise Reduction .....	69
Voicemail Settings .....	70
Save Unknown Numbers .....	70
Roaming Settings .....	70
Set Roam Mode.....	71
Roaming Guard .....	71
Data Roam Guard.....	72
Device Settings.....	72
Sound Settings .....	73
Ringtone & Notifications.....	74
Touch Feedback & System.....	75
Display Settings.....	76
Home screen .....	78
Lock screen .....	79
Gestures.....	82
Storage.....	83
Power saver.....	84
Apps Settings .....	84
Personal Settings.....	85
Accounts & sync .....	85
Location services .....	86
Security .....	86
Language & Input Settings.....	87
Backup & reset .....	89
System Settings.....	89
Date & time.....	90
Accessibility .....	90
Connectivity .....	90
Developer Options .....	91
Activate This Device .....	92

System Updates .....	92
Phone Identity.....	93
Contacts.....	94
Get Started With Contacts .....	94
Add a Contact.....	95
Add a Contact to Your Favorites .....	96
Edit a Contacts Entry .....	96
Communicate with Your Contacts.....	100
Import, Export, and Share Contacts .....	101
Import contacts from your microSD card.....	101
Export contacts to your microSD card.....	102
Share a contact .....	102
Accounts and Messaging .....	103
Gmail .....	103
Create a Google Account.....	103
Sign into Your Google Account.....	104
Access Gmail.....	104
Send a Gmail Message .....	106
Read and Reply to Gmail Messages.....	107
Change Gmail Settings.....	109
Email .....	110
Add an Email Account (POP3 or IMAP) .....	111
Corporate Email (Outlook) .....	112
Open Email.....	113
Create and Send Email.....	114
Reply to or Delete an Email Message.....	114
Configure and Sync Corporate Email Settings.....	115
Text and Multimedia Messaging.....	116
Compose Text Messages .....	117
Send a Multimedia Message (MMS) .....	117
Save and Resume a Draft Message .....	118
Managing Message Conversations.....	119
Delete Messages.....	120

Text and Multimedia Message Options .....	121
Synchronize Accounts .....	123
Synchronize Your Google Account .....	123
Synchronize Your Corporate Account .....	124
Apps and Entertainment.....	125
Play Store™ .....	125
Sprint ID.....	126
Sprint Applications .....	128
Sprint Zone.....	129
NASCAR Sprint Cup Mobile .....	129
NBA Game Time .....	130
Sprint TV & Movies .....	131
Music .....	131
Back Up Your Downloaded Music Files .....	132
Sprint Music Plus.....	133
YouTube™ .....	133
GPS Navigation .....	134
Google Maps™.....	134
Scout™ by Telenav .....	137
Google Navigation .....	137
Web and Data.....	139
Connect Wi-Fi.....	139
Wi-Fi Direct.....	141
Data Services .....	141
Your User Name.....	142
Launch a Web Connection.....	142
Data Connection Status and Indicators.....	142
Virtual Private Networks (VPN) .....	143
Prepare Your Phone for VPN Connection.....	143
Set Up Secure Credential Storage.....	143
Add a VPN Connection .....	143
Connect to or Disconnect From a VPN .....	144
Browser .....	144



Learn to Navigate the Browser .....	145
Go to a Specific Website.....	146
Browser Menu .....	146
Adjust Browser Settings.....	147
Create Website Settings .....	147
Create Bookmarks .....	148
Tethering and Portable Hotspot .....	149
Camera and Video .....	151
Take Pictures.....	151
Camera Settings.....	152
View Your Pictures .....	153
Gallery Options.....	153
Assign Pictures.....	154
Record Videos .....	155
Video Settings .....	155
Video Gallery Options.....	156
Video Wiz .....	157
Tools and Calendar.....	159
QuickMemo™ .....	159
FileShare .....	161
SmartShare .....	161
Calendar .....	163
View Event Details.....	165
Create an Event.....	166
Edit or Delete an Event.....	166
Set an Event Reminder.....	167
Respond to an Event Reminder.....	167
Display and Synchronize Calendars .....	168
Change Calendar Settings.....	168
Folders.....	169
Alarm/Clock .....	169
Calculator .....	172
Bluetooth .....	172

Turn Bluetooth On and Off.....	173
Bluetooth Settings Menu.....	173
Pairing Bluetooth Phones .....	174
Send Items via Bluetooth.....	175
Disconnect Bluetooth Connection During an Active Call .....	176
microSD Card .....	176
Remove the microSD Card .....	177
Insert the microSD Card .....	177
microSD Icon Indicators.....	177
microSD Adapter .....	178
View Memory in the microSD Card .....	178
Format the microSD Card .....	178
Connect Your Phone to Your Computer.....	179
Update Your Phone .....	180
Index.....	182

# Get Started

This section gives you all the information you need to set up your phone and Sprint service for the first time.

[Your Phone at a Glance](#)

[Set Up Your Phone](#)

[Activate Your Phone](#)

 
[Make Your First Call](#)

[Set Up Your Voicemail](#)

[Sprint Account Information and Help](#)

## Your Phone at a Glance

The following illustration outlines your phone's primary external features and buttons.

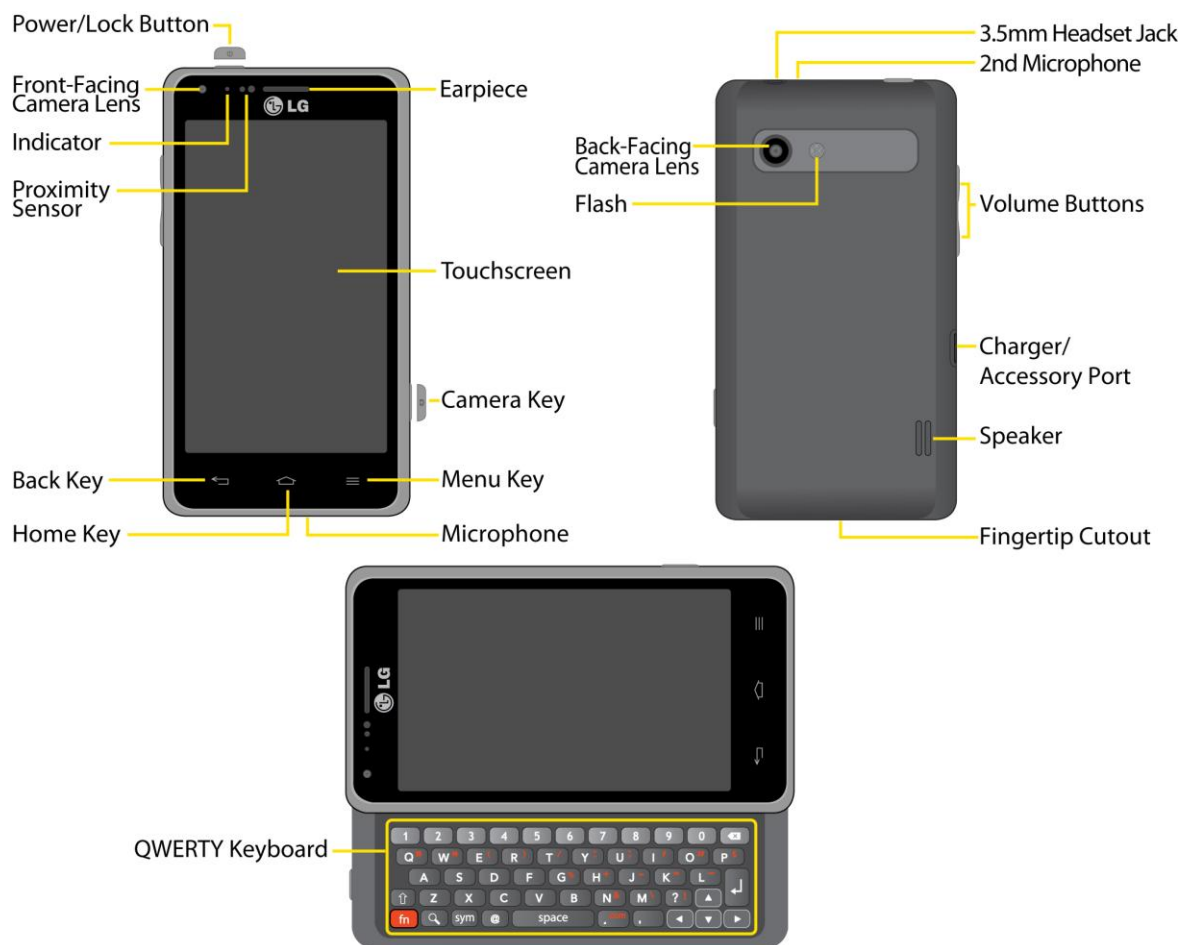

## Set Up Your Phone

You must first install and charge the battery to begin setting up your phone.

1. Install the battery.
  - Remove the battery from its packaging.
  - Insert the battery into the opening in the back of the phone, making sure the connectors align (see step 1 in the following illustration). Gently press down to secure the battery (see step 2 in the following illustration).
  - Position the back cover over the battery compartment and press down until you hear a click (see step 3 in the following illustration). Press and hold the Power/Lock Button located at the top left to turn the phone on.



## Activate Your Phone

Follow the instructions below to activate your phone if it has not already been activated. Depending on your account or how and where you purchased your phone, it may be ready to use or you may need to activate it on your Sprint account.

- If you purchased your phone at a Sprint Store, it is probably activated and ready to use.
- If you received your phone in the mail and it is for a new Sprint account or a new line of service, it is designed to activate automatically.
- When you turn the phone on for the first time, you should see a **Hands Free Activation** screen, which may be followed by a **PRL Update** screen and a **Firmware Update** screen. Follow the onscreen instructions to continue.
- If you received your phone in the mail and you are activating a new phone for an existing number on your account (you're swapping phones), you can activate on your computer online or directly on your phone.
  - **Activate on your computer:**
    - Go to [sprint.com/activate](http://sprint.com/activate) and complete the online instructions to activate your phone.






- **Activate on your phone:**
  - Turn on your new phone. (Make sure the old one is turned off.) Your phone will automatically attempt Hands-Free Activation.
  - Touch **Activate** to override auto-activation and start the manual activation wizard.
  - Follow the on-screen prompts to complete the activation process.
- To confirm activation, make a phone call. If your phone is still not activated or you do not have access to the Internet, contact Sprint Customer Service at **1-888-211-4727** for assistance.

**Tip:** Do not press the Power/Lock Button  while the phone is being activated. Pressing Power/Lock Button  cancels the activation process.

**Note:** If you are having difficulty with activation, contact Sprint Customer Service by dialing **1-888-211-4727** from any other phone.

## Make Your First Call





Once your phone is activated, you can make phone calls.

1. Tap  > . (Tap the **Dial** tab, if the screen is not already on the dial screen.)
2. Use the dialpad to enter a phone number.
  - If you enter a wrong number, tap  to erase digits one by one.
  - To erase the entire number, touch and hold .
3. Tap  to dial the number.

**Note:** Your phone's battery should have enough charge for your phone to turn on and find a signal, set up your voicemail, and make a call. You should fully charge your battery as soon as possible.

## Set Up Your Voicemail

Your phone automatically transfers all unanswered calls to your voicemail, even if your phone is in use or turned off. You should set up your Sprint voicemail and personal greeting as soon as your phone is activated. Always use a password to protect against unauthorized access.

1. Tap  > .
2. Touch and hold  .
3. Follow the system prompts to:

- Create your password.
- Record your name announcement.
- Record your greeting.

**Note:** Sprint strongly recommends that you create a password when setting up your voicemail to protect against unauthorized access. Without a password, anyone who has access to your phone is able to access your voicemail messages.

## *Sprint Account Information and Help*

Find out about account passwords and information about managing your account and finding help.

[Sprint Account Passwords](#)

[Manage Your Account](#)

[Sprint Support Services](#)

### *Sprint Account Passwords*

As a Sprint customer, you enjoy unlimited access to your personal account information, your voicemail account, and your data services account. To ensure that no one else has access to your information, you will need to create passwords to protect your privacy.

#### **Account User Name and Password**

If you are the account owner, you will create an account username and password when you sign on to [www.sprint.com](http://www.sprint.com). (Click **Sign in/Register** to get started.) If you are not the account owner (if someone else receives the bill for your Sprint service), you can get a sub-account password at [www.sprint.com](http://www.sprint.com).

#### **Voicemail Password**

You'll create your voicemail password (or passcode) when you set up your voicemail. See [Set Up Your Voicemail](#) for more information on your voicemail password.

#### **Data Services Password**

With your Sprint phone, you may elect to set up an optional data services password to control access and authorize Premium Service purchases.

For more information, or to change your passwords, sign on to [www.sprint.com](http://www.sprint.com) or call Sprint Customer Service at **1-888-211-4727**.










### *Manage Your Account*

Manage your Sprint account from your computer, your Sprint phone, or any other phone.

## Online: [sprint.com](https://www.sprint.com)

- Access your account information.
- Check your minutes used (depending on your Sprint service plan).
- View and pay your bill.
- Enroll in Sprint online billing and automatic payment.
- Purchase accessories.
- Shop for the latest Sprint phones.
- View available Sprint service plans and options.
- Learn more about data services and other products like games, ringers, screensavers, and more.

## From Your Sprint Phone

- From the dial screen, tap    to access a summary of your Sprint service plan or get answers to other questions.
- From the dial screen, tap    to make a payment.
- From the dial screen, tap    to check minute usage and account balance.

## From Any Other Phone

- Sprint Customer Service: **1-888-211-4727**.
- Business Customer Service: **1-888-788-4727**.


## *Sprint Support Services*

Sprint 411 and Sprint Operator Services let you easily access information and calling assistance from your Sprint phone.

### Sprint 411

Sprint 411 gives you access to a variety of services and information, including residential, business, and government listings; movie listings or showtimes; driving directions, restaurant reservations, and major local event information. You can get up to three pieces of information per call, and the operator can automatically connect your call at no additional charge.

There is a per-call charge to use Sprint 411, and you will be billed for airtime.

- ▶ From the dial screen, tap    .

## Sprint Operator Services

Sprint Operator Services provides assistance when you place collect calls or when you place calls billed to a local telephone calling card or third party.

- ▶ From the dial screen, tap  .

For more information or to see the latest in products and services, visit us online at [sprint.com](https://www.sprint.com).



# Phone Basics

---

Your phone is packed with features that simplify your life and expand your ability to stay connected to the people and information that are important to you. The topics in this section will introduce the basic functions and features of your phone.

[Your Phone Overview](#)

[Status Bar](#)

[Turn Your Phone On and Off](#)

[Battery and Charger](#)



[Phone Function Keys](#)

[Touchscreen Navigation](#)

[Your Home Screen](#)

[Enter Text](#)

[Search Your Phone and the Web](#)




**Tip:** **Phone Software Upgrades** – Updates to your phone’s software may become available from time to time. Sprint will automatically upload critical updates to your phone. You can also use the menu to check for and download updates. Tap  >  > **System settings** > **System updates**.

# Your Phone Overview

The illustrations and descriptions below outline your phone's basic layout.



## Front View

 
1. **Power/Lock Button** locks the screen. Press and hold to open the phone options menu for the following options: **Power off**, **Power off and restart**, and **Airplane mode**. You can also quickly switch to Silent mode , Vibration mode  or Sound mode .
2. **Front-Facing Camera Lens** allows you to take pictures and video of yourself. Also lets you participate in video chats.
3. **Earpiece** lets you hear the caller and automated prompts.
4. **Proximity Sensor** senses proximity towards other objects (such as your head) so that touch commands are not accidentally activated during a call.

**Note:** Please be careful not to cover the sensors with a protective film, pouch, or a protective case not authorized by LG.

5. **Status Light** indicates incoming calls, new messages, or other events by blinking. It is red while charging and turns green when charging is completed.
6. **Touchscreen** displays all the information needed to operate your phone, such as the applications, call status, the Contacts list, the date and time, and the signal and battery strength.
7. **Back Key** returns to the previous screen. It also closes pop-up display items such as menus and dialog boxes.

8. **Home Key** returns to the Home screen. If you're already viewing one of extension panes, it opens the central Home screen. Touch and hold to display recently used applications.
9. **Menu Key** allows you to access your phone's main functions menu from the Home screen: **Theme**, **Home screen settings**, **Lock screen settings**, **App settings**, **System settings**. While using an application, tap to open a list of available options.
10. **Microphone** allows other callers to hear you clearly when you are speaking to them.
11. **QWERTY Keyboard** allows you to enter text easily and comfortably using your thumbs.

## Rear View

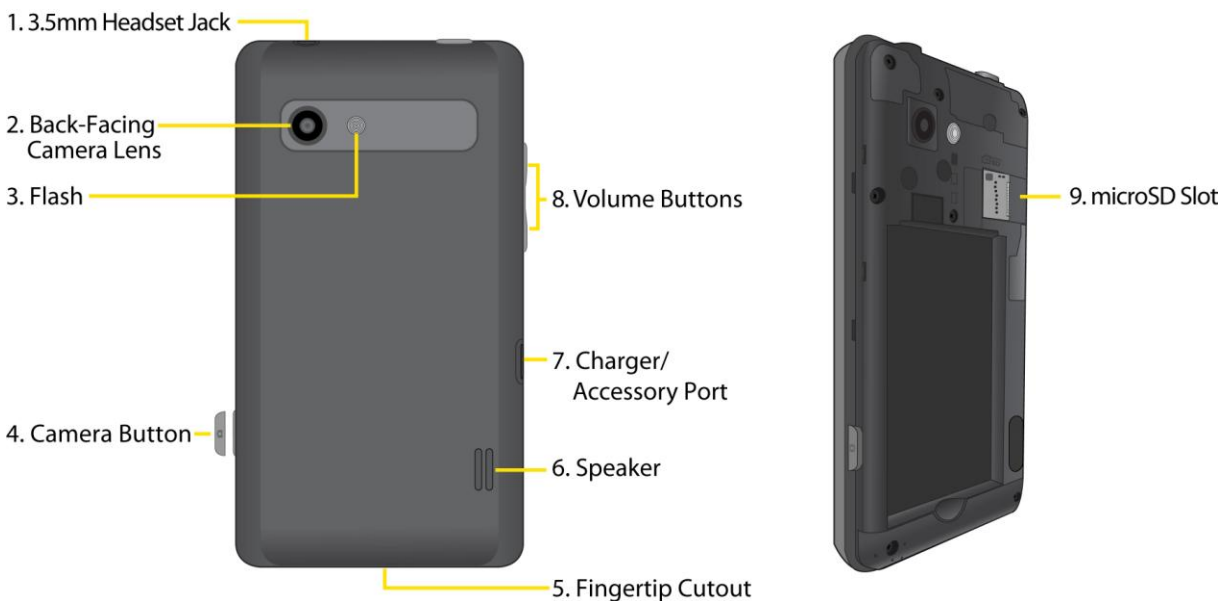


1. **3.5mm Headset Jack** allows you to plug in a headset for convenient, hands-free conversations.  
**CAUTION!** Inserting an accessory into the incorrect jack may damage the phone.
2. **Back-Facing Camera Lens** lets you take pictures and record videos.
3. **Flash** helps you take pictures and video in dim lighting.
4. **Camera Button** press and hold to access the camera and camcorder to take pictures and videos.
5. **Fingertip Cutout** allows you to easily remove the phone's back cover.
6. **Speaker** lets you hear the different ringers and sounds. The speaker also lets you hear the caller's voice in speakerphone mode.
7. **Charger/Accessory Port** allows you to connect the phone charger or a USB cable.  
**CAUTION!** Inserting an accessory into the incorrect jack may damage the phone.

8. **Volume Buttons** allow you to adjust the ringer and media volumes, or to adjust the in-call volume during a call.
9. **microSD Slot** accommodates the pre-installed microSD™ card (expandable up to 32GB).













## Status Bar





 
 

 



The Status Bar appears at the top of the screen. It displays icons indicating that you've received notifications (on the left) and icons indicating the phone's status (on the right), along with the current time. To view notification alerts, touch the Status Bar and drag it down.

If you have more notifications than can fit in the Status Bar, the  icon prompts you to open the Status Bar to view them all. (See [Notifications Panel](#).)

### Status Icons











Icon	Description
	<b>Signal Strength</b> – Shows your current signal strength (the more bars there are, the stronger the signal is).
	<b>No Service</b> – Your phone cannot find a usable signal.
	<b>4G Connected</b> – Indicates that 4G data service is available.
	<b>4G In Use</b> – Indicates that 4G data service is in use.
	<b>3G/1x Connected</b> – Indicates that 3G/1x data service is available.
	<b>3G/1x In Use</b> – Indicates that 3G/1x data service is in use.
	<b>Wi-Fi Connected</b> – Indicates that Wi-Fi is in use.
	<b>Bluetooth On</b> – Indicates that Bluetooth is on.
	<b>Bluetooth Connected</b> – Indicates that the phone is connected to a Bluetooth phone.
	<b>GPS On</b> – Indicates that GPS is on.
	<b>GPS Communicating</b> – Indicates that the phone is receiving location data from GPS.
	<b>Roaming</b> – Your phone is “roaming” off the Nationwide Sprint Network.



Icon	Description
	<b>Airplane Mode</b> – Indicates that the phone is in Airplane Mode.
	<b>Speakerphone On</b> – Indicates that Speakerphone is on.
	<b>Vibrate Mode</b> – Indicates that the ringer volume is set to vibrate and any sounds are silenced.
	<b>Ringer Silenced</b> – Indicates that all sounds are turned off.
	<b>Very Low Battery</b> – Indicates that battery is very low.
	<b>Low Battery</b> – Indicates that battery is low.
	<b>Battery Drained (40%)</b> – Indicates that battery is partially drained.
	<b>Battery Full</b> – Shows your current battery charge level. (Icon shown is fully charged.)
	<b>Battery Charging</b> – Indicates that battery is charging.
	<b>Unknown Battery</b> – Indicates that an unknown battery is inserted.
	<b>Alarm Clock</b> – Indicates that an alarm is set.

## Notification Icons



Icon	Description
	<b>New Gmail Message</b> – Indicates a new Gmail message.
	<b>New Email</b> – Indicates a new Email message.
	<b>New Text or Multimedia Message</b> – Indicates you have received a new text or multimedia message.
	<b>Problem With Text Or Multimedia Message Delivery</b> – Indicates a text or multimedia message is undeliverable.
	<b>Urgent Text or Multimedia Message</b> - Indicates you have received an urgent text or multimedia message.
	<b>New Google Talk Message</b> – Indicates you have received a new Google Talk message.
	<b>New Voicemail</b> – Indicates you have received a new voicemail message.
	<b>Upcoming Event</b> – Alerts you about an upcoming event.

Icon	Description
	<b>Data Is Syncing</b> – Application sync is active and synchronization is in progress for Gmail, Calendar, and Contacts.
	<b>Problem With Sign-In Or Sync</b> – There has been an issue with your connection to the Google server, or you were not properly signed into your account. In order to use Google application or sync features, you must set up and sign into an active Google Account.
	<b>Full microSD Card</b> – Indicates that the microSD card is full.
	<b>Wi-Fi Networks Available</b> – Indicates that open or secured Wi-Fi networks are available.
	<b>Wi-Fi Direct</b> – Indicates that Wi-Fi Direct is turned on.
	<b>USB Connected</b> – The phone has detected an active USB connection.
	<b>USB Debugging Connected</b> – The phone has detected an active USB connection and is in a USB Debugging mode.
	<b>More Notifications Not Displayed</b> – Indicates that there are more notifications which are not displayed in the Status Bar.
	<b>Call In Progress</b> – Indicates that a call is in progress.
	<b>Call In Progress Using Bluetooth Headset</b> – Indicates that a call is in progress using the Bluetooth headset.
	<b>Call Being Forwarded</b> – Indicates that a call is being forwarded.
	<b>Call On Hold</b> – Indicates that a call is on hold.
	<b>Missed Call</b> – Indicates that you have missed calls.
	<b>Uploading Data</b> – Indicates that your phone is uploading data.
	<b>Downloading Data</b> – Indicates that your phone is downloading data.
	<b>Download Finished</b> – Indicates that a download is complete.
	<b>Connected To VPN</b> – Indicates that the phone is connected to a Virtual Private Network.
	<b>Disconnected From VPN</b> – Indicates that the phone is disconnected from the Virtual Private Network.
	<b>Song Is Playing</b> – Indicates that a song is currently playing.
	<b>Carrier data</b> – Data use threshold approaching or exceeded.
	<b>TTY</b> – Indicates that your phone is operating in TTY mode.

Icon	Description
	<b>Tethering and Hotspot Active</b> - Indicates that both USB tethering and Portable Wi-Fi hotspot are active.
	<b>Portable Wi-Fi hotspot Active</b> - Indicates that Portable Wi-Fi hotspot is active.

## Turn Your Phone On and Off

Turn your phone on and off and wake-up the screen by using the Power/Lock Button .

### Turn Your Phone On

- ▶ Press and hold the Power/Lock Button .

Once your phone is on, it may display “Searching for Service.” When your phone finds a signal, it enters standby mode – the phone’s idle state. At this point, you are ready to begin making and receiving calls.

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. When a signal is found, your phone automatically returns to standby mode.

In Power Save mode, your phone searches for a signal periodically without your intervention. You can also initiate a search for Sprint service by pressing any key (when your phone is turned on).

**Tip:** The Power Save feature conserves your battery power when you are in an area where there is no signal.


### Turn Your Phone Off

1. Press and hold the Power/Lock Button  for two seconds until you see the Phone options on the display screen.
2. Tap **Power off** and then tap **OK** to power off the phone.

Your screen remains blank while your phone is off (unless the battery is charging).

### Wake Up the Screen

If you don’t use the phone for a while, the screen and backlight will shut off to conserve battery power.

1. Press the Power/Lock Button . Your lock screen will appear. See [Lock screen](#).
2. Swipe the screen to any direction to unlock it. The last screen you were working on opens. (This is the default lock screen.)

## Lock and Unlock Your Phone

You can prevent accidental screen touches from activating phone functions by locking your phone.

 
### Lock Your Phone

When your phone is locked, you can only receive incoming calls or make calls to 911.

- ▶ Press the Power/Lock Button .

### Unlock Your Phone

1. Press the Power/Lock Button  to wake up the phone. (See above).
2. Swipe the screen to any direction to unlock it.

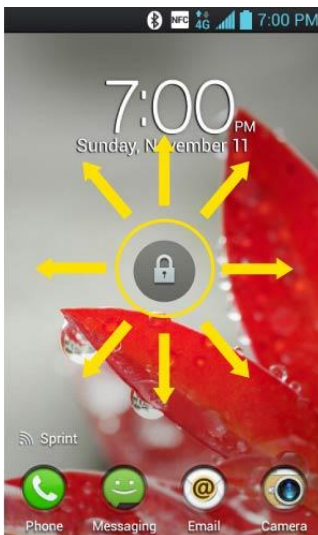

**Note:** The default Lock screen simply locks the screen to prevent unintentional actions. For more security to guard against unauthorized use, you can set an unlock requirement (such as a pattern, PIN or password that will need to be entered to unlock it).

## Battery and Charger

Sprint-approved or LG-approved batteries and accessories can be found at Sprint Stores or through LG, or call 1-866-866-7509 to order. They're also available at [www.sprint.com](http://www.sprint.com).

**WARNING:** Use only Sprint-approved or LG-approved batteries and chargers with your phone. The failure to use a Sprint-approved or LG-approved battery and charger may increase the risk that your phone will overheat, catch fire, or explode, resulting in serious bodily injury, death, or property.



## Battery Capacity

Your phone is equipped with a Lithium Ion (Li-Ion) battery. It allows you to recharge your battery before it is fully drained. The battery provides up to 7.0 hours of continuous digital talk time.

When the battery reaches 5% of its capacity, the battery icon blinks. When there are approximately two minutes of talk time left, the phone can sound an audible alert and then turn off.

**Note:** Long backlight settings, searching for service, using vibrate mode, browser use, and other variables may reduce the battery's talk and standby times.

**Tip:** Watch your phone's battery level indicator and charge the battery before it runs out of power.

## Install the Battery

- ▶ See [Set Up Your Phone](#).

## Remove the Battery

1. Make sure the power is turned off so that you don't lose any unsaved items.
2. Lift the back cover using the fingertip cutout located at the bottom of the phone and remove it.
3. Lift the battery using the fingertip cutout and remove it from the phone.

**WARNING:** Do not handle a damaged or leaking Li-Ion battery as you can be burned.

 


## Charge the Battery

Keeping track of your battery's charge is important. If your battery level becomes too low, your phone automatically turns off and you will lose any information you were just working on.

Always use a Sprint-approved or LG-approved desktop charger, travel charger, or vehicle power adapter to charge your battery.

1. Connect the charging adapter and USB cable as shown; the LG logo on the charging adapter should face toward you.

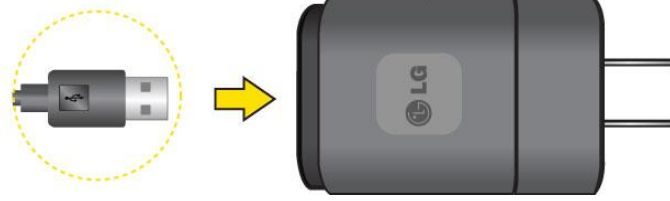

2. Plug one end of the USB cable into the phone's Charger/Accessory Port and the other end into an electrical outlet. The charge time varies depending upon the battery level.

With the Sprint-approved Li-Ion battery, you can recharge the battery before it becomes completely drained.

### Battery Temperature Protection

Though extremely rare, if the battery becomes overheated, the phone will automatically turn off.

### Charge with USB

You can use your computer to charge your phone. To be able to charge with the USB cable, you need to install the necessary USB drivers on your computer first. Connect one end of the USB cable to the Charger/Accessory Port on your phone and connect the other end to a USB port on your computer. It is best to use the rear USB port when connecting to a desktop computer. The USB hub should be powered by an external power source.

**Note:** Low-power USB ports are not supported, such as the USB port on your keyboard or bus-powered USB hub.

The LG USB Driver is downloadable from the following site: <http://www.lg.com/us/> > Select **SUPPORT**. In the Search box next to SEARCH PRODUCT SUPPORT, enter the model name or name and click **SEARCH**. Click the model. On the PRODUCT SUPPORT page, click on **Software Update & Drivers**.

Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.

### Extend Your Battery Life

You can extend your battery's life between charges by turning off features that run in the background. You can also monitor how applications and system resources consume battery power.

- Reduce your Backlight On time. (See [Backlight Time Length](#).)
- Turn Bluetooth off when not in use. (See [Turn Bluetooth On and Off](#).)
- Turn Wi-Fi off when not in use. (See [Turn Wi-Fi On and Connect to a Network](#).)

- Deactivate the GPS when not needed. Most applications using this function will periodically query the GPS satellites for your current location; each query drains your battery. (See [GPS satellites](#).)
- Do not wait until your battery is completely depleted before charging your phone. Repeating this process of a complete discharge and recharge can over time reduce the storage capacity of any battery.
- Turn off Automatic application sync. (See [Synchronize Accounts](#).)
- Use the Power Control Widget to deactivate hardware functions such as Wi-Fi, Bluetooth, GPS, Synchronization, or LCD brightness setting. (See [Add and Remove Widgets on the Home Screen](#).)
- Check the Running Services and close any unnecessary applications.

## Battery Charge Level

Tap  >  > **System settings** > **About phone** > **Battery**.

The battery status (charging or discharging) and level (as a percentage of fully charged) are displayed.

## Monitor and Control Battery Use

The Battery use screen shows which applications consume the most battery power. You can also use it to turn off applications that you've downloaded, if they are consuming too much power.

Tap  >  > **System settings** > **About phone** > **Battery** > **Battery use**.

Tap any of the listed items for more options.

## *Phone Function Keys*

The LG Mach™ comes equipped with three main function keys that can be used on any screen to access added functions.

### Menu Key


### Work with Menus

### Notifications Panel

### Home Key

### Back Key

## Menu Key


The Menu Key activates an available menu function for the current screen or application. When on the Home screen, tap  to view the following options:


- **Theme** allows you to change the theme.
- **Edit home screens** allows you to rearrange the Home screen panels and set the default panel.
- **Home screen settings** provides direct access to the phone's Home screen settings menu. (See [Home screen](#).)
- **Lock screen settings** provides direct access to the phone's lock screen settings menu. (See [Lock screen](#).)
- **App settings** provides direct access to the Applications settings menu. (See [Apps Settings](#).)
- **System settings** provides quick access to the phone's Settings menu. (See [Settings](#).)

## Work with Menus

 
There are two Android menu types, Options menus and Context menus.

### Options menu

Options menus contain tools that apply to the activities of the current screen or application, not to any specific item on the screen. To open the available options menu, tap .


- Not all applications have Options menus; if you tap  on a screen that has no Options menu, nothing will happen.

Some applications have more Options menu items than can fit in the options menu; tap **More** to open the additional items.

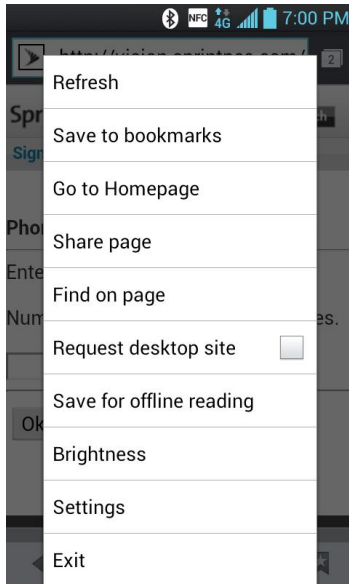


## Context menus

 Context menus contain options that apply to a specific item on the screen. To open a Context menu, touch and hold an item on the screen. Not all items have Context menus. If you touch and hold an item that has no Context menu, nothing will happen.

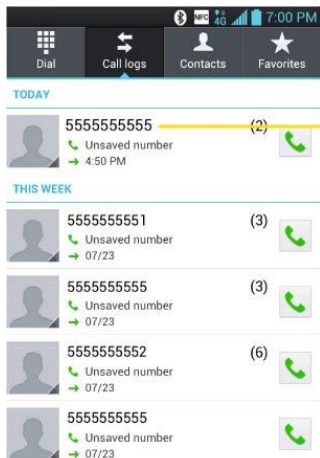

 When you touch and hold certain items on a screen, a Context menu opens.

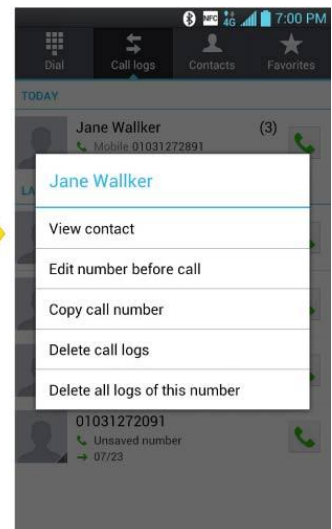

## Select Menu Items

To select a menu or option, simply tap it. If there are more menus/options than can fit in a screen, slide the screen up to display more menus/options.

For example, to set the phone to play tones when dialing numbers on the dial pad:



1. Tap  > .

2. Tap **System settings**.
3. Tap **Sound**.
4. Slide the screen up to display more menus.
5. Tap **Dial pad touch tones** to checkmark it.

For the purposes of this guide, the above steps condense into:

- ▶ Tap  >  > **System settings** > **Sound** > **Dial pad touch tones**.

### Back Up Within a Menu

- ▶ Tap  to back up within a menu.  
  
– or –  
  
▶ Tap  to return to the Home screen.

## Notifications Panel

Notification icons report the arrival of new messages, calendar events, alarms, as well as ongoing events, such as when you are on a call.

When you receive a notification, text appears briefly and the notification icon will be displayed in the Status Bar. For descriptions of the various notification icons, see [Status Bar](#).

You can open the Notifications Panel to view a list of all recent notifications. Depending on your settings, you may hear a notification sound and the phone may vibrate.

**Note:** [Adjusting sound volume and other general notifications settings is described in Sound Settings](#).

Applications whose activities produce notifications, such as Gmail™ and Google Talk, have their own settings, which you can use to configure whether, and how, they send notifications. See the sections on those applications for details.

### Open Notifications

- ▶ Touch and drag the Status Bar to the bottom of the screen.

The Notifications Panel displays the Quick Settings and a list of your current notifications, organized into ongoing and event-based notifications.


### Respond to Notifications

1. Open the Notifications Panel. Your current notifications are listed in the panel, each with a brief description.

2. Tap a notification to view it. The Notifications Panel will close and the application that corresponds to your response will open.


For example, new voicemail notifications dial your voicemail box, and network disconnect notifications open the list of configured networks so you can reconnect.

## Clear Notifications


1. Open the Notifications Panel.
2. Tap  at the top right of the panel.

All event-based notifications will be cleared; ongoing notifications will remain in the list.


## Close Notifications

- ▶ Touch and drag the tab at the bottom of the Notifications Panel to the top of the screen.  
– or –
- ▶ Tap . (The panel will also close when you touch a notification.)

## Home Key

The Home Key takes you back to your main Home screen (of the 7 total available screens). Tap  to access your main Home screen.

## Back Key

The Back Key returns you to the previously active screen. If the on-screen keyboard is currently open, the Back Key  closes the keyboard.

 
## Touchscreen Navigation

The LG Mach™ is a touch-sensitive phone which allows you to select an on-screen option with a single touch and to easily scroll through long lists. Simply slide up and down through the display with your fingertip.

Your touchscreen provides an excellent way to interact with and use your Android phone. With the touch of your finger, you can access available applications, make menu selections, and access data saved to your phone. The following terms are used for describing the different available actions using the touchscreen:

- **Tap:** A single finger tap selects items, links, shortcuts and letters on the on-screen keyboard.


- **Touch and hold:** Touch and hold an item on the screen by touching it and not lifting your finger until an action occurs. For example, to open a contact's available options, touch and hold the contact in the Contacts list until the context menu opens.
- **Drag:** Touch and hold an item for a moment and then, without lifting your finger, move your finger on the screen until you reach the target position. You can drag items on the Home screen to reposition them, as described in [Change the Phone's Wallpaper](#), or drag the Notifications Panel open, as described in [Notifications Panel](#).
- **Swipe or slide:** To swipe or slide, quickly move your finger across the surface of the screen, without pausing when you first touch it (so you don't drag an item instead). For example, you can slide the screen up or down to scroll through a list, or browse through the different Home screens by swiping from left to right (and vice versa).
- **Double-tap:** Double-tap to zoom on a web page or a map. For example, quickly double-tap a section of a web page to adjust that section to fit the width of the screen. You can also double-tap to zoom in and out when taking a picture (using the Camera), and when using Maps.
- **Pinch-to-Zoom:** Use your index finger and thumb in a pinch or spread motion to zoom in or out when using the Browser, Maps, or browsing pictures.
- **Rotate the screen:** From many applications and menus, the orientation of the screen adjusts to the phone's physical orientation. (See [Change the Screen Orientation](#).)

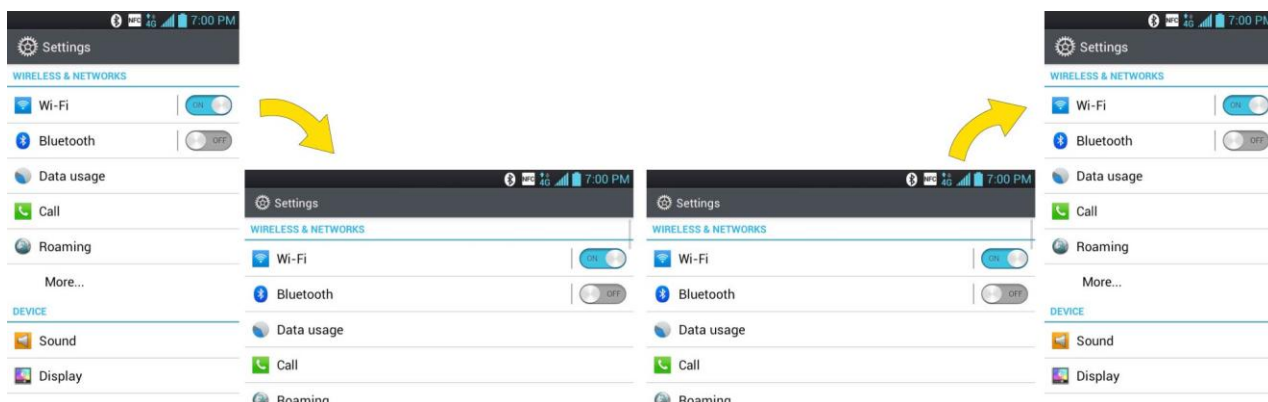

Rotate the device counter-clockwise for landscape orientation.

Rotate the device clockwise for portrait orientation.

## Your Home Screen

The Home screen is the starting point for many applications and functions, and it allows you to add items like application shortcuts, or Google widgets to give you instant access to information and applications. This is the default panel and accessible from any menu by tapping .



Home Screen

Extended Home Screens

Use the Applications Key

Applications: How to View, Open and Switch

Applications

Customize Your Home Screen

Add and Remove Widgets on the Home Screen

Change the Phone's Wallpaper

Customize Applications Icons on Home screen

Access Recently-Used Applications

Home Screen Clean View

Change the Screen Orientation

## Home Screen

On the Home screen, you can view Quick Keys at the bottom of the screen. The Quick Keys and applications icons provide easy, one-tap access to the functions you use the most.



### Status Bar

Shows device status information including the time, signal strength, battery status, and notification icons.

### Applications Icons

Tap an icon (application, folder, etc.) to open and use it.


### Applications Key

Tap to open the Applications screen to view installed applications.

### Phone Key

Tap to open the dial pad. Also provides additional tabs to access Call logs, Contacts, and your Favorites.

 
To return to the Home screen:

- ▶ Tap  at any time, from any application

## Extended Home Screens

The operating system provides multiple Home screens to provide more space for adding icons, widgets, and more.

- ▶ Slide your finger left or right across the Home screen. The main screen is in the center with three extension screens on either side of it. (For more information on sliding, see [Touchscreen Navigation](#).)

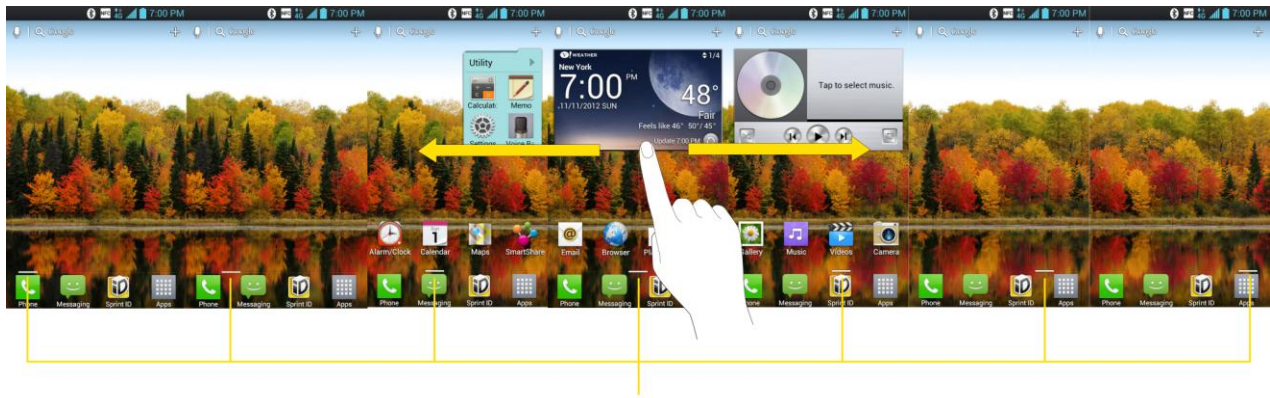




### Location Indicator

The white bar at the bottom of the screen indicates which Home screen you are viewing.

## Use the Applications Key

All of your phone's applications are located within the Applications screen. This key accesses shortcuts to your currently available applications.

**Note:** The Applications screen houses all default and downloaded applications (installed from Play Store).

1. Tap  >  to open the Applications screen.
  - To close the Applications screen, tap .
2. Scroll through the list and tap an icon to launch the associated application.

## Applications: How to View, Open and Switch

All of the applications on your phone, including any applications that you downloaded and installed from Play Store™ or other sources, are grouped together on one Applications screen that you access from your Home screen. If you have more applications than you can currently see on the Applications screen, slide the screen up or down to view more.

The Applications screen contains all of the phone's applications (though not downloaded widgets and other downloaded material that isn't an application), including the Alarm/Clock, Browser, Calculator, Camera, Play Store, YouTube, Voice Search, and much more.



Home screen

Tap an application icon to open the application.

Slide the screen left or right to bring more icons into view.

Tap to open the Applications screen.



Applications screen

## Open the Applications Screen

- ▶ Tap .

## Close the Applications Screen

- ▶ Tap .

**Note:** The Applications screen closes automatically when you tap an icon to open its Application. Dragging an icon onto your Home screen also closes the Applications screen automatically.

## Open and Switch Applications

Multi-tasking is easy with Android™. Opened applications can keep running in the background when you open another application. There's no need to quit an application before opening another. You can easily switch among several open applications. Android manages each application, pausing and starting them as needed to ensure that unused applications don't waste your phone's resources.



To open an application:

- ▶ Simply tap its icon on the screen.

**Tip:** You can customize your Home screen with shortcuts to the applications you use most often. Applications are located on the Applications screen, but you can add an application shortcut to your Home screen for faster access. No matter where the icon is,

on the Applications screen or your Home screen, just touch it to open and use it. See [Add Application Icons to the Home screen](#) for more information.


To open multiple applications:

1. Tap an application icon to open it.
2. Tap .
3. Tap  and tap the icon for the other application you want to open.

– or –

Simply tap the icon if the application you want is already on your Home screen.

To switch between multiple applications:

1. Touch and hold . A list of applications that you've used recently is displayed.
2. Tap the application icon you want to open.



– or –

Tap  to return to the current application.

**Note:** Swipe any application preview to remove it from the recently used apps screen.



## Add Application Icons to the Home Screen

Customize your Home screen with shortcuts to the applications you use most often.














 

 





 
 
1. Tap  > .
2. Touch and hold the application icon you want to add to your Home screen.
3. Lift your finger to place the app on your Home screen, or drag the icon to where you want it on the screen, then lift your finger.

## Applications





The following is a listing of the default applications available on your device.

Icon	Description
	<b>Alarm/Clock</b> – Access the Alarm/Clock application.
	<b>Application Manager</b> – Allows you to uninstall applications.

	<b>Backup</b> – Allows you to perform backup and restore all your user data on the phone into internal memory or on a micro SD card. (Backup data: Prebuilt/Downloaded App, Bookmarks, Calendar, Call log, Contacts, Home screen, Messages, System settings)
	<b>Browser</b> – Launches the Sprint Powerdeck browser.
	<b>Calculator</b> – Launches the Calculator application.
	<b>Calendar</b> – Launches the Calendar application that can sync to either your Google or Outlook® work calendar. Events can only be synched to a managed account.
	<b>Camera</b> – Launches the Camera.
	<b>Car Home</b> – Launches Car Home application.
	<b>Contacts</b> – Displays the Contacts that can be synchronized with your phone from either your Google or Outlook account. Contacts can only be synched to a managed account.
	<b>Downloads</b> – Launches the Downloads application that you can view, reopen, or delete what you've downloaded.
	<b>Email</b> – Provides access your POP3, IMAP, and Exchange Server (Outlook) email accounts. Also provides access to your Gmail account.
	<b>FileShare</b> – Allows you to share multimedia files and documents to other phones via Wi-Fi Direct.
	<b>Finance</b> – Launches the Finance application.
	<b>Gallery</b> – Displays a Gallery of camera images and video saved on your microSD™ card.
	<b>Gmail</b> – Provides access to your Gmail account.
	<b>Google+</b> – Share and keep up with all the different people in your life.
	<b>Latitude</b> – Lets you see your friends' locations and share yours with them. The application also lets you see your friends' locations on a map or in a list.
	<b>Local</b> – Allows you to discover and share places using the location-based service.
	<b>Maps</b> – Launches a dynamic map that helps you find local businesses, locate friends, view maps and get driving directions.
	<b>Memo</b> – Allows you to write a memo.
	<b>Messaging</b> – Provides access to your text and multimedia messages.

	<b>Messenger</b> – Helps you keep in touch with Google+ Messenger.
	<b>Music</b> – Launches the Music Player.
	<b>Navigation</b> – Launches the GPS Navigation feature on your phone, allowing you to get quick turn-by-turn directions.
	<b>News</b> – Launches the News application.
	<b>Phone</b> – Accesses the phone keypad.
	<b>Play Books</b> – Allows you to purchase and download ebooks from Play Store.
	<b>Play Movies</b> – Allows you to rent and view videos.
	<b>Play Music</b> – Launches the Music Player.
	<b>Play Store</b> – Browse, search for, and download applications on the Play Store.
	<b>Polaris Office</b> – Launches the Polaris Office application so that you can view, create, and edit document files on your phone.
	<b>Qualcomm Enhanced Location</b> – Launches the Qualcomm Enhances Location Service application.
	<b>Search</b> – Displays the Quick Search Box to search for a key term both on your phone and the web.
	<b>Settings</b> – Accesses the phone's Settings menu.
	<b>Shopper</b> – Use Google Shopper to find products, scan product barcodes, magazine ads, albums, or book cover art.
	<b>SmartShare</b> – Launches SmartShare application that helps you to easily share and find pictures, music and videos between DLNA certified phones.
	<b>Sprint ID</b> – Accesses the Sprint ID application.
	<b>Sprint Zone</b> – Accesses the Sprint Zone application.
	<b>Talk</b> – Launches the Google Talk application that lets you chat with family and friends over the Internet for free.
	<b>Task Manager</b> – Allows you to view running applications, memory usage of them, and stop running or uninstall applications.
	<b>Video Editor</b> – Launches the Video Editor application.
	<b>Video Wiz</b> – Launches the Video Wiz application so you can create your own video using recorded videos and pictures you've taken.
	<b>Videos</b> – Allows you to view videos.
	<b>Voice Dialer</b> – Launches your phone's automatic speech recognition (ASR) software, called Voice Control, to dial a phone number in our Contacts or to launch phone functions.



	<b>Voice Recorder</b> – Launches your phone’s speech recognition software and initiates a Google search based on the recognized speech.
	<b>Voicemail</b> – Launches Voicemail.
	<b>Weather</b> – Allows you to view weather information.
	<b>YouTube</b> – Launches the YouTube application.

**Note:** The Email application can access both Exchange Server-based email (such as Work email) and other Internet-based email providers such as Yahoo! and Gmail.

## Customize Your Home Screen



You can customize your Home screen when you do the following.

- **Create Shortcuts**
- **Add Widgets**
- **Create Contact shortcuts**
- **Change the Background (Wallpaper)**
- **Customize Applications Icons**

### Create Shortcuts

Shortcuts are different from the Home screen Widgets. Shortcuts can access a specific contact, activate a feature, action, or launch an application.


To add a shortcut from the Applications screen:

1. Tap  to access the Home screen.
2. Select a location (screen) for your new shortcut by scrolling across your available screens until you reach the desired one. (See [Home Screen](#).)
3. Tap  to reveal all your current applications. By default, the applications are listed in a grid view.
4. Scroll through the list and locate your desired application.
5. Touch and hold the on-screen icon. This creates an immediate shortcut of the selected icon and closes the Applications screen. The new shortcut then appears to hover over the Home screen.



**Note:** The same shortcut can be added to any of the available screens (Home or Extended). The application you add to the screen will still appear within the Applications screen.

6. While holding the on-screen icon, position it on the current screen. Once complete, release the screen to lock the shortcut into its new position.

To add a shortcut via the Home screen:

1. Tap  to access the Home screen.
2. Touch and hold on an empty area of the screen.
3. Tap either **Apps**, **Downloads**, **Widgets**, or **Wallpapers**.
4. Touch and hold a selection from the list and drag it to your Home screen.


To delete a shortcut:

1. Tap  to access the Home screen.
2. Touch and hold the desired shortcut. This unlocks it from its location on the current screen.
3. Drag the icon over **Remove**  and release it.


## *Add and Remove Widgets on the Home Screen*

Widgets are self-contained applications that can be accessed through your Applications screen or on the Home or Extended screens. Unlike a shortcut, this Widget appears as an on-screen application.

To add a Widget:

1. Tap  to access the Home screen.
2. Touch and hold on an empty area of the screen.
3. Tap the **Widgets** tab.
4. Touch and hold a Widget and drag it to an empty spot on your current screen.

To remove a Widget:

1. Go to the Home screen on which the widget is located.
2. Touch and hold the widget. This unlocks it from its location on the current screen.
3. Drag the widget over **Remove**  and release it.
  - This action does not delete the Widget. It just removes it from the current screen.



To place a Widget onto a different screen:

1. Touch and hold the widget you want to move.
2. Drag the widget to the edge of the screen (the left side if moving to a screen located on the left, right side if moving to a screen located on the right).
3. After about one second, the current screen will change. Repeat until you get to the desired screen.

## *Change the Phone's Wallpaper*

You can select and assign your phone's background wallpaper.

1. From the Home screen, tap  > **Home screen settings** > **Wallpaper**.


– or –

Touch and hold an empty spot on the Home screen, then tap **Wallpapers**.

2. Tap **Gallery**, **ID wallpapers**, **Live wallpapers**, or **Wallpaper gallery**.
  - **Gallery** to use a picture saved on your phone as a wallpaper. You can crop the picture before setting it as a wallpaper.
  - **ID wallpapers** to open the available wallpapers that were included in your Sprint ID pack.
  - **Live wallpapers** to open a list of animated wallpapers installed on your phone. Live wallpapers can be animated or even interactive. More Live wallpapers are available on Play Store.
  - **Wallpaper gallery** to open a screen of wallpaper images saved on your phone. Slide the thumbnail images left and right to view the available images.
3. Tap **Set wallpaper** or **Save**.

## *Customize Applications Icons on the Home screen*

You can customize each application icons on the Home screen.

1. Touch and hold an application icon until it's unlocked from its current position. Then drop it on the screen. The editing icon  will appear in the upper right corner of the application.



2. Tap the application icon again and select the a desired icon design.


– or –

Tap **Create photo icon** to take a new picture or select a picture from the Gallery.




## *Access Recently-Used Applications*

Your phone keeps a running list of your most recently used applications.

1. Touch and hold  to open the recently-used applications window.
2. Tap an icon to open the related application.

## *Home Screen Clean View*

You can see the wallpaper without items on the Home screen by pinching out. Pinch in or tap  to see applications and widgets again.






## *Change the Screen Orientation*

This phone is capable of changing the orientation of screen content when the orientation of the phone itself has changed. The phone's built-in accelerometer senses movement and changes its angle/orientation. Note that some of the screens, applications and widgets do not support orientation changes.

The automatic screen orientation feature can be manually enabled to change the orientation for all enabled screens when rotation is detected.

**Note:** An example of a screen that automatically re-ori-ents by moving the phone is the Messaging screen. This only requires you turn the phone to a horizontal position.

1. Tap  >  >  **Settings** > **Display**.
2. Tap **Auto-rotate screen** to enable (a blue checkmark displays) or disable the screen auto-rotation.

## *Enter Text*

You can type on your phone using either the slide-out QWERTY keyboard or one of the available touchscreen keyboards.

### [Slide-out QWERTY Keyboard](#)

### [LG Keyboard Types](#)

 
### [Tips for Editing Text](#)




## *Slide-out QWERTY Keyboard*



Open the slide-out QWERTY keyboard to type faster and more conveniently. The slide-out keyboard also comes with special keys that let you quickly access menus and search your phone.

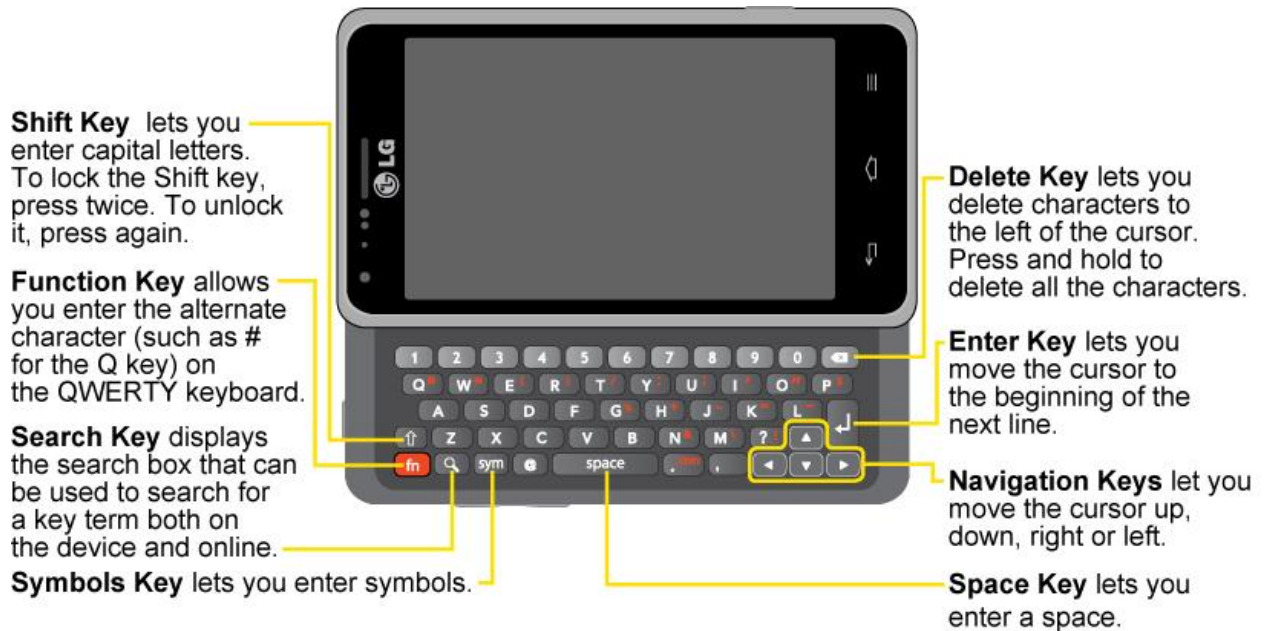1. Hold the phone sideways, with the front touch keys to your right
2. Push the screen panel up with your thumbs to reveal the slide-out keyboard.

**Note:** When the slide-out keyboard is opened, the display stays in landscape mode and you will not be able to use the onscreen keyboard.



3. Start an app or select a field that requires entry of text or numbers.
4. Press the letter keys to enter text. Press the following keys to enter uppercase letters, numbers, special characters, or symbols:
  - Shift Key 
    - Press once to capitalize the next letter you select.
    - Press twice to lock the key and type a series of uppercase letters (this works just like the Caps Lock key on your computer keyboard). The cursor changes when you lock the shift key.
    - To unlock, press the shift key once again.
  - Function Key 
    - Press once to type the orange character shown beside the letter or punctuation keys. For example, if you need to type the dollar sign (\$), press , and then press the **P** key (**FN, P**).
    - Press twice to lock the key and type a series of numbers and characters. The cursor changes when you lock the function key.
    - To unlock, press the function key once again.




- Press and hold vowels, or the C, N, or S keys, to open a pop-up window where you can touch other variations for the letter (e.g., accents, tilda, etc.).
5. Press these keys to perform other actions:
- Search Key 
    - Instead of pressing the SEARCH button, press the search key to open the search box and then type what you want to search. Press the Enter Key  to begin the search.
6. Use the Navigation Keys to the right of the slideout keyboard to move the cursor.

## *LG Keyboard Types*

The touchscreen keyboards let you enter text directly onscreen without opening the phone.

By default, there are 4 types to choose from for the LG Keyboard: **QWERTY keyboard**, **Phone keyboard**, **Handwriting**, and **Shape writer**.

To change the keyboard:

1. On any touchscreen keyboard, touch and hold the Settings key .
2. Tap **Input language & type** > .
3. Tap the desired keyboard and tap  repeatedly to go back to the text entry screen.

## QWERTY keyboard

 
### Letters Entry Keyboard

#### Shift Key

Tap once to capitalize the next letter you type. Tap again to turn on CAPS lock. And tap again to turn off CAPS lock.

#### Numbers and Symbols/ Settings Key

Tap to change input to number and symbol entry.  
Touch and hold to access the LG Keyboard settings.

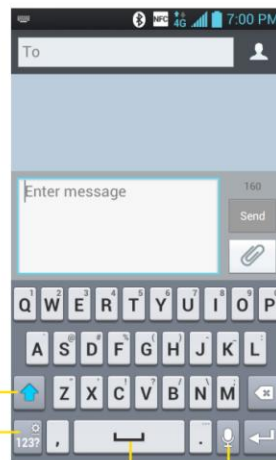

#### Delete Key

Tap to delete characters to the left of the cursor.

#### Enter Key

Tap to move to a new line of text.

#### Voice to Text Key

Tap to enter text by voice.

#### Space Key

Tap to enter space.

 
### Numbers and Symbols Entry Keyboard

#### Alt Key

Tap to access additional symbols until you see the one you want.

#### Numbers and Symbols/ Settings Key

Tap to change input to letters entry.  
Touch and hold to access the LG Keyboard settings.

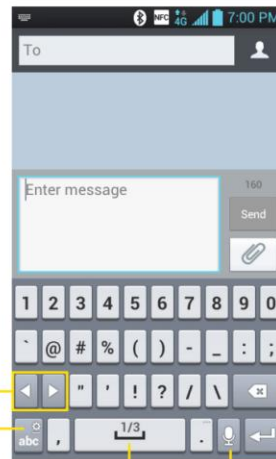

#### Delete Key

Tap to delete characters to the left of the cursor.

#### Enter Key

Tap to move to a new line of text.



#### Voice to Text Key



Tap to enter text by voice.


#### Space Key

Tap to enter space.


1. Tap a text field where you want to enter text.
2. Enter the desired text.

- To enter numbers or symbols, tap .
- To enter letters again, tap .

 
**Note:** If you do not want the screen to change orientations automatically, uncheck the Auto-rotate screen. Tap  >  > **System settings** > **Display** and deselect **Auto-rotate screen**.

3. When you have finished typing, tap  to close the keyboard.

## Phone keyboard

To enter text, tap the key labeled with the desired letter until it appears on the screen. For example, tap  once for "a", twice for "b", or three times for "c".

### Letters Entry Keyboard

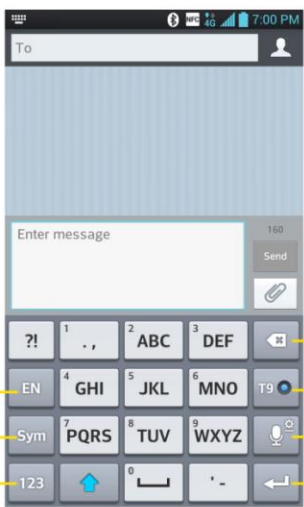

**Language Key**  
Tap to change the keyboard layout language.

**Symbols Key**  
Tap to insert symbols.

**Numbers Key**  
Tap to change input to number entry.


**Delete Key**  
Tap to delete characters to the left of the cursor.

**T9 Key**  
Tap to turn on/off the T9 text entry mode.

**Voice to Text Key**  
Tap to enter text by voice. Touch and hold to change into other keyboard.

**Enter Key**  
Tap to move the cursor to the next line.

### Numbers Entry Keyboard



**Language Key**  
Tap to change the keyboard layout language.

**Symbols Key**  
Tap to insert symbols.

**Letters Key**  
Tap to change input to letter entry.

**Delete Key**  
Tap to delete characters to the left of the cursor.

**Space Key**  
Tap to enter space.

**Voice to Text Key**  
Tap to enter text by voice. Touch and hold to change into other keyboard.

**Enter Key**  
Tap to move the cursor to the next line.



## Handwriting

Write the text with your fingertip. The touchscreen converts your movements into characters.

### Letters Entry Keyboard

#### Numbers Key

Tap to change input to number entry.  
Touch and hold to change into other keyboard.

#### Space Key

Tap to enter space.

#### Delete Key

 
Tap to delete characters to the left of the cursor.

#### Enter Key

Tap to move the cursor to the next line.


#### Voice to Text Key

Tap to enter text by voice.

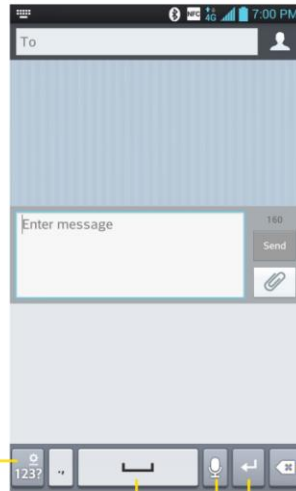

## Shape writer

 This keyboard type is similar to the QWERTY keyboard with the added shape writer feature. The Shape writer feature allows you to draw a line through the letters that spell out the desired word in one quick gesture.

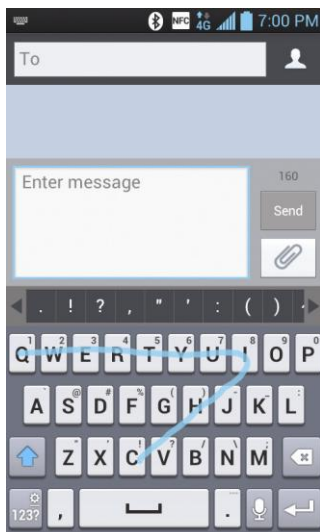



## *Tips for Editing Text*

Your phone gives you many options to make entering text easier, including copying, cutting, and pasting text, using voice-to-text input, customizing the user dictionary, using predictive text, and more.

To cut/copy and paste:

1. Touch and hold a word to highlight it.
2. Drag the blue highlight markers to highlight the text you want.

- or -

To select all the text, tap **Select all** in the context menu.

- To cancel the selection, simply tap unselected text or empty area.
3. Tap **Cut** or **Copy** in the context menu.
  4. Place the cursor on the location where you want to paste the text.
  5. Touch and hold the text field and tap **Paste**. The text that you pasted also remains in the phone's memory (temporarily), so you can paste that same text in another location.

## *Search Your Phone and the Web*

You can search for information on your phone and on the web using the Search application. Some applications, such as Gmail, Contacts, and Browser have the ability to search contents within those specific applications.

You can conduct the search by typing in the search terms or saying what you're looking for. Typing can be useful because the search application can provide suggestions so you don't necessarily have to type out your full request.

 
[Phone and Web Search Using Text Entry](#)

[Phone and Web Search Using Voice Command](#)

### *Phone and Web Search Using Text Entry*

You can search on your phone and on the web by entering text.


1. From the Home screen, tap the Search Widget  (For information on how to add widget, see [Add and Remove Widgets on the Home Screen.](#))

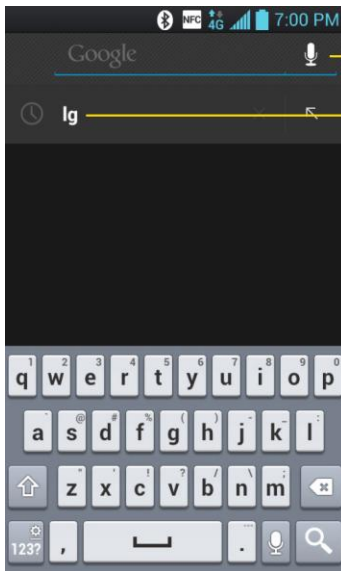

**Voice Search**  
Tap to search by voice.

**Search results**  
Provides a one-tap shortcut to matching search items and past searches.

 2. Enter the text you're searching for in the Quick Search Box.

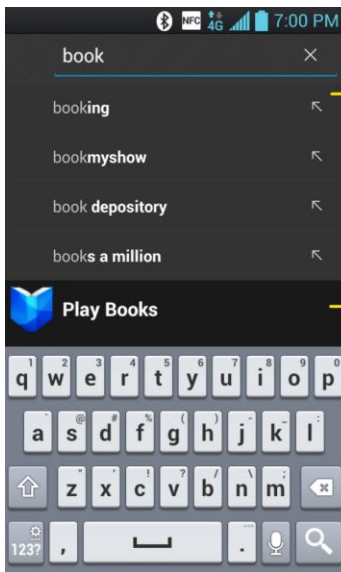

As you type, search results from your device, previous search terms, and Web search suggestions appear. Tap an item to search for that term.

- You can use the Search preferences to configure some aspects of Google web search (for example, whether it makes suggestions below the Quick Search Box as you type), and what phone features you want to include in searches.

To access these settings, tap  > **Settings**.

3. Tap  to search for the entered text.


– or –

If what you want to search for appears in the suggestions list, tap that item to conduct the search.

4. If the phone asks you to select which browser to use, tap your preference. Then, tap **Always** to keep this preference setting.

## *Phone and Web Search Using Voice Command*

You can search on your phone and on the web by voice command.

- ▶ Tap  from the Search Widget.

When you stop speaking, Google Search by Voice analyzes your speech and displays the results of your search.

The available Voice Commands are:

- Say “**Directions to,**” followed by an address, name, business name, type of business, or other destination, to get directions to that location from Google Maps™.
- Say “**Navigate to,**” followed by an address, name, business name, type of business, or other destination to get spoken, turn-by-turn directions to that destination.
- Say “**Map of,**” followed by an address, name, business name, type of business, or other location, to view that location on Google Maps.
- For additional commands, scroll left or right..

For more information on Google Search, tap  > **Help**, from the Google search screen.

# *Phone Calls*

---

With the Sprint National Network and your phone's phone, you can enjoy clear calling across the country.

[Make Phone Calls](#)

[Receive Phone Calls](#)

[Visual Voicemail](#)

[Voicemail\(Traditional\)](#)

[Phone Call Options](#)

[Set Up Speed Dialing](#)

[Call Logs](#)

[Save a Phone Number](#)

[Find a Phone Number](#)

[Voice Dialer](#)

[Text-to-Speech](#)

## *Make Phone Calls*

There are several convenient ways to place calls from your phone.

[Call Using the Phone Dialer](#)

[Dialing Options](#)

[Missed Call Notification](#)

[Call Emergency Numbers](#)

[In-Call Options](#)

[Dial and Save Phone Numbers With Pauses](#)






[Dial From the Contacts List](#)

 
[Use Direct Dialing](#)



[Plus \(+\) Code Dialing](#)

## Call Using the Phone Dialer

The most "traditional" way to place a call is by using the phone's dialer screen.

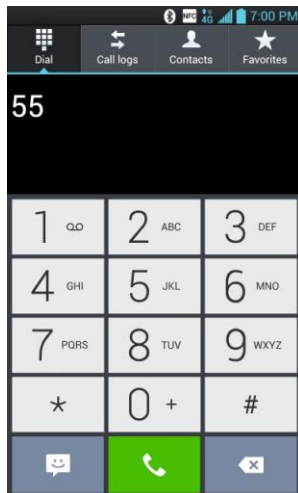1. Tap  > .
2. Enter a phone number using the on-screen dialpad and tap .
  - If you enter a wrong number, tap  to erase digits one by one.
  - To erase the entire number, touch and hold .



- You can open other applications during a call. The  will appear in the Status Bar while the call is underway.
  - Press the Up/Down Volume Buttons to adjust the call volume.
  - Use the on-screen buttons to add another call, mute a call, to use the speakerphone, and for other options, as described in [In-Call Options](#).
3. Tap  to end the call.

**Tip:** To redial your last outgoing call, follow step 1 to access the Dialer, tap the **Call logs** tab, locate the call entry and tap .

You can also make calls from your [Contacts list](#), from the Call log, and using [Voice Command](#).


## Dialing Options


After entering numbers with the dialpad, you can use the following dialing options.

Tap  to view the following options:

- **Add to Contacts:** Tap to add the entered number as a new contact or to an existing contact entry. (See [Save a Phone Number](#).)
- **Speed dials:** Tap to access the speed dials list. (See [Set Up Speed Dialing](#).)
- **Add 2-sec pause:** Enter digits and select this option to introduce a two-second pause before the following sequence of digits is dialed by the phone. (See [Dial and Save Phone Numbers With Pauses](#).)
- **Add wait:** Enter digits and select this option to have the phone dial the preceding set of digits first, and then dial the following sequence of digits when you tap **Yes** on the pop-up screen. (See [Dial and Save Phone Numbers With Pauses](#).)
- **Call settings:** Tap to access the Call settings screen. (See [Call Settings](#).)

## Missed Call Notification

A missed call icon displays when you do not answer a call. When you do not answer an incoming call,  is displayed in the Status Bar.


1. Touch and drag the Status Bar to the bottom of the screen to open the Notification Panel.
2. Tap the missed call notification. The **Call logs** screen will be displayed. To dial the phone number, tap .

## Call Emergency Numbers




You can place calls to 911 even if the phone's screen is locked or your account is restricted.

**Note:** When you place an emergency call, your phone automatically enters Emergency mode.

To call the 911 emergency number when the phone's screen is locked with a screen lock:

1. Unlock the screen. For more information, see [Wake Up the Screen](#).
2. Tap .

To call the 911 emergency number normally or when your account is restricted:

1. Unlock the screen. For more information, see [Wake Up the Screen](#).
2. Tap  > .
3. Tap .

## Enhanced 911 (E911) Information

This phone features an embedded Global Positioning System (GPS) chip necessary for utilizing E911 emergency location services where available. When you place an emergency 911 call, the

GPS feature of your phone seeks information to calculate your approximate location. Depending on several variables, including availability and access to satellite signals, it may take up to 30 seconds or more to determine and report your approximate location.

**Important:** **Always report your location to the 911 operator when placing an emergency call.** Some designated emergency call takers, known as Public Safety Answering Points (PSAPs) may not be equipped to receive GPS location information from your phone.

## *In-Call Options*

Once you initiate a call, you will see these on-screen options.

- **Add call** to initiate a 3-way call.
- **End** to end the call.
- **Dialpad** to display the dialpad.
- **Bluetooth** (Only available when a Bluetooth headset is connected to your phone) to conduct the call via the Bluetooth headset for hands-free conversation. For details about pairing the phone with a Bluetooth headset, see [Pairing Bluetooth Phones](#).

**Note:** When using the Bluetooth headset during a call, the Ongoing Call notification icon is blue in the Status Bar.

- **Mute** to mute the microphone during a call. The Mute button lights up to indicate the microphone is muted. To unmute the microphone, tap **Mute** again.
- **Speaker** to turn the speakerphone on or off. The Speaker button lights up to indicate that the speakerphone is on.

**WARNING:** Because of higher volume levels, do not place the phone near your ear while using the speakerphone.

## *Dial and Save Phone Numbers With Pauses*



You can dial or save phone numbers with pauses for use with automated systems, such as voicemail or credit card billing numbers.

There are two types of pauses available on your phone:

- **2-Second Pause** automatically sends the next set of numbers after two seconds.
- **Hard Pause (Wait)** sends the next set of numbers when you tap **Yes** on the pop-up.

**Note:** You can have multiple pauses in a phone number and combine two-second and hard pauses.

To dial or save phone numbers with pauses:

1. Enter the phone number.
2. Tap  > **Add 2-sec pause** or **Add wait**.
3. Enter the additional numbers.
4. Tap  to dial the number.

– or –

Tap  > **Add to Contacts** to save the number in your Contacts.




**Note:** When dialing a number with a hard pause (Wait), tap **Yes** on the pop-up to send the next set of numbers.


## *Dial From the Contacts List*

You can dial directly from your Contacts list.

1. Tap  >  > **Contacts**.

– or –

Tap  >  >  **Contacts**.

2. Find a contact to call and tap it to open its entry, then tap .

## *Use Direct Dialing*

With Direct Dialing, you are able to directly save a contact to your Home screen.

1. Touch and hold an empty area on a Home screen.
2. Tap the **Widgets** tab.
3. Scroll right and tap **Direct dial**.
4. Tap a contact from your Contacts List. The contact will appear on your Home screen.


To use Direct Dial:

- ▶ Simply tap the contact on the Home screen.

## *Plus (+) Code Dialing*

 
When placing international calls, Plus Code Dialing automatically enters the international access code for your location (for example, 011 for international calls made from the U.S.).





1. In the Dial screen, touch and hold **0 +** until you see a “+” on the display screen.
2. Dial the country code and phone number and then tap . The phone automatically prepends the access code for international dialing, followed by the country code and phone number.

## Receive Phone Calls

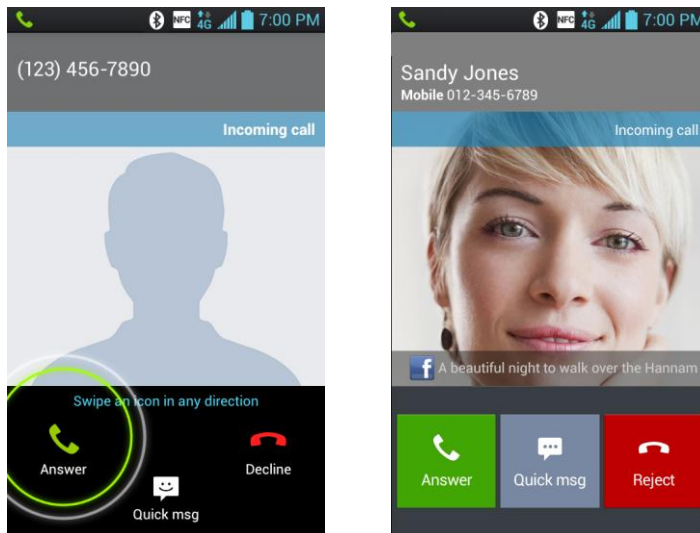When you receive a phone call, the Incoming Call screen opens with the caller ID and any other available information (such as the caller's name, if saved in the Contact's list). The most recent incoming calls are recorded in the Call logs. (See [Call Logs](#).)



### Answer an Incoming Call

- ▶ If the screen is locked, swipe  in any direction.
- ▶ If the screen is unlocked, tap  to answer the call.

If you were already on a call, the first call is placed on hold while you answer the new call. To silence the ringer of an incoming call, press the down Volume Key.

Your phone notifies you of incoming calls in the following ways:

- The phone rings or vibrates.
- The backlight illuminates.
- The screen displays an incoming call message.

### Reject an Incoming Call

- ▶ If the screen is locked, swipe  in any direction.

- ▶ If the screen is unlocked, tap  to decline the call.

The caller is sent directly to your voicemail box to leave a message.

## Answer a Roam Call With Roaming Guard Enabled

Roaming Guard is an option that helps you manage your roaming charges when making or receiving calls while outside the Nationwide Sprint Network. Please see [Roaming Settings](#) for more information about roaming.

- ▶ Tap **Yes** to answer the call. (See [Roaming Guard](#) for additional information.)

**Note:** When your phone is off, calls go directly to voicemail.

## End a Call

- ▶ Tap .

If you opened other applications while on a call:

- ▶ Open the Notifications Panel.
  - Touch and drag the Status Bar to the bottom of the screen.

Tap **Current call** to redisplay the phone application.

- ▶ Tap .

## *Visual Voicemail*

Visual Voicemail gives you a quick and easy way to access your voicemail. Now you can find exactly the message you are looking for without having to listen to every voicemail message first. This new feature periodically goes out to your voicemail, and gathers the caller information from all of the current voicemails. It then populates a list with the caller name and number, along with the length of time and priority level of the voicemail message.

[Set Up Visual Voicemail](#)

[Review Visual Voicemail](#)

[Listen to Multiple Voicemail Messages](#)

[Configure Visual Voicemail Options](#)

[Configure Visual Voicemail Settings](#)




[Change Your Main Greeting via the Voicemail Menu](#)

[Edit the Display Name via the Voicemail Menu](#)

## Set Up Visual Voicemail

Setting up Visual Voicemail follows many of the same procedures as setting up a traditional Sprint voicemail. You should set up your Sprint voicemail and personal greeting as soon as your phone is activated. Your phone automatically transfers all unanswered calls to your voicemail, even if your phone is in use or turned off.

**Note:** To set up your traditional voicemail box, see [Set Up Voicemail](#).







1. Tap  >  >  **Voicemail**.
2. Tap **Personalize now** and follow the system prompts to:
  - Create a password (part of standard voicemail).
  - Record your name announcement.
  - Record your greeting.
3. When prompted to enter information, tap **Dialpad** to bring up the onscreen dialpad to enter your numeric responses.





**Important:** **Voicemail Password** – Sprint strongly recommends that you create a password when setting up your voicemail to protect against unauthorized access. Without a password, anyone who has access to your phone is able to access your voicemail messages.

4. Once you have completed the setup process, return to the voicemail page (see step 1).
5. Tap the **Welcome to Voicemail** message on the screen to play a brief explanation of the voicemail services.

## Review Visual Voicemail

Visual Voicemail lets you easily access and select which messages you want to review.

1. Tap  >  >  **Voicemail**.
2. Tap a message to review it. The following is a description of the features available while reviewing a voicemail message.
  - **Timeline** provides a visual timeline for the current message. Touch and drag this bar to scrub through the message to different points.
    - Tap  to pause the playback, tap  to resume.
    -  **Speaker Off/On** to turn the speakerphone on or off during playback. If the speakerphone feature was enabled within the Voicemail Settings menu, the speakerphone will always be automatically enabled during voicemail playback.

-  **Trash** to move the current voice message to the trash folder.
-  **Call** to call the person who left the voicemail message.
-  **Share** to share the selected message using your favorite services like Email, Text, and direct to Voicemail.
-  **Reply** to reply to the message. You can then reply to the sender or forward it to anyone with either an email or phone number. This allows you to send this voicemail message to several recipients at the same time. You can tag the reply message for both Urgency and Privacy.
  - Touch **Send** to deliver the new message.





### *Listen to Multiple Voicemail Messages*

When you are done listening to a voicemail message you can easily access other voicemail messages without returning to the main voicemail screen.

3. Listen to the current voicemail message.
4. Swipe your finger left or right to display the next or previous message. It will begin playing automatically.

You can navigate through voicemail messages as frequently as you'd like. You can even move to the next or previous message before you're finished listening to the current one.

### *Use Visual Voicemail to Delete Your Messages*





1. Tap  >  >  **Voicemail**.
2. Touch and hold a voicemail entry from the list you want to delete and tap .



– or –

Open a message and tap .

### *Configure Visual Voicemail Options*





Use the Menu button to access and configure your Visual Voicemail options.

3. Tap  >  >  **Voicemail**.
4. From this initial screen, you can:
  - Tap  to compose a new voicemail message.

- Tap **Inbox** to view the voicemail messages in other folder: **Inbox, Trash, SD card**.
- Tap  to search a voicemail message.
- Tap  to configures your voicemail application settings.





## Configure Visual Voicemail Settings

The Visual Voicemail settings menu lets you access settings for notifications, pictures, greetings, and more.

1. Tap  >  >  **Voicemail**.
2. Tap  > **Settings** and select from the following:
  - **Manage subscription** to verify Voicemail-to-Text account information. This may take a minute.
  - **Data consent agreement** to agree or disagree to send speech data to assist with the quality of the Voicemail application.
  - **Auto forward to email** to send a copy of new messages to an email address of your choice.
  - **Personalize voicemail** to change your voicemail greeting for incoming calls and update password.
  - **Notifications** to determine how your are notified of new voicemails. Set the notification sound and vibrate option.
  - **Delete messages** to set Visual Voicemail to permanently delete messages from the Trash folder after a specific number of days.
  - **Display name** to enter a name to identify yourself to people when replying or forwarding messages.
  - **View quick tips tutorial** to view a visual tutorial about Visual Voicemail.
  - **Help** to see the Sprint visual voicemail help.
  - **Send feedback** to send some feedbacks to the Voicemail Feedback team by Gmail or Email.
  - **Check for update** to search for an upgrade to your Visual message software.
  - **About Voicemail** to view build information about the current visual voicemail application.





## Change Your Main Greeting via the Voicemail Menu

Your main greeting can be changed directly via the Visual Voicemail system. This direct access saves you from having to navigate within the voicemail menu.

1. Tap  >  >  **Voicemail**.
2. Tap  > **Settings** > **Personalize voicemail**.
3. Tap **OK** to connect to the Sprint voicemail system. Follow the prompts to change your current greeting.
4. Use Visual Voicemail to Delete Your Messages

## Edit the Display Name via the Voicemail Menu

From your Visual Voicemail menu, you can quickly change the name attached to your voice messages.

1. Tap  >  >  **Voicemail**.
2. Tap  > **Settings** > **Display name**.
3. Tap the text field and enter a new identifying name (used to identify you to recipients of your voice messages).
4. Tap **OK** to save your information.

## Voicemail(Traditional)

In addition to [Visual Voicemail](#), your phone and Sprint service always offer traditional voicemail service accessed through the phone application.




[Set Up Voicemail](#)

[Voicemail Notification](#)

[Retrieve Your Voicemail Messages](#)

## Set Up Voicemail

You should set up your Sprint Voicemail and personal greeting as soon as your phone is activated. Always use a password to protect against unauthorized access. Your phone automatically transfers all unanswered calls to your voicemail, even if your phone is in use or turned off.

1. Tap  > .
2. Touch and hold  to dial your voicemail number.


3. Follow the system prompts to:
  - Create your password.
  - Record your name announcement.
  - Record your greeting.

**Important:** **Voicemail Password** – Sprint strongly recommends that you create a password when setting up your voicemail to protect against unauthorized access. Without a password, anyone who has access to your phone is able to access your voicemail messages.

## *Voicemail Notification*

There are several ways your phone alerts you to a new voicemail message.

- By sounding the assigned ringer type.
- By displaying within the Notifications area of the Status Bar when a single new unheard voicemail message is received.
- By displaying within the Notifications area of the Status Bar when multiple new unheard voicemail messages have been received.




**Note:** When you are roaming off the Nationwide Sprint Network, you may not receive notification of new voicemail messages. Sprint recommends that you periodically check your voicemail by dialing 1 + area code + your wireless phone number. When your voicemail answers, tap  and enter your password. Roaming rates apply when you access voicemail while roaming off the Nationwide Sprint Network.

**Note:** Your phone accepts messages even when it is turned off. However, your phone notifies you of new messages only when it is turned on and you are in a Sprint service area.




## *Retrieve Your Voicemail Messages*

You can review your messages directly from your wireless phone (using either traditional voicemail or Visual Voicemail) or from any other touch-tone phone.

### Use Traditional Voicemail to Access Your Messages


1. Tap  > .
2. Touch and hold . If prompted, enter your voicemail password.
3. Follow the voice prompts to listen to and manage your voicemail messages.

## Use Visual Voicemail to Access Your Messages

1. Tap  >  >  **Voicemail**.
2. Tap an entry to listen to the message.

**Note:** You are charged for airtime minutes when you are accessing your voicemail from your wireless phone.

## Use Another Phone to Access Messages

1. Dial your wireless phone number.
2. When your voicemail answers, tap the asterisk key on the phone (  ).
3. Enter your password.

# Phone Call Options

Your phone application provides many useful features and options to help you make the most of your calling experience.

[Caller ID](#)

[Call Waiting](#)







[3-Way Calling](#)

[Call Forwarding](#)

[In-call Options](#)

## Caller ID

Caller ID allows people to identify a caller before answering the phone by displaying the number of the incoming call. If you do not want your number displayed when you make a call, follow these steps.

1. Tap  >  (Tap the **Dial** tab if necessary).
2. Tap   .
3. Enter a phone number and tap .

To permanently block your number, call Sprint Customer Service.



## Call Waiting




When you're on a call, Call Waiting alerts you of incoming calls by sounding a beep instead of a ring. Your phone's screen informs you that another call is coming in and displays the caller's phone number (if it is available).

To respond to an incoming call while you're on a call:

- ▶ Before accepting the incoming call, tap and drag one of the following on-screen options:
  - **Answer** to answer the new call. The first caller is placed on hold.
  - **Decline** to send the call to your voicemail box.






To switch back to the first caller:

- ▶ From the In-Call options screen, tap **Swap** .

**Tip:** For those calls where you don't want to be interrupted, you can temporarily disable Call Waiting by pressing    before placing your call. Call Waiting is automatically reactivated once you end the call.

## 3-way Calling







With 3-Way Calling, you can talk to two people at the same time. When using this feature, the normal airtime rates will be charged for each of the two calls.

1. Tap  >  (Tap the **Dial** tab if necessary).
2. Make your call to the first recipient.
3. Once you have established the connection, tap **Add call** .
4. Enter the second caller's phone number and tap  or select a number from your Contacts. (Your first call is automatically put on hold.)
5. When you're connected to the second party, tap **Merge calls**  to combine both calls into a single 3-way call. If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all callers are disconnected.








## Call Forwarding

Call Forwarding lets you forward all your incoming calls to another phone number – even when your phone is turned off. You can continue to make calls from your phone when you have activated Call Forwarding.

## Activate Call Forwarding

1. Tap  >  (Tap the **Dial** tab if necessary).
2. Tap   .
3. Enter the area code and phone number to which you want your calls forwarded.
4. Tap . You will hear a tone to confirm the activation of Call Forwarding and the call will end.

 
## Deactivate Call Forwarding

1. Tap  >  (Tap the **Dial** tab if necessary).
2. Tap     . You will hear a tone to confirm the deactivation and the call will end.

**Note:** You are charged a higher rate for calls you have forwarded.

## In-call Options

While you're on a call, you will see a number of onscreen options. Tap an option to select it.

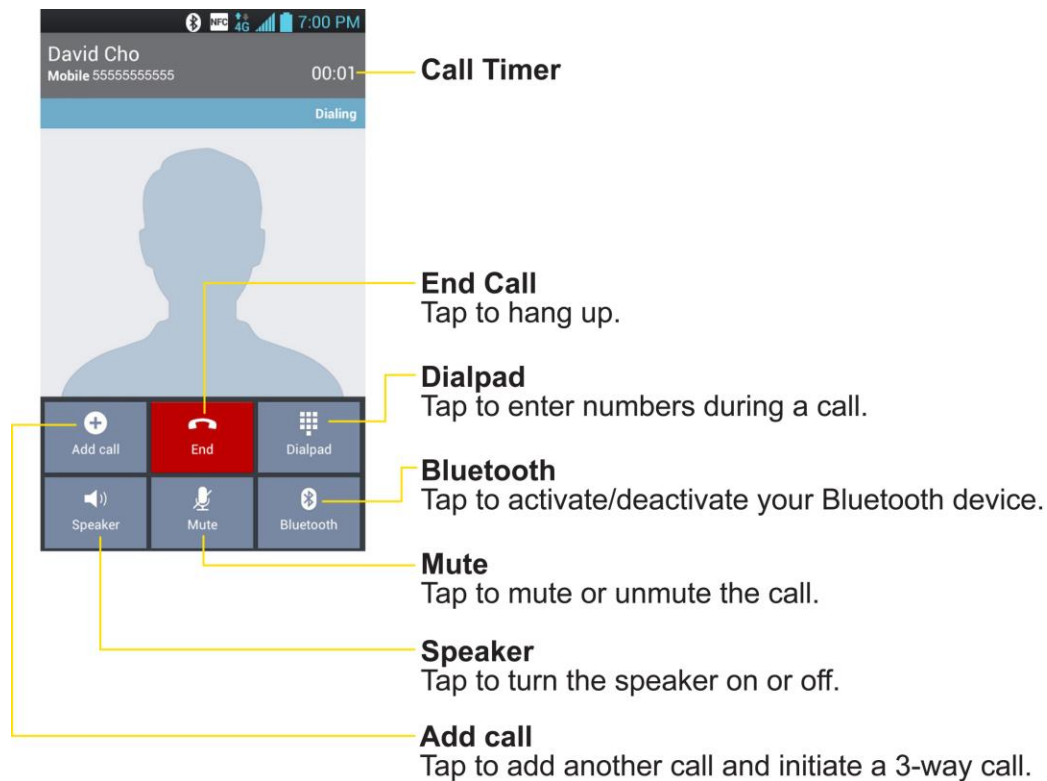


- **Add call** to initiate a 3-way call.

- **End** to end the current call.
- **Dialpad** to display the dialpad to enter additional numbers, for example, an extension or access code.
  - For example: When you call your bank's 800 number, use your dialpad to enter your account number and PIN.
- **Speaker** to route the phone's audio through the speaker (On) or through the earpiece (Off).
  - Activate Speaker to route the phone's audio through the speaker. (You can adjust the speaker volume using the volume buttons.)
  - Deactivate Speaker to use the phone's earpiece.


**Warning:** Because of higher volume levels, do not place the phone near your ear during speakerphone use.

- **Mute** to mute the microphone during an active call. Tap again to unmute the microphone.

**Note:** If Mute is activated, the speaker mode is deactivated.

- **Bluetooth** (Only available when a Bluetooth headset is connected to your phone) to route the phone's audio through a connected Bluetooth headset (On) or through the speaker (Off). For details about pairing the phone with a Bluetooth headset, see [Pairing Bluetooth Phones](#).
  - When the call is routed to a Bluetooth headset, the current call area shows the Bluetooth call icon ()

**Note:** The Headset button is activated to show the current call is routed to the connected Bluetooth headset.

- To route the current call back to the phone, tap **Bluetooth** to temporarily use the phone. Tap it again to route the call back to the connected Bluetooth headset.
- When Bluetooth or the Bluetooth headset is turned off, the call is routed through either the earpiece or speaker and shows ()




Tap  during a call to display a list of additional in-call features. Tap an option to select it.

- **Contacts:** Display your contacts list.
- **Memo:** Create a new memo while remaining on the call.
- **Messaging:** Opens the Messaging screen.

## Set Up Speed Dialing

Your phone can store up to 99 phone numbers in speed dial locations.

To assign a speed dial number to a contact:

1. Tap  >  > **Contacts** tab.
2. Tap  > **Speed dials**.
3. Tap a desired speed dial location number from 2 to 99.
4. Tap the desired contact and phone number to set it as a speed dial.

**Note:** If you assign a number to an already in-use speed dial location, the new phone number will automatically replace the previous speed dial assignment.

## Call Logs

The Call Logs tab of the phone application lists all recent incoming, outgoing, and missed calls. It offers a convenient way to redial a number, return a call, or add a number to your Contacts.

### Open the Call Logs





- ▶ Tap  >  > **Call logs** tab.

Calls are listed in the Call logs tab, the most recent calls are located at the top of the list. Scroll down to see older entries.

 
**Note:** Call logs record only calls that occur while the phone is turned on. If a call is received while your phone is turned off, it will not be included in the call logs. If you return a call from the voicemail menu, it will not be included in your phone's Call logs.

### Call Logs Options

Tap an entry to view the date and time of the call and call duration. The following options are available:

-  to make a call.
-  to send a text message.
-  to add an entry's number to your Contacts (for entries not saved in Contacts).
-  to view the contact entry (for entries saved in Contacts).

If several calls were made to one number or received by one number, the calls are displayed as one entry. When you tap this entry, the individual call logs are opened.

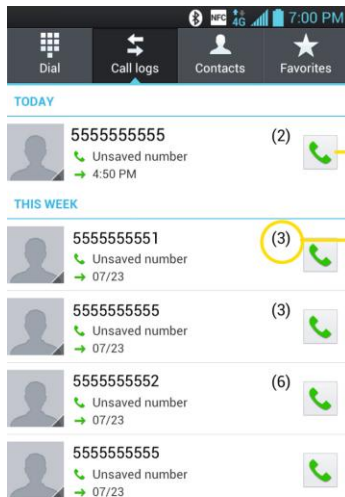

Tap to call back.

The number of calls from the same number

You can also touch and hold the entry to open a menu with more options, to communicate with that contact in other ways.

- **Add to Contacts** (for entries not saved in Contacts) to save the number to Contacts.
- **View contact** (for entries saved in Contacts) to view contact information.
- **Edit number before call** to edit a number before you redial.
- **Copy call number** to copy the call number.
- **Delete call logs** to delete all the call logs.
- **Delete all logs of this number** to delete all the logs of this number only.

## Make a Call From Call Logs

- ▶ From the Call logs, tap  at the right of the entry.

## Save a Number From the Call Logs

1. Touch and hold an entry and tap **Add to Contacts**.
2. Tap **Create new contact**.

– or –


Search for an existing contact name and tap an existing contact to add the new number to that existing contact.

3. Enter as much information as you want. (For more information about creating and editing contacts, see [Get Started with Contacts](#).)

**Note:** You cannot save phone numbers already in your Contacts or from calls identified as **No ID** or **Restricted**.

## Prepend a Number From the Call Logs

If you need to make a call from the Call logs and you are outside your local area code, you can add the appropriate prefix by prepending the number.

1. Touch and hold an entry and tap **Edit number before call**.
2. Tap the area immediately to the left of the phone number and enter the prefix.
3. Tap  to call the number.

– or –

Tap  > **Add to Contacts** > **Create new contact** to save the amended number in your Contacts.

## Clear the Call Logs





1. From the Call logs, tap  > **Delete all**.
2. If you are certain you want to clear the Call logs, tap **OK**.

– or –

Tap **Cancel**.

## Save a Phone Number

You can store phone numbers and contact entries in your phone. You can also synchronize them with your Google™ Account, Microsoft Exchange account, or other accounts that support syncing contacts. (For more information, see [Get Started with Contacts](#).)

1. Tap  > .
2. Enter a phone number and tap **Add to Contacts**  or  > **Add to Contacts**.
3. Tap **Create new contact**.




– or –

Search for an existing contact name and tap an existing contact to add the new number to that existing contact.

For more information about creating and editing contacts, see [Get Started with Contacts](#).

## Find a Phone Number

Your contacts are displayed alphabetically in a list. It is easy to search for a contact by name.

1. Tap  >  > **Contacts** tab.
2. Scroll and search for the contact or start entering the name of the contact you're searching for. As you type, contacts with matching names will appear above the keyboard.
3. Tap a matching contact in the list to open its entry. To dial a number, tap .

## Voice Dialer

You can use your phone's automatic speech recognition (ASR) software, called Voice Dialer, to dial a phone number in your Contacts or to launch phone functions without having to go through the phone menus. All you have to do is to talk into the phone, and ASR will recognize your voice and complete tasks by itself.

**Note:** The Voice Control (Speech-to-Action) feature will not launch if you are currently in an active menu.

### Activate Voice Dialer

- ▶ Tap  >  >  **Voice Dialer**.



The screen displays "Listening" and the phone prompts you to say the name of the command you want to use. To complete your task, simply follow the voice prompts or touch an on-screen option.

Available ASR commands include:

- **Call** <Name> to call an entry in your Contact List. (See [Make a Voice Call With Voice Dialer](#).)
- **Dial** <#> to call a spoken phone number.
- **Redial** to call back the last Contact you dialed.
- **Open** <Menu> to jump directly to menu items or applications. (See [Open Menus With Voice Dialer](#).)




**Tip:** Use Voice Dialer in a quiet environment so it can accurately recognize your commands.

### Make a Voice Call With Voice Dialer

1. Tap  >  >  **Voice Dialer**.




2. When you see “Listening,” say “**Call**” followed by the name and the label for the phone number you wish to call. For example, say “**Call John Smith Mobile.**” The phone dials the number stored for the contact “John Smith” with the label “**Mobile.**”
  - If the location is not recognized or the name does not have a phone number stored in Contacts, your phone will display a list of possible options.
  - If a name has only a single number, or if you know the name but are not sure which number to call, say “**Call**” followed by the name only. For example, say “**Call John.**” If the name is recognized and there is only one phone number for the name, your phone immediately places the call.

### Call a Phone Number with Voice Dialer

1. Tap  >  >  **Voice Dialer.**
2. When you see “Listening,” say “Dial” followed immediately by a phone number; for example, say “Dial 555 555 5555.”
3. Speak naturally and clearly and remember to speak one digit at a time (1-800 should be pronounced “One Eight Zero Zero.”)

### Open Menus With Voice Dialer




The Voice Dialer application allows you to directly open many menu items or applications by saying voice commands.

1. Tap  >  >  **Voice Dialer.**
2. When you see “Listening,” say “**Open**” followed by a menu or application.
3. If a list of valid actions is displayed, tap an action, the phone opens the selected menu.

## *Text-to-Speech*

The text-to-speech feature allows the phone to provide a verbal readout of on-screen data such as messages and incoming caller information (based on Caller ID).

### Text-to-Speech Settings

1. Tap  >  > **System settings > Language & input > Text-to-speech output.**
2. Configure any of the following Text-to-Speech settings:
  - **Preferred Engine:** Choose which text-to-speech engine you prefer to use. Tap  to set various engine settings.



- **Speech rate:** Allows you to adjust the rate at which the displayed text is spoken by the phone. Choose from: **Very slow**, **Slow**, **Normal**, **Fast**, and **Very fast**.
- **Listen to an example:** Plays a short example of what the text-to-speech feature will sound like on your phone when activated.

# Settings

---

This section provides an overview of items you can change using your phone's System settings menus.

[Wireless & Networks Settings](#)

[Call Settings](#)

[Roaming Settings](#)

[Device Settings](#)

[Personal Settings](#)

[System Settings](#)

## *Wireless & Networks Settings*

This group of settings lets you control your phone's Wi-Fi settings, Bluetooth, Tethering, VPN, and Mobile networks.

[Wi-Fi Settings](#)

[Bluetooth Settings](#)

[Data Usage](#)

[Airplane Mode](#)

[Wi-Fi Direct](#)

[Portable Wi-Fi Hotspot](#)

[Bluetooth Tethering](#)

[NFC Settings](#)

[Android Beam](#)

[VPN Settings](#)

[Mobile Networks Settings](#)

## *Wi-Fi Settings*

Your phone lets you take advantage of Wi-Fi hotspots for high-speed data access using available computer networks. For details on your phone's Wi-Fi features and settings, see [Connect Wi-Fi](#).




## Bluetooth Settings

Your phone's Bluetooth capabilities let you use wireless headsets, send and receive pictures and files, and more. For details on your phone's Bluetooth settings, see [Bluetooth Settings Menu](#).

## Data Usage

You can check the current data usage, set to enable/disable mobile data, or set the mobile data limit.

### Turn on or off the Sprint 4G network

1. Tap  >  > **System settings** > **Data usage**.
2. Slide the **Mobile data** switch  to the right to turn on this feature.

– or –

Tap the **Mobile data** switch  to the left to turn off this feature.




## Airplane Mode

Airplane Mode (Flight mode) allows you to use many of your phone's features, such as games, and music, when you are in an airplane or in any other area where making or receiving calls or data is prohibited. When you set your phone to Airplane Mode, it cannot send or receive any calls or access online data.

### Activate Airplane Mode

1. Press and hold the **Power/Lock Button**  to reveal the phone options.
2. Tap **Airplane mode**.



– or –

1. Tap  >  > **System settings** > **More...**
2. Tap **Airplane mode**. (A blue checkmark appears.) While in Airplane Mode, your phone's Status Bar will display .

### Deactivate Airplane Mode

1. Press and hold the **Power/Lock Button**  to reveal the phone options.
2. Tap **Airplane mode**.



– or –

1. Tap  >  > **System settings** > **More...**
2. Tap **Airplane mode** to remove the checkmark.

## *Wi-Fi Direct*

Wi-Fi Direct supports a direct connection between Wi-Fi enabled phones without an access point. Due to the high battery usage of Wi-Fi direct, it is recommended that you plug your phone into a power outlet while using the Wi-Fi Direct feature.

Turn On Wi-Fi Direct

1. Tap  >  > **System settings** > **More...** > **Wi-Fi Direct**.
2. Tap **Wi-Fi Direct** to activate. (A blue checkmark will appear.)



## *Portable Wi-Fi Hotspot*

You can share your phone's data connection with a computer by turning on the USB tethering. You can also share your phone's data connection with up to eight phones at once, by turning your phone into a portable Wi-Fi hotspot. For details on your phone's Tethering & portable hotspot settings, see [Tethering and Portable Hotspot](#).

## *Bluetooth Tethering*

When you do not want to share LG Mach's Internet connection, checkmark this option.



Turn on Bluetooth Tethering

1. Tap  >  > **System settings** > **More...**
2. Tap **Bluetooth tethering** to activate. (A blue checkmark will appear.)

## *NFC Settings*

NFC (Near Field Communication) is a wireless technology that enables data transmission between two objects when they are brought within a few inches of each other. When you enable NFC on your LG Mach™, your phone can exchange data with other NFC-enabled devices or read information from smart tags embedded in posters, stickers, and other products. From the NFC settings menu, you can manage direct sharing and pairing Bluetooth via NFC.

Turn On NFC

1. Tap  >  > **System settings** > **More...**
2. Tap **NFC** to activate. (A blue checkmark will appear.)




## Android Beam

When this feature is turned on, you can beam app content to another NFC-capable device by holding the devices close together.

For example, you can beam Browser pages, YouTube videos, contacts, and more. Just bring the devices together (typically back to back) and then touch your screen. The app determines what gets beamed.

### Turn On Android Beam

**Note:** Please make sure that NFC is turned on, before you turn on Android Beam.

1. Tap  >  > **System settings** > **More...** > **Android Beam**.
2. Slide **Android Beam** switch  to the right to turn on this feature.



## VPN Settings

From your phone, you can add, set up, and manage virtual private networks (VPNs) that allow you to connect and access resources inside a secured local network, such as your corporate network. For details on your phone's VPN settings, see [Virtual Private Networks \(VPN\)](#).



## Mobile Networks Settings

You can choose whether to turn on or off the LTE radio band. You can also set whether to enable or disable data access on your phone.

### Network Mode

1. Tap  >  > **System settings** > **More...** > **Mobile networks** > **Network mode**.
2. Choose from the following two options:
  - Tap **LTE/CDMA** to turn on the LTE radio band.
  - Tap **CDMA** to turn off the LTE radio band.

### Enable/Disable Data Access

1. Tap  >  > **System settings** > **More...** > **Mobile networks**.
2. Tap **Data enabled** to check or uncheck it.

## Call Settings

Your phone's Call settings menu lets you configure International call options and TTY mode.

### Quick Messages

North American Dialing

International Dialing

TTY mode

Proximity Sensor



Noise Reduction

Voicemail Settings

Save Unknown Numbers

## *Quick Messages*

Quick message is a specified text message to send out when you want to ignore an incoming call and respond to the caller with a text instead. You can add or edit quick messages.

1. Tap  >  > **Systems settings** > **Call** > **Quick messages**.
2. Tap a quick message to edit.



– or –

Tap  to add a new quick message.

3. Enter a message and tap **Save**.



## *North American Dialing*

Replace + code as needed for outgoing calls.

1. Tap  >  > **System settings** > **Call**.
2. Tap **North American dialing** to check or uncheck it.

## *International Dialing*

Set international dialing code for outgoing calls.



1. Tap  >  > **System settings** > **Call** > **International dialing** (The North American dialing option must be disabled).
2. Enter the international dialing code and tap **OK**.

## *TTY mode*

A TTY (also known as a TDD or Text Telephone) is a telecommunications phone that allows people who are deaf, hard of hearing, or who have speech or language disabilities, to communicate by telephone. Your phone is compatible with select TTY phones. Please check

with the manufacturer of your TTY phone to ensure that it is compatible with digital cell phones. Your phone and TTY phone will connect via a special cable that plugs into your phone's headset jack. If this cable was not provided with your TTY phone, contact your TTY phone manufacturer to purchase the connector cable.

## Turn TTY Mode On or Off

1. Tap  >  > **System settings** > **Call** > **TTY mode**.
2. Tap **TTY Off** to turn TTY mode off or tap **TTY FULL**, **TTY HCO** or **TTY VCO**.

To access the state Telecommunications Relay Service (TRS) for assistance with TTY calls:

- ▶ Dial     to reach an operator.

For additional information about Sprint Relay Services and TTY compatibility, call Sprint Relay Customer Service at **800-676-3777** or visit [www.sprintrelay.com](http://www.sprintrelay.com).



**Note:** In TTY Mode, your phone will display the TTY access icon. When enabled, TTY mode may impair the audio quality of non-TTY phones connected to the headset jack.

**WARNING:** For 911 Emergency Calling, Sprint recommends that TTY users make emergency calls by other means, including Telecommunications Relay Services (TRS), analog cellular, and landline communications. Wireless TTY calls to 911 may be corrupted when received by public safety answering points (PSAPs), rendering some communications unintelligible. The problem encountered appears related to software used by PSAPs. This matter has been brought to the attention of the FCC, and the wireless industry and the PSAP community are currently working to resolve this.

## Proximity Sensor

You can access the LG Mach™ proximity sensor through the Call Settings menu.



To enable the Proximity Sensor:

1. Tap  >  > **System settings** > **Call**.
2. Tap **Proximity Sensor** to enable it. (A blue checkmark will appear.)

## Noise Reduction

You can set the phone to reduce the background noise while using a hands-free call.

To set noise reduction:

1. Tap  >  > **Systems settings** > **Call**.
2. Tap **Noise reduction** to turn it on. (A blue checkmark will appear.)



## *Voicemail Settings*

You can configure your voicemail settings. For details on Voicemail settings, see [Configure Visual Voicemail Settings](#).

## *Save Unknown Numbers*

You can set the phone to save the phone numbers not saved in Contacts yet.

To save unknown numbers

1. Tap  >  > **Systems settings** > **Call**.
2. Tap **Save unknown numbers** to turn it on. (A blue checkmark will appear.)

## *Roaming Settings*

With your phone and global roaming service from Sprint Worldwide<sup>SM</sup> Wireless Service, you can make phone calls and use wireless data services around the globe on compatible CDMA and GSM/UMTS networks.


[Set Roam Mode](#)

[Roaming Guard](#)

[Data Roam Guard](#)

[Roaming Icon](#)

Your display screen always lets you know when you're off the Nationwide Sprint Network.

Anytime you are roaming, the phone displays the roaming icon (). If you are roaming on a digital system, you will see the roaming icon along with the text – **Digital Roam** – .

[Roam on Other Digital Networks](#)


When you're roaming on digital networks, your call quality and security will be similar to the quality you receive when making calls on the Nationwide Sprint Network. However, you may not be able to access certain features, such as data services, depending on the available network.

**Note:** If you're on a call when you leave the Nationwide Sprint Network, your call will be dropped. If your call is dropped in an area where you think Sprint service is available, turn your phone off and on again to reconnect to the network.

[Check for Voicemail Messages While Roaming](#)

When you are roaming off the Nationwide Sprint Network, you may not receive a notification of new voicemail messages on your phone. Callers can still leave messages, but you will need to periodically check your voicemail for new messages if you are in a roaming service area for an extended period of time.





1. Dial your 10-digit wireless phone number.
2. When you hear your voicemail greeting, tap .
3. Enter your passcode at the prompt and follow the voice prompts.

When you return to the Nationwide Sprint Network, voicemail notification will resume as normal.

## Set Roam Mode

Your phone allows you to control your roaming capabilities. By using the Roaming menu option, you can determine which signals your phone accepts.

Choose from three different settings on your dual-band phone to control your roaming experience.

1. Tap  >  > **System settings** > **Roaming**.
2. Tap **Domestic Data**, **International Data** or both to place a checkmark and connect to data service while roaming. (Requires **Domestic Voice** or **International Voice**.)



**Note:** With Data roaming unchecked, you can still transmit data with a Wi-Fi connection. See [Connect Wi-Fi](#).

3. Tap **System select** to change the CDMA roaming mode.
  - **Sprint only** to access only the home area mobile network, which is the Nationwide Sprint Network. This option also prevents roaming on other networks.
  - **Include roaming** to seek service off the Nationwide Sprint Network. When Sprint service is unavailable, the phone searches for an alternate system.

## Roaming Guard

Roaming makes it easy to manage your roaming by requiring confirmation before placing or answering a roaming call.

To turn Roaming Guard on or off:

1. Tap  >  > **System settings** > **Roaming** > **Roaming Guards**.
2. Tap **Voice(Domestic)**, **Voice(International)** or both to activate or deactivate this function. When active, an extra key press is required for dialing when in a roaming area.


**Note:** Roaming Guard is turned on by default on your phone. Voice dialing and speed dialing are not available when you are roaming with Call Guard enabled.

To place roaming calls with Roaming Guard on:

1. Tap  >  (Tap the **Dial** tab if necessary).

2. Enter 1 + area code + the seven-digit number and tap .

To answer incoming roaming calls with Roaming Guard on:



1. Swipe  in any direction. A message will be displayed notifying you that roaming charges will apply.
2. Tap **Yes**.

## *Data Roam Guard*

Depending on service availability and roaming agreements, your phone may be able to access data services while roaming on certain digital systems. You can set your phone to alert you when you are roaming off the Nationwide Sprint Network and try to use data services such as messaging.

**Note:** Data Roam Guard is turned on by default on your phone.

To set your Data Roam Guard notification:

1. Tap  >  > **System settings > Roaming > Roaming Guards**.
2. Tap **Data (Domestic)**, **Data (International)** or both to place a checkmark and activate the function.

To use data services when Data Roam Guard is active:

- ▶ When a pop-up notification appears informing you that data roam charges may apply, tap **Connect** or **Always Connect** to connect.

## *Device Settings*

This group of settings lets you configure your phone's sound, display, gestures, power saver, apps, and quad core control settings.

[Sound Settings](#)

[Ringtones and Notifications](#)

[Touch Feedback & System](#)

[Display Settings](#)

[Home screen](#)

[Lock screen](#)

[Gestures](#)

[Storage](#)

[Settings](#)



Power saver

Apps Settings



## Sound Settings

In the Sound settings menu, you can configure call and notification ringtones, audio volumes, as well as some related settings.

### Sound profile

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Sound > Sound profile**.
3. Tap one of the three options.

To switch to silent mode:



1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Sound > Sound profile**.
3. Tap **Silent**.

– or –

Press the down Volume Button until you see  on the screen.

### Volumes

Adjust your phone's volume settings to suit your needs and your environment.

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Sound > Volumes**.
3. Adjust each volume level.
  - **Phone ringtone:** Changes the volume of your call ringtones (if applicable).
  - **Notification sound:** Allows you to set this volume level. This is the volume of the ringtone when you receive a notification.
  - **Touch feedback & system:** Changes the volume for system.
  - **Music, video, games and other media:** Changes the volume of your music, videos and other media.
  - **Alarms:** Changes the volume of your alarms.

4. Tap **OK**.

**Tip:** You can adjust the ringer volume on the Home screen or Applications screen, or almost any screen by using the Volume Buttons on the left side of your phone. In other applications such as Music, YouTube, spoken directions, and other audio, the Volume Buttons control the volume of the application.



## Ringtone & Notifications

You can select and assign ringtones for your incoming calls.

### Phone Ringtone




The phone ringtones alert you of incoming calls.

To select a ringtone for voice calls:

1. Tap  >  > **System settings** .
2. From the DEVICE section, tap **Sound** > **Phone ringtone**.
3. Tap a ringtone to select it and to hear it. If you want to set the ringtone, tap **OK**. If not, select another ringtone or tap **Cancel**.

To use a song as a ringtone:

You can use a song as your phone ringtone, in place of one of the ringtones that come with the phone.

1. Tap  >  >  **Music**.
2. Touch and hold a song in your collection. In the context menu, tap **Set as ringtone**.



– or –

On the Playback screen, tap  > **Set as ringtone**.

For details about using the Music Player application, see [Music](#).

### Notification sound



When you receive a notification such as the arrival of new messages, calendar events, or alarms, the phone sounds a ringtone.

1. Tap  >  > **System settings** > **Sound** .
2. From the DEVICE section, tap **Sound** > **Notification sound**.

3. Tap a ringtone to select it and to hear it. If you want to set the ringtone, tap **OK**. If not, select another ringtone or tap **Cancel**.

## Vibrate Types

To set a vibrate type for incoming calls, messages receipt, Email receipt, alarm, and calendar event.




1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Sound > Vibrate Type**.

**Note:** **Vibrate Type** can only be selected when **Vibrate only** is selected as the sound profile or **Ringtone with vibration** option is checked in the Sound screen.

3. Tap each vibrate type to select it.
4. Tap **OK**.

## Quiet time



To set times to turn off all sounds except alarm and media:

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Sound**.
3. Slide the **Quiet time** switch  to the right to turn on this feature.
4. Tap **Quiet time** to set the time and days.



## *Touch Feedback & System*

The Touch feedback & System menu lets you select whether you hear tones when touching numbers on the dialpad, selecting on-screen options, and more.

To hear tones when you use the dialpad to dial a number:



1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Sound**.
3. Tap **Dial pad touch tones**. (A blue checkmark will appear.)

To hear sound when you tap buttons, icons, and other on-screen items:



1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Sound**.

3. Tap **Touch sounds**. (A blue checkmark will appear.)

To hear sound when the screen is locked or unlocked:

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Sound**.
3. Tap **Screen lock sound**. (A blue checkmark will appear.)

To set your phone to vibrate when touching buttons and keys:



1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Sound**.
3. Tap **Vibrate on touch**. (A blue checkmark will appear.)

## Display Settings

Adjusting your phone's display settings not only helps you see what you want, it can also help increase battery life.

### Brightness

Adjust your screen's contrast (brightness) to suit your surroundings.



1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Display > Brightness**.
3. Use the slider to set a brightness level.

**Note:** For the best battery performance, use the dimmer levels.

4. Tap **OK**.

### Auto-Rotate Screen

Choose whether the phone automatically switches the orientation of the screen as you turn it sideways or even upside down.

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Display**.
3. Tap **Auto-rotate screen** to automatically rotate the screen (a blue checkmark will appear).



– or –

To disable the auto-rotate feature, tap **Auto-rotate screen** so that the checkmark is removed.

**Note:** Some applications on your phone do not support the Auto-rotate feature.

## Backlight Time Length



Select how long the display screen remains backlit after you touch the screen or press a key before the screen darkens.

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Display > Screen timeout**.
3. Tap **15 seconds, 30 seconds, 1 minute, 2 minutes, 5 minutes, 10 minutes**, or **Never**.

**Note:** Long backlight settings reduce the battery's talk and standby times. For the best battery performance, use the shortest convenient timeout.



## Font Type

Choose the desired font type.

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Display > Font type**.
3. Tap a desired font type.

## Font Size



Choose the desired font type.

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Display > Font size**.
3. Tap a desired font size.



## Front Key Light

Configure the Front key light options.

To turn on the front keys:



1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Display > Front key light**.
3. Tap **Turn on front key light**. (A blue checkmark will appear.)

To set how long the front keys remain back while the screen is turned on:

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap Display > Front key light > Front key light duration.
3. Tap **1.5 seconds**, **3 seconds**, **5 seconds**, or **Always on**.

## Motion Sensor Calibration

You can improve the accuracy of the tilt and speed of the sensor.



1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Display > Motion sensor calibration** .
3. Place the phone on a flat surface and tap **Calibrate sensor**

## Home screen

Configure your phone's home screen settings.



### Theme

Choose the desired theme.

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Home screen > Theme**.
3. Tap the desired theme then tap apply.

### Animation Display Options



Choose whether you want to enjoy animated transitions for some effects (such as when opening menus), for all supported effects (such as when navigating from one screen to another), or to remove all animated transitions (this setting does not affect transitions in non-native applications).

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Home screen > Animation**.
3. Tap **No animations** or **All animations**.

### Screen swipe effect



Choose the desired type of effect to display when you swipe from one Home screen canvas to the next.



1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Home screen** > **Screen swipe effect**.
3. Tap the desired effect and **OK**.



## Wallpaper

Choose the desired wallpaper.

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Home screen** > **Wallpaper**.
3. Choose a location and select the desired wallpaper.
4. Tap **Set wallpaper** to set it as the wallpaper.



## Scroll Wallpaper

Checkmark to allow the wallpaper to scroll with the screen instead of having it as a static image.

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Home screen**.
3. Tap **Scroll wallpaper**. (A blue checkmark will appear.)



## Scroll Screens Circularly

Checkmark to show the first screen after last screen when scrolling.

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Home screen**.
3. Tap **Scroll screens circularly**. (A blue checkmark will appear.)

## Home Backup & Restore

You can backup and restore app/widget configurations and the theme.



1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Home screen**.
3. Tap **Home backup & restore** > **Backup or Restore**.

## Lock screen

Lock screen menu lets you configure screen lock options and when to be locked.

## Select screen lock

You can increase your phone's security by face unlock, creating a screen unlock pattern, by creating a PIN, or by choosing a password. When these features are enabled, you must show your face, draw the correct unlock pattern, enter the PIN, or enter the password on the screen to unlock and regain access to the phone.

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Lock screen** > **Select screen lock**.
3. Select the desired screen lock option from the below:
  - **None:** No lock screen.
  - **Swipe:** Swipe any part of the screen to unlock the screen.
  - **Face Unlock:** Unlocks the screen through facial recognition. Follow the prompts. You are asked to set a Pattern and/or PIN as a backup.
  - **Pattern:** Opens a set of screens that guide you through drawing a screen unlock pattern. It's recommended that you enter backup PIN as well in case that you might lost the pattern. Then, you can set vibrate on touch or whether to make the pattern visible.
  - **PIN:** Enter a numeric PIN to unlock screen.
  - **Password:** Enter a password to unlock screen.

From then on, any time you wish to turn the phone on or unlock the screen, you must draw your unlock pattern or enter the PIN or password to unlock the screen.



- If you have set up Unlock PIN or Unlock Password, enter the Unlock PIN or Unlock Password. After entering it, tap **OK**. The last screen you were working on opens.

**Note:** You have five opportunities to enter your unlock Pattern, PIN or Password. If you've entered the wrong information five times, you must wait 30 seconds before you can attempt again.

- If you've set up a Google Account on the phone, tap the **Forgot pattern?** button. You will be able to unlock the phone with your Google Account username and password.
- If you haven't created a Google Account on the phone, you must perform a factory reset.

**CAUTION!** If you perform a factory reset, all user applications and user data will be deleted. Please remember to back up any important data before performing a factory reset.



- When you can't recall your unlock **Pattern, PIN or Password:**

1. Turn the power off.
2. Press and hold the following keys for over 10 seconds: Down Volume Button  + Power/Lock Button .
3. When the Factory Hard Reset screen is displayed, release these keys and follow the instructions on the screen.

**Note:** If you can't recall your unlock PIN or Password: Call Sprint Customer Service at **1-888-211-4727**.



## Wallpaper

Select the wallpaper to display for your lock screen.

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Lock screen > Wallpaper**.
3. Select **Gallery** or **Wallpaper gallery**.
4. Select the desired wallpaper and tap **Set wallpaper**.



## Clocks & shortcuts


Customize clocks and shortcuts on the lock screen.

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Lock screen > Clocks & shortcuts**.
3. Swipe left or right to select the clock or calendar type.
4. Tap each shortcut key to select the desired shortcut key.
5. After configuration, tap **Save**.

## Owner Info



Select whether to display the owner information on the lock screen and customize the owner information.

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Lock screen**.
3. Tap **Owner info** to show owner information on the lock screen. (A blue checkmark will appear.)

4. Tap  to enter the owner information.
5. After you have entered the information, tap **save**.



## Lock Timer

Choose the amount of time before the screen automatically locks after the screen has timed-out.

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Lock screen** > **Lock timer**.
3. Tap the desired time.

## Power Button Instantly Locks

Checkmark to instantly lock the screen when you press the Power/Lock Button .



1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Lock screen**.
3. Tap **Power button instantly locks** to turn on this feature. (A blue checkmark will appear.)

## Gestures

You can configure various gestures options.



### Move home screen items

If you checkmark this, you can move to other home screens by tilting the phone while you press and hold an item.

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Gestures**.
3. Tap **Move home screen items** to turn on this feature. (A blue checkmark will appear.)



### Tilt sensitivity

When the **Move home screen items** is checkmarked, you can test and adjust sensitivity of tilt sensor for the Home screen and applications.

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Gestures** > **Tilt sensitivity**.
3. Tap **Test** to test out the sensitivity level.



## Silence incoming calls

You can set the phone to silence incoming calls by just flipping the phone.

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Gestures**.
3. Tap **Silence incoming calls** to set this feature on. (A blue checkmark will appear.)



## Snooze or stop alarm

You can set the phone to snooze or stop the alarm by just flipping the phone.

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Gestures**.
3. Tap **Snooze or stop alarm** to set this feature on. (A blue checkmark will appear.)

## Pause video



You can set the phone to pause the video by just flipping the phone.

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Gestures**.
3. Tap **Pause video** to set this feature on. (A blue checkmark will appear.)



## Storage

The Storage menu lets you monitor the used and available space on the system memory and the microSD card.

To unmount microSD card so that you can format the card or remove safely:

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Storage** > **Unmount SD card** > **OK**.

To permanently erase everything on the microSD card:




1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Storage** > **Erase SD card** > **Erase SD card** > **Erase everything**.

**Note:** You must unmount the microSD card before formatting it.



## Power saver

The Power saver menu lets you turn on the power saver and configure diverse options to save power.

To turn on Power saver:

1. Tap  >  > **System settings**.
2. From the DEVICE section, slide the **Power saver** switch  to the right to turn on this feature.



To select features to turn off or to change value when battery is low:

1. Tap  >  > **System settings**.
2. From the DEVICE section, tap **Power saver**.
3. From the POWER SAVING ITEMS section, checkmark each feature to turn off.



## Apps Settings

This menu lets you view details about the applications installed on your phone, manage their data, force them to stop, and set whether you want to permit installation of applications that you obtain from websites and email.

To view details about the applications:

1. Tap  >  > **App settings**.
2. Tap **Downloaded**, **Running**, or **All**.

To force applications to stop:



1. Tap  >  > **App settings**.
2. Tap **Running**.
3. Find the application to force stop and tap the application.
4. Tap **Stop**.
5. Read the disclaimer and tap **OK**.

To uninstall a downloaded application:



1. Tap  >  > **App settings**.
2. Tap **Downloaded**.

3. Find the application to force stop and tap the application.
4. Tap **Uninstall**.
5. Read the disclaimer and tap **OK**.



To set the phone to end a running application when you open a new applications:

1. Tap  >  > **Systems settings > Developer options**.
2. Tap **Don't keep activities**.

To set the limit of the number of processes that can run in the background:

1. Tap  >  > **Systems settings > Developer options > Background process limit**.
2. Tap **Standard limit, No background processes, At most 1 process, At most 2 processes, At most 3 processes, or At most 4 processes**.

To set the phone to alert you to unresponsive applications that are running in the background:

1. Tap  >  > **Systems settings > Developer options**.
2. Tap **Show all ANRs**.

## *Personal Settings*

This group of settings lets you configure accounts & sync, location services, security, language & input, and backup & reset settings.

[Accounts & sync](#)


[Location services](#)

[Security](#)

[Language & Input Settings](#)

[Backup & reset](#)

### *Accounts & sync*



Use the Accounts & sync settings menu to add, remove, and manage your Google™ and other supported accounts. You also use these settings to control how and whether all applications send, receive, and sync data on their own schedules and whether all applications can synchronize user data automatically. Gmail™, Calendar, and other applications may also have their own settings to control how they synchronize data; see the sections on those applications for details. Slide  to the right to enable adding account or sync. Tap **ADD ACCOUNT** to add new account.

## Location services

Use the Location services menu to set your preferences for using and sharing your location when you search for information and use location-based applications, such as Maps.



### Google's location services

You can use information from Wi-Fi and mobile networks to determine your approximate location, used while searching in Google Maps and other applications. When you checkmark this option, you're asked whether you consent to sharing your location anonymously with Google's location service.

1. Tap  >  > **System settings** > **Location services**.
2. Tap **Google's location service**. (A blue checkmark will appear.)
3. When you check this option, you're asked whether you consent to sharing your location anonymously with Google's location service.
4. Read the disclaimer and tap **Agree**.

### GPS satellites



You can use your device's global positioning system (GPS) satellite receiver to pinpoint your location to within accuracy as close as several meters (street level). Actual GPS accuracy depends on a clear view of the sky and other factors.

1. Tap  >  > **System settings** > **Location services**.
2. Tap **GPS satellites**. (A blue checkmark will appear.)

**Note:** Uncheck this option when you do not use Maps to conserve battery.

### Location & Google search

You can let Google use your location to improve search results and other services.

1. Tap  >  > **System settings** > **Location services**.
2. Tap **Location & Google search**. (A blue checkmark will appear.)
3. When you check this option, you're asked whether you allow Google to use your location for improved search results and other services.
4. Read the disclaimer and tap **Agree**.

## Security

Use the Security settings to configure how to help secure your phone and its data.



## Encrypt phone

Opens a screen that encrypts data on the phone for security. You will be required to enter a PIN or password to decrypt your phone each time you power it on.

## Enable storage encryption

Opens a screen that encrypts data in the internal storage or SD card for security. You will be required to enter a PIN or password to decrypt your phone each time you insert a new SD card.

## Password typing visible

Checkmark to briefly show each character of passwords as you enter them so that you can see what you enter.

## Phone administrators

Add or remove phone administrators.

## Unknown sources

Allow installation of non-Play Store applications.

## Trusted credentials

Checkmark to allow applications to access your phone's encrypted store of secure certificates and related passwords and other credentials. You use credential storage to establish some kinds of VPN and Wi-Fi connections. If you have not set a password for the secure credential storage, this setting is dimmed.

## Install from storage

Touch to install a secure certificate from a microSD card.

## Clear credentials

Deletes all secure certificates and related credentials and erases the secure storage's own password, after prompting you to confirm that you want to do this.

## *Language & Input Settings*

Your phone's Language & input settings let you select a language for the device's screens and menus, as well as manage a personal user dictionary. The Keyboard settings let you select a preferred input method, control keyboard settings, and more.

## Display Language

You can choose to display your device's on-screen menus in multiple languages.

1. Tap  >  > **System settings** > **Language & input** > **Language**.

2. Tap **English, Español, 한국어, 文中(简体), or 文中(繁體)**.


## Spelling correction

Allows spelling correction when using the on-screen keyboard.

## Personal dictionary

Allows you to view, edit, and add words to your personal dictionary.



## Keyboard & Input Methods

Shows the default keyboard type. Checkmark the keyboard you want to use from **Google voice typing, LG Keyboard**. Tap  to configure each keyboard's settings.



## Physical Keyboard

You can set some useful options for the entry by the slide-out QWERTY keyboard.



To correct mistyped words:

1. Tap  >  > **Systems settings > Language & input**.
2. Under the PHYSICAL KEYBOARD section, tap **Auto-replace**. (A blue checkmark will appear.)

To automatically capitalize the first letter in sentences:

1. Tap  >  > **Systems settings > Language & input**.
2. Under the PHYSICAL KEYBOARD section, tap **Auto-capitalization**. (A blue checkmark will appear.)

To automatically punctuate when you press the Space Key twice:

1. Tap  >  > **Systems settings > Language & input**.
2. Under the PHYSICAL KEYBOARD section, tap **Auto-punctuate**. (A blue checkmark will appear.)

## Voice Search

Tap to configure the Voice Search settings.

## Text-to speech output

Tap to set the preferred engine or general settings for text-to-speech output.

## Pointer speed



Adjust the pointer speed.

## *Backup & reset*

The privacy settings on your device allow you to back-up your data, automatically restore data, and erase all the data on your phone.



### Back Up My Data

You can back up app data, Wi-Fi passwords, and other settings to Google servers.

1. Tap  >  > **Systems settings** > **Backup & reset**.
2. Check whether the Backup account is right.
3. Tap **Back up my data**. (A blue checkmark will appear.)
4. To set to automatically restore the backups, tap **Automatic restore**. (A blue checkmark will appear.)

### Factory Data Reset

Resetting the phone restores all the factory defaults, including personal data from internal phone storage, information about your Google Account, any other accounts, your system and application settings, and any downloaded applications. Resetting the phone does not erase any system software updates you've downloaded or any files on your microSD card, such as music, pictures, or applications. After resetting the phone, the next time you turn on the phone, you're prompted to reenter the same kind of information as when you first started the phone. See [Activate Your Phone](#).

1. Tap  >  > **Systems settings** > **Backup & reset**.
2. If you are certain that you would like to restore all factory settings, tap **Factory data reset**.
3. Tap **Reset phone**.
4. Enter your unlock sequence if you have configured one, then tap **Erase everything** to confirm.

## *System Settings*

This group of settings lets you configure date & time, accessibility, PC connection and developer options. And you can activate the phone, update the phone, or view the phone information.

### Date & time

Accessibility

Connectivity

Developer Options

Activate This Device

System Updates

Phone Identity

## *Date & time*

Set your preferences for how the date and time is displayed.

## *Accessibility*

Use the Accessibility settings to configure any accessibility plug-ins you have installed on your phone.

**Note:** Requires additional plug-ins to become selectable.

## *Connectivity*

Your device's PC connection menu lets you configure USB connection type, USB tethering, and Ask on connection.

### USB connection type

Opens a dialog box to choose the default connection mode when connecting your phone to a PC via USB. Choose from Charge only, Media sync (MTP), or Camera (PTP).

### Media sync(MTP)

Allows the phone to be used as MTP phone when a microSD card is present in the phone. It allows transfer of protected content from the phone to the PC and vice versa.

To synchronize your phone with your computer using the USB

1. Connect your phone to your computer with a USB cable.
2. Autorun will check whether MTP driver is installed or not in your PC.
3. If the driver is not installed, the MTP driver will be installed automatically and your PC will be rebooted. After rebooting, it is possible to transfer any files between the phone and the PC.



**Note:** For Windows® XP, MTP driver is not installed by default. So Autorun will install the MTP driver automatically after checking existence of the driver. If Windows Media

Player(WMP) over version 10.x is installed on the PC, MTP driver may be installed. For Windows® 7 except for N edition, the driver is installed.

## USB tethering

You can use your phone to provide a data connection to a computer by activating data tethering and connecting them with a USB cable.

To tether your phone with your computer using the USB

1. Connect your phone to your computer with a USB cable.
2. Tap  >  > **Systems settings** > **Connectivity** > **USB tethering**.
3. Tap **OK** if you agree with the prompt.

**Note:** - Data Tethering requires an appropriate data plan. Phones connected by tethering use data from your plan. Plans are not unlimited and significant charges may be incurred if the included data allowance is exceeded. Performance may vary depending on the number of phones connected and other factors.

- You cannot access your phone's microSD card on your computer when using USB tethering.



## Ask on connection

Checkmark to have the phone ask you to choose which USB connection mode it should connect with to a PC.



## *Developer Options*

Keep in mind that turning on these developer settings may result in irregular device behavior.

To turn on debug mode when USB is connected:

1. Tap  >  > **Systems settings** > **Developer options**.
2. Tap **USB debugging**.

To set the phone to flash the screen when applications operate for a long period of time on the main thread:



1. Tap  >  > **Systems settings** > **Developer options**.
2. Tap **Enable strict mode** (a blue checkmark displays).

To make the touch data visible on the screen:



1. Tap  >  > **Systems settings** > **Developer options**.

2. Tap **Show touch data** (a blue checkmark displays).



To show visual feedback when the screen is tapped:

1. Tap  >  > **Systems settings** > **Developer options**.
2. Tap **Show touches** (a blue checkmark displays).



To set the phone to flash areas of the screen when they are updated:

1. Tap  >  > **Systems settings** > **Developer options**.
2. Tap **Show screen updates** (a blue checkmark displays).



To overlay the current CPU usage on the screen:

1. Tap  >  > **Systems settings** > **Developer options**.
2. Tap **Show CPU usage** (a blue checkmark displays).



To use the 2D hardware acceleration in applications:

1. Tap  >  > **Systems settings** > **Developer options**.
2. Tap **Force GPU rendering** (a blue checkmark displays).

To select a speed for opening and closing pop-up windows:

1. Tap  >  > **Systems settings** > **Developer options** > **Window animation scale**.
2. Tap a desired one.

To select a speed for switching between screens:

1. Tap  >  > **Systems settings** > **Developer options** > **Transition animation scale**.
2. Tap a desired one.

## *Activate This Device*



Follow the onscreen instructions to activate your phone.

## *System Updates*

From time to time, updates may become available for your phone. You can download and apply updates through the Settings menu.



## Update Your Android Operating System

This option allows you to update the Android Operating System (OS) on your Phone via an over-the-air connection. There are two components: Sprint User-Interface (UI) firmware and Phone Google OS.

1. Tap  >  > **System settings** > **System updates** > **Update Firmware and Update LG software.**
2. Follow the on-screen instructions.



## Update Your Profile

This option allows you to automatically update your online user profile information. If you choose to change your user name and select a new one online, you must then update the user name on your Phone.

1. Tap  >  > **System settings** > **System updates** > **Update profile.**
2. Follow the on-screen instructions.

## Update Your PRL

This option allows you to download and update the PRL (Preferred Roaming List) automatically.

1. Tap  >  > **System settings** > **System updates** > **Update PRL.**
2. Follow the on-screen instructions.

## *Phone Identity*

Display your phone number and other information about your phone and account.

- ▶ Tap  >  > **System settings** > **About phone** > **Phone identity.**

# Contacts

---

The Contacts application lets you store and manage contacts from a variety of sources, including contacts you enter and save directly in your phone as well as contacts synchronized with your Google Account, your PC, compatible email programs (including Exchange Server), and your Facebook friends.

## Get Started With Contacts

[Add a Contact](#)

[Add a Contact to Your Favorites](#)

[Edit a Contacts Entry](#)

[Communicate with Your Contacts](#)

[Import, Export, and Share Contacts](#)

## Get Started With Contacts

Use the Contacts application to add, view, and communicate with your family, friends and acquaintances.

### Access Contacts

- ▶ Tap  >  >  > **Contacts** tab (if necessary).

All of your contacts are displayed alphabetically in a list. If you have a new phone and haven't added any contacts yet, the Contacts application will display hints on how to start adding contacts to your phone.

- ▶ To add contacts shortcut to the Home screen, touch and hold an empty spot on one of the Home screens, and then tap **Widgets**. Swipe the widgets left or right until you find **Contact** or **Favorite contacts** widgets.

### The Contacts List

Learn how to view and navigate through your phone's Contacts list.

- ▶ Tap  >  > **Contacts** tab. You will see the Contacts list.

Scroll through the list to view all your contacts. To see a specific entry, scroll to it and touch it.

**Tip:** If you have a lot of contacts stored, you'll see a slider on the right when you're flicking up or down the list. To go directly to a letter, touch and hold the slider and drag it to a letter.



## Contacts List Options





From the Contacts list, tap  to display the following options.

- **Delete:** Allows you to delete contacts.
- **Share:** Allows you to share contacts.
- **Send message:** Allows you to send a message to a contact.
- **Send email:** Allows you to send an email to a contact.
- **Speed dial:** Allows you to add a speed dial to your contacts.
- **Display options:** Allows you to set the display options for your contact list.
- **Call settings:** Allows you to set various call settings.

 
## Add a Contact

You can add contacts on your phone and synchronize them with the contacts in your Google™ Account, Microsoft Exchange account, or other accounts that support syncing contacts.

The Contacts application tries to join new addresses with existing contacts, to create a single entry. You can also manage that process manually.

1. Tap  >  > **Contacts** tab.
2. Tap  to add a contact.
3. Tap a destination type (**Phone**, **Google**, or **SIM**), if applicable.
4. Tap  to select a picture to display next to the name in your list of contacts and in the Caller ID.
5. Tap the Name field and enter a name for the new entry.
6. Tap the Phone field and enter a phone number.
7. Tap the label button (to the right of the phone number field) to select one of the following categories: **MOBILE**, **WORK**, **HOME**, **MAIN**, **WORK FAX**, **HOME FAX**, **PAGER**, **OTHER**, **CUSTOM**.
8. Tap the Email field and enter an email address and select the label from **HOME**, **WORK**, **OTHER**, **CUSTOM**.
9. Tap the Group name field and select one of the default groups or tap **New group** to create a new group.

10. Tap the ringtone field and select the desired ringtone.
11. Enter as much information as you want and when you're finished, tap **Save**.

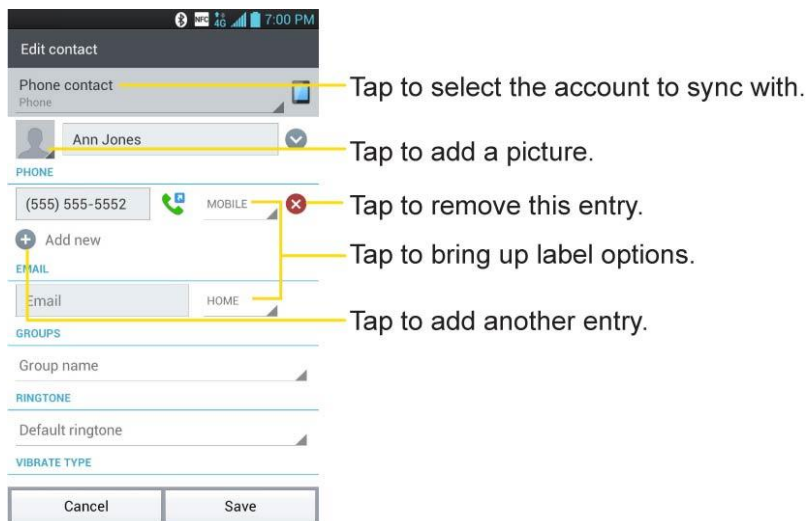

## Add a Contact to Your Favorites

Favorites contains a short list of the contacts you communicate with most often.

1. Tap > > **Contacts**.
2. Tap a contact to view its details.
3. Tap the star to the right of the contact's name. (A gold star appears.)

To remove a contact from your favorites list:

1. Tap > > **Favorites** tab.
2. Tap a contact to view its details.
3. Tap the gold star to the right of the contact's name. The star will turn gray, meaning it has been removed from your Favorites.

## Edit a Contacts Entry



 
You can change or add details saved in your contact entries, such as setting specific ringtones to specific contacts or setting calls from specific contacts to divert to your voicemail. Some contact entries contain information from multiple sources: information that you added manually, information joined from multiple accounts to consolidate duplicates, etc.

If you find duplicate entries in Contacts, you can join them into a single entry. If you find that unrelated contacts were joined in error, you can separate them.

Changes made to information from one source do not automatically change the information on the other sources. For example, if you have information about a contact from a Google Account and an Exchange account and both are configured to sync contacts, changes to the contact from the Google Account are synced to that account on the web, but the information from the Exchange account will remain unchanged.




For more information about working with multiple accounts, see [Synchronize Accounts](#).

## Edit Contact





1. Tap  >  >  **Contacts**.
2. Touch and hold the contact whose details you want to edit.
3. Tap **Edit contact**.
4. Edit the desired contact information.
5. Tap **Save**.

## Change a Contact's Phone Number





The default phone number is used when you initiate a call or send a text message using the context menu (by touching and holding a contact).

1. Tap  >  >  **Contacts**.
2. Tap the name of a contact to view its details.
3. Touch and hold the phone number you want to set as the contact's default phone number.
4. Tap **Set as default number**. (A checkmark will appear next to the default phone number.)





## Select a Ringtone for a Contact

1. Tap  >  >  **Contacts**.
2. Tap the name of a contact to view its details.
3. Tap .
4. Tap the ringtone field and tap a ringtone to select it.
5. Tap **OK**.




## Delete Contacts

1. Tap  >  >  **Contacts**.
2. Tap the name of a contact.
3. Tap  > **Delete**.
  - If the contact contains information from a read-only account, you will not be able to delete it; you will only be able to change the sync settings for that account or delete the account itself.
  - If the contact contains information joined from a read-only account, a dialog box will inform you that you must separate the contact entry into individual contacts to delete the contact.
4. Tap **OK** to confirm that you want to delete the contact.

## Add a Number to a Contact's Entry



1. Tap  >  >  **Contacts**.
2. Touch and hold the contact's entry.
3. Tap **Edit contact** in the menu that opens.
4. Tap .
5. Tap the label button to the right of the phone number field and select the relevant label.
  - To create your own label, tap **CUSTOM**.
6. Enter a phone number and tap **Save**.

## Edit a Contact's Entry Number

1. Tap  >  >  **Contacts**.
2. Touch and hold a contact's entry.
3. Tap **Edit contact**.
4. Tap a phone number to edit.
5. Re-enter or edit the number and tap **Save**.

## Assign Direct Dialing Numbers

Besides Speed dialing, you are also able to directly save a contact to your Home screen.

1. Tap  >  > **Contacts** tab.
2. Touch and hold a contact's entry.
3. Tap **Add to home screen** > **Direct dial**. The contact will be shown on the Home screen.





**Note:** If there is no available space on a particular Home screen panel, you must delete or remove an item before you can add another item. In this case, you have the option of switching to another Home screen pane.

To use direct dial:

Simply tap the contact on the Home screen.

### Assign a Picture to an Entry

Assign a picture to display each time a certain contact calls you.




1. Tap  >  >  **Contacts**.
2. Touch and hold the contact's entry.
3. Tap **Edit contact**.
4. Tap .
5. Tap **Take photo** to take a new picture. The camera will launch.

– or –

Tap **Select from Gallery** to select a picture from the Gallery.

6. After cropping the picture as you want, (see [Gallery Options](#)) tap **OK**.

### Find Contacts by Name

1. Tap  >  >  **Contacts**.
2. Tap the **Search contacts** field
3. Start entering the name of the contact you're searching for. As you type, contacts with matching names will appear below the search box.
4. Tap a matching contact in the list to open its entry.

 
## Communicate with Your Contacts

From the Contacts or Favorites tab, you can quickly call or send a text (SMS) or multimedia message (MMS) to a contact's default phone number. You can also open a menu to access different methods of communicating with that contact.

The Contacts application shares your contacts with many other applications, such as Gmail™ (see [Gmail](#)) and messaging (see [Text and Multimedia Messaging](#)).

To connect by using Quick Contact for Android™:

1. Tap a contact's picture to open Quick Contact for Android.

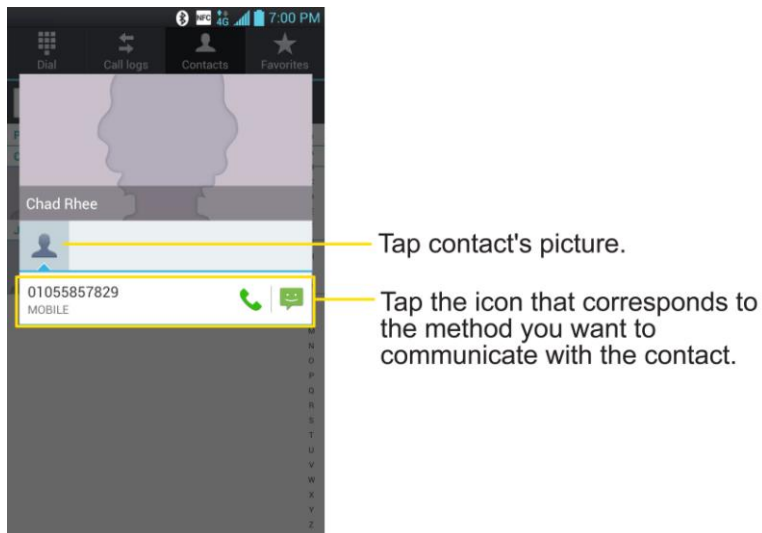

2. Tap the icon corresponding to the type of communication you want to start.





Depending on the contact information saved, the available actions will be displayed above the name. (For more information, see [Communicate with Your Contacts](#).)

To communicate with a contact:

1. Tap > > **Contacts**.
2. Tap the contact's entry.
3. In the contact's details screen, tap the method you wish to communicate with the contact.
  - Tap next to the number you want to call to directly.
  - Tap next to the number you want to message.

**Note:** Anytime you see the green Call Key next to a number, such as in your Favorites or Call logs, just tap it to call that number.

To call a contact's default number:

1. Tap  >  >  **Contacts**.
2. Tap  next to the contact entry.
3. If multiple numbers are stored, a pop-up window to select the number will open.
4. To set a number as default number when you make a call, tap **Set as default number**, then select the default number.

(For more information about placing phone calls, see [Make Phone Calls](#).)

For more information about sending text and multimedia messages, see [Text and Multimedia Messaging](#).

## *Import, Export, and Share Contacts*

If you have contacts stored in vCard format on a microSD card you can import them into your Contacts application on your phone. You can also export contacts in vCard format onto a microSD card. Export your contacts to back them up to a computer or another phone.

[Import contacts from your microSD card](#)





[Export contacts to your microSD card](#)

[Share a contact](#)

### *Import contacts from your microSD card*





You can import contacts from your microSD card directly to your phone.

**Note:** See [Connect Your Phone to Your Computer](#) for details about copying files to a microSD card from your computer.

1. Insert the microSD card (that contains the vCard files) into your phone.
2. Tap  >  >  **Contacts**.
3. Tap  > **Import/Export** > **Import from SD card**.
4. If you have more than one account on your phone, tap the account into which you want to import the contacts.
5. Tap the files you wish to import and tap **Import** and **OK** to confirm.

## *Export contacts to your microSD card*

You can export all of the contacts on your phone to your microSD card, as vCard files. You can then copy this file to a computer or another phone that is compatible with this format, such as an address book application. (See [Connect Your Phone to Your Computer](#).)

1. Tap  >  >  **Contacts**.
2. Tap  > **Import/Export**.
3. Tap **Export to SD card**.
4. Tap the contacts you want to export, then tap **Export** and **OK** to confirm.

## *Share a contact*

You can share a contact with someone by sending it to the person as a vCard file.

1. Tap  >  >  **Contacts**.
2. Open the contact you want to share.
3. Tap  > **Share**.
4. Choose the method for sending.



# Accounts and Messaging

---

With Sprint service and your phone's messaging capabilities, you have the opportunity to share information through many different channels and accounts.

[Gmail](#)

[Email](#)

[Text and Multimedia Messaging](#)

[Synchronize Accounts](#)

## *Gmail*

This email client is Google's web-based email service. (See [Synchronize Your Google Account](#).)

From a computer, launch your preferred web browser and navigate to [www.gmail.com](http://www.gmail.com). Depending on your synchronization settings, Gmail (along with calendar events, phone numbers and other contact information) on your phone is automatically synchronized between your phone and your Gmail account on the web.

[Create a Google Account](#)

[Sign into Your Google Account](#)

[Access Gmail](#)

[Send a Gmail Message](#)

[Read and Reply to Gmail Messages](#)

[Change Gmail Settings](#)

## *Create a Google Account*

You must create and/or sign into a Google Account to use Gmail™, Google Talk™, Google Calendar™, and other Google Apps. Signing into a Google Account is also necessary to download applications from Play Store™, to sync your data (if applicable) with the Google servers, and to take advantage of any other available Google services on your phone.

If you don't have a Google Account, you will be prompted to create one. If you have an enterprise account through your company or other organization, your IT department may have special instructions on how to sign into that account.

1. From a computer, or from your phone's Browser, navigate to [www.google.com](http://www.google.com).
2. On the main page, select **Sign In > SIGN UP**.

3. Follow the on-screen prompts to create your free account.
4. Log into your provided email address, locate the email from Google, and respond to the new email to both confirm and activate your new account.

## *Sign into Your Google Account*

If you have a Google Account but have not yet signed in with your phone, follow these instructions to sign in to your Google Account.

1. Launch an application that requires a Google Account (such as Play Store or Gmail).
2. Tap **Existing**.

**Note:** If you do not already have a Google Account, tap **New** and follow the on-screen prompts to create your new account.

3. Tap the **Email** and **Password** fields and enter your information.
4. Tap **Sign in**. Your phone then communicates with the Google servers to confirm your information.
5. Select **Join Google+** to join or **Not now** to skip this step and join later.
6. Read the disclaimer about Backup and restore and checkmark to keep the phone backed up with the Google Account. Then, tap **Next**.

**Important:** Some applications, such as Calendar, work only with the primary Google Account (the first Google Account set up with your phone). If you plan to use more than one Google Account with your phone, be sure to sign into the one you want to use with such applications first. When you sign in, your contacts, Gmail messages, Calendar events, and other information from these applications and services on the web can be synchronized with your phone. You will be prompted to sign in or to create a Google Account the first time you start an application that requires one, such as Gmail or Play Store.

 
## *Access Gmail*

Access your personal Gmail account directly on your phone.

When you open the Gmail application, the most recent conversations are displayed in your Inbox.

▶ Tap  >  >  **Gmail**.

All of your conversations are displayed in your Inbox unless you delete, archive, or filter them. Conversations with new messages are displayed with bold subject lines. To read a message in a conversation, tap the conversation. (See [Read Your Messages](#).)

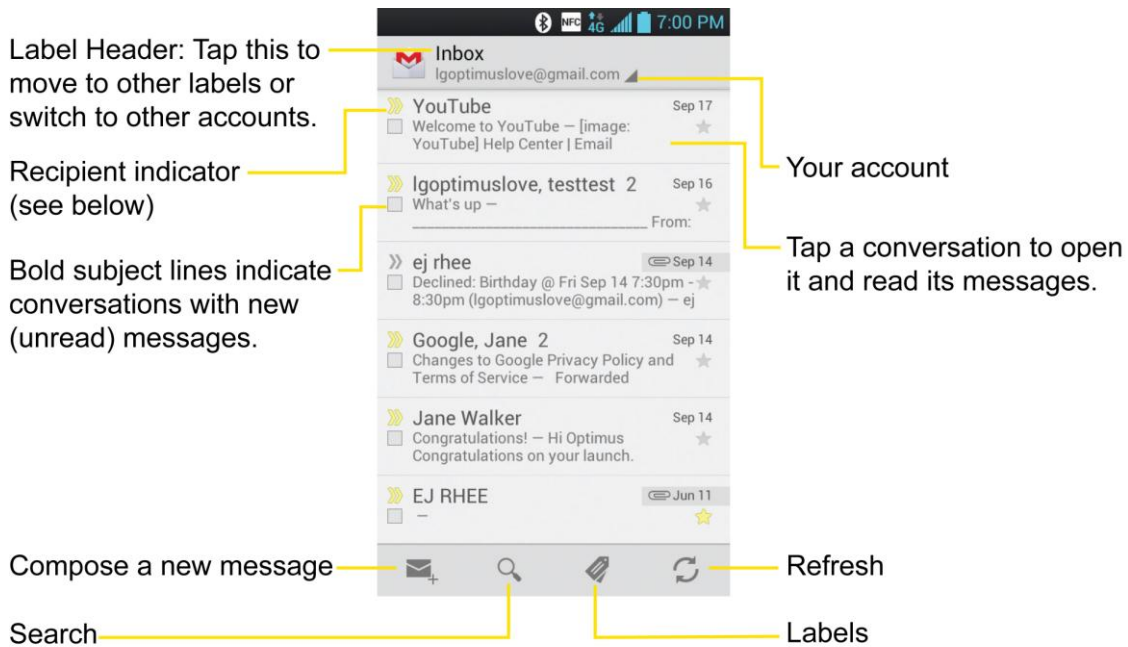


- » Indicates that this message was sent directly to you.
- » Indicates that you were CC'd on this message.

## View Your Gmail Inbox when Gmail is running


- ▶ If you are viewing a message or another label, tap  until you return to your Inbox.

## Add Another Google Account

1. From your Gmail Inbox, tap  > **Settings**.
2. Tap **ADD ACCOUNT** in the upper right corner of the screen.
3. Tap **Existing** or **New**, then enter the necessary information.

## Switch Between Accounts

 
Gmail displays conversations and messages from one Google Account at a time. If you have more than one account, you can open the Accounts screen to view how many unread messages you have in each account and switch accounts.

- ▶ From your Inbox, tap  by the email account, then tap the account that contains the messages you want to read.

## Read Your Messages

- ▶ Tap a conversation that contains the message you want to read.

When you open a conversation, the first unread or starred message is displayed.

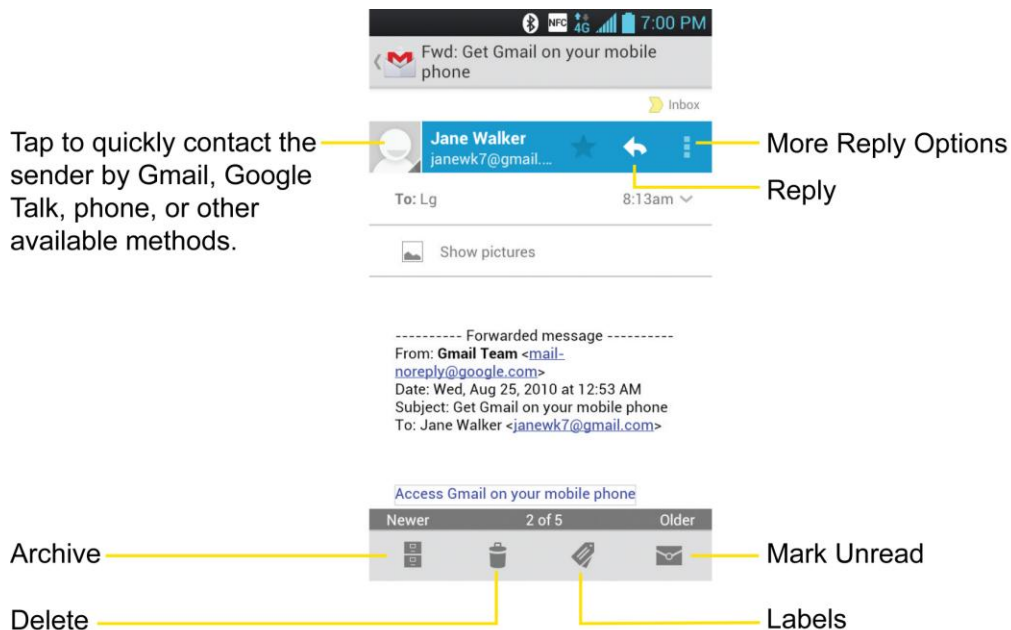

If you want to contact the sender, touch the Contact's picture ID to open Quick Contact. (See [Communicate with Your Contacts](#).) When reading messages in a conversation, you can use the buttons at the bottom of the screen to archive the entire or delete it. After you delete a conversation, you can tap **UNDO** in a dark gray box that appears on the bottom of the screen. You can scroll to the bottom of a message to access buttons for replying to or forwarding the message, as described in [Read and Reply to Gmail Messages](#).

To reread a message:

When you open a conversation, messages that you've already read are minimized into a tab that indicates the number of hidden messages.


1. Tap > > Gmail.
2. Tap the conversation you want to view.
3. Tap the contact name to open that message.

When reading a message or when its tab is selected, you can tap to return a read message to the unread state. For example, you could do this to remind yourself to read it again later.




## Send a Gmail Message

You can compose and send a message to people or groups with Gmail addresses or other email addresses.


1. Tap > > Gmail.

2. Tap .

**Note:** This will start the message from your default Gmail account. To send it from another account, on the Accounts screen, tap the triangle icon by the email account, then tap the account you want to use.

3. Enter a recipient's address. As you enter text, matching addresses are displayed from your Contact list. You can tap a suggested address or continue entering text to enter a new one.
4. Tap  > **Add Cc/Bcc** to copy (normal or blind status) recipients, if necessary.
5. Enter a subject for the message in the **Subject** field.
6. Continue into the next field to compose your email message.
7. Tap  > **Attach file** to add an attachment to the email.
8. Tap  to send the email.

– or –

If you're not ready to send the message, tap  > **Save draft** instead. You can read your drafts by opening messages with the Drafts label.

– or –

Tap  > **Discard** to erase the message (including any saved drafts).


**Note:** If you aren't connected to a network - for example, if you're working in Airplane mode - the messages that you send are stored on your phone, with the Outbox label until you connect to a network again.

## *Read and Reply to Gmail Messages*


You can continue an email conversation by replying to a message or by forwarding it.


1. On a message, tap  to reply to the message.



2. Tap  to select from **Reply all** or **Forward**.
  - Replying to or forwarding messages without changing the subject adds your reply to the current conversation. Changing the subject starts a new conversation.






- The message will open in a new screen where you can add or remove addresses, edit the subject, and add or remove text or attachments.
- You can add one or more people to an ongoing conversation by replying to all and then adding the new person's address(es) to the message.
- All of the messages in the conversation are included in the new message; any messages that follow the message you forward are omitted.

 
3. Tap  to send the email.

**Note:** You can change the message action after you've started the message. Simply tap the message action icon  in the message header to the right of the current message action, then tap the one you want. For example, if you chose **Reply** but decide you want to **Reply all**.


### Work with Conversations in Batches



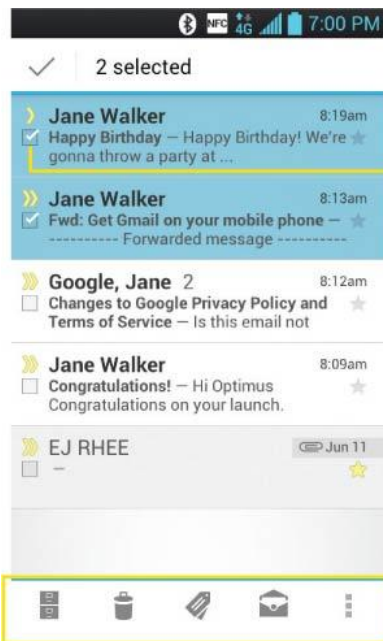


With Gmail, you can archive, label, delete, or perform other actions on a batch of conversations at once.

1. From the Inbox or another label, tap the checkmark box to the left of each message for all the messages you want to include in the batch.
  - When you checkmark a conversation, the  (Archive),  (Delete),  (Labels),  (Read/Unread) and  (more) buttons appear at the bottom of the screen (see below).



Tap to include the message in the batch.





Tap to select an action for the batch or tap  for more options.

2. Tap  (Archive),  (Delete),  (Labels),  (Read/Unread), or  (more).
  - The chosen action affects the selected batch of messages. If you accidentally delete a batch of conversations, you can tap **UNDO** in the grey bar (that appears briefly after the action) at the bottom of the Inbox screen to return the messages to the Inbox or appropriate label. You can also use **UNDO** after archiving, and reporting spam. If you never work with batches of messages, you can hide the check boxes to leave more room for the subjects of conversations. (See [Change Gmail Settings](#).)

## Change Gmail Settings





You can change a number of settings for Gmail. Each Google Account has its own settings, so your changes affect only the current account. (See [Switch between accounts](#)).

Notification volumes and some synchronization settings can also be changed in the Settings application.

1. Tap  >  >  **Gmail**.
2. Tap  > **Settings** > **General settings**.
  - **Confirm before deleting:** Checkmark the checkbox to ask to confirm before deleting a message.
  - **Confirm before archiving:** Checkmark the checkbox to ask to confirm before archiving a message.
  - **Confirm before sending:** Checkmark the checkbox to ask to confirm before sending a message.
  - **Reply all:** Checkmark the checkbox to make Reply all the default message action.
  - **Auto-advance:** Opens a dialog box to set which conversation list is viewed next.
  - **Message text size:** Opens a dialog box to set your message text size.
  - **Hide checkboxes:** Checkmark the checkbox to hide checkboxes so that tap and hold will select an item.
  - **Message actions:** Opens a dialog box to set when to show message actions.
  - **Clear search history:** Tap to clear your search history.
  - **Hide pictures in messages:** Pictures will not be displayed automatically until you allow by sender.


## Individual Account Settings

You can set each of your accounts with specific, individual settings.

1. Tap  >  >  **Gmail**.
2. Tap  > **Settings**.
3. Tap the account whose settings you want to modify.
  - **Priority Inbox:** Checkmark to make Priority Inbox the default Inbox for this account.
  - **Email notifications:** Checkmark to receive a Status Bar notification when mail arrives.
  - **Ringtone & vibrate:** Opens a dialog box to set the Sync download amount for this account and how you want to be notified.
  - **Signature:** Opens a dialog box to enter the signature you want to send at the end of your email.
  - **Gmail Sync is ON:** Opens the Accounts & Sync screen to modify your sync settings for this account, or remove this account.
  - **Days of mail to sync:** Opens a dialog box to set the number of days of mail to sync. Modifying this setting affects the sync download in the Ringtone & vibrate setting.
  - **Manage labels:** Opens a dialog box to set which mail labels are synced.
  - **Download attachments:** Checkmark to automatically download attachments to recent messages using a Wi-Fi connection.

## Respond with Quoted Text

When you respond to a Gmail message you can choose to type within the previous text. For example, if the previous text includes multiple questions, you can insert your responses immediately after each question instead of responding as a separate message.

1. Open a Gmail message and initiate your response action (e.g., **Reply**, **Forward**, etc.).
2. Make sure **QUOTE TEXT** checkbox below the Compose field is checkmarked, then tap **RESPOND INLINE**.
3. Tap where you want to insert your text, then enter your text as necessary.
4. Tap  in the upper right corner of the screen to send it.

## *Email*

Use the Email application to send and receive Emails from your webmail or other accounts, using POP3 or IMAP, or access your Exchange ActiveSync account for your corporate Email needs.



Although there is a separate Gmail application, the main email application can manage both Internet based email services (Gmail™ and Yahoo!™) and Corporate Work Email (Outlook®). The phone can also be manually configured to connect to other email systems.

**Note:** If you have multiple email accounts, you must configure each account with its own settings.

If you want to send and receive email messages through an ISP (Internet Service Provider) account (such as Outlook), you will first need to set up an IMAP or POP account.

- Internet Message Access Protocol (IMAP) – This mail retrieval protocol is frequently used in large networks and commercial and institutional settings. IMAP4 is the current standard.
- Post Office Protocol (POP) - This protocol is supported by most ISPs and is currently more common among consumer applications. POP3 is the current standard.

**Note:** For more information, review your email carrier's support documents or contact your IT administrator.

## Email Icons/Shortcuts



- Email shortcut



- Gmail shortcut

## Status Bar - Notifications



- New Email message received



- New Gmail message received

[Add an Email Account \(POP3 or IMAP\)](#)

[Corporate Email \(Outlook\)](#)

[Open Email](#)






[Create and Send Email](#)

[Reply to or Delete an Email Message](#)

[Configure and Sync Corporate Email Settings](#)

## *Add an Email Account (POP3 or IMAP)*

The Email application only reveals all currently added Email accounts. To view additional email accounts within the main Email screen, they must first be added.

1. Tap  >  >  **Email**.
2. Do one of the following:
  - If this is your first time to add an Email account, tap **Other** and enter your information.
  - If you have already added an Email account in Email, tap  > **Accounts** >  > **Add account**. If the Select email provider screen is displayed, tap **Other**.
3. Enter the **Email address** and **Password** for the Email account and then tap **Next**.
  - Tap **Manual** to configure your connection settings manually (POP3, IMAP, or Exchange). Follow the on-screen prompts and enter the information specific to your carrier.

**Important:** If the account type you want to set up is not in the phone database, you will be asked to enter more details. You should get all pertinent information for the Email account, such as incoming and outgoing server settings, before you proceed.




4. Enter the Account name and Your name and tap **Done**.

## *Corporate Email (Outlook)*

The main Email application also provides access to your Outlook Exchange server via your phone. If your company uses Microsoft Exchange Server 2003, 2007 and 2010 as the corporate email system, you can use this email application to wirelessly synchronize your email, Contacts and directly with your company's Exchange server.

**Important:** This Outlook application does not utilize Microsoft® ActiveSync to synchronize the phone to your remote Exchange Server. This synchronization is done wirelessly over the air (OTA) and not via a direct connection.

## Set Up a Corporate Email

1. Tap  >  >  **Email**.
2. Tap **Microsoft Exchange** (from the select email provider screen).
3. Enter your **Email address** and **Password** information, then tap **Next**. Consult your Network Administrator for further details.
  - **Email address:** Your Outlook work email address.
  - **Password:** Typically your network access password (case-sensitive).
4. Enter a **Server address**, domain and tap **Next**.
  - **Server:** Your exchange server remote email address. Typically starts with mail.XXX.com. Obtain this information from your company network administrator.

- **Domain:** Enter your network domain\login username.
- If your network requires SSL encryption, tap the Use secure connection (SSL) box to place a checkmark and activate this additional level of security.
- **If your exchange server requires this feature, leaving this field unchecked can prevent connection.**

**Note:** Signal interruptions or incorrect username or password information can cause completion issues.





5. Read the on-screen activation disclaimer and, if prompted, tap **Next**.
6. Configure your **Update schedule, Days to sync email** (days to synchronize between your phone and server), and activate any other email settings, then tap **Next**.
7. Identify your new account with a unique name and provide the outgoing name, then tap **Done**.

**Important:** You can synchronize over the air (not directly) with an Exchange Server running Microsoft Exchange Server 2003 Service Pack 2 (SP2) or Microsoft Exchange Server 2010.

**Note:** You can have multiple Work Email (Microsoft Exchange) accounts active on your phone.

## Open Email


Reading and replying to email on your phone is as simple as on your computer.

1. Tap  >  >  **Email**.
2. Tap a message to read, manage, or reply to.
  - From your Inbox screen, tap  to select options, such as **Refresh, Sort by, Accounts, Folders, Account settings**.
  - While in a message, the options described in the image below are available.





## Create and Send Email

Create and send email using any account you have set up on your phone. Increase your productivity by attaching files such as pictures, videos, or documents to email messages.

1. From the Inbox, tap .
2. Enter the recipient's email address in the **To** field.
  - You can add as many message recipients as you want.

**Note:** To send an additional carbon copy (Cc) or a blind carbon copy (Bcc) of the current email to other recipients, enter the recipients in the **Cc** or **Bcc** field.



3. Tap the **Subject** field and enter the email subject.
4. Tap the **Body** field and compose your email.
  - To add an attachment (such as picture, video, contact, event, audio, etc), tap .
  - You can access the internal storage and navigate to the file you wish to attach.
  - Tap the file you wish to attach.
5. Tap  to send the email.

**Note:** If you close the messaging window before sending it, it is stored in Drafts.

## Reply to or Delete an Email Message

Replying to or deleting an email is also simple.

To reply to an email message:

1. From the Inbox, tap an email message to view it.
2. With the email message displayed, tap  and choose **Reply**.
  - If you select **Forward**, you must specify the message's recipients.
3. Enter a new message body and tap .

To delete an email message:

- ▶ Touch and hold an email (from your inbox list) and tap **Delete** from the pop-up context menu.




– or –

With the email message displayed, tap .



## *Configure and Sync Corporate Email Settings*


You can sync and configure various settings for your corporate email and create a corporate email signature.

### Sync Your Accounts

1. Tap  >  > **System settings** > **Accounts & sync**.
2. Tap the Corporate account to reveal the account's synchronization settings screen.
3. Place a checkmark next to each option if you want the phone to automatically synchronize. If you want to manually synchronize, tap  > **Sync now**.


### Configure Corporate Email

1. Tap  >  > **System settings** > **Accounts & sync**.
2. Tap the Corporate account field to reveal the account's synchronization settings screen.
3. Tap **Microsoft Exchange settings**.
  - **Account name:** Displays the name used by the phone to track the account.
  - **Your name:** Displays your name. Tap this to change it.
  - **Signature:** To add a signature or other information to outgoing email.
  - **Update schedule:** Choose the update schedule.
  - **Days to sync email:** Choose how many days of email you want to sync.
  - **Account & sync:** Goes back to Account & sync screen.
  - **Out of office settings: Allows you to set your out of office settings and message.**
  - **Message format:** Allows you to set the message format to HTML or Plain text.
  - **Message size limit:** Allows you to set the size limit for messages.
  - **Entire settings:** Allows you to set the general setting and notification settings, etc.
    - **Set default account:** Allows you to set the default account.
    - **Roaming:** Allows you to retrieve Emails automatically while roaming.
    - **Notifications:** Allows you to decide whether to notify you of new Email.

- **Notification sound:** Allows you to select the notification sound.
  - **Vibrate:** Allows you to configure vibrate options.
  - **Vibrate Type:** Allows you to select the vibration type.
  - **Email permissible range:** Allows you to set the phone to notify you new Email from **Everyone**, **My contacts**, **Favorite contacts**, or **Selected contacts**.
  - **Ask before deleting:** Checkmark to set the phone to ask before deleting Email.
  - **Show image:** Checkmark to show external images in mail always.
  - **Storage:** Allows you to select the depository for attachment files.
  - **Conversational view:** Checkmark if you want to display Email messages with the same subject as a thread.
  - **Corporate directory:** Searches online directory for the recipient input.
  - **Email preview:** Allows you to set how much line of Email as a preview to display in the mail box.
  - **Brightness:** Allows you to adjust your screen's contrast (brightness) to suit your surroundings.
  - **Change login settings:** Allows you to change the login settings for your account.
4. Tap  to return to the previous screen.

For more detailed Corporate email information, see [Corporate Email \(Outlook\)](#). For more information on Corporate Calendar synchronizing, see [Synchronize Your Corporate Account](#).

## *Text and Multimedia Messaging*

With text messaging (SMS), you can send and receive instant text messages between your wireless phone and another messaging-ready phone. When you receive a new message, you will be notified by your phone. Messaging is available via the Messaging application in your Applications screen. The  icon appears in Status Bar when a new text message is received.

**Note:** See your service plan for applicable charges for text messaging.

[Compose Text Messages](#)

[Send a Multimedia Message \(MMS\)](#)

[Save and Resume a Draft Message](#)







[Managing Message Conversations](#)

## Delete Messages

### Text and Multimedia Message Options

## Compose Text Messages

Quickly compose and send text messages on your phone.





1. Tap  >  >  **Messaging** > .
2. Tap the **To** field and enter the recipient's phone number or email information using the on-screen keyboard.
  - **Contacts:** As you enter either a phone number or email address, if the information matches a current contact's entry information, you will see a match. When you see a match, tap the associated name to complete the addressing.
  - **Mobile:** Tap  to use the keypad to enter a wireless phone number directly.
  - **Email:** You can also enter the recipient's email address.
3. Tap a matching entry from the on-screen dropdown list. This list is populated by matches found from your managed accounts.
4. Tap the text field and enter your message.
5. Insert a Smiley.
  - To enter a smiley from the menu options, tap  > **Insert smiley**. Make a selection from the list to insert it into your current message.
6. Review your message and tap **Send**.



## Send a Multimedia Message (MMS)

When you need to add a little more to a text message, you can send a multimedia message (MMS) with pictures, voice recordings, audio or video files, or contact cards (vCard).

**Note:** See your service plan for applicable charges for multimedia messaging.

### Compose Multimedia Messages


1. Tap  >  >  **Messaging** > .
2. Tap the **To** field and enter the recipient's phone number or email information. As you enter the phone number or email address, matching contacts appear on-screen. Tap an available matching recipient or continue entering the phone number or email address.
3. Tap the text field and enter your message.

4. Tap .
5. Select a multimedia attachment type:
  - **Picture:** Opens the Gallery application. Use the on-screen navigation to select the picture you wish to send with the outgoing message.
  - **Capture picture:** Opens the Camera application. Take a picture, and then tap **OK** to use this image in your message. (See [Take Pictures.](#))
  - **Video:** Opens the Gallery application. Use the on-screen navigation to select a video and attach it to your outgoing message.
  - **Capture video:** Opens the Camcorder application. Record a video, then tap **OK** to use this video in your message. (See [Record Videos.](#))
  - **Audio:** Opens a menu that allows you to browse for audio files using different applications.
  - **Record voice:** Opens the message recorder.
    - After recording your message, tap  to attach it to your message.
  - **Slideshow:** Opens the Edit slideshow menu.
    - Tap **Add slide** to create a new slide.
    - Tap the created slide (example, Slide 1), tap **Add picture**, and then select the picture you want to add to the slide.
    - Tap the text field below the image to enter a caption for the picture.
    - When finished, tap **Done** to attach the slideshow to your message.
  - **Contact(vCard):** Opens your Contacts list and allow you to select a picture of a Contact to send.

**Note:** To remove or replace a picture or an audio attachment, on the Compose screen, tap  button next to the attachment.


6. When you are finished creating your new MMS message, tap **Send MMS**.

## *Save and Resume a Draft Message*

While composing a text or multimedia message, tap  to automatically save your message as a draft.



To resume composing the message:

1. On the All messages screen, touch  > **Draft** to view a list of all of your drafts.
2. Tap the message to resume editing it.
3. When you finish editing the message, tap **Send** or **Send MMS**.




## *Managing Message Conversations*

Text and multimedia messages that are sent to and received from a contact (or a number) are grouped into conversations or message threads in the All messages screen. Threaded text or multimedia messages let you see exchanged messages (similar to a chat program) with a contact on the screen.

To read a text message:

- ▶ Do one of the following:
  - On the All messages screen, tap the text message or message thread to open and read it.
  - If you have a new message notification, touch and slide the Status Bar down to open the Notifications panel. Tap the new message to open and read it.




To view a multimedia message (MMS):

1. Tap  >  >  **Messaging**.
2. On the All messages screen, tap a multimedia message or message thread to open it.
3. While viewing a message, tap the play icon (on the video or audio file) to playback the file or tap the image to view the picture.


**Tip:** The file attachment on the MMS message can be saved to the microSD card. To save the attachment, touch and hold the file and tap **Save to SD card** from the Message options context menu.

**Note:** When Auto-retrieve in MMS settings is disabled, only the message header is downloaded. To download the entire message, tap the **Download** button at the right side of the message. For details, see [Text and Multimedia Message Options](#).

To reply to a text or multimedia message:

1. Tap  >  >  **Messaging**.
2. On the All messages screen, tap a multimedia message or message thread to open it.
3. While viewing a message, tap the text field and type your reply message.

4. Once completed, tap **Send** or **Send MMS**.

To return to the All messages screen from a text message thread, tap .




**Note:** To view the details of a particular message, in the message thread, touch and hold the message to open the options menu, and then touch **View message details**.

**Note:** If a message contains a link to a web page, tap the message and then tap the link to open it in the web browser.

**Note:** If a message contains a phone number, tap the message and then tap the phone number to dial the number or add it to your contacts.

To protect a message from deletion:





You can lock a message so that it will not be deleted even if you delete the other messages in the conversation.

1. Tap  >  >  **Messaging**.
2. On the All messages screen, tap a multimedia message or message thread to open it.
3. Touch and hold the message that you want to lock.
4. Tap **Lock message** on the options menu. A lock icon is displayed at the right hand side of the message.




## *Delete Messages*


You can delete a single message or several messages at a time.

To delete a message thread:

1. Tap  >  >  **Messaging**.
2. On the All messages screen, tap the message thread that you want to delete.
3. Tap  > **Delete**.
4. Tap **Select all** and tap **Delete**.
5. When prompted to confirm, tap **OK**. Any locked messages in the thread will not be deleted unless you select the **Delete locked messages** check box.

To delete several message threads:

1. Tap  >  >  **Messaging**.
2. On the All messages screen, tap the message thread that you want to delete.





3. Tap  > **Delete**.
4. Checkmark the message threads you want to delete and tap **Delete**.
5. When prompted to confirm, tap **OK**. Any locked messages in the thread will not be deleted unless you select the **Delete locked messages** check box.

To view contact details and communicate with a contact:

When you have received a message from someone in your stored contacts, you can tap the contact's photo or icon in the message thread to open a menu of options. Depending on the stored contact information, you can view the contact details, phone or send an email message to the contact, and more.

## *Text and Multimedia Message Options*

The messages settings menu lets you control options for your text and MMS messages including message limits, size settings, and notifications.

1. Tap  >  >  **Messaging**.
2. On the All messages screen, tap  > **Settings**.
3. Adjust the following settings according to your needs:
  - **Storage Settings**
    - **Delete old messages:** Enable this option to delete older text messages when the limit for maximum number of text messages is exceeded.
    - **Text message limit:** Sets the maximum number of text messages that can be stored on the phone (per conversation).
    - **Multimedia message limit:** Sets the maximum number of multimedia messages that can be stored on the phone (per conversation).
    - **Signature:** Tap this to automatically add signature (blue checkmark displays).
    - **Callback number:** Check this to automatically add callback number (blue checkmark displays).
  - **Text Message (SMS) Settings**
    - **Set priority:** Select Normal or High.
    - **Message reassembly:** Enable this option (blue checkmark displays) so that multi-segment messages can be reassembled and shown as a single message. Each segment will still count toward your usage.

- **Quick messages:** Tap this to add or edit quick messages. Quick message is the specified text message to send out when you want to ignore an incoming call and respond to the caller with instead.
- **Multimedia Message (MMS) Settings**
  - **Auto-retrieve:** Enable this option to automatically retrieve the entire content of your MMS message. When checked, the MMS message header, message body, and any attachments will automatically download to your phone.  
  
If you disable this option, only the MMS message header will be retrieved and displayed.
  - **Roaming auto-retrieve:** Disable this option if you only desire the MMS message headers to download while roaming. Enable this option to automatically download your complete multimedia messages even while roaming.
  - **Set priority:** Select **Low**, **Normal**, or **High**.
- **Notification Settings**
  - **Notifications:** Enable this option if you wish to receive a notification in the Status Bar when a new text or multimedia message arrives.
  - **Select ringtone:** Allows you to select a ringer to sound when a new message is received. Tap this option, and then select a ringtone that is specific to new text and multimedia messages. A sample will briefly be played upon selection.
  - **Vibrate:** Enable this option if you want the phone to vibrate when a new text or multimedia message is received.
  - **Vibrate type:** Choose what type of vibration you wish to apply to new messages.
  - **New message popup:** Enable this option if you wish to see a new message as a pop-up.
- **Emergency Alerts Settings**
  - **Presidential alert:** Enable this option if you wish presidential alerts to be always presented. This is set to enabled by default.
  - **Extreme alert:** Enable this option to receive extreme alerts.
  - **Severe alert:** Enable this option to receive severe alerts.
  - **AMBER alert:** Enable this option to receive AMBER alerts on child abduction.
  - **Test alert:** Enable this option to allow monthly test alerts.
  - **Font size:** Allows you to select the font size for emergency alerts.




# Synchronize Accounts

Your phone is able to synchronize data from a variety of different sources or sites. These accounts can range from Google, a Corporate Exchange Server, and other social sites, including Facebook, Twitter, and MySpace.

## Synchronize Your Google Account



## Synchronize Your Corporate Account

### Enable Auto-Sync

1. Tap  >  > **System settings** > **Accounts & sync**.
2. Slide  to the right to turn on synchronization.
  - Tap an account you've already set up to choose the type of data you want to synchronize. For example, you can choose to sync your Google Calendar and/or Gmail data.

## Synchronize Your Google Account


By default, there are no accounts managed by the phone. These must be added manually.

1. Tap  >  > **System settings** > **Accounts & sync**.
2. Tap **ADD ACCOUNT** > **Google**.
3. Tap **Existing**.

**Note:** If you do not already have a Google Account, tap **New** and follow the on-screen prompts to create your new account.

4. Tap the **Email** and **Password** fields and enter your information.
5. Tap **Sign in**. Your phone then communicates with the Google servers to confirm your information.
6. Read the disclaimer about Backup and restore and checkmark to keep the phone backed up with the Google Account. Then, tap **Next**.

### Configure Google Sync Settings



1. Tap  > **System settings** > **Accounts & sync**.
2. Tap the Google Account to reveal the account's synchronization settings screen.
3. Tap the type of data you wish to synchronize (Sync Calendar, Sync Contacts, Sync Gmail, Sync Google Photos, Sync Google Play Books, and many more).

4. Tap  to return to the previous screen.

## *Synchronize Your Corporate Account*

Your phone is capable of synchronizing with your company's Exchange Servers.

To add a new Corporate account:

1. Tap  >  > **System settings** > **Accounts & sync**.
2. Tap **ADD ACCOUNT** > **Microsoft Exchange**.
3. Follow the on-screen prompts to create your new Corporate email account. (See Corporate Email (Outlook.)
4. Tap the options you wish to configure:
  - **Update schedule:** Allows you to configure when to update emails.
  - **Days to sync email:** Allows you to configure how many days of data you want to sync.
  - **Set as default:** Checkmark this if you wish to set as the default account.
  - **Sync Email:** Checkmark this option to sync emails.
  - **Sync Contacts:** Checkmark this option to sync contacts.
  - **Sync Calendar:** Checkmark this option to sync calendar.
5. Tap **Next**.
6. Read the disclaimer and tap **Activate**.

For more detailed Work/Corporate email information, see [Corporate Email \(Outlook.\)](#).

# Apps and Entertainment

---

All your phone's features are accessible through the Apps list.

[Play Store™](#)

[Sprint ID](#)

[Sprint Applications](#)

[Sprint TV & Movies](#)

[Music](#)




[YouTube™](#)

[GPS Navigation](#)

## Play Store™




Play Store provides direct access to Android applications and games to download and install on your phone.

### Access the Play Store


1. Tap  >  >  **Play Store**.
2. If not already logged in with your Google Account, tap **Existing**.
3. Tap **Sign in** and enter your Google Account information.
4. Touch **Accept** to agree to the Play Store terms of service.

**Note:** Play Store options may vary depending on the version installed in your phone. Your Play Store application will update automatically when available.



### Select and Install a Google Application

1. Tap  >  >  **Play Store**.
2. Browse for an application. Once you have decided on one, tap it to view its details.
3. Read the application descriptions and comments.
4. Tap **Install** or **Download** (for free applications) or the **Price** button (for paid applications).





**Note:** Use caution with applications which request access to any personal data, functions, or significant amounts of data usage times.

5. Tap **Accept & download** (for free applications) or follow the on-screen instructions to pay for the application and tap **Accept & buy**.
6. Check the progress of the current download by opening the Notifications Panel.
7. You will be notified when the item is downloaded and installed on your phone.
8. On the Play Store screen, tap  > **My Apps**, tap the installed application in the list, and then tap **Open**.

## Launch an Installed Google Application





1. Tap  > .

– or –

- Tap  >  >  **Play Store** >  > **My Apps**.
2. Tap the icon of the newly installed application.

## Reinstall a Google Application

If the Android Operating System is ever updated, any data contained on the phone will be erased. The only data stored on the phone are Google applications available via Play Store.

1. Tap  >  >  **Play Store** >  > **My Apps**.
2. Swipe the screen to the left and scroll through the list of previously downloaded Google applications and choose the one you wish to reinstall.
3. Follow the on-screen instructions.

## *Sprint ID*




ID Packs are bundles of applications, ringtones, wallpapers, settings, and more. ID Packs are installed using an application called Sprint ID.

You can have multiple ID Packs installed at any one time and you can easily switch from one ID Pack to another without losing any applications already installed. For example, when you install the Sprint ID Pack, Sprint applications such as Sprint TV, Scout, NASCAR Sprint Cup Mobile, and Sprint NBA Mobile will remain in your applications.

## Install Your First ID Pack

**Note:** Your phone must be activated, your battery should be fully charged, and you should be in a network coverage area before you install an ID Pack.




1. Tap  from the Home screen.
  - If your phone is in Power Save mode, press the **Power/Lock Button**  to reactivate the screen.
  - If the lock screen appears, unlock it by dragging the Unlock icon  in any direction.

**Note:** You also have the ability to place an emergency call directly from the Welcome to Sprint ID screen.

2. Tap **Get New ID Packs** in the Choose your ID screen.

**Note:** The Sprint ID pack comes with wallpapers, ringtones, and applications such as **Sprint TV & Movies**, **TeleNav GPS Navigator**, **Sprint Music Plus**, **Sprint NBA Mobile**, and **NASCAR Sprint Cup Mobile**.

3. Browse the ID packs and tap the desired one.
4. Read the information screen for a description of the ID Pack and touch **Install**.
5. Touch **Agree** to accept the Terms & Conditions of the ID Pack.
6. If prompted, touch **Continue** on any following screens until you see the Downloading icon  in the Status Bar.



**Note:** While the ID Pack is downloading in the background, you can begin to explore the features of your new phone from the Home screen.

When the download is complete, you will see the Download finished icon  in the Status Bar.

**WARNING:** DO NOT interrupt the download process.

7. Open the Notifications Panel if the download is complete, then tap **ID ready to install** to install the ID Pack.

## Switch ID Packs

1. Tap  >  (Sprint ID).
2. Tap an ID Pack to replace your current pack.

– or –

Tap **Get New ID Packs** to install a new ID Pack and follow steps 2–7 on the previous page.



**Note:** Certain features of Sprint ID are subject to change. For the most up-to-date information about using Sprint ID, please visit [www.sprint.com](http://www.sprint.com).

## Sprint Applications

You can access a wide variety of Sprint applications in many different categories with your phone and data service. Currently, various applications, such as NASCAR, Sprint NBA Mobile, Scout™ by Telenav, Sprint Music Plus, and Sprint TV are available when you download them from Play Store or Sprint Zone.




**Note:** Some Sprint data applications may not work with a Wi-Fi connection present. If prompted, disable your phone's Wi-Fi feature while using these applications.

### Download Sprint ID Packs

- ▶ Tap  > . On the Choose your ID screen, tap **Get New ID Packs > Sprint**. Follow the on-screen prompts to install one of the Sprint ID packs.

**Note:** Once you download and install one of the Sprint ID packs, various Sprint applications will appear on your Applications screen. When you switch from the Sprint pack to another ID pack, or choose a new ID pack, the Sprint applications will remain installed and visible on your Applications screen.

To download and install Sprint apps:

1. Tap  >  > **[application name]**. The application will then be downloaded.
2. Follow the instructions to customize your application (such as selecting a favorite team or driver) or tap  to explore your options.

**Note:** **Important Privacy Message** – Sprint's policies often do not apply to third-party applications. Third-party applications may access your personal information or require Sprint to disclose your customer information to the third-party application provider. To find out how a third-party application will collect, access, use, or disclose your personal information, check the application provider's policies, which can usually be found on their website. If you aren't comfortable with the third-party application's policies, don't use the application.




[Sprint Zone](#)

[NASCAR Sprint Cup Mobile](#)

[NBA Game Time](#)

## Sprint Zone








Sprint Zone is a free application that lets you stay connected to all the latest news and information from Sprint. Included here are Sprint customer promotions, news, feedback, featured apps and tips/tricks for your phone.

1. Tap  >  >  **Sprint Zone**.
2. Navigate through the list to find your relevant topics.
3. Tap a topic link to continue to that page.

## NASCAR Sprint Cup Mobile

Now you have the ability to get every bit of NASCAR coverage, news, and stats right on your phone.

**Note:** You can download the NASCAR application from the Play Store. (For more detailed Play Store information, see [Play Store™](#).)




1. Tap  >  > **Downloads** tab >  **NASCAR**.
2. On the Welcome screen, tap **Select My Driver** and choose your favorite driver from the list.
3. After selecting your driver, you will be directed to the main page.
4. Navigate the main page using your finger.
5. Tap an on-screen option to activate features that include:
  -  Provides access to **Live Race Center, Drivers, News, Standings, Schedule, Videos, Miss Sprint Cup, NASCAR On SPEED, Fantasy, Fan Zone,** and **Settings/Help**.
  -  Allows you to choose from **Sprint Cup Series, Nationwide Series,** and **Camping World Series**.
  -  Allows you to watch the current qualifying leaderboard.
  -  Allows you to view race and schedule info.
  - **My Driver** Allows you to customize your NASCAR experience by following specific drivers. Information includes driver-specific stats and social media content.
  - **Videos** displays a list of selectable multimedia content.

- **News** Provides you with quick access to NASCAR-specific news, editorials, and photos.
- **Tweets** Allows you to view the latest Twitter updates.

## *NBA Game Time*

Get access to in-game and post-game video highlights, news, stats, scores, and live radio broadcasts. Sprint NBA Mobile also provides direct access to live ESPN NBA Games via Sprint TV's ESPN Channel.

**Note:** You can download the **NBA Game Time** application from the **Play Store**. (For more detailed **Play Store** information, see [Play Store™](#).)

1. Tap  >  > **Downloads** tab > **NBA Game Time**.
2. Browse the application menus to stay up-to-date with the NBA.
3. Tap the **Menu Key**  for the following options:
  - **Home:** Allows you to return to the Sprint NBA Mobile Home page.
  - **Scores:** Allows you to view the scores of current and past games.
  - **Video:** Allows you to watch video highlights and live games.
  - **League:** Allows you to view Conference, Division, and League standings.
  - **More:** Allows you to access the following options.
    - **Settings:** Allows you to set up various application options.
    - **League Pass:** Allows you access to your League Pass subscription.
    - **Favorite Team:** Allows you to select your favorite team.
    - **NBA Store:** Allows you to access the NBA Store.
    - **Feedback:** Allows you to send feedback to the application developer.
    - **FAQ:** Allows you to view the frequently asked questions.
    - **About NBA Game Time:** Allows you to view version information about the application.
    - **Terms & Conditions:** Allows you to view the Terms & Conditions.
    - **Blackout Information:** Allows you to view information about game blackouts.




## Sprint TV & Movies

The Sprint TV & Movies application offers a wide variety of accessible channels. Subscription options include comprehensive basic packages as well as a full menu of a la carte channels. Visit [sprintchannels.mobitv.com](http://sprintchannels.mobitv.com) for more information on channels and pricing.

**Note:** You can download the Sprint TV & Movies application from the Play Store. (For more detailed Play Store information, see [Play Store™](#).)

**Note:** Available categories and content are subject to change.

### Watch TV

1. Tap  >  >  **Sprint TV & Movies**. Depending on your settings, your phone may prompt you to accept a data connection.
2. Select **Live TV**, **On Demand**, or **Movies** to display channel options.
3. Tap an entry to select a channel from the Sprint TV listings or to select an available category.

**Note:** The first time you access a channel, the system will prompt you to purchase access (unless the channel doesn't have a monthly fee). Tap **Subscribe** to purchase access.

4. If applicable, tap a desired clip to view the program. The clip will automatically load and begin playing.

**Tip:** Scroll through the channels to view more selections. Once you find a channel that you want to watch or listen to, simply touch it and wait approximately three seconds, and the channel begins loading.




## Music

You can play audio files that are stored on your phone's microSD card. Copy audio files from your computer onto the microSD card before you open the Music application. The Music Player application supports audio files in numerous formats, including MP3, WMA, M4A (DRM-free AAC files, from iTunes®), AMR, MIDI, and OGG Vorbis.

### Back Up Your Downloaded Music Files




#### Sprint Music Plus

#### Music Player



 


1. Tap  >  >  **Music**.
2. You can select music tracks from the following tabs:
  - **Songs:** To browse through your downloaded music library.

- **Albums:** To display your music library sorted by album.
  - **Artists:** To display your music library sorted by artist.
  - **Playlists:** To select a customized playlist you've created.
  - **Folders:** To browse for music files using folders.
3. Once you've displayed a list of songs, you can browse through your available titles.
    - To listen to a song or playlist, tap it to begin playing.

### Create a Playlist

1. Tap  >  >  **Music > Songs**. All compatible music files are displayed.
2. Touch and hold a song you'd like to add to a playlist. A context menu is displayed.
3. Tap **Add to playlist** and select either **Now playing list** or **New playlist** (to create a new playlist).
  - If you select **New playlist**, delete the current default name, enter a name for your new playlist, then tap **OK**.

### Assign a Song as a Ringtone

1. Tap  >  >  **Music > Songs**.
2. Touch and hold a song you'd like to use as your new ringtone. A context menu is displayed.
3. Tap **Set as ringtone** to set the selected song as your new default ringtone.
4. Confirm the song has been successfully assigned by navigating to your phone's ringtone menu.
  - Tap  >  > **System settings > Sound > Phone ringtone**.

### *Back Up Your Downloaded Music Files*

Sprint recommends that you back up your downloaded music files to your computer. Although the downloaded files can only be played on your phone and on your account, backing them up to your computer lets you access the files in case your microSD card is lost or damaged, or if you install a new microSD card. (See [Connect Your Phone to Your Computer](#).)

1. Connect your phone to your PC using a USB cable or the built-in connection on Bluetooth-enabled phones.
2. Use your computer to navigate to the microSD card's **Music** folder.



3. Select and copy the music files to a folder on your computer's hard drive.

## *Sprint Music Plus*



The Sprint Music Plus store lets you purchase and download digital music files to play on your phone or computer.

**Note:** You can download the Sprint Music Plus application from the Play Store. (For more detailed Play Store information, see [Play Store™](#).)

### Access Sprint Music Plus

1. Tap  >  > **Downloads** tab > **Sprint Music Plus**. Depending on your settings, your phone may prompt you to accept a data connection.
2. If prompted, follow the on-screen instructions to download the application.





### Purchase and Download Music from Sprint Music Plus




1. Tap  >  > **Downloads** tab > **Sprint Music Plus**.
2. Tap **My Library**, **Downloads**, **Music Store**, **Ringtone Store**, or **Ringback Tone Store** to begin your music selection.
  - **My Library** allows you to access your music library.
  - **Downloads** allows you to view any pending downloads.
  - **Music Store** provides access to various menus to download music.
  - **Ringtone Store** provides access to various menus to download ringtones.
  - **Ringback Tone** Store provides access to various menus to download ringback tones.

## *YouTube™*

YouTube™ is a video sharing website on which users can upload and share videos. The site is used to display a wide variety of user-generated video content, including movie clips, TV clips, and music videos, as well as video content such as video blogging, informational shorts and other original videos.

**Note:** YouTube is a data-intensive feature. Sprint recommends that you upgrade to an unlimited data plan to avoid additional data charges.

1. Tap  >  >  **YouTube**.
2. To search for videos, tap .

3. Enter the text to search for or tap  to search by voice.
4. If entering text, tap a suggestion below the search box or tap  to search.
5. Scroll through the search results and tap a video to watch it.
6. Tap  to return to the previous page.

## GPS Navigation

Your phone's built-in GPS capability gives you access to a number of location-based services, including Maps, Navigation, and Scout™ by TeleNav.

[Google Maps™](#)





[Scout™ by Telenav](#)

[Google Navigation](#)

 
## Google Maps™

You can use Google Maps to find your current location; to view real-time traffic conditions; to get detailed directions by foot, public transportation, bicycle, or car; and to navigate by using spoken, turn-by-turn driving instructions using the Google Maps Navigation (beta) service. You can search on a street map or a satellite image to locate an address or a landmark, and you can view some locations as if you were strolling down the street. If you join Google Latitude, you can view your friends' locations on your maps and share your location and other information with them. There are some locations that Maps does not have information about.

### Launch Google Maps

1. Tap  >  >  **Maps**
2. Tap . The map centers on a blue arrow that indicates your location. A blue circle around the arrow indicates that your actual location is within the circle.



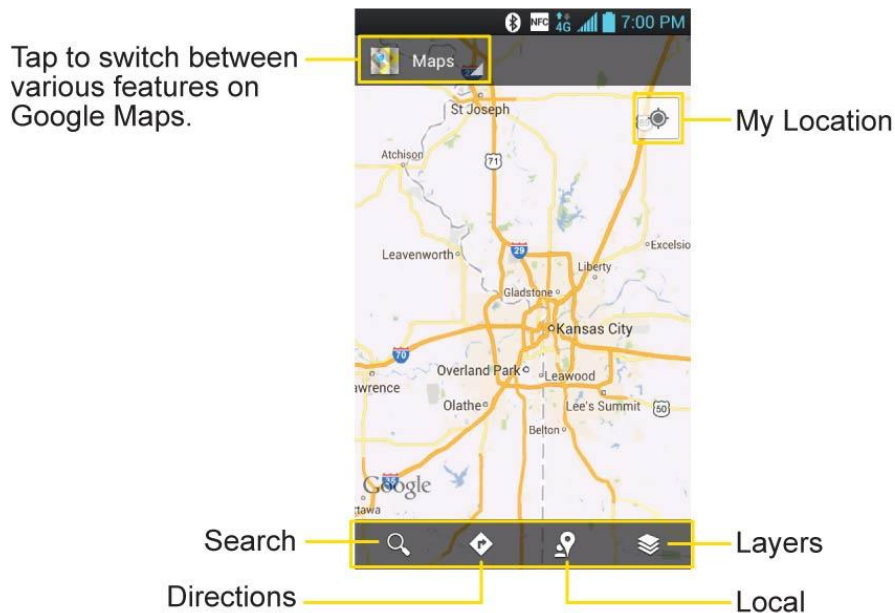




 To get an address and additional information for a location:





- ▶ Touch and hold a location on the map. A balloon with the address and a thumbnail from Street View (if available) opens over the location.
- ▶ Tap the balloon to access additional options.

To utilize Google Maps:



1. Tap  >  >  **Maps**
  - If prompted, read the What's new message and tap **OK**.
2. Pinch out or in to zoom in or out of the current map view.

– or –







Tap each icon at the bottom of the screen.

-  (Search) to search for a location.
-  (Directions) to get directions.
-  (Local) to find restaurants, bars and more.
-  (Layers) to view locations and additional information overlaid on the Maps.


To search for a location:

1. While viewing a map, tap .
2. In the search box, enter the place you're looking for.
  - You can enter an address, a city, or a type of business or establishment. For example, "theater in New York".
3. Tap . Markers with letter labels indicate search matches on the map.
4. Tap a marker to open a balloon that contains a label. Tap the balloon to open a screen with more information about the location, as well as options for obtaining directions.

To get directions:



1. While viewing a map, tap .
2. Enter a starting point in the **My Location** field, or leave as is to allow GPS to find your location, and your destination in the **End point** field.
  - Tap  to open a menu with options for selecting an address from your Contacts or a point that you touch on a map.
  - To reverse directions, tap  > **Reverse Start & End**.
3. Tap the icon for car, public transit, bicycling, or walking directions.
4. Tap **GET DIRECTIONS**. The directions to your destination appear as a route.
5. You can choose the directions format:
  - Tap **DIRECTIONS LIST** to read directions as text.
  - Tap  to see turn-by-turn directions.
  - Tap  to launch turn-by-turn GPS Navigation (beta) (if available for your region and transportation method).
  - When you're finished, tap  > **Clear Map** to clear the map.

To discover and share places:

1. While viewing a map, tap .
2. Tap a category to begin browsing. Results will appear on the map for the area you're currently viewing.

3. After discovering a place, you can see the location, get directions, or call.



To add layers for familiar features such as Traffic, Terrain or Google Latitude:

1. While viewing a map, tap . A dialog opens with a list of layers as well as shortcuts to any recent searches.
2. Tap the layer you'd like to view to place a green checkmark. You can add multiple layers.
  - If you turn a layer on, the layer will remain on the map until you specifically turn it off or clear the map.
3. To clear the map of all layers, tap  > **Clear Map**.



## *Scout™ by Telenav*

Scout™ by Telenav is a daily personal navigator that helps you get where you're going. It lets you see and hear turn-by-turn directions and it can provide important, personalized information about traffic and alternate routes.



### Get Scout

1. Tap  >  >  **Play Store**.
2. Tap **Apps** > **Sprint** > **Scout** and follow the prompts to download and install the app.

### Use Scout




1. Tap  >  > **Downloads** tab > **Scout**.
2. Follow the onscreen instructions to access, launch, and use.

**Note:** Before using any navigation programs, make sure your phone is set to allow location detection, and then select which sources you want to use.

Tap  >  > **System settings** > **Location services**. Select Google's location service and/or GPS satellites for location sources.

## *Google Navigation*

Another Google Maps navigation application is available on your phone. It uses your current location (provided by GPS communication to your phone) to provide various location-based services.

1. Tap  >  >  **Navigation**.
2. Read the on-screen disclaimer and tap **Accept**.

3. Choose from the following on-screen options:

- **Speak Destination** to use the voice recognition feature to search for matching locations in your area.
- **Type Destination** to manually enter a destination address.
- **Contacts** to receive turn-by-turn directions to the address stored for a selected Contacts entry.
- **Starred** to obtain directions to locations that have been starred within Google maps ([maps.google.com](https://maps.google.com)).

# Web and Data

---

Your phone's data capabilities let you wirelessly access the Internet or your corporate network through a variety of connections, including Wi-Fi, Sprint 4G, Data Services (Sprint 3G Network), and Virtual Private Networks (VPN).

This section addresses your phone's data connections and the built-in web browser. Additional data-related features can be found in Accounts and Messaging, Applications and Entertainment, and Tools and Calendar.

[Connect Wi-Fi](#)

[Data Services](#)

[Virtual Private Networks \(VPN\)](#)

[Browser](#)

[Tethering and Portable Hotspot](#)

## Connect Wi-Fi


Wi-Fi is a wireless networking technology that can provide Internet access at distances of up to 100 meters, depending on the Wi-Fi router and your surroundings.

[Wi-Fi Protected Setup](#)

[Wi-Fi Direct](#)

To use Wi-Fi on your phone, you must connect to a wireless access point, or hotspot. Some access points are open and you can simply connect to them without entering any information. Others are hidden or implement other security features, so you must configure your phone to connect to them.


Turn off Wi-Fi when you're not using it to extend the life of your battery.

When you connect to a Wi-Fi network, the phone obtains a network address and other information it needs from the network, using the DHCP protocol. To configure the phone with a static IP address and other advanced settings, tap  > **Advanced** from the Wi-Fi settings menu.

### Turn Wi-Fi On and Connect to a Network

Use the Wireless & networks setting menu to enable your phone's Wi-Fi radio and connect to an available Wi-Fi network.

1. Tap  > .

2. Tap **System settings > Wi-Fi**.
3. Slide the **Wi-Fi** switch  to the right to turn Wi-Fi on and scan for available Wi-Fi networks.
  - A list of available Wi-Fi networks will be displayed. Secured networks are indicated by a lock icon.
  - If the phone finds a network that you have connected to previously, it automatically connects to it.
4. Tap a network to connect to it.
  - If the network is open, you will be prompted to confirm that you want to connect to that network by touching **Connect**.
  - If the network is secured, you will be prompted to enter a password. (Ask your network administrator for details.)
  - When you're connected to a network, you can tap the network name in the Wi-Fi settings screen for details about the speed, security, address, and related settings.

To receive notifications when open or secured networks are in range:

By default, when Wi-Fi is on, you receive notifications in the Status Bar when your phone detects an open Wi-Fi network.

1. Turn on Wi-Fi, if it's not already on.
2. From the Wi-Fi settings screen, tap **Network notification** and select "**Open networks**" or "**Any Wi-Fi networks**". Select "**OFF**" if you want to stop receiving notifications.

## Add a Wi-Fi Network

You can add a Wi-Fi network manually if it does not broadcast its name (SSID) or if you want to add a Wi-Fi network when you are out of its range.

To add a secured network, you need to contact the network's administrator to obtain the password or other required security credentials.

1. Turn on Wi-Fi, if it's not already on.
2. From the Wi-Fi settings screen, tap **ADD NETWORK**.
3. Enter the Network SSID (name) of the network. If the network is secured, tap the **Security** drop-down menu and tap the type of security used for the network.
4. Enter the required passwords and security credentials.
5. Tap **Save**.

The phone will connect to the wireless network. Any credentials that you entered are saved, so you are connected automatically the next time you come within range of this network.

To forget a Wi-Fi network:



You can also make the phone forget about the details of a Wi-Fi network that you have added. For example, if you don't want the phone to connect to it automatically or if it is a network that you no longer use.

1. Turn on Wi-Fi, if it's not already on.
2. In the Wi-Fi settings screen, touch and hold the name of the network.
3. Tap **Forget network**.

## *Wi-Fi Direct*

Wi-Fi Direct supports a direct connection between Wi-Fi enabled phones without an access point. Due to the high battery usage of Wi-Fi direct, it is recommended that you plug your phone into a power outlet while using the Wi-Fi Direct feature.

To turn on Wi-Fi Direct:

1. Tap  >  > **System settings** > **More...** > **Wi-Fi Direct**.
2. Tap **Wi-Fi Direct**. (A blue checkmark will appear.)
3. Tap **CREATE GROUP** to create a group.
4. Tap **SEARCH** to search for available phones.

## *Data Services*

With your Sprint service, you are ready to start enjoying the advantages of data services. This section will help you learn the basics of using your data services, including managing your user name, launching a data connection, and navigating the web with your phone.

[Your User Name](#)

[Launch a Web Connection](#)

[Data Connection Status and Indicators](#)

**Important:** Certain data services requests may require additional time to process. While your phone is loading the requested service, the touchscreen or QWERTY keyboard may appear unresponsive when in fact they are functioning properly. Allow the phone some time to process your data usage request.




## Your User Name

When you buy your phone and sign up for service, you're automatically assigned a user name, which is typically based on your name and a number, followed by "@sprintpcs.com." (For example, the third John Smith to sign up for Sprint data services might have jsmith003@sprintpcs.com as his user name.)

When you use data services, your user name is submitted to identify you to the Nationwide Sprint Network. Your user name will be automatically programmed into your phone. You don't have to enter it.

## Update Your User Name

If you choose to change your user name and select a new one online, you must then update the user name on your phone.

- ▶ Tap  >  >  **Settings > System updates > Update profile.**
  - Your profile will be automatically updated by the network.

## Launch a Web Connection

Launching a web connection is as simple as opening the browser on your phone.

- ▶ Tap  >  >  **Browser.**


Once the Browser loads, you are directed to the home page.

**Tip:** To change the default home page, tap  > **Settings > General > Set homepage.**


**Note:** The Browser automatically launches when a web link is touched from within an email or text message.

## Data Connection Status and Indicators

Your phone notifies you of the current status of your data connection through status icons in the Status Bar. The following symbols can be displayed:

 Your phone is connected to the high-speed 4G Sprint Mobile Broadband Network. When the signal bands are animated, your phone is scanning and connecting. During data transfer, the animated icon is not used (for example, when you are opening a web page). When the signal bands are gray, your phone is connected to the network, signal is weak.

When both the bands and the 4G icon are gray, there is no coverage and you are disconnected from the 4G network.

 Your phone is connected to the high-speed Sprint Mobile Broadband Network(3G/1x). When the arrows are animated, your phone is transferring data. When the arrows are



gray, your phone is connected to the network but is not currently transferring data. In either state, you can receive incoming calls.

If you do not see an indicator, your phone does not have a current data connection. To launch a connection, see [Launch a Web Connection](#).

## *Virtual Private Networks (VPN)*

From your phone, you can add, set up, and manage virtual private networks (VPNs) that allow you to connect and access resources inside a secured local network, such as your corporate network.

[Prepare Your Phone for VPN Connection](#)

[Set Up Secure Credential Storage](#)

[Add a VPN Connection](#)



[Connect to or Disconnect From a VPN](#)

### *Prepare Your Phone for VPN Connection*

Depending on the type of VPN you are using at work, you may be required to enter your login credentials or install security certificates before you can connect to your company's local network. You can get this information from your network administrator. Before you can initiate a VPN connection, your phone must first establish a Wi-Fi or data connection. For information about setting up and using these connections on your phone, see [Launch a Web Connection](#) and [Turn Wi-Fi On and Connect to a Network](#).

### *Set Up Secure Credential Storage*



If your network administrator instructs you to download and install security certificates, follow the instructions below.

1. Tap  >  > **System settings** > **Security**.
2. Tap **Install from storage** and browser for desired certificates.

You can then download and install the certificates needed to access your local network. Your network administrator can tell you how to do this.

### *Add a VPN Connection*

Use the Wireless & networks settings menu to add a VPN connection to your phone.

1. Tap  >  > **System settings** > **More...** > **VPN**.
2. Tap **Add VPN network**.




3. Configure the settings according to the security details you have obtained from your network administrator.
4. When finished, tap **Save**.

The VPN is then added to the VPNs section of the VPN settings screen.

## *Connect to or Disconnect From a VPN*

Once you have set up a VPN connection, use the Wireless & networks settings menu to connect to or disconnect from the VPN.

### Connect to a VPN

1. Tap  >  > **System settings** > **More...** > **VPN**.
2. In the VPNs section, tap the VPN that you want to connect to.
3. When prompted, enter your login credentials, and then tap **Connect**. When you are connected, the VPN connected icon  appears in the notification area of the Status Bar.
4. Open the web browser to access resources such as intranet sites on your corporate network.

### Disconnect From a VPN

1. Touch and drag down the Status Bar to open the Notifications Panel.
2. Tap the VPN connection to return to the VPN settings screen, and then tap the VPN connection to disconnect from it.

When your phone has disconnected from the VPN, the VPN disconnected icon  is displayed in the notification area of the Status Bar.

## *Browser*

Your phone's web browser gives you full access to both mobile and traditional websites on the go, using 3G, 4G, or Wi-Fi data connections.

[Learn to Navigate the Browser](#)

[Go to a Specific Website](#)

[Browser Menu](#)

[Adjust Browser Settings](#)

[Create Website Settings](#)

[Create Bookmarks](#)

## Learn to Navigate the Browser

Navigating through menus and websites during a data session is easy once you've learned a few basics. Here are some tips for getting around:

**Note:** Prior to gaining access to Sprint's Powerdeck web page, you may be asked to enter your 10-digit PCS phone number and tap **Ok**. Entering your phone number is not required for access to other web pages.

### Scrolling

As with other menus on your phone, you'll have to scroll up and down to see everything on some websites.

To scroll a web page:

- ▶ Slide your finger on the screen in the direction you wish to scroll.

### Selecting

Once you've learned how to scroll, you can start navigating the web.


To select items or links:

- ▶ Simply tap a link or an item.

Links, which are displayed as underlined text, direct you to web pages, select special functions, or even place calls.


### Go Back

To go back one page:

- ▶ Tap  on your phone. Repeat this process to keep going back through your recently visited pages.

### Find and Copy Text on a Web Page

To find text on a web page:

1. Tap  > **Find on page**.
2. Enter the text you're looking for.
  - As you type, the first word with matching characters is highlighted on the screen and subsequent matches are boxed.
3. Tap the left or right arrow to jump to and highlight the previous or next matching word.

To copy text from web page:

1. Open a web page and scroll to the beginning of the text you want to copy
2. Touch and hold the first word of the text you want to copy.
3. Drag either selection tab to expand or reduce the range of selected text.
  - To cancel the selection, simply tap unselected text or empty area.
4. Tap the selected text. The text you selected is copied to the clipboard. You can now use the techniques described in [Enter Text](#) to paste the copied text into a text field.

## *Go to a Specific Website*

Follow the instructions to go to a particular website by entering a URL (website address).

1. Tap the URL field (top of the Browser window) and enter a new web address.
  - As you enter the address, possible matches are displayed. Tap an entry to launch the desired website.
2. Tap the suggested website or the **Go** key on the keyboard.

## *Browser Menu*

The Browser menu offers additional options to expand your use of the web on your phone.

### Open the Browser Menu

The Browser menu may be opened anytime you have an active data session, from any page you are viewing.

- ▶ From any open web page, tap .



Options available within the Browser menu include:

- **Refresh:** Reloads the current web page and displays the most current information.
- **Save to bookmarks:** Allows you to save the current page to your bookmarks.
- **Go to Homepage:** Allows you to go directly to the homepage.
- **Share page:** Allows you to send a URL via Bluetooth, Email, Gmail, and Messaging.
- **Find on page:** Allows you to search the current Web page for a word.
- **Request desktop site:** Allows you to view the current page in desktop view.
- **Save for offline reading:** Allows you to save the current page for reading offline.
- **Brightness:** Allows you to adjust the Browser's brightness level.

- **Settings:** Allows you to configure and manage your Browser settings.
- **Exit:** Allows you to completely exit the Browser.


## Adjust Browser Settings

You can change the page settings for your browser, including default zoom level, pop-up blocking, display options, setting your home page, and more.


1. Tap  to open the Browser menu.
2. Tap **Settings**.
3. Select a sub-category and make the desired changes:
  - **General:** Settings for Homepage, Toolbar & Form auto fill.
  - **Privacy & Security:** Settings for managing personal data from web browsing and usage.
  - **Accessibility:** Settings for better visibilities.
  - **Advanced:** Adjust JavaScript and other web content settings.
  - **Bandwidth management:** Settings for Search result preloading and Load images.
  - **Labs:** Experimental functions provided by Google.
4. Tap  to return to the Browser.

## Set the Browser Home Page

Customize your web experience by setting your browser's home page.


1. Tap  to open the Browser menu.
2. Tap **More > Settings > General > Set home page**.
3. Select one of the available options and enter the necessary information.

## Reset the Browser to Default

1. Tap  to open the Browser menu.
2. Tap **Settings > Advanced > Reset to default**.
3. Tap **OK** to complete the process.

## Create Website Settings



You can create settings for individual websites.

1. Tap  to open the Browser menu.
2. Tap **Settings > Advanced > Website Settings**. These advanced settings that can be configured for individual sites (ex: Clear location access).
3. Tap **OK** to complete the process.


## Create Bookmarks

Make browsing easier by setting up and using custom bookmarks.

You can bookmark web pages so that you can quickly return to them.

1. From any open web page, open the toolbar at the bottom of the screen.
2. Tap . Three tabs are revealed:
  - **Bookmarks**: Displays a list of your current bookmarks.
  - **History**: Displays a record of your browsing history. These records are organized into folders such as: **Today**, **Yesterday**, **5 days ago**, and **1 month ago**.
  - **Saved pages**: Displays the pages you've saved for offline reading.
3. In the Bookmarks tab, tap  > **Add bookmark**.
4. Enter a descriptive name and URL for the new bookmark.
5. Tap **OK** to store the new entry to your Bookmarks list.


## Create Bookmarks from Other Tabs

1. From any open web page, open the toolbar at the bottom of the screen and tap .
2. Tap the **History** tab.
3. Tap the star icon adjacent to a web page entry. The star now turns gold. This adds the “starred” website to your current Bookmarks list.

– or –


Touch and hold an entry from the list to display a context menu. Then, tap **Save to bookmarks** to add the selected entry to your current list of bookmarks.

## Create a New Home Page

1. From any open web page, open the toolbar at the bottom of the screen and tap .
2. Tap either the **Bookmarks** or **History** tab.

3. Touch and hold an entry from the list to display a context menu.
4. Tap **Set as homepage** to assign the selected entry as your new homepage.

### Add Bookmarks to Your Home Screen



1. From any open web page, open the toolbar at the bottom of the screen and tap .
2. Touch and hold an existing entry from the list to display a context menu.
3. Tap **Add shortcut to home** to add the selected entry to your Home screen.

## *Tethering and Portable Hotspot*

You can share your phone's data connection with up to five phones at once, by turning your phone into a portable Wi-Fi hotspot.



When your phone is sharing its data connection, appears in the Status Bar. For the latest information about portable hotspots, including supported operating systems and other details, please visit <http://www.android.com/tether#wifi>.

To share your phone's data connection via USB cable:

1. Tap  >  > **System settings** > **Connectivity**.
2. Connect your phone to your computer with a USB cable.
3. Tap **USB tethering** to activate it. (A blue checkmark will appear.)

**Note:** You cannot access your phone's microSD card on your computer when using USB tethering.

To share your phone's data connection as a portable Wi-Fi hotspot:

1. Tap  >  > **System settings** > **More...** > **Portable Wi-Fi hotspot**.
2. Tap **Portable Wi-Fi hotspot** to activate it. (A blue checkmark will appear.) After a moment, the phone starts broadcasting its Wi-Fi network name (SSID), so you can connect it with up to 8 computers or other phones.
3. To change the network name (SSID) or secure its Wi-Fi network, tap **Configure Wi-Fi hotspot**.
4. In the dialog box, configure the options.
  - Tap the **Network SSID** field and enter a new network SSID (name) that other computers see when scanning for Wi-Fi networks.

- To secure the Wi-Fi network, tap the **Security** menu and select **WPAP2 PSK** (Wi-Fi Protected Access 2 with a Preshared Key). When a password field is added to the dialog box, enter a password. You will need to enter this password when you connect the phone's hotspot with a computer or other phone.
- Tap the **SSID Visibility** field to decide if you want your hotspot to be displayed to other devices.
- To limit the number of phones to share your phone's data connection, tap **Max users** and select the number of the phones to limit.

5. Tap **Save**.



# Camera and Video

---

You can use the camera or camcorder to take and share pictures and videos. Your phone comes with a 5 megapixel camera with an autofocus feature that lets you capture sharp pictures and videos.

[Take Pictures](#)

[Record Videos](#)

[Video Wiz](#)

You can take pictures and record videos using the Camera application. You can also view your pictures and videos with the Gallery application.

**Note:** Be sure to clean the protective lens cover with a microfiber cloth before taking pictures. A lens cover with smudges from fingers can cause blurry pictures with a "halo" effect.

## Take Pictures

 
Taking pictures with your phone's built-in camera is as simple as choosing a subject, pointing the lens, and pressing a button.

[Camera Settings](#)




[View Your Pictures](#)

[Gallery Options](#)

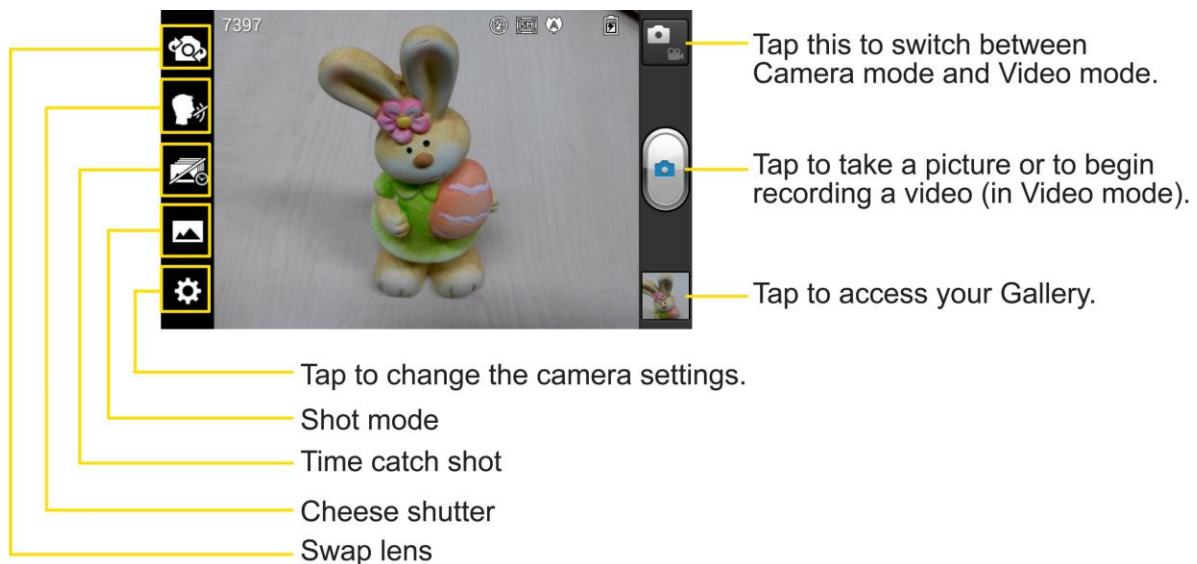
[Assign Pictures](#)



To take a picture:






1. Tap  >  >  **Camera** to activate camera mode. (Additional camera options are available through the camera settings page. See [Camera Settings](#) for more information.)
2. Frame your subject on the screen.
3. Tap the subject on the screen to focus on it. A green square around the subject indicates that the camera has focused.

**Note:** To zoom in, press the Volume Buttons.

4. Tap  until the shutter sounds. The camera brings the image into focus. When the image is in focus, the focus indicators in each corner turn green and the camera takes a picture. (Your phone automatically saves the picture to the microSD card.)

## Camera Settings




From the camera mode, tap each icon to adjust the following camera settings.

-  **Swap lens** to swap between the rear camera lens and the front camera lens.
-  **Cheese shutter** to turn on or off the voice shot. When on, you just say "Cheese", "Smile", "Whisky", "Kimchi", or "LG" to take a picture.
-  **Time catch shot** to capture the missing moment before pressing the shutter.
-  **Shot mode** to select the shot mode from: **Normal**, **HDR**, **Panorama**, and **Continuous shot**.
  - **Normal:** Captures a normal photo shot.
  - **HDR:** Combines photos taken at different exposures to one optimal photo compensating for backlight by enhancing multiple exposure control.
  - **Panorama:** Multiple continuous photos are assembled into one single panoramic image. Tap the Capture button to start then slowly turn the camera from one side of the screen to the other.
  - **Continuous shot:** Six continuous photos are taken, one after another.
-  **Settings** to adjust the following camera settings.
  - **Flash** to set the Flash mode. Choose from **Off**, **On**, or **Auto**.
  - **Brightness** to adjust the brightness setting compatible with the environment.

- **Focus** to set a focus mode. Choose from **Auto** or **Face tracking**.
- **Image size** to set the size of your picture.
- **Scene mode** to choose a scene mode setting.
- **ISO** to control the camera's sensitivity to light. Choose from **Auto (default)**, **800**, **400**, **200**, or **100**.
- **White balance** to select how the camera adjusts colors in different kinds of light in order to achieve the most natural-looking colors for your pictures. Choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent**, or **Cloudy**.
- **Color effect** to apply different color effects to your pictures. Choose from **None**, **Mono**, **Sepia**, or **Negative**.
- **Timer** to set your camera's timer.
- **Geotagging** to use your phone's location-based services. Take pictures wherever you are and tag them with the location. If you upload tagged pictures to a blog that supports geotagging, you can see the pictures displayed on a map.
- **Shutter sound** to adjust the sound the shutter makes when taking a picture.
- **Auto review** to set whether to view the picture that was just taken. Choose from **Off** (default), **On**, **2 sec**, or **5 sec**.
- **Storage** to choose where to save your pictures.
- **Reset** to restore all camera default settings.
- **Camera help guide** to see the help guide whenever you want to know how a function operates.

## *View Your Pictures*




The Gallery is where you can access the Gallery of stored camera images. You can view them in a slideshow, share them with your friends, and delete and edit them.

1. Tap  >  >  **Gallery**.
2. Select a location and tap an image to view your picture.







## *Gallery Options*

The Gallery application presents the pictures and videos on your microSD card, including those you've taken with the Camera application and those you downloaded from the web or other locations.

If you have one of your phone's Google™ Accounts, you'll also see your Picasa web albums in Gallery.





1. Tap  >  >  **Gallery** to view the images stored on the microSD card.
  - Drag left or right to view more albums.
2. Tap an album to open it and view its contents. (The pictures and videos in the album are displayed in chronological order.)
3. Tap a picture in an album to view it.



- Tap a picture again to reveal the following icons:
  -  **SmartShare**: With DLNA certified devices, you can share media files.
  -  **Camera**: Opens the Camera.
  -  **Share via**: You can share the picture via various methods such as Messaging or Bluetooth.
  -  **Delete**: Deletes the picture.
- Tap  for options, such as **Set image as, Move, Copy, Rename, Rotate left, Rotate right, Crop, Edit, Slideshow, and Details.**
- Tap  to return to the previous screen.

## *Assign Pictures*

After taking a picture, assign it as a picture ID for a Contacts entry or as the Home screen background image (wallpaper).

1. Tap  >  >  **Gallery**.
2. Tap an album and tap an image to view it.
3. With the picture displayed, tap  > **Set image as**.

4. Select an option.

- **Contact Photo** to assign the picture to a Contact entry as a picture ID. Tap an entry from Contacts, crop the image and tap **OK** to assign the picture.
- **Home screen wallpaper** to assign the picture as a background image, crop the image and tap **OK** to assign the picture.
- **Lock screen wallpaper** to assign the picture as a background image for your lock screen.







## Record Videos

In addition to taking pictures, you can record, view, and send videos with your phone's built-in video camera.

### Video Settings




### Video Gallery Options




In addition to taking pictures, you can record, view, and send videos with your phone's built-in video camera.

1. Tap  >  >  **Camera**.
2. Tap  to switch to Camcorder mode.
3. Select **MMS video** to record a short video for email or messaging or **Long video**.
4. Point the lens to frame the scene where you want to start.
5. Tap  to start recording the video. The length of the recording is displayed on the top left part of the screen.
6. Tap  to stop recording. Your video will be automatically saved to the Gallery.

## Video Settings





From video mode, tap each icon to adjust the following camcorder settings.



-  **Swap lens** to swap between the rear camera lens and the front camera lens.
-  **Zoom** to zoom in on the subject of your video.
-  **Brightness** to choose a brightness setting compatible with the environment.

-  **Live effect** to provide various visual effects when recording a video. Choose an effect and tap .
-  **Settings** to adjust the following video settings.
  - **Flash** to turn on or off the flash.
  - **Video size** to select the size of your video.
  - **White balance** to select how the camcorder adjusts colors in different kinds of light in order to achieve the most natural-looking colors for your videos. Choose from **Auto**, **Incandescent**, **Sunny**, **Fluorescent**, or **Cloudy**.
  - **Color effect** to apply different color effects to your videos. Choose from **None**, **Mono**, **Sepia**, or **Negative**.
  - **Geotagging** to use your phone's location-based services. Take pictures wherever you are and tag them with the location. If you upload tagged pictures to a blog that supports geotagging, you can see the pictures displayed on a map.
  - **Audio recording** to apply audio recording settings for your video.
  - **Auto review** to enable auto review of your video.
  - **Storage** to choose where to save your videos.
  - **Reset** to restore all camera default settings.
  - **Video help guide** to see the help guide whenever you want to know how a function operates.




## Video Gallery Options

The Gallery is where you can access the Gallery of stored video images. You can view them, share them with your friends, and delete and edit them.

1. Tap  >  >  **Gallery** to view the videos stored on the microSD card and internal memory.
  - Scroll left or right to view more albums.
2. Tap an album to open it and view its contents. (The pictures and videos in the album are displayed in chronological order.)
3. Tap a video to view it. You can access the following options:
  -  **SmartShare**: With DLNA certified devices, you can share media files.



 

-  **Lock/Unlock**: Locks the touch keys to prevent unintentional touches.
- Tap  to access **Screen ratio**, **Brightness**, **Trim** and **Details** options.

 
## Play a Video




1. Tap  >  >  **Gallery** to view videos stored on the microSD card and internal memory.
  - Scroll left or right to view more albums.
2. Tap an album to open it and view its contents. (The pictures and videos in the album are displayed in chronological order.)
3. Tap a video in an album to play.
  - Tap the video to view the playback controls.





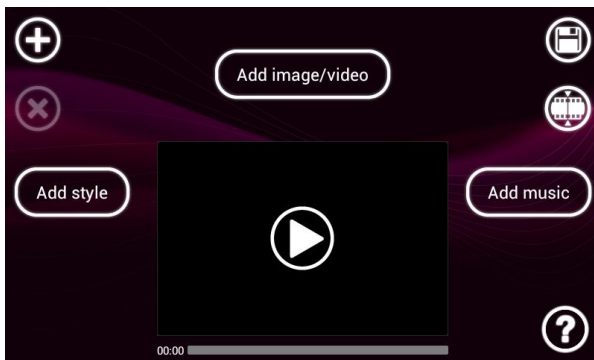
## Video Wiz

You can make your own movie using your images/video and music.

1. Tap  >  >  **Video Wiz**.
2. After seeing the brief introduction on the Steps, tap the  in the upper right hand corner of the introduction screen.



3. Tap  to add images and/or video to your movie.
4. Tap the desired images and/or videos, then tap .
  - To remove images or videos, tap  and select **Delete selected** or **Delete all files**.
  - To rearrange them, touch and hold an image/video, drag and drop it to the desired position.

5. Tap **Add style** to select the desired movie style.
  - Scroll through and select the style you want. As you scroll through the styles, a preview is displayed.
6. Tap **Add music** to set the background music.
7. Tap  to play your movie.
8. Tap  to edit the video clip using Overlay Text, Overlay Image, or Trim Video.
  - After editing the video, tap .
9. Tap  to save the video.
10. Tap  to view the help information on using this feature.



# Tools and Calendar

---

Learn how to use many of your phone's productivity-enhancing features.

[QuickMemo™](#)

[FileShare](#)

[SmartShare](#)

[Calendar](#)

[Folders](#)

[Alarms/Clock](#)

[Calculator](#)

[Bluetooth](#)

[microSD Card](#)

[Update Your Phone](#)


## QuickMemo™

 
The QuickMemo™ feature allows you to create memos and capture screen shots. You can use QuickMemo to easily and efficiently create memos during a call, with a saved picture or on the current phone screen.

1. While viewing the screen you want to capture and create a memo on, press and hold both Volume Buttons at the same time for one second to access the QuickMemo feature.








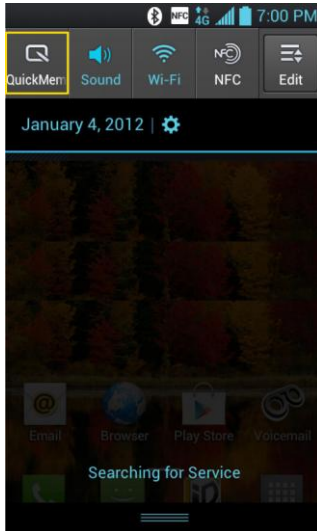

– or –

 



While viewing the screen you want to capture and create a memo on, slide the Status Bar down and tap .




2. Create a memo using the following options:

- : Tap to select whether to use the background screen.
- : Tap to undo the most recent action.
- : Tap to redo the most recently deleted action.
- : Tap to select the pen type and color.
- : Tap to use the eraser to erase the memo that you created.
- : Tap to share the memo with others via any of the available applications.
- : Tap to save the memo you've created.

**Note:** Please use a fingertip while using the QuickMemo feature. Do not use your fingernail.

3. After capturing the screen, tap . You can crop the screen using the triangles in each corner. Touch and drag  to the desired part of the screen.
4. Tap  to show the Edit menu and tap  to save the current memo.




Discard QuickMemos:

- ▶ Tap  until you exit QuickMemo.

## View the Saved QuickMemo





Your QuickMemos can be saved in the Gallery application.

To view QuickMemos saved in your Gallery:

- ▶ Tap  >  >  **Gallery** and select the **QuickMemo** album.

## FileShare





FileShare application allows you to share multimedia files and documents to other phones via Wi-Fi Direct.

1. Tap  >  >  **FileShare**.
2. Choose the types of content you would like to share. Tap **Images, Videos, Music, or Documents**.
3. Tap  in the upper right corner of the screen, then checkmark the file(s) you want to share.
4. Tap **Send** to begin scanning for available phones, then select the phone you want from the list.

## SmartShare

The SmartShare application uses DLNA (Digital Living Network Alliance) technology to share digital content through a wireless network. Both phones must be DLNA certified to support this feature. A separate accessory purchase of an MHL(Mobile High-definition Link) adapter is needed to perform this function.

### To turn SmartShare on and allow content sharing







1. Tap  >  >  **SmartShare**.
2. Tap  > **Settings**.
3. Tap **Discoverable** to checkmark it which enables your phone to be detected by other phones.
  - Checkmark **Always accept requests** to automatically accept sharing requests from other phones.
  - Checkmark **Receive files** to allow other phones to upload media files to your phone.

4. Under the SHARED CONTENTS section, tap to checkmark the types of content you would like to share: **Photos, Videos, Music**.
5. SmartShare is now activated and ready to share the available content type(s) you selected for sharing.



 

### To control your renderer phones

Let your renderer phone (e.g., TV) play multimedia contents from your remote content library (e.g., PC).

**Note:** Make sure that the DLNA functionality of your phones is properly configured (e.g., TV and PC).





1. Tap  >  >  **SmartShare**.
2. Tap the **To** icon  at the upper right of the screen, then tap the device you want to use from the renderer device list.
3. Tap the **From** icon  at the top left of the screen, then tap the device that has your remote content library.
4. You can browse through the content library to find the content(s) you want.
5. Touch and hold a content thumbnail and tap **Play** or tap  > **Play**.

### To download contents from the remote content library

1. Tap  >  >  **SmartShare**.
2. Tap the **From** icon  at the upper left of the screen, then tap the device that has your remote content library.
3. You can browse through the content library to find the content(s) you want.
4. Touch and hold a content thumbnail, then tap **Download** in the context menu.

**Note:** Some content types are not supported.

### To upload contents from the remote content library

1. Tap  >  >  **SmartShare**.
2. Tap the **From** icon  at the top left of the screen, then select **My phone**.
3. You can browse through the local content library to find the content(s) you want.
4. Touch and hold a content thumbnail, then tap **Upload** in the context menu.

5. Select the device you want to upload the content to.

**Note:** Some DLNA enabled phones do not support the DMS upload functionality and will not upload files. Some content types are not supported.

## Calendar

With the Calendar application you can view the events you have scheduled in the coming days, weeks, or months.

[View Event Details](#)

[Create an Event](#)

[Edit or Delete an Event](#)




[Set an Event Reminder](#)

 
[Respond to an Event Reminder](#)

[Display and Synchronize Calendars](#)

[Change Calendar Settings](#)

[Open the Calendar](#)

- ▶ Tap  >  >  **Calendar**. If you have created or subscribed to more than one calendar through Google Calendar™ on the web, events from each calendar are displayed in a different color. (For information about which calendars are displayed on your phone, see [Displaying and Synchronizing Calendars](#).)

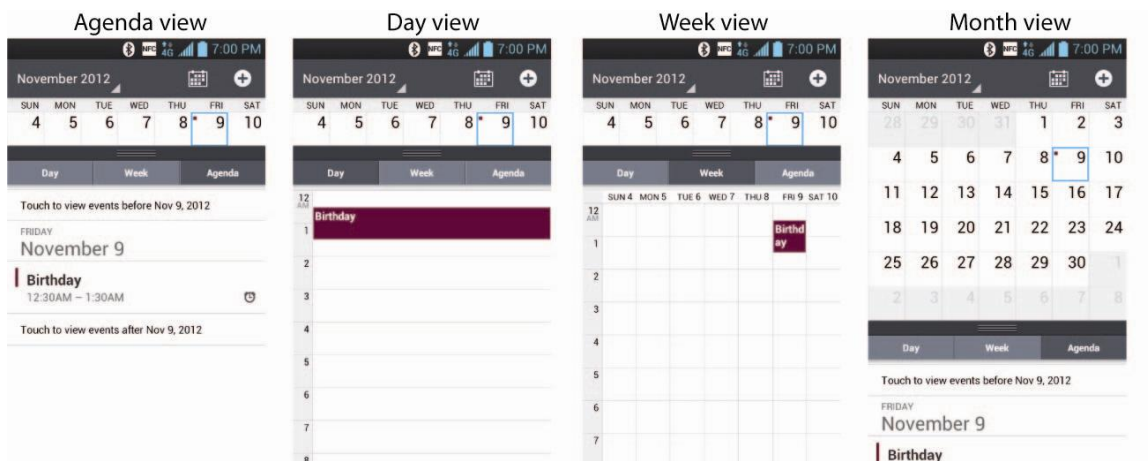


In Agenda, Day, or Week view, tap an event to view its details.


Tap a day in Month view to open that day's events.

**Note:** To go to any day in any Calendar view, tap  > **Go to date**.

## Change Calendar View

 - ▶ Tap  > **Day**, **Week**, **Month**, or **Agenda**. Each view displays the events in your calendar for the period of time that you specify.

- **Day View**

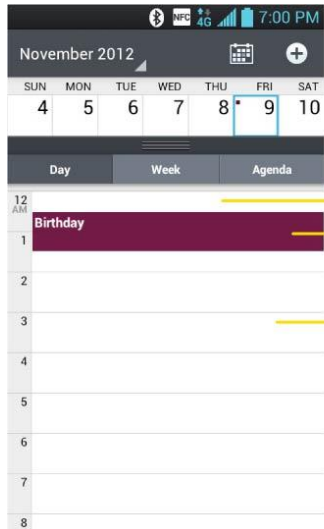


Drag left or right to view earlier or later days.

Tap an event to view its details.

Touch and hold a time slot or an event to create a new event at that time.

 - **Week View**

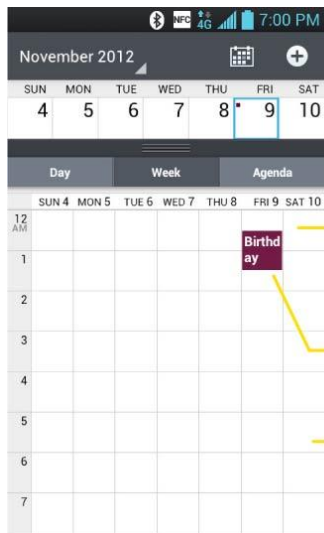

Touch and hold a time slot or an event to create a new event at that time.

Tap an event to view its details.

Drag the screen left or right to view previous or future weeks.

 
- **Month View**



Tap a day to view the events of that day.

Drag the screen up or down to view previous or future months.

- **Agenda View**

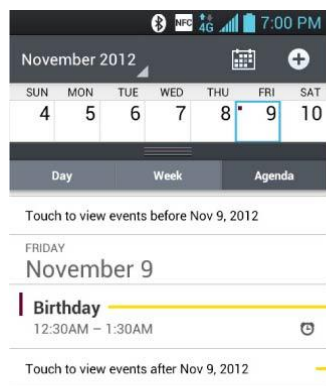


Tap an event to view its details.

Drag the screen up or down to view earlier or later events.

## *View Event Details*

 
You can view more information about an event in a number of ways, depending on the current view.

- ▶ In **Agenda**, **Day**, or **Week view**, tap an event to view its details.
- ▶ In **Month** view, tap a day to switch to **Day** view. Then tap an event to open the event summary.

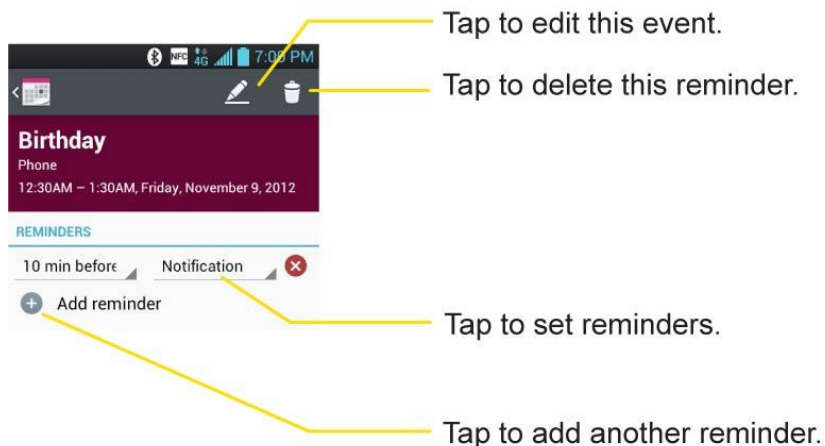

## Create an Event

You can use the Calendar tool on your phone to create events that appear on your phone and in your Google Calendar on the web.


1. Open the **Calendar**, and tap .
  - You can also touch and hold a spot in **Day**, **Week**, or **Month** view to open the new event screen with that day and time already entered.
2. Add details about the event.
  - Enter a name, and other optional details about the event, just as you would on Google Calendar (on the web). If you have more than one calendar, you can choose the calendar to which to add the event. Tap the **Plus** button to add more reminders. (See [Set an Event Reminder.](#))
3. Invite guests to the event.
  - In the **Guests** field, enter the email addresses of everyone you want to invite to the event. Separate multiple addresses with commas ( , ). If the people to whom you send invitations use Google Calendar, they'll receive an invitation through their Google Calendar and by email.
4. Scroll to the bottom of the screen and tap **Save**.
  - The event will be added to your Calendar. You can also access and configure the event from Google Calendar on the web.

## Edit or Delete an Event

You can edit or delete an event that you created on the phone or on the web. You can also edit or delete events created by others, if they have given you permission.



## Edit an Event


1. Open Calendar and tap the event to open it. (See [View Event Details](#).)
2. Tap . (For information on how to create or change event information, see [Create an Event](#).)
3. Make your changes to the event.
4. Tap **Save**.

## Delete an Event


- ▶ Tap an event to view the event details. Then, tap . Tap **Ok** to confirm.

## Set an Event Reminder

You can set one or more reminders for an event, whether or not you created the event or have permission to edit its other details.

1. Open **Calendar** and tap the event to open it. (See [View Event Details](#).)
2. Tap  **Add reminder** to add a reminder.
3. Tap the reminder time to display a popup menu and choose your desired setting.
  - At the designated time, you will receive a notification to remind you about the event. (See [Respond to an Event Reminder](#).) You can also use Google Calendar (on the web) to configure additional reminders.


## Delete an Event Reminder

1. Open **Calendar** and tap the event to open it.
2. Tap  to remove a reminder.

## Respond to an Event Reminder

If you set a reminder for an event, the reminder notification appears in the Status Bar when the reminder time arrives. (See [Notifications Panel](#).)

1. If you receive notifications in the Status Bar, drag the Notifications Panel down to your notifications. Tap the event notification to open the list of Calendar notifications.
2. Tap an event in the Calendar Notifications list to view more information about that event.
3. Tap **Snooze all** in the Calendar Notifications list to receive the reminder again 5 minutes later.

4. Tap **Dismiss all** in the Calendar Notifications list to delete all reminders in the list.
5. Tap  when viewing the Calendar Notifications list to keep the reminders. The reminders will remain in the Status Bar.


## *Display and Synchronize Calendars*

Initially, all calendars that you create or subscribe to through Google Calendar on the web are also displayed in the Calendar application on your phone. You can select which calendars to show or hide on the phone, and which to keep synchronized.

(For more information, see [Synchronize Accounts](#).)


Only the calendars that you've created or subscribed to on the web are shown in the **Calendars** list.

To select calendars to display:

1. Tap  > **Calendars to display**.
2. Checkmark to display the account.

## *Change Calendar Settings*

You can change the settings for how the Calendar application displays events and how it notifies you of upcoming events.

- ▶ Open the Calendar, and tap  > **Settings** > **General preferences**.
  - **Hide declined events:** When checkmarked, declined events so that they are not displayed in your calendar views. Tap to remove the checkmark and display all events in your calendar views.
  - **Show week number:** Displays the week number out of the year.
  - **Week starts on:** Opens a dialog box to configure from when the week starts on.
  - **Use home time zone:** When checkmarked, the phone displays calendars and event times in your home time zone when traveling.
  - **Home time zone:** Opens a dialog where you can set the time zone to use in Calendar when you're traveling, if you have the **Use home time zone** setting checked.
  - **Clear search history:** Allows you to remove all the searches you have performed.
  - **Notifications:** Checkmark to allow notifications of new events. When Notifications is set, you can select the notification sound or vibrate type, and whether to popup the notification or not.

- **Notification sound**
  - **Vibrate**
  - **Vibrate Type**
  - **Pop-up notification**
- **Default reminder time:** Allows you to select the default time set for event reminders.

 
## *Folders*

Folders allow you to organize other Home screen shortcuts and icons, or folders that contain all your contacts, contacts with phone numbers, or starred contacts. Your folder's contents are kept up to date automatically. Organizing in folders can create space to add more shortcuts, widgets, or applications on the Home screen.

### Add a Folder

1. Drag and drop an app icon over another app icon.
2. A folder will be created with both app icons in it.

### Rename a Folder

1. Tap the folder icon to open it.
2. Tap .
3. Enter the new folder name and tap **OK**.

**Note:** You can also change the folder color.

### Organize Items in a Folder

- ▶ Just drag a shortcut, an icon, or a folder and drop in a folder.

 
 
## *Alarm/Clock*




You can use Alarm/Clock application to monitor several types of information at once, in addition to the current date and time.

### Open the Alarm



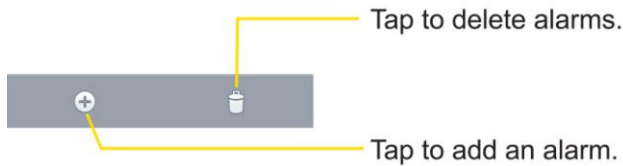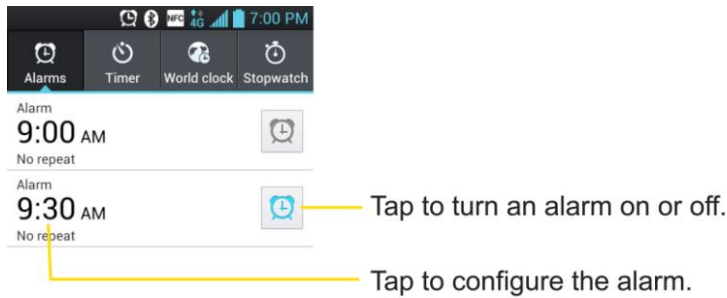

The Alarm/Clock application also allows you to set alarms.

1. Tap  >  >  **Alarm/Clock**.






2. an existing alarm to change its time and other attributes or tap **Add alarm**  to add a new one.
3. Set the time of the alarm. You can change the time by tapping the  and  buttons and the AM or PM buttons or tap the hour and minutes fields to enter the time with the keyboard.
4. Tap **Repeat** to set the days when you want the alarm to sound. (If you don't set a repeat, the alarm will only sound on the assigned day.)
5. Tap **Vibration** to have the phone vibrate, in addition to playing the ringtone.
6. Tap **Alarm sound** to select a ringtone for the alarm. The ringtone plays briefly when you select it.
7. Tap **Memo** to enter a name for the alarm.
8. When you're finished, tap **Save**.

### Change Alarm/Clock Settings





1. Tap  >  >  **Alarm/Clock**.
2. Tap  > **Settings**.
3. You can set the following options:
  - **Alarm in silent mode:** Tap to place a checkmark and allow your phone to play alarms even when it is in Silent mode.

- **Side button behavior:** Allows you to set the desired behavior of the Volume Buttons when pressed during an alarm.
- **Puzzle lock options:** Allows you to choose the puzzle type to use during the puzzle lock.
- **Vibrate type:** Allows you to set the vibrate type.




## Use the Timer

1. Tap  >  >  **Alarm/Clock** > **Timer** tab.
2. Tap **Hour/Minute/Second** to set the timer.
3. Tap **Vibration** to have the phone vibrate along with the alert sound. (A blue checkmark appears.)
4. Tap **Alert sound** to select the alert sound.
5. Use the **Alert volume** slider to set the alert volume.
6. When you're finished, tap **Start**.

## Use the World clock

1. Tap  >  >  **Alarm/Clock** > **World clock** tab.
2. Tap  to add a city.
3. Enter the city name in the search field and tap **Done**.  
As you key in, the cities which starts from the letters are displayed.  
– or –  
Scroll through the cities list and tap the city.
4. You can add cities as many as you want. Repeat steps 2 and 3.

 
## Use the Stopwatch



1. Tap  >  >  **Alarm/Clock** > **Stopwatch** tab.
2. Tap **Start** to start stopwatch time.
3. Tap **Stop** to stop the stopwatch.
  - While measuring time, tap **Lap** to view lap times.

# Calculator

You can use the Calculator application to solve math problems.

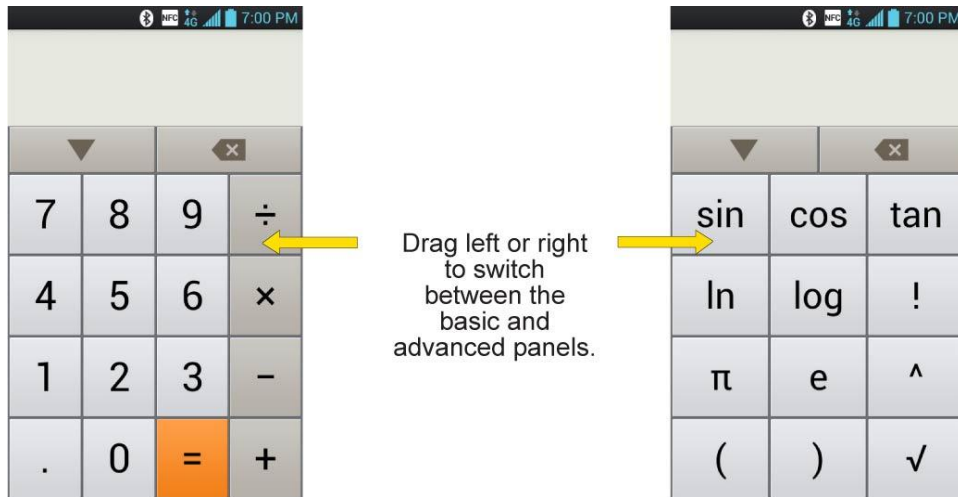1. Tap  >  >  **Calculator**.



2. Enter numbers and arithmetic operators on the basic panel.
3. Drag the basic panel to the left to open the advanced panel.
4. Touch and hold the Calculator's display to open a menu where you can copy what you've entered and access other tools.
5. Tap  to delete the last number or operator you entered. Touch and hold  to delete all of the entered information.

# Bluetooth

Bluetooth is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth phones, such as headsets and hands-free car kits, Bluetooth-enabled handhelds, computers, printers, and wireless phones. The Bluetooth communication range is usually up to approximately 30 feet.

[Turn Bluetooth On and Off](#)

[Bluetooth Settings Menu](#)

[Pairing Bluetooth Phones](#)

[Send Items via Bluetooth](#)





[Disconnect Bluetooth Connection During an Active Call](#)

## Turn Bluetooth On and Off




By default, your phone's Bluetooth feature is set to Off. Turning Bluetooth on makes your phone "discoverable" by other in-range Bluetooth phones.

**Note:** Activating Bluetooth can drain your battery faster and reduce your available usage times. To conserve your phone's battery, turn off Bluetooth when not in use. Always turn off your Bluetooth when you are in locations that prohibit its use.

### Turn Bluetooth On

1. Tap  >  > **System settings > Bluetooth.**
2. Slide  to the right to activate the feature. When active,  appears within the Status Bar.

### Turn Bluetooth Off

1. Tap  >  > **System settings > Bluetooth.**
2. Slide  to the left to deactivate Bluetooth.

### Bluetooth Status Indicators

The following icons show your Bluetooth connection status at a glance:

 – Bluetooth is active

 – Bluetooth is connected to a Bluetooth phone





## Bluetooth Settings Menu

The Bluetooth settings menu allows you to set up many of the characteristics of your phone's Bluetooth service.


Includes the following:

- Entering or changing the name your phone uses for Bluetooth communication
- Setting your phone's visibility (or "discoverability") for other Bluetooth phones

To access the Bluetooth Settings menu:

1. Tap  >  > **System settings > Bluetooth.**
2. Slide  to the right to activate the feature. When active,  appears within the Status Bar.

3. Set the following Bluetooth options:
  - **LG-LS860** (by default): Tap to rename your phone's Bluetooth name.
  - **Make phone visible:** Tap to place a checkmark and make your phone visible to other phones for pairing and communication. Tap again to uncheck and make your phone invisible.


**Note:** Your phone is visible for up to 2 minutes. This value appears as a countdown within this field. You can change the visibility timeout. From the Bluetooth settings screen, tap  > **Visibility timeout**, then tap your preference.

- **Device type to be searched:** Tap to select the type of devices you want to search for. The default settings is **All devices**.
4. Tap **Search for devices** at the bottom of the screen to search for in-range Bluetooth-compatible devices. Make sure the target device is set to be discoverable.

## Pairing Bluetooth Phones

The Bluetooth pairing process allows you to establish trusted connections between your phone and another Bluetooth phone. When you pair phones, they share a passkey, allowing for fast, secure connections while bypassing the discovery and authentication process.

### Pair Your Phone

1. Verify your Bluetooth is active.
2. From the Bluetooth settings page, tap **Make phone visible** to make your phone visible. Your phone must be visible to successfully pair with an external phone.
3. Tap **Search for devices**. (Your phone will display a list of discovered in-range Bluetooth phones.)
4. Tap a phone from the list to initiate pairing.
5. Depending on the phone, you might have to tap **Pair** to accept the passkey (if they match on both phones), confirm matching passkeys, or enter the passkey or PIN Code.
6. Tap **Done** > **OK** if you entered a passkey or PIN code or passkey.
7. The external phone will then have to accept the connection and enter your phone's PIN code.
  - Once successfully paired to an external phone,  appears within the Status Bar.


**Note:** Due to different specifications and features of other Bluetooth-compatible phones, display and operations may be different, and functions such as transfer or exchange may not be possible with all Bluetooth compatible phones.



Pairing between two Bluetooth phones is a one-time process. Once a pairing has been created, the phones will continue to recognize their partnership and exchange information without having to re-enter a passcode again.

## Disconnect a Paired Phone

Disconnecting a paired phone breaks the connection between the phone and your LG Mach™, but retains the pairing. At a later point when you wish to reconnect the phone, there is no need to setup the connection information again.

1. Verify your Bluetooth is active.
2. From the Bluetooth settings page, tap  next to the previously paired device (under the PAIRED PHONES section).
3. Tap **Unpair**.





**Note:** Disconnections are manually done but often occur automatically if the paired phone goes out of range of your LG Mach™ or if it is powered off.

## Send Items via Bluetooth




Depending on your paired phone's settings and capabilities, you may be able to send pictures, videos, Contacts information, or other items using a Bluetooth connection.


**Note:** Prior to using this feature, Bluetooth must first be enabled, and the recipient's phone must be visible. If no phones are detected, tap **Search for phones** to begin a new search.

## Send Contact Information

1. Tap  >  >  **Contacts**.
2. Tap an entry to open its details page.
3. Tap  > **Share** > **Bluetooth**.
4. Tap a paired phone.
  - The external Bluetooth phone must be visible and communicating for the pairing to be successful.



## Send Pictures and/or Videos

1. Tap  >  >  **Gallery**.
2. Tap an album to open it and view its contents. (The pictures and videos in the album are displayed in chronological order.)

3. Tap , then checkmark pictures and/or videos to share.
4. Tap **Share > Bluetooth**.
5. Tap a paired phone.
  - The external Bluetooth phone must be visible and communicating for the pairing to be successful.

## *Disconnect Bluetooth Connection During an Active Call*

You can manually disconnect or unpair from a Bluetooth phone through the Bluetooth settings menu.

- ▶ During an active call, where the audio is being routed through a connected Bluetooth phone (headset or hands-free connection), tap **Bluetooth** to route the phone's audio through the connected Bluetooth headset (On) or through the speaker (Off).
  - When the call is routed to a Bluetooth headset, the current call area is surrounded by a blue box, the **Bluetooth** button indicates it's on, and the **Bluetooth** call icon  is displayed in the Status Bar.
  - When Bluetooth is turned off, the call is routed through either the earpiece or speaker, the call area is surrounded by a green box, the **Bluetooth** button indicates it's off, and the **Call** icon  is displayed in the Status Bar.

**Note:** Communication can be toggled between the Bluetooth headset and the phone earpiece or speaker by tapping the Bluetooth button On or Off.

## *microSD Card*

Your phone is equipped with a preinstalled microSD™ (Secure Digital) memory card to expand the phone's available memory space. It allows you to store images, videos, music, and voice data in your phone.

[Remove the microSD Card](#)

[Insert the microSD Card](#)

[microSD Icon Indicators](#)

[microSD Adapter](#)

[View Memory in the microSD Card](#)



[Format the microSD Card](#)

[Connect Your Phone to Your Computer](#)

## Remove the microSD Card

To safely remove the microSD card from your phone, first you need to unmount the microSD card.

**WARNING:** On the Android OS 4.0, your downloaded applications from Play Store can store data on a microSD card as well as on the phone. Due to this feature, if you skip the unmount procedure, it can cause an error because information between the microSD card and the phone is not accorded properly. In the worst case, the microSD card can be corrupted or damaged.

1. Tap  >  > **System settings** > **Storage** > **Unmount SD card**. Confirm your selection by tapping **OK**. Now you can safely remove the microSD card.
2. Lift off the back cover using the fingertip cutout at the bottom of the cover.
3. Carefully remove the microSD card from the slot.

**Note:** You can easily damage the microSD card by improper operation. Please be careful when inserting, removing, or handling it.

## Insert the microSD Card

Remove the battery cover and battery to insert a compatible microSD card into your phone.



1. Lift off the back cover using the fingertip cutout at the bottom of the cover.
2. Position the microSD card with the label side facing up and slide it into place until it is fully inserted and locked in place.

**Note:** Be sure to use only recommended microSD cards (up to 32GB). Using non-recommended microSD cards could cause data loss and damage your phone.

## microSD Icon Indicators

The following icons show your microSD card connection status at a glance:



- microSD card has been unmounted from the phone and is safe to remove.



- microSD card is being prepared for use and for mounting.

**Note:** **DO NOT** remove a microSD card while files are being accessed or transferred. Doing so will result in loss or damage of data. Make sure your battery is fully charged before using the microSD card. Your data may become damaged or unusable if the battery runs out while using the microSD card.

## *microSD Adapter*

The microSD adapter allows you to use microSD cards in other SD-compatible phones, like computers, cameras, and printers. Before using the microSD card with an SD-compatible phone, you will need to insert the microSD card into the microSD adapter.

**Note:** You can purchase the microSD Adapter and microSD card separately.

To insert the microSD card into the microSD adapter:

- ▶ With the label side of the microSD card facing up, insert the card into the supplied microSD adapter, and gently slide the card until it is fully inserted.

To remove the microSD card from the microSD adapter:

- ▶ Hold the front edge of the microSD card, and gently pull it out to remove it from the adapter.



## **Write Protection**

The microSD adapter has a built-in Write Protection lock to prevent accidental overwriting or removal of your data when the microSD card and adapter are inserted in another phone.

- ▶ Slide the Write Protection lock tab down into the Lock position to prevent overwriting of data. To allow data to be added or removed from the microSD card, slide the Write Protection lock tab up into the normal position.

## *View Memory in the microSD Card*

The Storage settings menu gives you access to your microSD card memory information.

1. Tap  >  > **System settings > Storage.**
2. Review the available information.
  - The storage capacity page is divided into two sections: **Internal Storage** and **SD Card.**

## *Format the microSD Card*

Formatting a microSD card permanently removes all files stored on the card.

1. Tap  >  > **System settings > Storage.**


2. Tap **Unmount SD card** and confirm your selection by tapping **OK** to release the microSD card from its use by the phone. The icon appears in the Status Bar to indicate an unmounted microSD card.
3. Once unmounted, tap **Erase SD card > Erase SD card > Erase everything**.
  - Once completely formatted, you will have to remount the microSD card in order to use it.

**Note:** The formatting procedure erases all the data on the microSD card, after which the files **CANNOT** be retrieved. To prevent the loss of important data, please check the contents before you format the card.

## *Connect Your Phone to Your Computer*


Before using your phone's mass storage capabilities, you need to prepare your phone's data services to synchronize with your desktop or laptop computer. Once you have connected the phone to the computer, you can transfer your data to or from the microSD card.

### Connect via USB

1. Use the USB cable that came with your phone to connect the phone to a USB port on your computer.
2. Open the Notifications Panel and tap .
3. Select **Media sync (MTP)** or **Camera (PTP)** in the dialog box that opens to confirm that you want to transfer files.
  - When the phone is connected as Media sync (MTP) or Camera (PTP), you receive a notification on your computer.
  - Your phone's microSD card is mounted as a removable drive on your computer. You can now copy files to and from the microSD card. For more information, see the documentation for your computer.
  - During this time, you will not be able to access the microSD card in your phone, so you can't use applications that rely on the microSD card, such as Camera, Gallery, and Music.

### Disconnect Your Phone

**WARNING:** Carefully follow your computer's instructions to unmount, remove, or disconnect any removable USB phones or disks, to avoid losing information on the microSD card when disconnecting your phone from your computer.

1. On your computer, complete the process to safely Stop, or Remove, the USB phone (in this case, the phone). For example, use the Safely Remove Hardware option to Stop the USB Mass Storage Phone on Windows® XP.
2. Open the Notifications Panel (on your phone) and tap the USB icon  and select **Charge only** to unmount the microSD card.

### Important Connection Information

- To avoid loss of data, DO NOT remove the USB cable, the microSD card, or the battery while accessing or transferring files.
- DO NOT use your computer to change or edit folder or file names on the microSD card, and do not attempt to transfer large amounts of data from the computer to the microSD card. Doing so may cause the microSD card to fail.
- DO NOT turn off or restart your computer, or put it into standby mode, while using a mass storage phone. Doing so will result in loss or damage of data.
- The microSD card can only be mounted for use by either the phone or a connected computer. Prior to accessing the card via a different method, it must first be unmounted from its current phone (phone or computer-USB).




**Important:** The microSD card can only share a connection with one phone at a time, either your phone or your computer (via its USB connection), not both. You cannot browse the contents of the card via your phone if they are currently being browsed via your computer.

## Update Your Phone

From time to time, updates may become available for your phone. You can download and apply updates through the Settings menu.




### Update Your Android Operating System

This option allows you to update the Android Operating System (OS) on your phone via an over-the-air connection. There are two components: Sprint User-Interface (UI) firmware and phone Google OS.

1. Tap  >  >  **Settings > System updates > Update Firmware and Update LG Software.**
2. Follow the on-screen instructions.




## Update Your Profile

This option allows you to automatically update your online user profile information. If you choose to change your user name and select a new one online, you must then update the user name on your phone.

1. Tap  >  >  **Settings > System updates > Update profile.**
2. Follow the on-screen instructions.

## Update Your PRL

This option allows you to download and update the PRL (Preferred Roaming List) automatically.

1. Tap  >  >  **Settings > System updates > Update PRL.**
2. Follow the on-screen instructions.

# Index

---

3-way Calling, 55  
Access Gmail, 104  
Access Recently-Used Applications, 32  
Accounts & sync, 85  
Add a VPN Connection, 143  
Add an Email Account (POP3 or IMAP), 111  
Add and Remove Widgets, 30  
Adjust Browser Settings, 147  
Airplane Mode, 65  
Android Beam, 67  
Applications, 26  
Apps Settings, 84  
Assign Pictures, 154  
Back Key, 21  
Back Up Your Downloaded Music Files, 132  
Backup & reset, 89  
Battery and Charger, 14  
Bluetooth, 172  
Bluetooth Settings, 65  
Bluetooth Settings Menu, 173  
Bluetooth Tethering, 66  
Browser Menu, 146  
Calendar, 163  
Call Emergency Numbers, 44  
Call Forwarding, 55  
Call Logs Options, 58  
Call Using the Phone Dialer, 43  
Call Waiting, 55  
Caller ID, 54  
Camera Settings, 152  
Change Calendar Settings, 168  
Change Gmail Settings, 109  
Change the Phone's Wallpaper, 31  
Change the Screen Orientation, 33  
Compose Text Messages, 117  
Configure and Sync Corporate Email Settings, 115  
Configure Visual Voicemail Options, 50  
Configure Visual Voicemail Settings, 51  
Connect Your Phone to Your Computer, 179  
Connectivity, 90



- Contacts, 94
- Corporate Email (Outlook), 112
- Create a Google Account, 103
- Create an Event, 166
- Create and Send Email, 114
- Create Bookmarks, 148
- Create Website Settings, 147
- Customize Your Home Screen, 29
- Data Connection Status and Indicators, 142
- Data Roam Guard, 72
- Data Services
  - Password, 4
- Data Usage, 65
- Delete Messages, 120
- Developer Options, 91
- Dial and Save Phone Numbers With Pauses, 45
- Dial From the Contacts List, 46
- Dialing Options, 43
- Disconnect Bluetooth Connection During an Active Call, 176
- Display and Synchronize Calendars, 168
- Display Settings, 76
- Edit or Delete an Event, 166
- Edit the Display Name via the Voicemail Menu, 52
- Export contacts to your microSD card, 102
- Extend Your Battery Life, 16
- Extended Home Screens, 24
- Format the microSD Card, 178
- Gallery Options, 153
- Gestures, 82
- Go to a Specific Website, 146
- Google Maps™, 134
- Google Navigation, 137
- Home Key, 21
- Home screen, 78
- Home Screen, 23
- Import contacts from your microSD card, 101
- In-call Options, 56
- In-Call Options, 45
- Insert the microSD Card, 177
- International Dialing, 68
- Language & Input Settings, 87
- Launch a Web Connection, 142
- Learn to Navigate the Browser, 145
- LG Keyboard Types, 35

- Listen to Multiple Voicemail Messages, 50
- Location services, 86
- Lock and Unlock Your Phone, 14
- Lock screen, 79
- Manage Your Account, 4
- Managing Message Conversations, 119
- Menu Key, 18
- microSD Adapter, 178
- microSD Icon Indicators, 177
- Missed Call Notification, 44
- Mobile Networks Settings, 67
- NASCAR Sprint Cup Mobile, 129
- NBA Game Time, 130
- NFC Settings, 66
- Noise Reduction, 69
- North American Dialing, 68
- Notifications Panel, 20
- Open Email, 113
- Open the Call Logs, 58
- Pairing Bluetooth Phones, 174
- Phone and Web Search Using Text Entry, 39
- Phone and Web Search Using Voice Command, 41
- Phone Calls, 42
- Phone Identity, 93
- Plus (+) Code Dialing, 46
- Portable Wi-Fi Hotspot, 66
- Power saver, 84
- Prepare Your Phone for VPN Connection, 143
- Proximity Sensor, 69
- Quick Messages, 68
- Read and Reply to Gmail Messages, 107
- Remove the microSD Card, 177
- Reply to or Delete an Email Message, 114
- Respond to an Event Reminder, 167
- Retrieve Your Voicemail Messages, 53
- Review Visual Voicemail, 49
- Ringtone & Notifications, 74
- Roaming Guard, 71
- Save and Resume a Draft Message, 118
- Save Unknown Numbers, 70
- Scout™ by Telenav, 137
- Security, 86
- Send a Gmail Message, 106
- Send Items via Bluetooth, 175

- Set an Event Reminder, 167
- Set Roam Mode, 71
- Set Up Secure Credential Storage, 143
- Set Up Visual Voicemail, 49
- Set Up Voicemail, 52
- Settings, 64
- Share a contact, 102
- Sign into Your Google Account, 104
- Slide-out QWERTY Keyboard, 33
- Sound Settings, 73
- Sprint 411, 5
- Sprint Account Passwords, 4
- Sprint Music Plus, 133
- Sprint Operator Services, 6
- Sprint Support Services, 5
- Sprint Zone, 129
- Status Bar, 10
- Storage, 83
- Synchronize Your Corporate Account, 124
- Synchronize Your Google Account, 123
- System Updates, 92
- Text and Multimedia Message Options, 121
- Text-to-Speech, 62
- Tips for Editing Text, 39
- Touch Feedback & System, 75
- TTY mode, 68
- Turn Bluetooth On and Off, 173
- Turn Your Phone Off, 13
- Turn Your Phone On, 13
- Use Direct Dialing, 46
- Use the Applications Key, 24
- Video Gallery Options, 156
- Video Settings, 155
- View Event Details, 165
- View Memory in the microSD Card, 178
- View Your Pictures, 153
- Visual Voicemail, 48
- Voice Dialer, 61
- Voicemail
  - Notification, 53
  - Password, 4
- Voicemail Settings, 70
- Voicemail(Traditional), 52
- Wi-Fi Direct, 66, 141

Wi-Fi Settings, 64  
Work with Menus, 18  
Your Home Screen, 22  
Your User Name, 142