

Your MP 01 Mobile Phone. User Guide.

Punkt.

Contents.

3 About This User Guide.

4 Your MP 01 Mobile Phone.

- 4 What is in the box?
- 4 Safety
- 5 Get to know your phone
- 6 Keypad

7 Getting Started.

- 7 Inserting your SIM card
- 8 Charging your phone
- 8 Turning your phone on or o
- 8 Start-up guide
- 9 Locking or unlocking your phone's keypad
- 9 Connecting a headset

10 Your Home screen.

- 10 About your Home screen
- 10 Status Icons
- 11 Notifications
- 11 Shortcut menu

12 Calls.

- 12 Making calls
- 12 Ending calls
- 12 Answering calls
- 12 Rejecting calls
- 13 Multiple calls
- 13 Changing the volume of a call
- 13 Muting your microphone
- 13 Putting calls on hold
- 13 Using speed dial numbers

- 14 Viewing your call history
- 14 Showing or hiding your phone number on outgoing calls

15 Voicemail.

- 15 Checking your voicemail
- 15 Setting your voicemail number

16 Contacts.

- 16 About contacts
- 16 Adding contacts
- 16 Viewing contacts
- 16 Editing contacts
- 17 Deleting contacts
- 17 Sharing contacts
- 17 Viewing your own phone number
- 17 Adding and deleting speed dial numbers
- 18 Copying and moving contacts between your phone and SIM card
- 18 Backing up and restoring contacts

19 Text Messages.

- 19 About text messages
- 19 Entering text on your phone
- 20 Sending text messages
- 20 Viewing text messages
- 20 Deleting text messages
- 21 Using text message templates
- 21 Using the content in a text message

22 Alarms.

- 22 About alarms
- 22 Setting a new alarm
- 22 Setting or cancelling the saved alarm

23 Reminders.

- 23 About reminders
- 23 Setting a reminder
- 23 Editing a reminder
- 23 Deleting a reminder

24 Calendar.

- 24 Viewing your calendar

25 Sounds.

- 25 About sounds
- 25 Changing your ringtone volume
- 25 Changing your ringtone
- 25 Changing your message tone
- 25 Turning vibrate on or o
- 25 Turning the keypad tones on or o

26 Date And Time.

- 26 Changing the date and time setting
- 26 Setting the date
- 26 Setting the time
- 26 To set the time
- 26 Changing the time zone

27 Connectivity.

- 27 About Bluetooth
- 27 Turning Bluetooth on or o
- 27 Pairing with a Bluetooth device
- 27 Connecting to a paired Bluetooth device
- 28 Changing settings for a paired Bluetooth device
- 28 Changing the device name of your phone
- 28 Changing your network settings

29 Security.

- 29 About passcodes and PINs
- 29 Using a passcode for your phone
- 29 Using a PIN for your SIM card
- 29 Setting your phone's keypad to lock automatically

30 Phone Management.

- 30 Changing the language
- 30 Resetting your phone
- 30 Viewing information about your phone

31 How To Take Care Of Your MP 01 Mobile Phone.

32 Specifications.

33 Safety and regulatory.

- 33 Safety
- 33 Disposal
- 33 Regulatory compliance
- 34 Trademarks

35 Warranty and customer care.

- 35 Warranty
- 35 Customer care
- 35 Contact us

About This User Guide.

— Version
1.0

— Revision date
November 2016

— Change
First version

To use your MP 01 Mobile Phone,
refer to this user guide.

Read more about how to use your
MP 01 phone at punkt.ch.

All screens and images in this user
guide are for reference only and may
differ from your phone.

Your MP 01 Mobile Phone.

Congratulations on your new MP 01 Mobile Phone, designed by Jasper Morrison. The MP 01 is a simple phone that supports basic calling and text messaging.

Disconnect and rediscover the simple things in life. Enjoy!

What is in the box?

- MP 01 Mobile Phone
- Quick guide
- USB charger
- Micro USB cable
- Micro USB headset
- Micro USB to 3.5 mm converter
- SIM adapter
- SIM tray pin

Safety

Before you use your phone, read the following safety messages.

Turn off your phone in restricted areas

Turn off your phone in areas where the use of mobile phones is not allowed.

Be safe on the road

Obey all local laws. Do not use your phone while driving or in control of a vehicle, unless you use a hands free device.

Radio waves can cause interference

Your phone emits radio waves, which may interfere with other electronic devices. Interference from other electronic devices may affect your network signal.

Keep your phone clean and dry

Do not use your phone in dusty or dirty conditions. Do not get your phone wet, or use it in areas with high humidity or moisture.

Leave it to the professionals

Do not open or dismantle your phone, except for tasks described in this user guide. If your phone stops working, contact your local Punkt. dealer or get in touch at punkt.ch.


Protect your hearing

To prevent damage to your hearing, do not set the volume of a call higher than necessary.


Your MP 01 Mobile Phone.

Get to know your phone

Front view

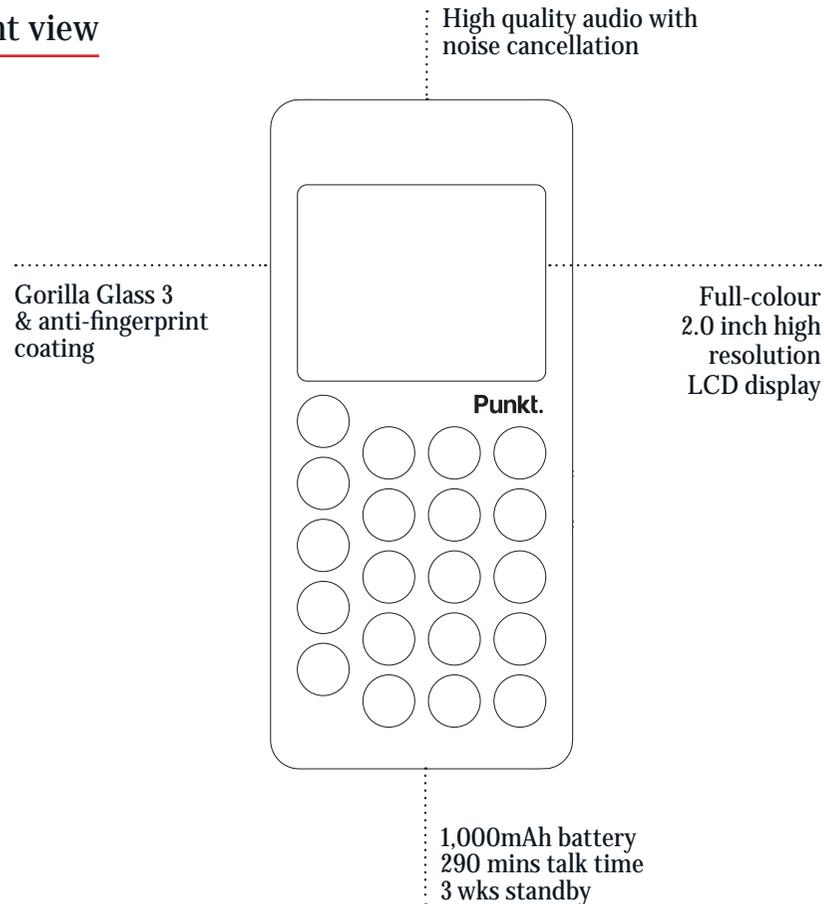

Rear view

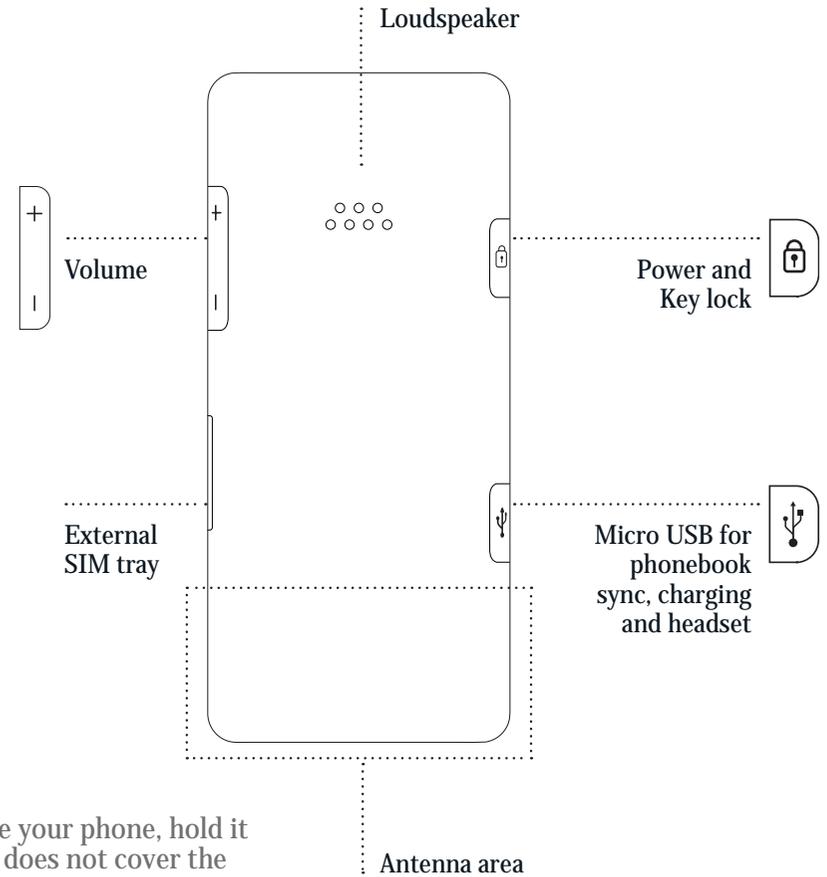

When you use your phone, hold it so your hand does not cover the antenna area.

If you cover the antenna area, it may affect your network signal.

Your MP 01 Mobile Phone.

Keypad

Use the keypad on your phone to navigate menus, and enter numbers or letters.



Up

- Move up in a list
- Move the cursor left when entering text



Punkt.

- Select the highlighted option
- On your Home screen: open the main menu



Down

- Move down in a list
- Move the cursor right when entering text



Contacts

- On your Home screen: open your contacts list
- Press and hold on your Home screen: add a new contact



Messages

- On your Home screen: open the Messages menu
- Press and hold on your Home screen: create a new message
- Send a text message template to someone calling you



Send

- Make a call
- Answer a call
- On your Home screen: view your call history



Back

- Go back to the previous screen
- Delete a character



End

- End a call
- Reject a call
- Return to your Home screen
- Press and hold on your Home screen: view the shortcut menu



**Number keys
(0 to 9)**

- Press and hold on your Home screen: call speed dial number
- Enter a number or letter



Star

- Choose symbols when entering text
- Enter symbols, for example +, when entering a phone number



Hash

- Change input mode when entering text
- Press and hold when entering text: swap between predictive and multi-tap modes

Getting Started.

Before you can use your phone for the first time, you need to do the following:


1. Insert a SIM card into your phone
2. Charge your phone fully
3. Turn your phone on
4. Follow the start-up guide on your phone

Inserting your SIM card

Your MP 01 phone is designed for use with micro-SIM (3FF) cards. If you have a nano-SIM card, use the SIM adapter that is provided in your phone box. Punkt. recommends that you do not permanently use the SIM adapter.

Warning: Only use micro-SIM cards or the provided SIM adapter. If you use another type of SIM card, you may damage your phone or SIM card.


Before you insert your SIM card, turn off your phone and unplug the micro USB cable. Read more about turning your phone off on page 8.

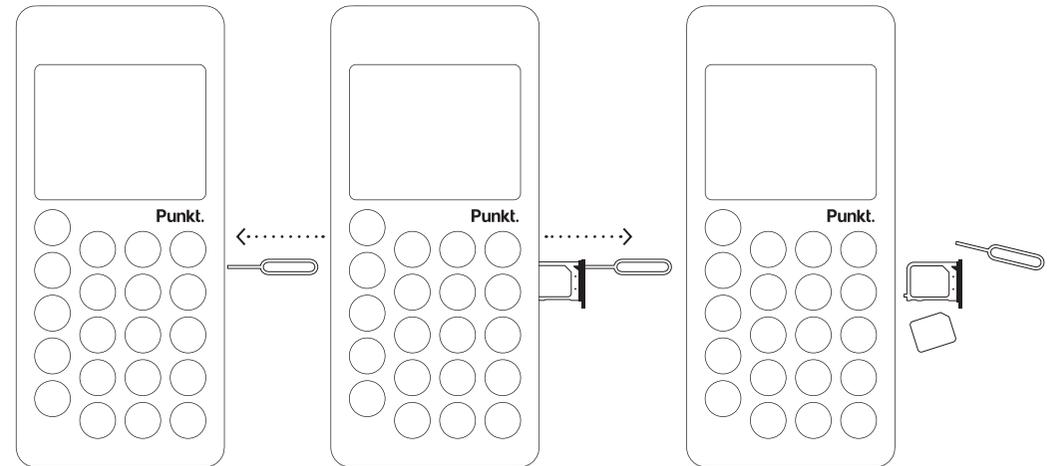

1. Insert the SIM tray pin into the hole on your phone, until the SIM tray pops out.
2. Pull the SIM tray carefully to remove it from your phone.

3. Place your SIM card into the SIM tray, with the metal side of the SIM card facing down.
4. Insert the SIM tray back into your phone and push it in until you feel it click into place.

Getting Started.

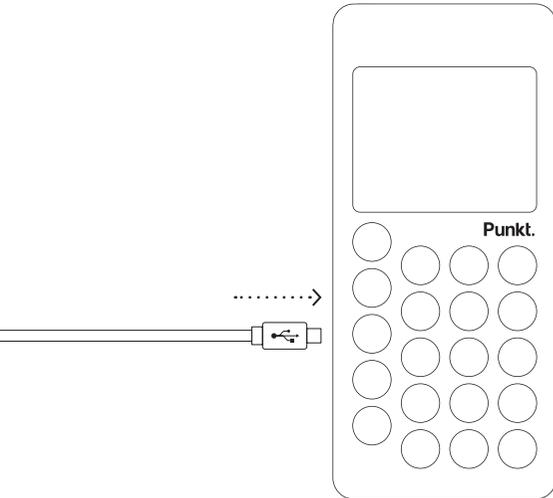

Charging your phone

You can easily charge your phone with the provided micro USB cable. Before you turn your phone on for the first time, charge it fully.

1. Open the cover of the USB port  on your phone.
2. Insert the micro USB cable into the USB port.
3. Insert the other end of the micro USB cable into the USB charger.
4. Connect the USB charger to a power outlet. Your phone starts to charge. The phone displays **Battery charging** and the current battery level.
5. When your phone is fully charged, remove the micro USB cable from your phone and close the cover of the USB port .

Tip: You can also use a computer's USB port to charge your phone. If your phone is on when you connect it to a computer, press  to charge it.

Turning your phone on or o

— **To turn your phone on**

1. Press and hold the lock button  on the side of the phone, until the screen turns on.
2. If your phone has a passcode, enter it with the keypad.
3. If your SIM card has a PIN, enter it with the keypad.
4. Read more about passcodes and PINs on page **29**.

— **To turn your phone o**

Press and hold the lock button  on the side of the phone. If your phone displays a confirmation message, press .

Start-up guide

When you turn your phone on for the first time, a start-up guide appears. This start-up guide sets up your phone so you can start using it.

1. Use   to choose a language and press .
2. Use   to choose a clock format and press .
3. Use   to set the time, in the format *hhmm*.
 - a. Choose the hour, then press .
 - b. Choose the minute, then press .
 - c. If you use a 12-hour clock, choose **AM** or **PM** and press .
4. Use   to set the date.
5. Your phone is now ready to use.
 - To continue choosing settings on your phone, select **Settings** and press .
 - To start using your phone, select **Later** and press .

Getting Started.

Locking or unlocking your phone's keypad

When your phone is in your pocket or bag, you can accidentally press keys or buttons. To prevent this from happening, lock your phone's keypad.

Tip: You can set your phone's keypad to lock automatically after a certain amount of time. Read more about automatic locking on page [29](#).

- To lock your phone's keypad, press the lock button  on the side of the phone. When the keypad is locked, your phone displays the  status icon.
- To unlock your phone's keypad, press and hold the lock button  on the side of the phone.

Connecting a headset

Sometimes you might want to use your phone but keep your hands free. You can use your phone with the following:

- A micro USB headset
- A Bluetooth enabled device, for example, a Bluetooth headset or the audio system in your car. Read more about connecting your phone to a Bluetooth device on page [27](#).

When a headset is connected to your phone, your phone displays the  status icon.

— To connect a micro USB headset

1. Open the cover of the USB port  on your phone.
2. Insert the micro USB headset into the USB port.

Tip: To connect a pair of headphones with a 3.5 mm connector, use the provided converter.

Your Home Screen.



About your Home screen

When you turn on your phone, it displays your Home screen. Your Home screen displays a clock and notifications.

To return to your Home screen from any other screen, press .

When the current time and date is selected, press  to open the main menu.


Note: All of the steps described in this user guide assume you start on your Home screen, with the current time and date selected.

Status icons

Your phone displays the following status icons at the top of your Home screen.

-  Strength of network signal
-  Gray - Bluetooth is on
White - Bluetooth is on and a device is connected
-  Keypad is locked
-  Connected to a computer
-  Connected to a headset
-  Silent mode without vibrate
-  Vibrate only mode
-  Red - Battery is empty
-  Battery is full
-  Battery is charging

Your Home Screen.

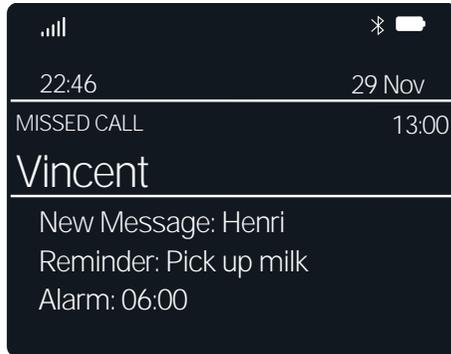

Notifications

Your Home screen displays notifications. You can receive notifications for calls, text messages, reminders, and alarms.

— To view more information about a notification on your Home screen

1. Use \odot \odot to select a notification and press \odot .
2. If you press \odot again, your phone displays content or a list of options. For example, for a reminder notification, you can delete or edit the reminder, or add an alert.

You can choose when to receive notifications. Choose to never receive notifications, always receive them, or only receive them when your phone's keypad is unlocked.

— To change your notification settings


1. Press \odot .
2. Use \odot \odot to select **Settings** and press \odot .
3. Use \odot \odot to select **Preferences** and press \odot .
4. Use \odot \odot to select **Notifications** and press \odot .
5. Choose when to receive notifications and press \odot to save.

Shortcut menu

From your Home screen, you can change common settings with the shortcut menu. Use the shortcut menu to quickly turn vibrate and Bluetooth on or off, or change your network settings.

- To view the shortcut menu, press and hold \odot on your Home screen.

Calls.

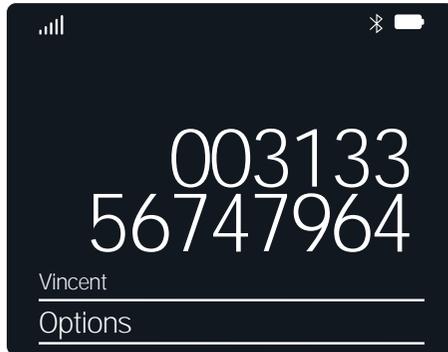

Making calls

— To call a phone number

1. Use the keypad to enter a phone number.
2. Press .

— To call someone in your call history


1. Press .
2. Choose a phone number or contact and press .

— To call a contact

1. Press .
2. Choose a contact and press .
3. If the contact has multiple phone numbers, choose a phone number and press .

Ending calls

- To end a call, press .

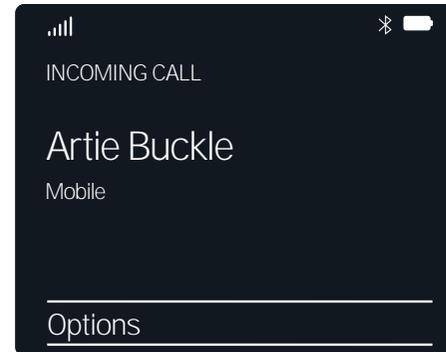

Answering calls

- To answer a call, press .
- To answer a call with your phone on loudspeaker, press and hold .

Tip: To change your ringtone, see page 25.

Rejecting calls

When you do not want to answer a call, you have several options.

- To silence a call, press either of the volume buttons on the side of your phone.
- To reject a call, press .
- To reject a call and send a text message to the caller
 - a. Press .
 - b. Use   to select **Send message** and press .
 - c. Choose a text message template and press .
- To set a reminder for you to call the caller back
 - a. Press .
 - b. Use   to select **Remind me** and press . The reminder is shown on your Home screen. Read more about reminders on page 23.

Calls.

Multiple calls

Sometimes you might receive a call when you are already on a call. If call waiting is on, when you are on a call and receive a new call, you can put the current call on hold and answer the new one. You can also make a new call when you are already on a call.

Note: Not all network providers or contracts allow you to handle multiple calls. For more information, contact your network provider.

- To answer or reject calls when you are already on a call
 - To answer the new call, press ☎.
 - To see other options, for example, rejecting the new call and sending a text message to the caller, press ⏸.

- To make a new call when you are already on a call
 - To call a phone number, enter it with the keypad and press ☎. The current call is put on hold.
 - To call a contact, press Ⓜ. Then choose a contact and press ☎. The current call is put on hold.

— To turn call waiting on or o

1. Press ⏸.
2. Use ⏮ ⏭ to select **Settings** and press ⏸.
3. Use ⏮ ⏭ to select **Calls** and press ⏸.
4. Use ⏮ ⏭ to select **Call waiting** and press ⏸.
5. Choose **Activate** or **Deactivate**, then press ⏸.

Tip: To check your current setting for call waiting, choose **Query status** and press ⏸.

Changing the volume of a call

When you are on a call, you can change the volume of the call or put it on loudspeaker.

- To change the volume of a call, use the volume buttons on the side of the phone.
- To put a call on loudspeaker, press 🔊. Use ⏮ ⏭ to select **Turn speaker on** and press ⏸.

Muting your microphone

- To mute your microphone, press 🔇. Use ⏮ ⏭ to select **Turn mute on** and press ⏸.

Putting calls on hold

- To put a call on hold, press ☎.
- To resume the call, press ☎.

Using speed dial numbers

Speed dial numbers allow you to instantly call a phone number or contact, at the touch of a key. Read about adding and deleting speed dial numbers on page 17.

- To call a speed dial number, press and hold the assigned key. For example, to dial the phone number or contact in speed dial position 2, press and hold 2.

Tip: Speed dial position 1 is assigned to your voicemail. Read about checking your voicemail on page 15.

Calls.

Call history	
Delete all	
✘ Norma Work	20:00
✘ Mobile	
➤ Elena Gatti	08:00
➤ Armin Link	25/12
➤ Denny Mango	25/12

Viewing your call history

Your call history shows recent calls that you have made and received.

1. Press .
2. To call someone in your call history, choose a call and press .
3. To view the details of a call, choose a call and press . From the **Options** menu you can call the phone number, send a text message, or add it to your contacts list.

Showing or hiding your phone number on outgoing calls

To hide your phone number when you make a call, hide your caller ID. When your phone number is hidden, the person who you are calling cannot see your number.

Note: Not all network providers or contracts allow you to change the caller ID settings. For more information, contact your network provider.

1. Press .
2. Use   to select **Settings** and press .
3. Use   to select **Calls** and press .
4. Use   to select **Caller ID** and press .
5. Choose to show or hide your phone number, or use your network provider's settings. Then press .

Diverting calls

You can divert calls to another number or to your voicemail. You can choose from the following settings:

- Divert calls when you do not answer
- Divert calls when you are busy
- Divert calls when you do not have network signal
- Divert all calls

Note: Not all network providers or contracts allow you to change the divert call settings. For more information, contact your network provider.

- To divert calls to another number or to your voicemail
1. Press .
 2. Use   to select **Settings** and press .
 3. Use   to select **Calls** and press .
 4. Use   to select **Divert calls** and press .
 5. Choose a divert setting, then press .
 6. Choose **Activate**, then press .

Tip: To check the current divert setting, choose **Query status** and press .

7. Choose where to divert calls and then follow the on-screen instructions.

— To cancel all divers

1. Press .
2. Use   to select **Settings** and press .
3. Use   to select **Calls** and press .
4. Use   to select **Divert calls** and press .
5. Use   to select **Cancel all divers** and press .

Voicemail.

Checking your voicemail

When you do not answer a call, the caller can leave a message on your voicemail provided by your network provider. When someone leaves a message on your voicemail, you receive a text message.

Note: Your voicemail settings depend on your network provider or contract. For more information, contact your network provider.

- To check your voicemail, press and hold .

Setting your voicemail number

Before you can check your voicemail, you need to set your voicemail number. Your voicemail number is specific to the network provider of your SIM card. If you do not know your voicemail number, contact your network provider.

1. Press .
2. Use   to select **Settings** and press .
3. Use   to select **Voicemail** and press .
4. Enter your voicemail number and press .

Contacts.

About contacts

You can save the phone numbers for family and friends as contacts on your phone. A contact can have up to three phone numbers assigned to it, each with a different label. For example, your friend might have a home phone number and a work phone number.

Adding contacts

To add a new contact, you can use your contacts list or the dialler.

— To add a new contact from your contacts list

1. Press **Ⓜ**.
2. Use **⬅ ➡** to select **Add contact** and press **Ⓞ** twice.
3. Enter the phone number and press **Ⓞ** twice.
4. Choose a label for the phone number and press **Ⓞ**.
5. Enter the contact name and press **Ⓞ** twice to save the contact. To add another phone number to the contact, see page 16.

— To add a new contact from the dialler

1. Use the keypad to enter a phone number.
2. Press **Ⓞ**.
3. Use **⬅ ➡** to select **Add to contacts** and press **Ⓞ** twice.
4. If required, edit the phone number.
5. Press **Ⓞ** twice.
6. Choose a label for the phone number and press **Ⓞ**.
7. Enter the contact name.
8. Press **Ⓞ** twice to save the contact.

To add another phone number to the contact, see page 16.

Viewing contacts

1. To view your contacts list, press **Ⓜ**.

Tip: To search for a contact in the list, use the keypad to enter the name of the contact.

2. To view the phone numbers for a contact, choose a contact and press **Ⓞ**.

Editing contacts

You can edit the name of a contact, edit their phone number, or add another phone number.

— To edit the name of a contact

1. Press **Ⓜ**.
2. Choose a contact and press **Ⓞ** twice.
3. Use **⬅ ➡** to select **Edit** and press **Ⓞ**.
4. Use **⬅ ➡** to select **Edit name** and press **Ⓞ**.

5. Edit the contact name and press **Ⓞ** twice to save.

— To edit the phone number of a contact

1. Press **Ⓜ**.
2. Choose a contact and press **Ⓞ** twice.
3. If there are multiple phone numbers for a contact, choose the number to edit and press **Ⓞ**.
4. Use **⬅ ➡** to select **Edit number** and press **Ⓞ**.
5. Edit the phone number and press **Ⓞ** twice.
6. Choose a label for the phone number and press **Ⓞ** to save.

— To add another phone number to a contact

1. Press **Ⓜ**.
2. Choose a contact and press **Ⓞ** twice.
3. Use **⬅ ➡** to select **Edit** and press **Ⓞ**.
4. Use **⬅ ➡** to select **Add number** and press **Ⓞ**.
5. Enter the phone number and press **Ⓞ** twice.
6. Choose a label for the phone number and press **Ⓞ** to save.

Contacts.

Deleting contacts

1. Press **⌘**.
2. Choose a contact and press **⌘** twice.
3. Use **⏪ ⏩** to select **Delete** and press **⌘** twice.

Sharing contacts

You can share a contact with family and friends. Choose to send the contact details in a text message or send them by Bluetooth.

1. Press **⌘**.
2. Choose a contact and press **⌘** twice.
3. Use **⏪ ⏩** to select **Share** and press **⌘**.
4. To choose how to share the contact, use **⏪ ⏩**.
 - To send the contact details in a text message, select **Share via message** and press **⌘**. Choose a recipient and then follow the on-screen instructions. Read more about text messages on page **19**.

- To send the contact details by Bluetooth, select **Share via Bluetooth** and press **⌘**. Choose another device and then follow the on-screen instructions. Read more about Bluetooth on page **27**.

Receiving a shared contact with Bluetooth

When someone uses Bluetooth to send you a contact, your phone displays a notification. After you receive the shared contact, add it to your contacts list. Read more about Bluetooth on page **27**.

1. To receive the shared contact, choose **Yes** and then press **⌘**. A vCard format (.vcf) file is saved on your phone.
2. Press **⌘**.
3. Use **⏪ ⏩** to select **Manage contact** and press **⌘**.
4. Use **⏪ ⏩** to select **Restore contacts** and press **⌘**.
5. Choose the .vcf file and press **⌘** to add it to your contacts list.

Viewing your own phone number

You can view your own phone number in your contacts list.

Note: For some SIM cards, you cannot view your own phone number in your contacts list. To check your own phone number, contact your network provider.

- To view your own phone number, press **⌘**. Your phone number is displayed at the top of the list.

Adding and deleting speed dial numbers

You can add phone numbers or contacts that you call a lot to speed dial numbers. Your voicemail is always assigned to speed dial number 1.

1. Press **⌘**.
2. Use **⏪ ⏩** to select **Manage contact** and press **⌘**.
3. Use **⏪ ⏩** to select **Speed dial** and press **⌘**.
4. To add a phone number or a contact to a speed dial number, choose an unassigned number and press **⌘**.
5. To delete a speed dial number, choose a number and press **⌘**.

Contacts.

Copying and moving contacts between your phone and SIM card

— To copy contacts between your phone and SIM card

1. Press **⌘**.
2. Use **⏪ ⏩** to select **Manage contact** and press **⏵**.
3. Use **⏪ ⏩** to select **Copy contacts** and press **⏵**.
4. Choose where to copy contacts to, then press **⏵**.
5. Choose to copy individual contacts or all contacts, then press **⏵**.
 - If you are copying individual contacts, choose the contact and press **⏵** to copy it. To copy another contact, press **⏵**.
 - If you are copying all contacts, press **⏵** to start.

— To move contacts between your phone and SIM card

1. Press **⌘**.
2. Use **⏪ ⏩** to select **Manage contact** and press **⏵**.
3. Use **⏪ ⏩** to select **Move contacts** and press **⏵**.
4. Choose where to move contacts to, then press **⌘**.
5. Choose to move individual contacts or all contacts, then press **⏵**.
 - If you are moving individual contacts, choose the contact and press **⏵** to move it. To move another contact, press **⏵**.
 - If you are moving all contacts, press **⏵** to start.

Backing up and restoring contacts

You can back up your contacts list to a computer and then restore it at a later date. Your phone can use backups in the vCard format (.vcf).

Tip: Read more about backing up and restoring contacts at punkt.ch. When your phone backs up your contacts list, it saves it as a .vcf file.

It names the backup with the current date and time. For example, a backup created on 11th March 2016 at 14:35:07 has the name Punkt20160311143507.

— To back up your contacts list to a computer

1. Press **⌘**.
2. Use **⏪ ⏩** to select **Manage contact** and press **⏵**.
3. Use **⏪ ⏩** to select **Backup contacts** and press **⏵** twice to save the backup.
4. Use the micro USB cable to connect your phone to a computer.
5. To put your phone in sync mode, use **⏪ ⏩** to select **Sync mode** and press **⏵**.
6. Copy the backup file from your phone to the computer.

— To restore your contacts list from a computer

1. Use the micro USB cable to connect your phone to a computer.
2. To put your phone in sync mode, use **⏪ ⏩** to select **Sync mode** and press **⏵**.
3. Copy the backup file from the computer to your phone.
4. Disconnect your phone from the computer.

5. Press **⌘**.
6. Use **⏪ ⏩** to select **Manage contact** and press **⏵**.
7. Use **⏪ ⏩** to select **Restore contacts** and press **⏵**.
8. Choose a backup and press **⏵** to restore it.

Text Messages.

About text messages

Text messages allow you to keep in touch with family and friends. When you send and receive text messages, your phone saves them in folders so you can easily find them. Your phone uses the following folders for text messages.

— Inbox

Text messages that you have received.

— Drafts

Text messages that you have started but not sent.

— Outbox

Text messages that you are currently sending or text messages that have failed to send.

— Sent

Text messages that you have sent.

— Templates


Text messages that you can quickly send.

Tip: You can save up to 1000 text messages on your phone.

Entering text on your phone

To enter text on your phone, use the keypad. Each number key represents several letters. For example, you can use the 2 key to enter the letters *a*, *b*, or *c*. You can enter text in the following ways:

- Predictive text
- Multi-tap text

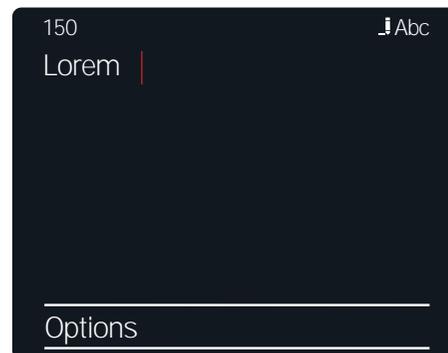

When you enter text, press  to cycle through the text entry modes. Your phone cycles through the modes in the following order.

1.  **ABC**
— Predictive text
Capitalise the first letter
2.  **ABC**
— Predictive text
All upper case letters
3.  **abc**
— Predictive text
All lower case letters
4. **Abc**
— Multi-tap text
Capitalise the first letter
5. **ABC**
— Multi-tap text
All upper case letters
6. **abc**
— Multi-tap text
All lower case letters 123
7. **123**
— Number

Tip: To instantly swap between predictive and multi-tap modes, press and hold .

Note: If your phone is not in English, the first two letters of your phone's language is used to display the text entry mode.

— To use multi-tap text entry

To enter a letter, press a key. Each time you press the key, it cycles through the associated letters. For example, to enter the letter *c*, press 2 three times.

— To use predictive text entry

With predictive text, you can press fewer keys to enter a word.

1. To enter a letter, press a key once. As you continue to press keys, your phone suggests words at the bottom of your screen.
2. To choose the suggested word that is highlighted in orange, press .
3. To choose another suggested word, use   and then press .

Tip: To choose a word and also insert a space after it, press .

When you use predictive text input,  is displayed in the top-right of your screen.

Text Messages.

- To enter other characters
- To enter a space between words, press **⓪**.
- To enter a full stop, press **Ⓛ**.
- To enter a number, press and hold a key. You can also press **Ⓢ** multiple times until the phone is in number mode.
- To view a list of symbols, press **Ⓢ**. Then press the relevant key to insert a symbol, or press **Ⓢ** to view the next page of symbols.

Sending text messages

You can send a text message to a phone number or contact. To send the text message to more than one person, add multiple phone numbers or contacts to the recipient list.

1. Press **Ⓢ**.
2. Press **⓪**.
3. Enter your message and press **⓪** twice.
4. To choose who to send the text message to, use **Ⓛ** **Ⓛ**.
 - To send the text message to a phone number, select **Enter number** and press **⓪**. Enter the phone number and press **⓪**.

- To send the text message to a contact, select **Add from Phonebook** and press **⓪**. Choose a contact and press **⓪**. If the contact has multiple phone numbers, choose a number and press **⓪**.
- 5. When you have added all of the recipients, press **⓪** twice to send the text message.

Tip: If your phone cannot send the text message, a message appears. Your phone saves the message to your outbox folder.

Viewing text messages

- To view a new text message
When you receive a new text message, a notification appears on your Home screen. To open the text message, press **⓪**.

Tip: To change your message tone, see page 25.

- To view text messages in a message folder

1. Press **Ⓢ**.
2. Use **Ⓛ** **Ⓛ** to choose a message folder, then press **⓪**.

3. To view a text message, choose a message and press **⓪**.

Tip: If you want to call the person who sent you the text message, you can quickly call them from the message. To call the person who sent you the text message, press **⓪**. Select **Call** and then press **⓪**.

Replying to or forwarding text messages

1. View a text message.
2. To choose an option, use **Ⓛ** **Ⓛ**.
 - To reply to the person who sent the text message, select **Reply** and press **⓪**.
 - To forward the text message to someone else, select **Forward** and press **⓪**.
3. Enter your message and press **⓪** twice.
4. Choose who to send the text message to.
5. When you have added all of the recipients, press **⓪** twice to send the text message.

Deleting text messages

1. Press **Ⓢ**.
2. Use **Ⓛ** **Ⓛ** to choose a message folder, then press **⓪**.
3. To choose which messages to delete, use **Ⓛ** **Ⓛ**.
 - To delete a text message, choose a message and press **⓪** twice. Then select **Delete** and press **⓪** twice.
 - To delete all text messages in the folder, select **Delete all** and press **⓪** twice.

Text Messages.

Using text message templates

You can quickly send text message templates. For example, when you receive a call but cannot answer it, you can reject it and send a text message template to the caller saying “Call me later”. Read more about rejecting calls on page 12.

— To insert a template into your text message

1. When you are entering a text message, press ⏺.
2. Use ⏴ ⏵ to select **Insert template** and press ⏺.
3. Choose a template and press ⏺ to insert it into your message.

Using the content in a text message

When you receive a text message that contains certain types of content, your phone can use it. For example, if you receive a text message that contains a phone number, you can call the number directly from the message.

— You can use the content of a text message to do the following:

- Call a phone number
- Send a text message to a phone number
- Create a reminder from part of the message
- Create a reminder from the full message
- Set an alarm
- Add or update a contact

— To use the content in a text message

1. Press ⏺.
2. Use ⏴ ⏵ to choose a message folder, then press ⏺.
3. To view a text message, choose a message and press ⏺ twice.

Tip: To use the sender’s phone number to add or update a contact, select **Add to contacts** and press ⏺. Follow the on-screen instructions.

4. Use ⏴ ⏵ to select **Use message content** and press ⏺.
5. Choose the content to use and press ⏺.
6. Choose an option and follow the on-screen instructions.

Alarms.

About alarms

To wake you up at the start of the day, set an alarm on your phone. When you set an alarm, your phone sets it for the next possible time. After you set an alarm, your Home screen displays the alarm icon and the alarm time.

Tip: If your phone is turned off and you have set an alarm, it wakes up at the alarm time.

Setting a new alarm

1. Use your keypad to enter the alarm time, in the format *hhmm*. For example, press 1 0 2 0 for an alarm at 10:20 in the morning.
2. Press .
3. Use   to select **Set alarm** and press .
4. If you use a 12-hour clock, choose **AM** or **PM** and press .

Setting or cancelling the saved alarm

You can set or cancel the saved alarm.

1. Press .
2. Use   to select **Alarm** and press . The saved alarm time is displayed.
3. To set or cancel the alarm, press .

Snoozing or turning off your alarm

When your alarm sounds, you can snooze it for 5 minutes or turn it off.

- To snooze the alarm when it sounds, press . The alarm sounds again in 5 minutes.
- To turn off the alarm when it sounds, press . When you turn off the alarm, your phone cancels it. To set the alarm again, see page 22.

Reminders.

About reminders

To help you remember something important, set a reminder on your phone. Your Home screen displays any reminders that you set. To remind you at a specific date and time, you can also add an alert to a reminder.

Setting a reminder

1. Press \odot .
2. Use $\triangleleft \triangleleft$ to select **Reminders** and press \odot twice.
3. Enter the description for the reminder, for example, *David's birthday*.
4. Press \odot twice.
5. Choose whether or not to add an alert to the reminder, then press \odot .
6. If you chose to add an alert, set the date and time for the alert.
 - a. Use $\triangleleft \triangleleft$ and \odot to enter the date.
 - b. Use $\triangleleft \triangleleft$ and \odot to enter the time.

Editing a reminder

When you have set a reminder, you can edit its description or alert.

— To edit a reminder's description

1. Press \odot .
2. Use $\triangleleft \triangleleft$ to select **Reminders** and press \odot .
3. Choose a reminder and press \odot twice.
4. Use $\triangleleft \triangleleft$ to select **Edit reminder** and press \odot .
5. Edit the description for the reminder.
6. Press \odot twice to save.

— To edit a reminder's alert

1. Press \odot .
2. Use $\triangleleft \triangleleft$ to select **Reminders** and press \odot .
3. Choose a reminder and press \odot twice.
4. Use $\triangleleft \triangleleft$ to select **Edit reminder alert** and press \odot .
5. To remove the alert, press \odot .
6. To change the date or time for the alert, use $\triangleleft \triangleleft$ to select **Modify date/time** and press \odot . Then set the date and time for the alert.
 - a. Use $\triangleleft \triangleleft$ and \odot to enter the date.
 - b. Use $\triangleleft \triangleleft$ and \odot to enter the time.

Deleting a reminder

1. Press \odot .
2. Use $\triangleleft \triangleleft$ to select **Reminders** and press \odot .
3. Choose a reminder and press \odot twice.
4. Use $\triangleleft \triangleleft$ to select **Delete** and press \odot .

Calendar.

Viewing your calendar

You can easily view a calendar on your phone.

1. Press  twice. Your calendar opens and displays the current month.
2. To view another month, use  .
3. To return to the current month, press .

Tip: To be reminded of an event on a specific date, set a reminder with an alert. Read more about reminders on page [23](#).

Sounds.

About sounds

Your phone can play a sound and vibrate when you receive a call or text message. You can also set your phone to play a sound each time you press a key, or turn the phone on and off.

Changing your ringtone volume

When you change your ringtone volume, it also affects the volume of message tones, keypad tones, and other sounds.

- To change the volume of your ringtone, from your Home screen, use the volume buttons on the side of the phone. Ensure you are not on a call.

When you are in a meeting or do not want to be disturbed, put your phone on silent.

- To put your phone on silent, press and hold the volume down button on the side of the phone. If your phone is set to vibrate, it still vibrates when you receive a call or message.

Changing your ringtone

The ringtone plays when you receive a call.

1. Press .
2. Use   to select **Sounds** and press .
3. Use   to select **Calls** and press .
4. Use   to move through the list of ringtones and hear a sample of each ringtone.
5. To set the new ringtone, press .

Changing your message tone

The message tone sounds when you receive a text message.

1. Press .
2. Use   to select **Sounds** and press .
3. Use   to select **Messages** and press .
4. Use   to move through the list of message tones and hear a sample of each tone.
5. To set the new message tone, press .

Turning vibrate on or off

You can set your phone to vibrate mode when you receive a call or text message. If your phone is set to vibrate, it still vibrates whether or not your phone is on silent.

1. Press .
2. Use   to select **Sounds** and press .
3. Use   to select **Vibrate** and press .
4. Choose **On** or **Off**, then press .

Turning the keypad tones on or off

To hear a sound each time you press a key, turn on the keypad tones.

1. Press .
2. Use   to select **Sounds** and press .
3. Use   to select **Keypad tone** and press .
4. Choose **On** or **Off**, then press .

Turning the start-up sound on or off

To hear a sound when you turn your phone on or off, turn on the start-up sound.

1. Press .
2. Use   to select **Sounds** and press .
3. Use   to select **Start-up sound** and press .
4. Choose **On** or **Off**, then press .

Date And Time.

Changing the date and time setting

You can set the date and time on your phone manually, or your phone can update them automatically.

1. Press .
2. Use   to select **Settings** and press .
3. Use   to select **Date and time** and press .
4. Use   to select **Mode** and press .
5. Choose **Automatic** or **Manual**, then press .

Note: For some network providers, you cannot automatically update the date and time. If the date and time do not update when you choose **Automatic**, set them manually.

Setting the date

You can easily set the date on your phone.

1. Press .
2. Use   to select **Settings** and press .

3. Use   to select **Date and time** and press .
4. Use   to select **Date** and press  twice.
5. To enter the date, use   and .

Setting the time

You can easily set the time on your phone, and choose between a 12-hour or 24-hour clock.

— To change the clock format

1. Press .
2. Use   to select **Settings** and press .
3. Use   to select **Date and time** and press .
4. Use   to select **Time** and press .
5. Use   to select **Format** and press .
6. Choose to use a 24-hour or 12-hour clock, then press  to save.

— To set the time

1. Press .
2. Use   to select **Settings** and press .
3. Use   to select **Date and time** and press .
4. Use   to select **Time** and press  twice.

5. Use   to set the time, in the format *hhmm*.
 - a. Choose the hour, then press .
 - b. Choose the minute, then press .
 - c. If you use a 12-hour clock, choose **AM** or **PM** and press .

Changing the time zone

When you travel to a different time zone, you can update the clock on your phone to the local time. To update the clock on your phone, do not change the time. Instead, set a time zone and then turn on the time zone. If you often travel to a different time zone, set the time zone to that location. Turn on the time zone when you travel, then turn it off when you are back home.

Tip: If you receive a text message that has the wrong time stamp, check the time zone settings. The wrong time stamp could be due to the following:

- The time zone is not currently set.
- The wrong time zone is set.
- The time is different due to daylight-saving time.

— To set the time zone

1. Press .
2. Use   to select **Settings** and press .
3. Use   to select **Date and time** and press .
4. Use   to select **Time zone** and press .
5. Choose a city for the time zone and press . To update the clock on your phone, turn on the time zone.

— To turn on the time zone

1. Press .
2. Use   to select **Settings** and press .
3. Use   to select **Date and time** and press .
4. Use   to select **Use time zone** and press .
5. Use   to select **On** and press .

Connectivity.

About Bluetooth

Use Bluetooth to wirelessly connect to other devices, for example, another phone or a Bluetooth headset.

When you use Bluetooth, you can do the following:

- Connect to a Bluetooth headset or similar device
- Send and receive contact details

Before you can connect your phone to a Bluetooth device, you need to pair your phone with it. You can then allow a paired Bluetooth device to connect to your phone automatically.

Turning Bluetooth on or off

1. Press **ⓘ**.
2. Use **⬅ ➡** to select **Settings** and press **ⓘ**.
3. Use **⬅ ➡** to select **Connectivity** and press **ⓘ**.
4. Use **⬅ ➡** to select **Bluetooth** and press **ⓘ**.
5. To turn Bluetooth on or off, press **ⓘ**. When Bluetooth is on, your phone displays the **📶** status icon.

Tip: To save battery power, turn Bluetooth off when it is not in use.

Pairing with a Bluetooth device

1. Press **ⓘ**.
2. Use **⬅ ➡** to select **Settings** and press **ⓘ**.
3. Use **⬅ ➡** to select **Connectivity** and press **ⓘ**.
4. Use **⬅ ➡** to select **Bluetooth** and press **ⓘ**.
5. Use **⬅ ➡** to select **Devices** and press **ⓘ** twice. Your phone searches for nearby Bluetooth devices. To stop the search, press **ⓘ**.
6. Choose a device to pair with, then press **ⓘ**.
7. Follow the on-screen instructions. If required, enter a code for authentication and then enter the same code on the Bluetooth device. Your phone is now paired to the Bluetooth device and is ready to connect.

Connecting to a paired Bluetooth device

1. Press **ⓘ**.
2. Use **⬅ ➡** to select **Settings** and press **ⓘ**.
3. Use **⬅ ➡** to select **Connectivity** and press **ⓘ**.
4. Use **⬅ ➡** to select **Bluetooth** and press **ⓘ**.
5. Use **⬅ ➡** to select **Devices** and press **ⓘ**.
6. Choose a paired Bluetooth device from the list and press **ⓘ**.
7. Choose **Connect** and press **ⓘ**.

Connectivity.

Changing settings for a paired Bluetooth device

You can rename a paired Bluetooth device, change its connection settings, or delete it. If you delete a Bluetooth device, you must pair it again before you can use it.

1. Press **ⓘ**.
2. Use **⬅ ➡** to select **Settings** and press **ⓘ**.
3. Use **⬅ ➡** to select **Connectivity** and press **ⓘ**.
4. Use **⬅ ➡** to select **Bluetooth** and press **ⓘ**.
5. Use **⬅ ➡** to select **Devices** and press **ⓘ**.
6. Choose a device and press **ⓘ**.
7. Choose an option and follow the on-screen instructions.

Tip: To allow the device to connect to your phone automatically, choose **Authorise** and press **ⓘ**. Then choose **Always connect** and press **ⓘ**.

Changing the device name of your phone

You can change the device name of your phone. The device name is shown when someone searches for Bluetooth devices. For example, you can include your own name to easily identify your phone when you pair it with another device.

1. Press **ⓘ**.
2. Use **⬅ ➡** to select **Settings** and press **ⓘ**.
3. Use **⬅ ➡** to select **Connectivity** and press **ⓘ**.
4. Use **⬅ ➡** to select **Bluetooth** and press **ⓘ**.
5. Use **⬅ ➡** to select **Name** and press **ⓘ**.
6. Edit the name of your phone.
7. Press **ⓘ** twice to save.

Tip: You can make your phone visible or invisible to other Bluetooth devices. In the **Bluetooth** menu, use **⬅ ➡** to select **Visibility** and press **ⓘ** to make it visible or invisible.

Changing your network settings

When you insert your SIM card, your phone automatically chooses a network provider. You can manually choose a different network provider.

— To choose your network provider

1. Press **ⓘ**.
2. Use **⬅ ➡** to select **Settings** and press **ⓘ**.
3. Use **⬅ ➡** to select **Connectivity** and press **ⓘ**.
4. Use **⬅ ➡** to select **Network** and press **ⓘ** twice.
5. To choose a setting, use **⬅ ➡**.
 - To set your network provider, select **Automatic** and press **ⓘ**.
 - To choose a network provider, select **Manual** and press **ⓘ**. Your phone displays a list of possible network providers. Choose a network provider and press **ⓘ**.

— To show or hide your network provider's name on your Home screen

1. Press **ⓘ**.
2. Use **⬅ ➡** to select **Settings** and press **ⓘ**.
3. Use **⬅ ➡** to select **Preferences** and press **ⓘ**.
4. Use **⬅ ➡** to select **Show network** and press **ⓘ**.
5. Choose **On** or **Off**, then press **ⓘ**.

Security.

About passcodes and PINs

To help stop other people using your phone, set a passcode. A passcode is a code of up to four numbers for your phone. You can also set a PIN for your SIM card, which stops other people using it for calls or text messages.

If a passcode or PIN is turned on, you must enter it whenever you turn your phone on.

The default passcode for your phone is 7658. The default PIN for your SIM card is set by your network provider. If you do not know the PIN for your SIM card, contact your network provider.

Using a passcode for your phone

Phone passcode can have up to four numbers.

— Turning your phone passcode on or off

1. Press .
2. Use   to select **Settings** and press .
3. Use   to select **Security** and press  twice.
4. Use   to select **Passcode** and press .
5. Enter your phone passcode and press . The default passcode is 7658.

— Changing your phone passcode

1. Press .
2. Use   to select **Settings** and press .
3. Use   to select **Security** and press .
4. Use   to select **Phone passcode** and press .
5. Use   to select **Change passcode** and press  twice.
6. Enter your current phone passcode and press . The default passcode is 7658.
7. Enter your new phone passcode and press . You can enter up to four numbers.
8. Enter your new phone passcode again, then press  to save.

Using a PIN for your SIM card

The PIN for your SIM card must be at least four numbers.

Warning: Do not try to guess the PIN for your SIM card. If you enter the wrong PIN three times, then your SIM card becomes locked. If your SIM card is locked, request a Personal Unlocking Key (PUK) from your network provider.

— Turning the PIN for your SIM card on or off

1. Press .
2. Use   to select **Settings** and press .
3. Use   to select **Security** and press .
4. Use   to select **SIM PIN** and press  twice.
5. Enter your PIN and press .

— Changing the PIN for your SIM card

1. Press .
2. Use   to select **Settings** and press .
3. Use   to select **Security** and press .
4. Use   to select **SIM PIN** and press .

5. Use   to select **Change SIM PIN** and press .
6. Enter your current PIN and press .
7. Enter your new PIN and press . You must enter at least four numbers.
8. Enter your new PIN again, then press  to save.

Setting your phone's keypad to lock automatically

You can set your phone's keypad to lock automatically after a certain amount of time. For example, you can set the keypad to lock after 30 seconds of inactivity.

1. Press .
2. Use   to select **Settings** and press .
3. Use   to select **Preferences** and press  twice.
4. Choose how long to wait before the keypad locks automatically. To turn off automatic locking, choose **Never**.
5. Press .

Phone Management.

Changing the language

Your phone can display content in several languages.

1. Press .
2. Use   to select **Settings** and press .
3. Use   to select **Preferences** and press .
4. Use   to select **Language** and press .
5. Choose a language and press  to save.

Resetting your phone

You can reset the settings on your phone, or erase all content and restore the phone to factory settings.

If your phone stops responding, press the reset switch on the back of your phone.

— To reset settings or restore your phone to factory settings

1. Press .
2. Use   to select **Settings** and press .
3. Use   to select **Reset** and press .
4. To choose a reset option, use  .
 - To reset the settings on your phone, select **Reset all settings** and press .
 - To erase all content and restore your phone to factory settings, select **Erase content and reset** and press .
5. If you have a phone passcode, enter your passcode and press .
6. To start the reset, press .

Warning: You cannot cancel or undo a phone reset. When you restore your phone to factory settings, it erases all content on the phone except the files in internal storage. Before you reset your phone, back up your contacts list and then export it to a computer. Read more about backing up your contacts list on page 18.

— To press the reset switch on the back of your phone

Sometimes your phone can stop responding. To turn the phone off and on again, you can use the reset switch on the back of your phone.

Note: While you remove the rear cover, hold the volume buttons and the lock button to keep them attached to your phone.

1. Remove the rear cover of your phone.
 - a. Insert your fingernail or a thin object into the gap at the top of your phone.
 - b. Gently pull the top of the rear cover away from your phone.
 - c. Continue to insert your fingernail or a thin object into the gap around the edge of your phone, and remove the rear cover.
2. To press the reset switch in the top left of the rear of your phone, use a pin.
3. Replace the rear cover of your phone.
 - a. With your phone facing down on a flat surface, align the rear cover with your phone.

- b. Press the section of the rear cover that is between the volume buttons and the SIM tray.
- c. Press the rear cover around the edges of your phone, until the rear cover has fully clicked into place.

Viewing information about your phone

You can use your phone to view the following information.

- Software version installed on your phone
- IMEI number, which is a unique identifier for your phone
- Number of contacts saved on your phone
- Number of text messages saved on your phone

— To view information about your phone

1. Press .
2. Use   to select **About** and press .
3. Use   to select **About this phone** and press .

How To Take Care Of Your MP 01 Mobile Phone.

For best performance, store your phone in temperatures between 15 °C and 25 °C.

Do not expose your phone to temperatures lower than 0 °C and higher than 40 °C. Exposure to extreme temperatures may cause your phone to stop working temporarily. Prolonged exposure to extreme temperatures may damage your phone or battery.

Keep your phone clean and dry. Do not use or store your phone in wet, dirty, or dusty conditions. If your phone gets dirty, use a soft and clean cloth to clean it.

Keep your phone away from sources of heat. Do not expose the battery to fire, as it may explode.

Take care not to drop, impact, or shock your phone. If your phone is damaged, do not use it.

Do not open, dismantle, or modify your phone in any way, other than that described in this user guide.

Only use your phone and accessories as described in this user guide.

When you use your phone, hold it so your hand does not cover the antenna area. If you cover the antenna area, it may affect your network signal.

Specifications.

Supported networks:
GSM 850, GSM 900, GSM 1800
and GSM 1900 MHz.

Estimated battery life:
290 minutes talk time and
500 hours standby time.

Various factors may affect the
estimated battery life, for example,
network conditions, use of features,
battery condition, or temperature.

Safety And Regulatory.

Safety

To use your phone safely, use it only in the way described in this user guide.

As a general rule, always switch off your phone wherever the use of such device is prohibited. Do not use your phone when in control of a vehicle, except with a hands-free device or headset. Always turn off your phone inside an aircraft.

Your phone emits radio waves, which may interfere with electronic devices. Do not use your phone when near devices that are possibly inadequately shielded.

Keep your phone out of reach of small children, as your phone has some small parts.

Continuous exposure to loud volumes may damage your hearing. If you use a headset, take care as excess volumes and sound pressure may damage your hearing. If you use a headset, it may affect your ability to hear other sounds.

If the battery is replaced with one of the wrong type, there is a risk of explosion.

Disposal

To dispose of your phone, use a dedicated collection point. Do not dispose of your phone in general waste.

Dispose of packaging materials and electrical or electronic equipment separately.



Dispose of used batteries according to the instructions on the battery. Do not dispose of batteries in a fire, as they can explode.

Regulatory compliance

EU compliance statement

Hereby, Punkt Tronics AG declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

CE 0700

Distance of operation

This device model has been tested and meets radiofrequency exposure guidelines when used as follows:

- Against the ear: Place or receive a device call and hold the device as you would a wire line telephone.
- Body worn: When transmitting, place the device in a carry accessory that contains no metal and position the device a minimum of 1.5 cm from your body. Use of other accessories may not ensure compliance with radio frequency exposure guidelines. If you do not use a body worn accessory and are not holding the device at your ear, position the device a minimum of 1.5 cm from your body.
- Data operation: When using a data feature, position the phone a minimum of 1.5 cm from your body for the whole duration of the data transmission.

FCC regulations

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This device generates, uses, and can radiate radio frequency energy. If not installed and used in accordance with the instructions, this device may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. To determine whether this device is causing interference to radio or television reception, turn the device off and on. If this device does cause interference to radio or television reception, try the following solutions:

Safety And Regulatory.

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and the affected equipment.
- Connect the equipment into an outlet on a circuit different from the one the receiver is connected to.
- Contact your supplier or an experienced radio or television technician.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the device.

RF exposure information (SAR)

This device meets the government's requirements for exposure to radio waves. This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard for wireless devices employs a unit of measurement known as the Specific Absorption Rate, or SAR.

The SAR limit set by the FCC is 1.6 W/kg.

Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power 20 level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels, to only use the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The highest SAR value for the device reported to the FCC when tested is:

- For use at the ear: 0.603 W/kg.
- When worn on the body: 0.495 W/kg.

Body-worn measurements differ among phone models, depending upon available enhancements and FCC requirements. While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this device with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this device is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID: Z3PMP01.

For body worn operation, this device has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and that positions the handset a minimum of 1.5 cm from the body. Use of other enhancements may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the device at your ear, position the device a minimum of 1.5 cm from your body when the device is switched on.

IC statement

This device complies with CAN ICES-3 (B)/NMB-3 (B). This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and

(2) this device must accept any interference, including interference that may cause undesired operation of the device.

Trademarks

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Punkt Tronics AG is under license.



Other trademarks and trade names are those of their respective owners.

Warranty And Customer Care.

Warranty

Punkt. guarantees this product for a period of two years from the date of purchase. The warranty only applies to defects attributable to the production process or materials used. The product covered by the warranty may be repaired or replaced after being assessed by Punkt. The service for products covered by the warranty can only be obtained by presenting proof of purchase (a valid receipt) and the original packaging.

The warranty does not cover parts subject to normal wear and tear due to daily use of the product. For example, the warranty does not cover batteries (if provided with the product), power cords, various cables, connectors or sockets, external parts and plastic parts that do not show obvious signs of manufacturing defects. The warranty does not cover accidental damage, misuse, negligence and is null and void if the product has been tampered with by unauthorized persons.

For further information, or if other problems arise, please contact the Punkt. dealer closest to you, or get in touch with us using the form on the Punkt. website punkt.ch.

Customer care

In the unlikely event that a problem should occur with one of our products, we kindly ask you to return the product to the store where it was purchased. The staff will be able to help solve the problem and, should the product malfunction be due to defects in workmanship or materials, they will handle the replacement procedure. Only products covered by the warranty will be replaced.

If you are unable to return the product to the store where it was purchased, please use the form on the Punkt. website, punkt.ch.

Your personal information will only be used for Punkt. customer care purposes and will therefore only be communicated to other companies providing repair services. Your information will not be used for sending you information or promotional material from Punkt. or its partners.

Contact us

If you have any questions or would like to comment on our products, please write to info@punkt.ch.

For more product information, visit the Punkt. official website at punkt.ch.

punkt.ch
info@punkt.ch

Tel +41 91 924 9003
Fax +41 91 924 9004

Punkt Tronics AG
Via Losanna 4
CH-6900 Lugano
Switzerland

Punkt.