

TOSHIBA

Leading Innovation >>>

User's Guide

excITE™_{10 LE}

If you need assistance:

- ❖ Toshiba's Support Web site
tabletsupport.toshiba.com

For more information, see “If Something Goes Wrong” on page 93 in this guide.

▲ WARNING

Handling the cord on this product will expose you to lead, a chemical known to the State of California to cause birth defects or other reproductive harm. ***Wash hands after handling.***

Model: AT200 Series

Regulatory Information

Protection of Stored Data

For your important data, please make periodic back-up copies of all the data stored on the hard disk or other storage devices as a precaution against possible failures, alteration, or loss of the data. **IF YOUR DATA IS ALTERED OR LOST DUE TO ANY TROUBLE, FAILURE OR MALFUNCTION OF THE HARD DISK DRIVE OR OTHER STORAGE DEVICES AND THE DATA CANNOT BE RECOVERED, TOSHIBA SHALL NOT BE LIABLE FOR ANY DAMAGE OR LOSS OF DATA, OR ANY OTHER DAMAGE RESULTING THEREFROM. WHEN COPYING OR TRANSFERRING YOUR DATA, PLEASE BE SURE TO CONFIRM WHETHER THE DATA HAS BEEN SUCCESSFULLY COPIED OR TRANSFERRED. TOSHIBA DISCLAIMS ANY LIABILITY FOR THE FAILURE TO COPY OR TRANSFER THE DATA CORRECTLY.**

Critical Applications

The device you have purchased is not designed for any “critical applications.” “Critical applications” means life support systems, medical applications, connections to implanted medical devices, commercial transportation, nuclear facilities or systems or any other applications where product failure could lead to injury to persons or loss of life or catastrophic property damage. **ACCORDINGLY, TOSHIBA, ITS AFFILIATES AND SUPPLIERS DISCLAIM ANY AND ALL LIABILITY ARISING OUT OF THE USE OF THE DEVICE PRODUCTS IN ANY CRITICAL APPLICATIONS. IF YOU USE THE DEVICE PRODUCTS IN A CRITICAL APPLICATION, YOU, AND NOT TOSHIBA, ASSUME FULL RESPONSIBILITY FOR SUCH USE.**

Radio Frequency (RF) Energy Exposure

When the transmitter and receiver on your device is powered ON, RF energy is received and transmitted. The power level your device transmits at is controlled by your network access while in communication.

Your device is approved to the radio standard by the country/region listed in the approved countries table for the module installed in your device.

FCC Notice “Declaration of Conformity Information”

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, it may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ❖ Reorient or relocate the receiving antenna.
- ❖ Increase the separation between the equipment and receiver.
- ❖ Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- ❖ Consult the dealer or an experienced radio/TV technician for help.

NOTE

Only Peripherals complying with the FCC Class B limits may be attached to this equipment. Operation with noncompliant peripherals or peripherals not recommended by Toshiba is likely to result in interference to radio and TV reception. Shielded cables must be used between the external devices and the device's ports. Changes or modifications made to this equipment not expressly approved by Toshiba or parties authorized by Toshiba could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- ❖ This device may not cause harmful interference.
- ❖ This device must accept any interference received, including interference that may cause undesired operation.

Contact Toshiba's Support Web site at tabletsupport.toshiba.com.

Industry Canada Requirement

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Wireless Interoperability

The Toshiba Wireless LAN Card products are designed to be interoperable with any wireless LAN product that is based on Direct Sequence Spread Spectrum (DSSS) radio technology, and is compliant to:

- ❖ The IEEE 802.11 Standard on Wireless LANs (Revision A/B/G), as defined and approved by the Institute of Electrical and Electronics Engineers.
- ❖ The Wireless Fidelity (Wi-Fi®) certification as defined by the Wi-Fi Alliance. The “Wi-Fi CERTIFIED” logo is a certification mark of the Wi-Fi Alliance.

CAUTION

Bluetooth® and Wireless LAN devices operate within the same radio frequency range and may interfere with one another. If you use *Bluetooth*® and Wireless LAN devices simultaneously, you may occasionally experience a less than optimal network performance or even lose your network connection.

If you should experience any such problem, immediately turn off your *Bluetooth*® or Wireless LAN device.

Please contact Toshiba product support on Web site <http://www.toshiba-europe.com/computers/trt/bluetooth.htm> in Europe or tabletsupport.toshiba.com in the United States for more information.

Wireless LAN and Your Health

Wireless LAN products, like other radio devices, emit radio frequency electromagnetic energy. The level of energy emitted by Wireless LAN devices however is far much less than the electromagnetic energy emitted by wireless devices like for example mobile phones.

Because Wireless LAN products operate within the guidelines found in radio frequency safety standards and recommendations, Toshiba believes Wireless LAN is safe for use by consumers. These standards and recommendations reflect the consensus of the scientific community and result from deliberations of panels and committees of scientists who continually review and interpret the extensive research literature.

In some situations or environments, the use of Wireless LAN may be restricted by the proprietor of the building or responsible representatives of the organization. These situations may for example include:

- ❖ Using the Wireless LAN equipment on board airplanes, or
- ❖ In any other environment where the risk of interference to other devices or services is perceived or identified as harmful.

If you are uncertain of the policy that applies on the use of wireless devices in a specific organization or environment (e.g. airports), you are encouraged to ask for authorization to use the Wireless LAN device prior to turning on the equipment.

CAUTION Exposure to Radio Frequency Radiation

The radiated output power of the Toshiba Wireless LAN Card is far below the FCC radio frequency exposure limits. Nevertheless, the Toshiba Wireless LAN Card shall be used in such a manner that the potential for human contact during normal operation is minimized. The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Specific Absorption Rate (IEEE)

Your device is designed to be in compliance with Radio Waves exposure regulations and does not exceed the limits for exposure to radio waves (radio frequency electromagnetic fields) in accordance with the Federal Communications Commission (FCC) and Industry Canada (IC). A substantial safety margin is set to assure the safety of all persons, regardless of health.

A unit of measurement known as the Specific Absorption rate, or SAR is utilized for the radio wave exposure guidelines. The SAR measurement for devices does not exceed 1.6W/kg.

The actual SAR values for your device, while in use, are normally well below the stated values. The operating power of your device is automatically decreased when full power is not needed for the wireless connection to increase system efficiency and to minimize interference on the network. The lower the power output of the device the lower its SAR value.

As stated by the World Health Organization, present scientific information indicates no special precautions are needed for the use of this device. To further reduce any exposure, limit your usage.

▲ WARNING Turn Wi-Fi®, *Bluetooth*®, and Wireless WAN Functionalities off for Cardiac Pacemakers

- ❖ Turn Wi-Fi®, *Bluetooth*®, and Wireless WAN functionality off when you are near a person who may have a cardiac pacemaker implant or other medical electric device. Radio waves may affect pacemaker or medical device operation, possibly resulting in serious injury. Follow the instructions of your medical device when using any Wi-Fi® or *Bluetooth*® or Wireless WAN functionally.
-

Regulatory Information

This device complies with the following radio frequency and safety standards.

Canada – Industry Canada (IC)

This device complies with RSS 210 of Industry Canada.

CAUTION

The installer of this radio equipment must ensure that the antenna is located or pointed such that it does not emit RF field in excess of Health Canada limits for the general population; consult Safety Code 6, obtainable from Health Canada's Web site www.hc-sc.gc.ca/rpb. The RF device shall not be co-located with any other transmitter that has not been tested with this device.

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of this device.

L' utilisation de ce dispositif est soumise aux deux conditions suivantes: (1) il ne doit pas produire de brouillage et (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même s'il est susceptible de compromettre son fonctionnement.

The term "IC" before the equipment certification number only signifies that the Industry Canada technical specifications were met.

To prevent radio interference to the licensed service, this device is intended to be operated indoors and away from windows to provide maximum shielding. Equipment (or its transmit antenna) that is installed outdoors is subject to licensing.

Pour empêcher que cet appareil cause du brouillage au service faisant l'objet d'une licence, il doit être utilisé à l'intérieur et devrait être placé loin des fenêtres afin de fournir un écran de blindage maximal. Si le matériel (ou son antenne d'émission) est installé à l'extérieur, il doit faire l'objet d'une licence.

Europe - Restrictions for use of 2.4 GHz Frequencies in European Community Countries

België/ Belgique:	For private usage outside buildings across public grounds over less than 300m no special registration with IBPT/BIPT is required. Registration to IBPT/BIPT is required for private usage outside buildings across public grounds over more than 300m. For registration and license please contact IBPT/BIPT.
	Voor privé-gebruik buiten gebouw over publieke grond over afstand kleiner dan 300m geen registratie bij BIPT/IBPT nodig; voor gebruik over afstand groter dan 300m is wel registratie bij BIPT/IBPT nodig. Voor registratie of licentie kunt u contact opnemen met BIPT.
	Dans le cas d'une utilisation privée, à l'extérieur d'un bâtiment, au-dessus d'un espace public, aucun enregistrement n'est nécessaire pour une distance de moins de 300m. Pour une distance supérieure à 300m un enregistrement auprès de l'IBPT est requis. Pour les enregistrements et licences, veuillez contacter l'IBPT.
Deutschland:	License required for outdoor installations. Check with reseller for procedure to follow.
	Anmeldung im Outdoor-Bereich notwendig, aber nicht genehmigungspflichtig. Bitte mit Händler die Vorgehensweise abstimmen.
France:	Restricted frequency band: only channels 1 to 7 (2400 MHz and 2454 MHz respectively) may be used outdoors in France. Please contact A.R.T. (http://www.art-telecom.fr) for applicable procedures to follow.
	Bande de fréquence restreinte: seuls les canaux 1- 7 (2400 et 2454 MHz respectivement) doivent être utilisés endroits extérieur en France. Vous pouvez contacter l'Autorité de Régulation des Télécommunications (http://www.art-telecom.fr) pour la procédure à suivre.
Italia:	License required for indoor use. Use with outdoor installations not allowed.
	È necessaria la concessione ministeriale anche per l'uso interno. Verificare con i rivenditori la procedura da seguire.
Nederland:	License required for outdoor installations. Check with reseller for procedure to follow.
	Licentie verplicht voor gebruik met buitenantennes. Neem contact op met verkoper voor juiste procedure.

Bluetooth® Wireless Technology Interoperability

Bluetooth® Cards from Toshiba are designed to be interoperable with any product with Bluetooth® wireless technology that is based on Frequency Hopping Spread Spectrum (FHSS) radio technology, and is compliant to:

- ❖ Bluetooth® Specification as defined and approved by The Bluetooth® Special Interest Group.

-
- ❖ Logo certification with *Bluetooth*[®] wireless technology as defined by The *Bluetooth*[®] Special Interest Group.
-

CAUTION

Always use *Bluetooth*[®] cards from Toshiba in order to enable wireless networks over two or more (up to a total of seven) Toshiba portable computers using these cards. Please contact Toshiba product support on Web site <http://www.toshiba-europe.com/computers/tnt/bluetooth.htm> in Europe or tabletsupport.toshiba.com in the United States for more information.

When you use *Bluetooth*[®] cards from Toshiba close to 2.4 GHz Wireless LAN devices, *Bluetooth*[®] transmissions might slow down or cause errors. If you detect certain interference while you use *Bluetooth*[®] cards from Toshiba, always change the frequency, move your device to the area outside of the interference range of 2.4 GHz Wireless LAN devices (40 meters/43.74 yards or more) or stop transmitting from your device. Please contact Toshiba product support on Web site <http://www.toshiba-europe.com/computers/tnt/bluetooth.htm> in Europe or tabletsupport.toshiba.com in the United States for more information.

Bluetooth[®] and Wireless LAN devices operate within the same radio frequency range and may interfere with one another. If you use *Bluetooth*[®] and Wireless LAN devices simultaneously, you may occasionally experience a less than optimal network performance or even lose your network connection. If you should experience any such problem, immediately turn off either one of your *Bluetooth*[®] or Wireless LAN. Please contact Toshiba product support on Web site <http://www.toshiba-europe.com/computers/tnt/bluetooth.htm> in Europe or tabletsupport.toshiba.com in the United States for more information.

***Bluetooth*[®] Wireless Technology and Your Health**

The products with *Bluetooth*[®] wireless technology, like other radio devices, emit radio frequency electromagnetic energy. The level of energy emitted by devices with *Bluetooth*[®] wireless technology however is much less than the electromagnetic energy emitted by wireless devices such as mobile phones.

Because products with *Bluetooth*[®] wireless technology operate within the guidelines found in radio frequency safety standards and recommendations, Toshiba believes *Bluetooth*[®] wireless technology is safe for use by consumers. These standards and recommendations reflect the consensus of the scientific community and result from deliberations of panels and committees of scientists who continually review and interpret the extensive research literature.

In some situations or environments, the use of *Bluetooth*[®] wireless technology may be restricted by the proprietor of the building or responsible representatives of the organization. These situations may for example include:

-
- ❖ Using the equipment with *Bluetooth*[®] wireless technology on board airplanes, or
 - ❖ In any other environment where the risk of interference to other devices or services is perceived or identified as harmful.

If you are uncertain of the policy that applies on the use of wireless devices in a specific organization or environment (e.g. airports), you are encouraged to ask for authorization to use the device with *Bluetooth*[®] wireless technology prior to turning on the equipment.

CAUTION Exposure to Radio Frequency Radiation

The radiated output power of the *Bluetooth*[®] Card from Toshiba is far below the FCC radio frequency exposure limits. Nevertheless, the *Bluetooth*[®] Card from Toshiba shall be used in such a manner that the potential for human contact during normal operation is minimized.

Copyright

This guide is copyrighted by Toshiba America Information Systems, Inc. with all rights reserved. Under the copyright laws, this guide cannot be reproduced in any form without the prior written permission of Toshiba. No patent liability is assumed, however, with respect to the use of the information contained herein.

©2012 by Toshiba America Information Systems, Inc. All rights reserved.

Export Administration Regulation

This product and/or document contains technical data that may be controlled under the U.S. Export Administration Regulations, and may be subject to the approval of the U.S. Department of Commerce prior to export. Any export, directly or indirectly, in contravention of the U.S. Export Administration Regulations is prohibited.

Notice

While Toshiba has made every effort at the time of publication to ensure the accuracy of the information provided herein, product specifications, configurations, prices, system/component/options availability are all subject to change without notice. For the most up-to-date product information about your device, or to stay current with the various product software or hardware options, visit Toshiba's Web site at tabletsupport.toshiba.com. Toshiba assumes no liability for any damages incurred directly or indirectly from any errors or omissions contained herein. In no event shall Toshiba be

liable for any incidental, consequential, special, or exemplary damages, whether based on tort, contract or otherwise, arising out of or in connection with this information or any other information contained herein or the use thereof.

Trademarks

App Place and excite are either trademarks or registered trademarks of Toshiba America Information Systems, Inc. and/or Toshiba Corporation.

Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Toshiba is under license. Other trademarks and trade names are those of their respective owners.

Google, the Google logo, Android, Android Market, Google Maps, Google eBooks, Gmail, YouTube, and Google Talk are trademarks of Google, Inc.

HDMI, the HDMI Logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing, LLC.

Microsoft is a registered trademark of Microsoft Corporation in the United States and/or other countries.

Secure Digital and SD are trademarks of SD Card Association.

Wi-Fi is a registered trademark of the Wi-Fi Alliance.

All other brand and product names are trademarks or registered trademarks of their respective companies.

Device Recycling Information

As part of a commitment to people and the future, Toshiba promotes the efficient use of resources by working to achieve our zero-waste-to-landfill goal at all our production sites. In addition to our existing waste reduction and recycling policies, Toshiba is strongly committed to reducing electronic waste. In order to ensure efficient use of resources and appropriate treatment of hazardous substances, in accordance with recycling regulations in each state, country, and territory, Toshiba wants to make it easy for customers to recycle products at the end of the life cycle. To learn more about Toshiba's sustainability commitment, visit us.toshiba.com/green.

Licenses

This Product is licensed under the AVC, the VC-1 and the MPEG-4 Part 2 Visual patent portfolio licenses for the personal and non-commercial use of a consumer to (i) encode video in compliance with the above standards (“Video Standards”) and/or (ii) decode AVC, VC-1 and MPEG-4 Part 2 Visual that was encoded by a consumer engaged in personal and non-commercial activity or was obtained from a video provider licensed to provide such video. None of the licenses extend to any other product regardless of whether such product is included with this product in a single article. No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA, LLC. See www.mpegla.com.

Contents

Introduction.....	16
This guide	17
Safety icons	17
Other icons used.....	18
Your device's features and specifications	18
Other documentation	18
Service options	19
Precautions.....	19
File management tips	20
Toshiba's online resources	20
Chapter 1: Getting Started.....	21
Features and components.....	21
Front	22
Back.....	22
Right side.....	23
Left side	23
Top	24
Bottom	24
Connecting to a power source	24

Battery Notice	26
Charging the battery	26
Taking care of your battery	27
Safety precautions	27
Optimizing battery life	27
Maintaining your battery	28
Disposing of your device	28
Using the device for the first time	29
Turning on the power	29
Setting up your device	30
Setting up your Wi-Fi® connection	30
Setting location preferences	31
Setting the date and time	32
Sign in to your Google™ Account	32
Setting up Wi-Fi® and Bluetooth® connections	34
Registering your Toshiba device	35
Backing up your data	35
Backing up data using TOSHIBA File Manager	35
Backing up data using your Google™ Account	35
Restoring your data using your Google™ Account	36
Navigation and features	36
Home screen	38
Touch screen navigation	39
Navigating the Home screen	40
System bar	40
Securing your tablet	43
Customizing your Home screens	44
Adding an item to a Home screen	45
Moving an item from the Home screen	45
Removing an item from a Home screen	45
Changing the wallpaper	46
Turning off the device	46

Options for turning off the device	46
Using Shut down mode	47
Using Sleep mode	48
Syncing and managing your accounts	48
Add an account	49
Remove an account	49
Navigation, Maps, Places, and Latitude.....	50
Managing downloads	50
Factory data reset	51
Caring for your device.....	52
Cleaning the device	52
Chapter 2: Settings	53
Customizing your device's settings.....	53
Apps and Settings menus	53
Wireless and networks settings	58
Sound settings	60
Screen settings	61
Multimedia settings	62
Location and security settings	63
Applications settings.....	65
Accounts & sync settings	66
Privacy settings	67
Storage settings.....	68
Language & input settings	68
Accessibility settings	70
Date & time settings	71
About tablet	71
Chapter 3: Working with Apps.....	73
Downloading Toshiba Apps	73
TOSHIBA Media Player	73
Apps	74
Downloading from Android Market™	74
Preinstalled Apps on your tablet	74
Uninstalling Apps on your tablet	75

Chapter 4: Exploring the Features on your Device.....	76
Using the onscreen keyboard.....	76
Type to enter text.....	77
Speak to enter text.....	79
Using the built-in speakers.....	79
Using external speakers or headphones.....	79
Recording sounds.....	80
Using the cameras.....	80
Using a Micro SD™ Card.....	80
Inserting memory media.....	81
Removing memory media.....	81
Adding optional external devices.....	82
Using an external keyboard.....	82
Using an external mouse.....	82
Using external devices.....	83
Connecting an HDMI®-compatible television or display device.....	83
Using a docking station.....	83
Connecting your tablet to a docking station.....	84
Chapter 5: Utilities.....	86
TOSHIBA Service Station.....	86
Check for application updates.....	88
Downloading updates.....	88
Installing updates.....	88
Downloading and installing System updates.....	89
TOSHIBA File Manager Utility.....	89
File browsing screen.....	90
Operation of files/folders.....	91
TOSHIBA Adaptive display.....	92
Chapter 6: If Something Goes Wrong.....	93
Problems when you turn on the device.....	93
The operating system is not working.....	94
Internet problems.....	94
Power and the batteries.....	94

Display problems	95
Sound system problems	96
Wireless networking problems.....	96
If you need further assistance.....	97
Before you contact Toshiba	97
Contacting Toshiba	97
Other Toshiba Internet Web sites.....	98
Toshiba's worldwide offices.....	98
Appendix A: Power Cord/Cable Connectors.....	100
Glossary.....	101
Index.....	111

Introduction

Welcome to the world of powerful, portable, multimedia. With your Toshiba tablet device, you can watch movies, listen to your favorite music, read books, play games and do much more.

NOTE The product specifications and configuration information are designed for a product Series. Your particular model may not have all the features and specifications listed or illustrated. For more detailed information about the features and specifications on your particular model, please visit Toshiba's Web site at tabletsupport.toshiba.com.

While Toshiba has made every effort at the time of publication to ensure the accuracy of the information provided herein, product specifications, configurations, prices, system/component/options availability are all subject to change without notice. For the most up-to-date product information about your device, or to stay current with the various device software or hardware options, visit Toshiba's Web site at tabletsupport.toshiba.com.

This guide

This guide introduces the features on your device as well as some basic procedures needed to perform tasks on your tablet powered by Android™.

You can:

- ❖ Read the entire guide from beginning to end.
- ❖ Skim through and stop when a topic interests you.
- ❖ Use the table of contents and the index to find specific information.

Safety icons

All of the Safety instructions contained in this manual must be read carefully and be fully understood before you attempt to use this device, in order to avoid potential hazards that could cause bodily injury, property damage, or damage to the device.

- ❖ The Safety Instructions contained in this Manual have been categorized according to the seriousness of the potential hazards, through the use of the following signal words.

▲ DANGER Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

▲ WARNING Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

▲ CAUTION Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

CAUTION Indicates a potentially hazardous situation which, if not avoided, may result in property damage.

NOTE Provides important information.

Other icons used

Additional icons highlight other helpful or educational information:



TECHNICAL NOTE: This icon indicates technical information about the device.



HINT: This icon indicates helpful hints and tips.



DEFINITION: This icon indicates the definition of a term used in the text.

Your device's features and specifications

Certain chassis are designed to accommodate all possible configurations for an entire product Series. Your select model may not have all the features and specifications corresponding to all of the icons or switches shown on the chassis, unless you have selected all those features.

This information applies to all the features and icons described in this guide.

Below are examples of some of the many possible icons used on your device:



(Sample Illustration) System icons

Other documentation

Your device comes with the following documentation:

- ❖ A Legal/Safety/Regulatory document
- ❖ A Quick Start
- ❖ A standard limited warranty
- ❖ It may also contain guides for other programs that may come with your system.

For accessory information, visit Toshiba's Web site at accessories.toshiba.com.

Service options

Toshiba's standard limited warranty, extended warranty, and service upgrade terms and conditions are available at warranty.toshiba.com.

To stay current on the most recent applications, application updates, and hardware options for your device, as well as other product information, be sure to regularly check the Toshiba Web site at tabletsupport.toshiba.com.

If you have a problem or need to contact Toshiba, see “If Something Goes Wrong” on page 93.

Precautions

Your device is designed to provide optimum safety and ease of use, and to withstand the rigors of travel. You should observe certain precautions to further reduce the risk of personal injury or damage to the device.

▲ WARNING

Keep this device away from small children. This device is not a toy and may be hazardous to small children, for example, small detachable parts may be a choking hazard. Improper use of device could result in loud volume emitting from the device possibly causing hearing damage, and improper use and handling of batteries could result in possible injury.

CAUTION

Never place a heavy object on the device and be careful not to drop a heavy object onto the device. It could damage the device or cause system failure.

- ❖ Turning off the device while it is reading from or writing to flash media may damage the flash media.
- ❖ Keep the device and disks away from objects that generate strong magnetic fields, such as large stereo speakers.
- ❖ Scan all new files for viruses.

This precaution is especially important for files you receive via email or download from the Internet. Occasionally, even new programs you buy from a supplier may contain a virus. You need a special program to check for viruses.

File management tips

- ❖ Back up your files to external media on a regular basis. Label the backup copies clearly and store them in a safe place.

As you work with data it exists in the device's memory. This memory is called "volatile memory" because it is only active while the device is turned on. When you turn off the device, all the data remaining in volatile memory is lost. To help avoid data loss, save your work to Internal Storage or network storage. Your work (data) will remain in internal storage to be called up when you need it. As long as the internal storage remains healthy, your data is relatively safe. However on occasion, hardware failures do happen. If you experience a hardware failure, your data could be lost. As an extra step to help avoid data loss, back up your data. See "[Backing up your data](#)" on page 35 for more information.

- ❖ Scan all new files for viruses.

This precaution is especially important for files you receive via external media, email, or download from the Internet.

Toshiba's online resources

Toshiba maintains a number of online sites to which you can connect. These sites provide information about Toshiba products, give help with technical questions and keep you up to date with future upgrades. For more information, see "[Contacting Toshiba](#)" on page 97.

Chapter 1


Getting Started

This chapter provides tips for using your device effectively, summarizes how to connect components, and explains what to do the first time you use your device.

Please read and adhere to all safety information carefully and make sure you fully understand the instructions before you attempt to use your device in order to avoid potential hazards that could cause bodily injury, property damage, or damage the device.


Features and components

For further details on each of the items listed in the following section, be sure to follow the provided references to sections later in this document.

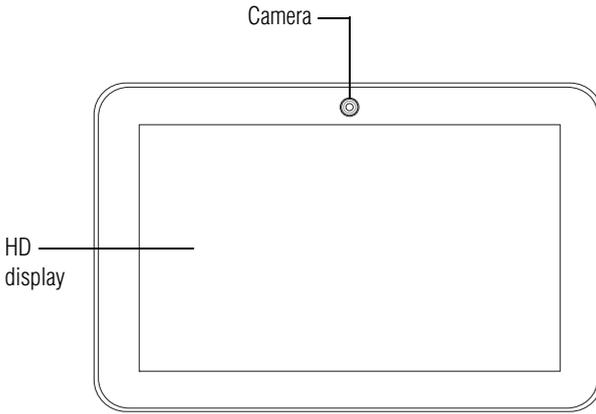Front

(Sample Illustration) Front view


- ❖ **Camera**—Allows you to take still photos (includes flash settings) or record videos.

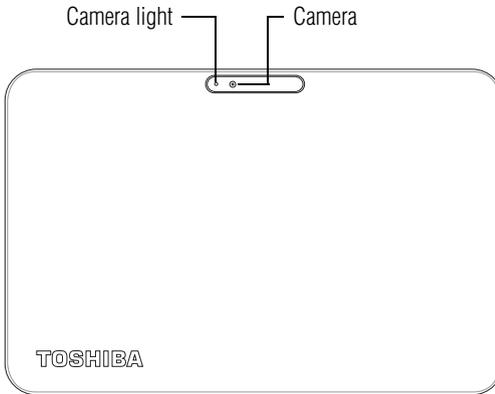Back

(Sample Illustration) Back view

- ❖ **Camera indicator light**—Glows blue when the front Camera is in operation. For more information, see [“Using the cameras” on page 80](#).
- ❖ **Camera**—Allows you to take still photos (includes flash settings) and videos. For more information, see [“Using the cameras” on page 80](#).


Right side

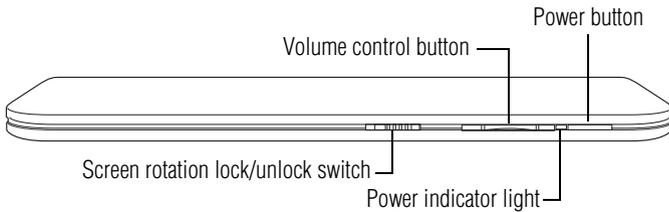

(Sample Illustration) Right side view

- ❖ **Screen rotation lock/unlock switch**—Allows you to lock the orientation of the display screen so that the current view does not rotate with movement. For more information, see [“Screen settings” on page 61](#).
- ❖ **Volume control buttons**—Allows you to increase/decrease the volume.
- ❖ **Power indicator light**—Glowes white when AC Power is connected.
- ❖ **Power button**—Turns the device on and off. Press and hold the button for several seconds to turn the device ON/OFF. Press the button quickly to wake the device from Sleep mode or to place it into Sleep mode. For more information, see [“Options for turning off the device” on page 46](#).

Left side

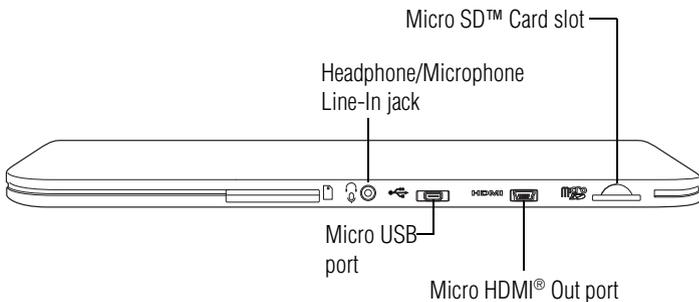

(Sample Illustration) Left side view

- ❖ **Headphone/Microphone Line-In jack**—Allows you to listen to or record sounds onto your device. For more information, see [“Using external speakers or headphones” on page 79](#).
- ❖ **Micro USB port**—Allows the transfer of data.


- ❖ **Micro HDMI® Out port**—Allows for the transfer of video and audio signals. For more information, see “Using external devices” on page 83.
- ❖ **Micro SD™ Card slot**—Supports the use of Secure Digital™ (SD™) media. For more information, see “Using a Micro SD™ Card” on page 80.

Top



(Sample Illustration) Top view

Bottom

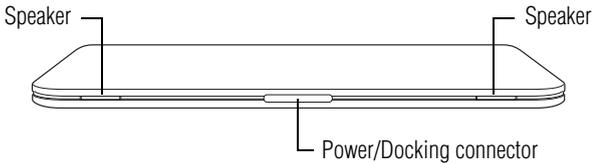

(Sample Illustration) Bottom view

- ❖ **Speakers**—Allow you to listen to sounds on your device. For more information, see “Using the built-in speakers” on page 79.
- ❖ **Power/Docking connector**—Allows connection to a USB power cable or a docking station. Remove the docking connector cover to access to the docking connector. For more information, see “Using a docking station” on page 83.

Connecting to a power source

Your device requires power to operate. Use the USB Power cable and USB/AC adaptor to connect the device to a live electrical outlet, or to charge the device’s battery.

⚠ WARNING


Always confirm that the power plug (and extension cable plug if used) has been fully inserted into the socket, to ensure a secure electrical connection. Failure to do so may result in a fire or electric shock, possibly resulting in serious injury.

Be careful if you use a multiple connector. An overload on one socket could cause a fire or electric shock, possibly resulting in serious injury.

-
- ⚠ WARNING** Always use the Toshiba USB/AC adaptor that was provided with your device, or use USB/AC adaptors specified by Toshiba to avoid any risk of fire or other damage to the device. Use of an incompatible USB/AC adaptor could cause fire or damage to the device possibly resulting in serious injury. Toshiba assumes no liability for any damage caused by use of an incompatible adaptor.
-

To connect AC power to the device:

- 1 Connect the USB Power cable to the USB/AC adaptor.

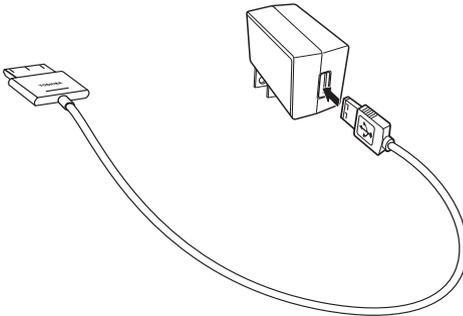


(Sample Illustration) Connecting the USB Power cable to the USB/AC adaptor.

-
- ⚠ WARNING** Handling the cord on this product will expose you to lead, a chemical known to the State of California to cause birth defects or other reproductive harm. **Wash hands after handling.**
-

- 2 Plug the USB Power cord into the Power/Docking connector on the bottom of the device.

NOTE Do not force the plug into device.

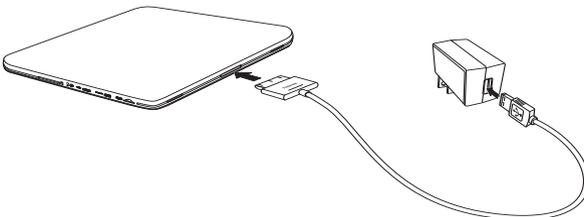

(Sample Illustration) Connecting the AC adaptor cord to the device

-
- 3 Connect the USB/AC adaptor to a live electrical outlet.



The Power light glows white.

⚠ WARNING

Never attempt to connect or disconnect a power plug with wet hands. Failure to follow this instruction could result in an electric shock, possibly resulting in serious injury.

The device's power light gives you an indication of the current power state:

- ❖ Glows white while the USB/AC adaptor is connected
- ❖ Is unlit when the USB/AC adaptor is not plugged into the device or an AC outlet

Battery Notice

Actual battery life may vary depending on settings, application usage, features or tasks selected, network configuration, operating temperature and many other factors.

The battery life cited in the product specifications is only achieved on the select models and configurations tested by Toshiba under the specific test settings at the time of publication and is not an estimate of a system's battery life under any conditions other than the specific test settings.

Recharge time varies depending on usage. The battery may not charge while the device is consuming full power. After a period of time, the battery will lose its ability to perform at maximum capacity and will need to be replaced. This is normal for all batteries.

Charging the battery

⚠ WARNING

If the device is leaking or its case is cracked, put on protective gloves to handle it.

Your device contains a rechargeable battery that may need to be charged prior to use.

To use external power or to charge the battery you must attach the USB/AC adaptor. See [“Connecting to a power source” on page 24.](#)

To charge the device plug it into a power source.

NOTE Battery life and charge time may vary depending on the external conditions, or the applications and features used.

NOTE Please handle your device carefully to avoid scratching or damaging the surface.

Taking care of your battery

The following sections offer tips on how to take care of your battery and prolong its life.

Safety precautions

⚠ WARNING Device warning indicators

- ❖ Always immediately turn the power off and disconnect the power cable/ cord plug from the plug socket and stop using the battery pack if you observe any of the following conditions:
 - ❖ Offensive or unusual odor
 - ❖ Excessive heat
 - ❖ Discoloration
 - ❖ Deformation, cracks, or leaks
 - ❖ Smoke
 - ❖ Other unusual event during use, such as abnormal sound

Do not turn on the device's power again until an authorized Toshiba service provider has checked it for safety. Continued use could cause a fire or rupture possibly resulting in serious injury or device failure including but not limited to the loss of data.

Optimizing battery life

You can extend your battery's life between charges by turning off features you don't need. You can also change and monitor the way apps and system resources consume battery power.

Below are some of the things you can do:

- ❖ To turn off Wi-Fi® or Bluetooth® when you are not using them, touch the **Settings** (⚙) icon, and then touch **Wireless & networks**. For more information, see [“Wireless and networks](#)

settings” on page 58 and “Location and security settings” on page 63.

- ❖ Turn down the screen brightness and set a shorter screen time-out. For more information, see “Screen settings” on page 61.
- ❖ If you do not need them, turn off automatic syncing for Gmail™, Calendar, Contact, etc. For more information, see “Accounts & sync settings” on page 66.
- ❖ If you know you will not be near a Wi-Fi® network for some time, switch to Airplane mode. For more information, see “Wireless and networks settings” on page 58.

To check the battery charge level:

- 1 Touch the **Settings** (⚙️) icon.
The Settings menu appears.
- 2 Touch the **About tablet** (ⓘ) icon.
The About tablet menu appears.
- 3 Touch **Status**.

The battery status (charging/discharging) and level (as a percentage of fully charged) are displayed.

NOTE For more details on your battery use, touch **Battery use**.

Maintaining your battery

Fully discharging your battery periodically will allow better accuracy of the battery meter.

To fully discharge your battery, periodically disconnect the device from a power source and operate it on battery power until the battery fully discharges.

Disposing of your device

Discard this device in accordance with applicable laws and regulations.

Disposal of this product may be regulated due to environmental considerations. For disposal, reuse or recycling information, please contact your local government.

In addition, Toshiba’s recycling initiatives include recycling programs, events, and consumer promotions. For details, please visit us.toshiba.com/green.

Notice regarding CR coin cell batteries, applicable to California, U.S.A. only:

Perchlorate Material - special handling may apply.
See <http://www.dtsc.ca.gov/hazardouswaste/perchlorate/>


Using the device for the first time

The device is now ready for you to turn it on and begin using it.

Turning on the power

To turn on the device:

- 1 Make sure any external devices (such as the USB/AC adaptor, if you plan to use AC power rather than battery power) are properly connected and ready.
- 2 Check to ensure that all slots are empty.
- 3 Press and hold the Power button for several seconds.

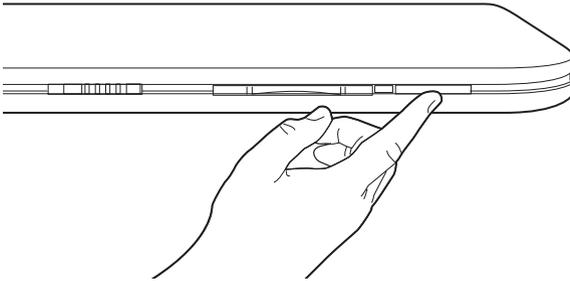

(Sample Illustration) Turning on the power


Small bright dots may appear on your screen display when you turn on your device. Your display contains an extremely large number of thin-film transistors (TFT) and is manufactured using high-precision technology. Any small bright dots that may appear on your display are an intrinsic characteristic of the TFT manufacturing technology. Over a period of time, and depending on the usage of the device, the brightness of the screen will deteriorate. This is also an intrinsic characteristic of the screen technology.

Setting up your device

NOTE

To take full advantage of features for your device, Toshiba recommends that you have access to a Wi-Fi® network and a Google™ Account before setting up your device.

The first time you power on your tablet the Welcome screen appears and you will be asked to choose a language.

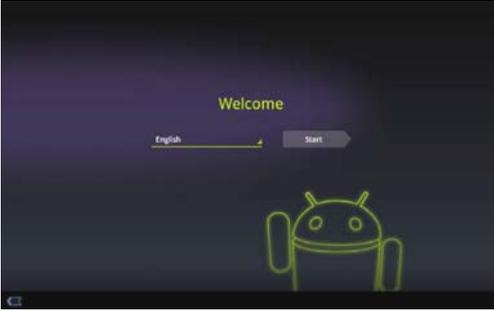

(Sample Image) Welcome screen

- ❖ If English is your language of choice touch **Start**.
- ❖ Touch **English** to change your language. Choose from the list of language options and then touch **Start**.

Your tablet begins the activation process when you touch **Start** on the Welcome screen.

Setting up your Wi-Fi® connection

After choosing your language the “Wi-Fi setup” screen appears, displaying all available Wi-Fi® networks.

Touch the name of the network you want to connect to, and then touch **Connect**.


The "Connected to Wi-Fi network" screen appears.



(Sample Image) Wi-Fi setup screen

Setting location preferences

After you have connected to a Wi-Fi® network, the “Use Google location service” screen appears. Your approximate location is made available to the apps you use by Google’s location service.

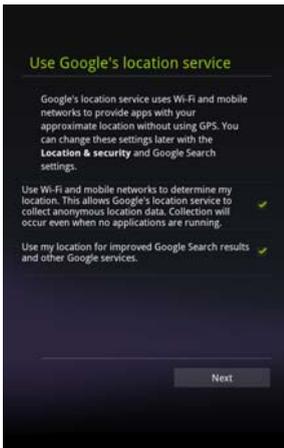

(Sample Image) Use Google location service screen

Touch your preferred settings, and then touch **Next** to continue.

Setting the date and time


When your location preferences have been chosen, the “Set date and time” screen appears.

There are two options available for setting date and time:

- ❖ Use network provided time (leave the setting option **ON**), and then touch **Next**.
- ❖ The option, “Use network provided time” can be set to **OFF**. This allows you to manually enter the date/time information.
 - 1 Select the time zone.
 - 2 Set the date and time by touching the date or time option and then the up/down arrows, and then touch **Next** to continue.

Sign in to your Google™ Account

Once the date and time have been set, the “Sign in with your Google Account” screen appears.

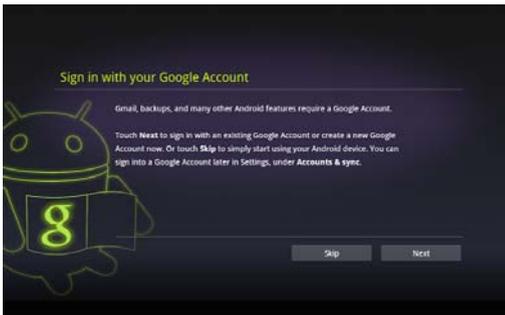

(Sample Image) Sign in with your Google Account screen

A Google Account is required to access many of the powered by Android™ features, including Gmail™, backing up your data, etc.

NOTE

Sign in to your Google Account now to restore settings that have been previously backed up. If you wait until after setup, you will not be able to restore your settings. For more information, see [“Backing up your data” on page 35](#).

Touch **Next** to sign in with an existing Google Account or create a new one now.

The “Sign in with your Google Account” screen appears.



(Sample Image) Sign in with your Google Account screen

- ❖ Enter your existing Google Account information, and then touch **Sign in**.
- ❖ If you do not already have a Google Account, you can create a new one by touching **Create account**.

The “Signing in” screen appears.

Touch **Skip** to skip the account setup for now. You can sign in to a Google Account later in **Settings**, under **Accounts & sync**.


NOTE This may take several minutes. If your screen times-out and goes blank/dark, press the Power button to turn on the screen again.

Waking the tablet

If the screen times-out:

- 1 Press the Power button.

The lock screen appears, unless you have previously disabled it.

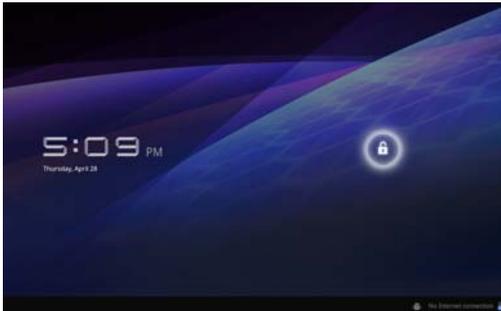

(Sample Image) Lock screen

- 2 Touch and hold the **Lock** (🔒) icon and drag it to the edge of the large circle surrounding it.
The last screen viewed appears.

Setting up Wi-Fi® and Bluetooth® connections

Wi-Fi®:

- 1 Touch the **Settings** (⚙️) icon, the **Wireless & networks** (📶) icon, **Wi-Fi settings**, and then select **Wi-Fi**, if not previously turned on.
The device scans for and displays all available Wi-Fi® networks.
- 2 Touch the Wi-Fi® network you want to connect to.
If the network is open, you will be asked to confirm the connection.
- 3 Touch **Connect** to confirm.
The **Wireless & networks** (📶) icon appears in the System bar.
- 4 Touch the **Back** (⬅️) icon to try a different network.
To connect to secure/locked networks, you will be prompted to enter the appropriate credentials.

NOTE

Wi-Fi® may be enabled by default and the device saves this information so that you can connect automatically the next time you come within range of this network.

If you use third-party applications on this device, any information those applications collect (including location-based information) may be sent to third parties and merged with other customer information subject to their respective privacy policies.

Bluetooth®:

- 1 Touch the **Settings** (⚙️) icon, the **Wireless & networks** (📶) icon, and then **Bluetooth** (select the check box to enable it).
- 2 Touch **Bluetooth settings**, and then **Find nearby devices**.
The device scans/finds nearby devices (i.e. keyboard, mouse).
- 3 Touch the name of the device to pair with and then touch **Pair**.

Registering your Toshiba device

NOTE

To register online, you must be connected to the Internet.

Product registration is strongly recommended, and allows Toshiba to send you periodic updates, announcements, and special offers applicable to your product. Product registration can be completed by either visiting the Toshiba Web site at register.toshiba.com or by touching the **Register**  icon. Failure to complete Product Registration will not diminish Customer rights under the Standard Limited Warranty.

Backing up your data

Back up the data you create in case something happens to your device. You can back up your data to a Micro SD™ Card (see “Using a Micro SD™ Card” on page 80), or to a network (see “Backing up data using your Google™ Account” on page 35), if available.

You can also back up your settings as well as your data using your Google™ Account. Your data is backed up automatically using this option. For more information, see “Privacy settings” on page 67. If you need to replace your device, your data can be restored to your new one.

Backing up data using TOSHIBA File Manager


Using the TOSHIBA File Manager, you can back up your data to a Micro SD™ Card. For more information, see “TOSHIBA File Manager Utility” on page 89.

Backing up data using your Google™ Account

You can also back up your settings as well as your data using your Google™ Account. Your data is backed up automatically using this option. For more information, see “Sign in to your Google™ Account” on page 32.

Restoring your data using your Google™ Account

If your data was previously backed up using this service you can sign in to your Google™ Account and choose to restore your settings from your Google Account to your device.

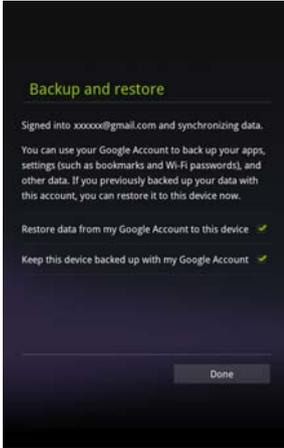


(Sample Image) Backup and Restore screen

The data that is backed up may include the following:

- ❖ Your Wi-Fi® networks and passwords, user data, and tablet settings
- ❖ Many Google application settings, such as your Browser bookmarks
- ❖ The apps you download from Android Market™

Navigation and features

Your device exemplifies the innovative blending of touch-screen technology and intuitive application design making the most of your tablet device.

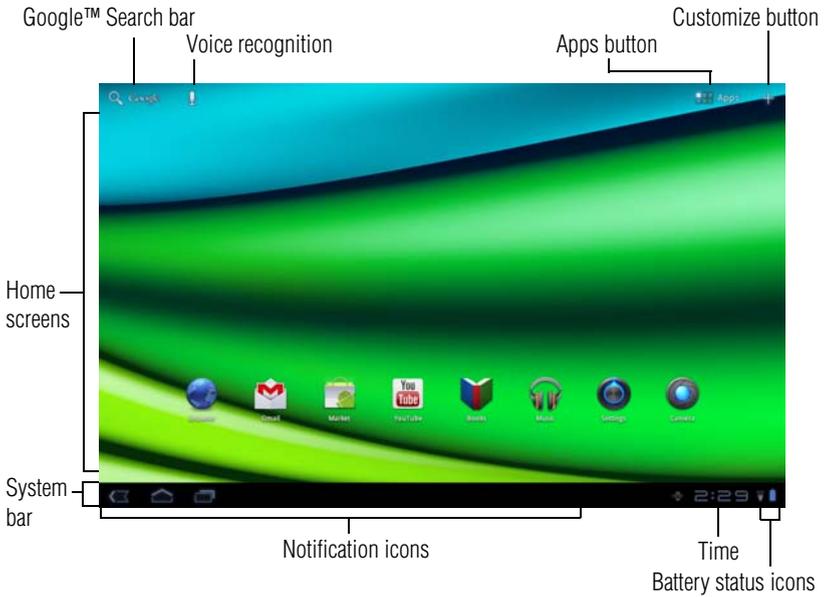

(Sample Image) Central Home screen

Icons and buttons you may find on your display screen.

<i>Icon</i>	<i>Name</i>	<i>Description</i>
	Back button	Touch to return to the previously viewed screen.
	Home button	Touch to return to the Home screen.
	Recent Apps button	Touch to view the most recently view apps.
	Time display	Located in the System bar to the left of the Status icons.
	Battery status icon	Located in the System bar. Displays the status of the battery charge.
	Customize button	Touch to Customize your Home screens.
	Voice recognition button	Touch to perform a voice-enabled search.

Icon	Name	Description
	Google Search bar	Touch to perform a search using the keyboard.
	Settings icon	Touch to open the Settings menu.

Home screen

The total number of available Home screens is five. Move between screens by swiping your finger to the left or right.



(Sample Image) 5 available Home screens

Your device's five home screens have several standard features, including icons and a customizable background pattern (wallpaper). The wallpaper image spans the width of all five Home screens.

The middle screen is your Central Home screen and the starting point after your device has been set up. However, your device will return to the last home screen viewed each time you wake up your device from Sleep mode. Touch the Home button to return to the central Home screen.

Icons

An icon represents a shortcut of either a widget, application, bookmark, or game that can be quickly launched by touching the icon on a Home screen.

Each Home screen may display icons for any of the following:

- ❖ Widgets
- ❖ Applications
- ❖ Bookmarks

- ❖ Games
- ❖ Thumbnails

Your Home screen will contain other icons depending on how you have customized it. See [“Customizing your Home screens” on page 44](#).



Gmail™ icon—An example of an icon located on a Home screen is the Gmail icon. This shortcut, when touched, launches your Gmail webmail account.

Touch screen navigation

Use your finger to manipulate the onscreen icons, buttons, menu items, onscreen keyboard, and other items on the touchscreen. You can also change the screen’s orientation.

CAUTION

The screen is made of glass so avoid contact with sharp, rough, or abrasive objects or substances as screen may break or scratch if not handled properly. If you see a crack in the glass, discontinue use of the device to avoid injury.

Touch—Touch to activate items displayed on the screen, such as app and setting icons or onscreen buttons. Touch to type using the onscreen keyboard.

Touch & hold—Touch and hold an item on the screen by touching and holding the item in place until an action occurs.

Drag—Touch and hold an item for a moment and then, without lifting your finger, move the item until you reach the target position. For example, drag items on the Home screen to reposition them, see [“Customizing your Home screens” on page 44](#).

Swipe or slide—To swipe or slide, quickly move your finger across the surface of the screen without pausing. For example, slide the Home screen left or right to view another Home screen.

Double-tap—Tap quickly twice to zoom in. For example, double-tap a section of a Web page to zoom in on that section. Double-tap again to zoom out.

Pinch—In some apps (such as Maps, Browser, and Gallery), you can zoom in and out by placing two fingers on the screen at once and pinching them together (to zoom out) or spreading them apart (to zoom in).

Rotate the screen—In most apps, the orientation of the screen rotates with the tablet as you turn it. You can turn this feature on and off, using the Screen rotation lock switch on the side of your

tablet. This allows you to lock the screen to the currently viewed screen orientation.

Navigating the Home screen

When the setup process is complete, the Home screen appears. This is your starting point for all features used on your tablet. You can use the Customize button to add shortcuts for apps, widgets, and other features to all five of your Home screens. You can also change your wallpaper to more customize the look of your device. For more information, see [“Customizing your Home screens”](#) on page 44.

System bar

The System bar displays icons of tasks or programs that run continuously in the background and displays notifications, such as incoming email and the status of your wireless connection. Touch an icon to learn more about its task.

Navigation buttons

Using the navigation buttons in the System bar is an easy way to quickly switch between apps.

The System bar displays the Back () button, Home () button, and Recent Apps () button. Also displayed are the Notification icons, the time, and Status icons.


Touch the Home button at any time to return to the Home screen. Swipe your finger right or left to view another Home screen, or touch and hold anywhere on the Home screen to view the thumbnail view of all five Home screens. Touch the Home button again to return to the central Home screen.

In some media apps, the System bar controls are replaced by dim dots while a movie, slide show, etc. is displayed. This increases the viewing space on the screen. Touch the dot that corresponds with the desired control, or touch a blank area of the System bar to restore the full view.

At the top of the screen you will find the Google™ Search bar () and next to that is the search by voice () button. Also available at the top of the screen are the Apps () button and the Customize () button.

Status icons

Status icons are located on the far right of the System bar. Status icons display current system status information, such as power usage and network connectivity status.

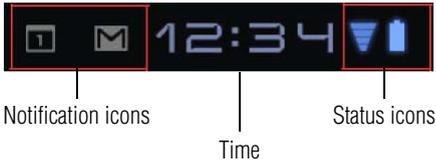

(Sample Image) Status icons

Touch the **Time** display to view the Status Details panel. For more information, see [“Securing your tablet” on page 43](#).

After your Google™ Account is set up, the Network Status icons are blue when connected to Google services. This indicates that the tablet is ready to sync your Gmail™, Calendar, and contacts, and to back up your settings. When your tablet is not connected to a Google Account or the wireless connection is disabled, the icons are gray.

Managing Notifications

Notifications report the arrival of new messages, calendar events, and alarms, and they report the status of your Wi-Fi® connection.

Notification icons appear in the System bar, to the left of the time display, along with a summary that appears briefly.

Depending on your settings you may also hear a notification sound.

Typical notifications are currently running programs and available updates. To activate a specific task, click the appropriate Notification bar icon.

Most apps that send notifications, such as Gmail™ and the calendar, have their own settings. These settings can be configured to send notifications in different ways, with a sound or vibration, etc. See the documentation for those apps for details. You can open the Notifications list to view all of your current notifications.

Opening a notification

- 1 Touch the time display in the System bar on the lower right of your Home screen.

The Notification summary panel opens.



(Sample Image) Notification summary panel screen

- 2 Touch a notification summary to view it or to respond to it.

Touch the notification's Close button to remove it from the Notifications list. Touching a blank area of the screen closes the list without removing the notification.

Responding to notifications

When the Notification summary panel is open you can respond to a notification by touching the associated icon.

Notification panels contain a variety of information and controls, including:

- ❖ A message summary, with the date and picture of the sender
- ❖ Media controls to play/pause music or to skip to the next or previous track
- ❖ Progress bars that indicate the progress of currently downloading apps:

- 1 Touch a notification icon in the System bar.

The notification's summary panel opens.

- 2 Touch a notification in the Notification summary panel to open it in its application.

It will then be cleared from the Notification summary panel.

- 3 To remove the notification without viewing it, touch its Close button.

Securing your tablet

CAUTION

If you choose to set a password (with or without encryption), Toshiba strongly recommends that you write down your password and keep it in a safe location where you can later access it should you not remember it.

Toshiba is not responsible for any losses that may occur, as a result of the inability to access your device.

When you initially turn on or wake the tablet, the lock screen requires you to drag the **Lock** () icon to unlock the screen, see [“Waking the tablet” on page 33](#). Alternatively, you can secure the lock screen by requiring a pattern or entry of a numeric PIN or password, so only you can access your data. You may also be required to secure the lock screen by a policy set by an email account or other account you add to your tablet. For more information, see [“Location and security settings” on page 63](#).

You can also encrypt the data on your tablet, so you must enter a numeric PIN or a password to decrypt it each time you power it on.

- 1 Touch the **Time** () display in the System bar, touch the time in the Status Details panel, and then touch the **Settings** () icon at the bottom of the Quick Settings screen.

You can also open Settings by touching the **Settings** () icon in the Apps screen or on a Home screen.

- 2 Touch the **Location & security** () icon.
- 3 Touch **Configure lock screen**.
- 4 Touch **Pattern, PIN, or Password**.

If you touch **Pattern**, you're guided to create a pattern you must draw to unlock the screen. The first time you do this, a short tutorial about creating an unlock pattern appears. Then you are prompted to draw and redraw your own pattern.

If you touch **PIN** or **Password**, you are prompted to set a numeric PIN or a password you must enter to unlock your screen.

The next time you turn on your tablet or wake up the screen, you must draw your unlock pattern or enter your PIN or password to unlock it.

You can encrypt all the data on your tablet: Google™ Accounts, application data, music and other media, downloaded information, etc. If you do, you must enter a numeric PIN or password each time you power on your tablet.

CAUTION

- ❖ Encryption is irreversible. The only way to revert to an unencrypted device is to perform a factory data reset, which will erase all your data.
 - ❖ You must not interrupt the encryption process or you will lose some or all of your data. (See “[Privacy settings](#)” on page 67 and “[If Something Goes Wrong](#)” on page 93).
-

- 1 Before starting the encryption process on your tablet, you must:
 - ❖ Set a lock screen PIN or password (see “[Securing your tablet](#)” on page 43).
 - ❖ Charge your tablet’s battery.
 - ❖ Plug your tablet to the USB/AC adaptor.
 - ❖ Schedule an hour or more for the encryption process.
- 2 Touch the **Settings** (⚙️) icon, **Location & security** (📍) icon, and then **Encrypt tablet**.

Read the information on the Encrypt Tablet screen carefully.

If you change your mind touch the **Back** (⬅️) button to exit the encryption process.
- 3 Touch the **Encrypt tablet** button.
- 4 Enter your lock screen PIN or password and touch **Continue**.
- 5 Touch the **Encrypt tablet** button again, to confirm you want to continue.

The encryption process begins and displays the progress.

Encryption can take an hour or more, during which time your tablet may restart several times.

When encryption is complete, you are prompted to enter your PIN or password. Subsequently, you must enter your PIN or password each time you power on your tablet, to decrypt it.

Customizing your Home screens

You can add Apps icons, Widgets, Bookmark shortcuts, and other items to any available free space on any Home screen. You can also change the Wallpaper.

For more information on the Home screens, see “[Navigation and features](#)” on page 36.

Adding an item to a Home screen

- 1 Open the Home screen you want to add the item to. For more information on using the Home screens, see “[Navigation and features](#)” on page 36.
- 2 Touch the **Customize** (⊕) button located at the top-right of the screen or touch & hold an empty area of the Home screen.
- 3 Touch the category of the item you want to add. If there are no empty spots on the Home screen, “Add” is dimmed and you must delete or move an item or switch to another Home screen before you can add a new item.
- 4 In the pop-up menu, touch the tab for the category of the item you want to add.
 - ❖ **App shortcuts**—Application icons you can place on your Home screen. Touching them opens the associated apps without having to first open the Apps screen.
 - ❖ **Widgets**—Miniature applications. You can place the associated icons on the Home screen.
 - ❖ **Wallpapers**—Background images downloaded from the Web or chosen from the Gallery (pictures taken with your camera, or still images included with the system). A live wallpaper is an animated scene or maybe a map that centers on your location.
 - ❖ **More**—This category includes Browser bookmark shortcuts, shortcuts created in the Maps app, and many more items.
- 5 Swipe your finger left or right to view additional items in each category.
- 6 Touch & hold the item, and then drag it to the location you wish to place it on the Home screen.

Moving an item from the Home screen

To move an item to a new location on the current Home screen or to move it to another Home screen, touch & hold the icon, and then drag and drop it to the new location.

Removing an item from a Home screen

- 1 Touch & hold the item you wish to remove.
The **Remove** button appears in the top right corner of the display.
- 2 Drag the item to the **Remove** button.

-
- 3 Lift your finger when the icon turns red.
-

NOTE

The item has been removed from the Home screen, but not deleted from the system. To add the item back to your Home screen, see [“Adding an item to a Home screen” on page 45](#).

Changing the wallpaper

- 1 Touch the **Customize** (⊕) button located at the top-right of the screen.
- 2 Touch **Wallpapers**.
- 3 Touch **Gallery**, **Live wallpapers**, or **Wallpapers**.
 - ❖ **Gallery**—Opens a thumbnail page, displaying the images you have taken with the tablet’s camera. Pictures can be cropped before setting them as a wallpaper.
 - ❖ **Live wallpapers**—Opens a thumbnail page, displaying the sample live wallpapers that came preinstalled on your tablet. Touch a thumbnail image to preview it on the screen.
 - ❖ **Wallpapers**—Opens a thumbnail page, displaying the sample wallpaper images that came preinstalled on your tablet. Touch a thumbnail image to preview it on the screen.

Additional wallpapers can be downloaded from Android Market™.
- 4 Touch the wallpaper you want. The selected wallpaper is set as the background image on your display screen.

Turning off the device

It is a good idea to turn off your device when you are not using it for a while.

If you are using the device for the first time, leave the device plugged into a power source (even though the device is off) to fully charge the battery.

Options for turning off the device

You have two options available for turning off the device: Shut down and Sleep mode. Each option has its advantages.

- ❖ Use shut down if you will not be using the device for several days or if you must turn off your device.



TECHNICAL NOTE: Before using the shut down option to turn off your device, backup your data.

If you change your mind and decide to continue working after all, wait a few seconds before turning the device on again.

NOTE

If you do not intend to use your device for a long period of time, turn off the device, disconnect the power plug from the plug socket, and store your device in a dry dust-free location.

- ❖ Letting the screen time-out or enter into Sleep mode allows the device to conserve power. When turning on the device again, the system automatically returns to the last screen viewed.

To change the screen time-out setting, see [“Screen settings” on page 61](#).

Using Shut down mode

The Shut down mode completely shuts down the device without saving your data or the current state of the device. Shut down mode closes all open apps, shuts down the operating system, and then turns off your tablet.

CAUTION

Always back up your data and settings before shutting down your tablet.

To turn off your device using Shut down mode:

- 1 Press and hold the Power button.

A pop-up screen appears, asking whether you would like to shut down.



(Sample Image) Shut down pop-up screen

- 2 In the pop-up window, touch **OK** to completely shut down the tablet.
The operating system shuts down and the tablet turns off.
- 3 Touch **Cancel** to abort the shut down process.

Using Sleep mode

Your device will automatically time-out after a couple minutes of non-operation, placing it into Sleep mode. The screen dims and then darkens to conserve battery power. For more information on waking the tablet from Sleep mode, see [“Waking the tablet” on page 33](#). To change the amount of time it takes for the display to darken, touch the **Settings** (⚙️) icon, and then the **Screen** (📺) icon.

NOTE

Increase battery life between charges by using the shortest available time-out setting. See [“Screen settings” on page 61](#).

You can also place your tablet into Sleep mode by pressing the Power button quickly.

Factors to consider when choosing Sleep mode:

- ❖ While in Sleep mode, the device uses some battery power.
- ❖ Because the state of the system is stored in memory, you will lose data if the battery discharges completely while the device is in Sleep mode.
- ❖ Waking your device from Sleep mode takes less time and consumes less battery power than restarting after shutting down the device.
- ❖ When starting up again, the device returns to the screen last viewed.

CAUTION

If you place the device in Sleep mode and the battery discharges fully, your unsaved data will be lost. Be sure to backup your data first.

Syncing and managing your accounts

Using the Accounts & Sync settings, you can configure the ways in which your account interacts with the applications on your tablet, and you can sync contacts, email, calendar events, etc. from your multiple Google™ Accounts.

Add an account

Add multiple Google Accounts and Microsoft® Exchange ActiveSync accounts to have all your accounts available on your tablet device. For more information, see [“Accounts & sync settings”](#) on page 66.

- 1 Touch the **Settings** (⚙️) icon.

The Settings menu appears.

- 2 Touch the **Accounts & sync** (🔗) icon.

The Accounts & sync menu appears displaying the current sync settings and a list of the current accounts.



(Sample Image) Accounts & sync screen

- 3 Touch **Add account**.
- 4 Follow the onscreen instructions to enter the required account information.
- 5 Configure the account settings. For more information, see [“Accounts & sync settings”](#) on page 66.

The account is added to the list in the Accounts & sync settings.

Remove an account

To remove an account and all the associated information, including email, contacts, settings, etc.:

- 1 Touch the **Settings** (⚙️) icon.

The Settings menu appears.

- 2 Touch the **Accounts & sync**  icon.
The Accounts & sync menu, appears, displaying the current sync settings and a list of the current accounts.
- 3 Touch the account you wish to delete.
- 4 Touch **Remove account** and confirm to continue.
The account and the associated information is removed from the Accounts & sync settings.

Navigation, Maps, Places, and Latitude

To access Navigation, Maps, Places and Latitude:

- 1 Touch the **Apps**  icon.
The Apps menu appears.
- 2 Touch the **Navigation** , **Maps** , **Places**  icon, or the **Latitude**  icon.

WARNING Do not use this device while driving.

Navigation: Access turn-by-turn, spoken driving instructions with the free Google™ Navigation application (Beta).

Maps: Finds your current location to access real-time traffic conditions, and obtain detailed directions by foot, public transportation, or car, using the free Google Maps application (Beta).

Places: Quickly find local establishments, such as restaurants, banks, or gas stations, using the free Google Places application.

Latitude: Locate points-of-interest directly on a street map or satellite image. Some areas support street-level views of businesses and neighborhoods. View your friends' locations on your maps and share your location and other information with them, using Google Latitude.

To learn more, visit the Google Help Center.

Managing downloads

To access downloads:

- 1 Touch the **Apps**  icon.
The Apps menu appears.
- 2 Touch the **Applications**  icon, and then touch the **Manage applications** menu on the right side.

- 3 Touch the **Downloaded** () icon.

The Downloaded menu appears.

- 4 Touch an item to open it.

Items can be deleted from your tablet or sorted by file size or file name for easier viewing.

To sort the items, touch the **Sort by size** () or **Sort by name** () menu option on the top right of the screen.

To delete items:

- 1 Select the items you wish to delete.
- 2 Touch **Uninstall**, and then touch **OK** to confirm the deletion.

Files, apps, and items downloaded from a Web Browser, Gmail, etc., are stored on your tablet's internal storage. Use the Downloads app to view, open, or delete downloaded items.

Factory data reset

This restores the device to the out of box state. All data on the device is erased, including system/application settings, user downloaded/installed applications and data such as photos, music, videos, contacts, etc.

CAUTION

The recovery process deletes all data, restoring the tablet to its out-of-box state. Be sure to save your data to external media before executing the recovery), see ["Backing up your data" on page 35.](#))

Before restoring the device to the out of box state, back up all data to external media. You can use your Google™ account to back up all data and apps settings.

To perform this process:

- 1 Touch the **Settings** () icon.
The Settings menu appears.
- 2 Touch the **Privacy** () icon.
The Privacy menu appears.
- 3 Touch **Factory data reset**.

4 Touch **Reset tablet**.

5 Touch **Erase everything**.

The Factory data reset process begins.

NOTE

This process could take several minutes. For more information, see [“Setting up your device” on page 30](#).

Caring for your device

This section gives tips on cleaning and moving your device. For information about taking care of your device’s battery, see [“Taking care of your battery” on page 27](#).

CAUTION

The screen is made of glass so avoid contact with sharp, rough, or abrasive objects or substances as screen may break or scratch if not handled properly. If you see a crack in the glass, discontinue use of the device to avoid injury.

Cleaning the device

CAUTION

Keep liquids, including cleaning fluid, out of the device’s ports, speakers and other openings. Never spray cleaner directly onto the device. Never use harsh or caustic chemical products to clean the device.

To keep your device clean, gently wipe it with a lightly dampened soft cloth.

Chapter 2

Settings

Customizing your device's settings

You can customize the settings for the various functions on your Toshiba tablet, such as screen orientation, or sound settings.

Apps and Settings menus

This menu contains most of the tools you will need to customize and configure your tablet.

Accessing the Apps and Settings menus

To access the Apps menu:

- ❖ Touch the **Apps** ( Apps) icon.

Customizing your device's settings

Icon	Name	Description
	Contacts	Touch to view your Contacts.
	Calculator	Touch to open the Calculator application.
	Downloads	Touch to view the Downloads application, see "Managing downloads" on page 50 .
	Media Player	Touch to open the multimedia player, see "TOSHIBA Media Player" on page 73 .
	Books	Touch to view the books that have been downloaded to your tablet.

To access the Settings menu:

- ❖ Touch the **Settings** () icon.

The Settings menu appears.



(Sample Image) Settings menu screen

The following are some of the icons you may find in the Settings menu.

Icon	Name	Description
	Wireless Networks	Configure and manage connections to networks and devices via Wi-Fi®, or <i>Bluetooth</i> ®, see "Wireless and networks settings" on page 58 .
	Sound	Configure the Sound settings to set the audio for media playback, notifications, and alarms with the your desired volume level and notification sounds, see "Sound settings" on page 60 .


<i>Icon</i>	<i>Name</i>	<i>Description</i>
	Screen	Configure the screen orientation or use energy saving settings, see “Screen settings” on page 61 .
	Multimedia	Touch to adjust the multimedia playback settings, see “Multimedia settings” on page 62 .
	Location & security	Configure how you want the tablet to determine your location, see “Location and security settings” on page 63 .
	Applications	Touch to view and manage the installed applications, see “Applications settings” on page 65 .
	Accounts & sync	Add, remove, and manage all of your accounts, and sync accounts to work together, see “Accounts & sync settings” on page 66 .
	Privacy	Back up your settings and data to Google™ servers, using your Google Account, or perform a factory data reset, see “Privacy settings” on page 67 .
	Storage	Monitor the used and available space on your tablet's internal storage and other storage media installed on your tablet, see “Storage settings” on page 68 .
	Language & input	Configure the various input methods available on your tablet, see “Language & input settings” on page 68 .
	Accessibility	Touch to change the settings for accessibility features to activate an accessibility application, see “Accessibility settings” on page 70 .
	Date & time	Configure your preferences for the way in which dates are displayed, see “Date & time settings” on page 71 .
	About tablet	Displays information regarding your operating system software and hardware, see “About tablet” on page 71 .

Access Settings from the Quick Settings menu

You can open the Quick Settings menu to view and control the tablet settings you most often use, as well as access the Settings menu.

- 1 Touch the **Time** (5:02) display in the lower-right corner of the screen in the System bar.

The Status Details menu displays.

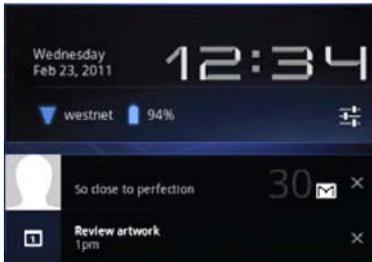

(Sample Image) Status Details menu screen

- ❖ Touch any open area of the display screen to close the Status Details menu.

Or

- ❖ Touch anywhere in the Status Details menu to display the Quick Settings menu.

The Quick Settings menu displays below the Status Details menu, replacing the list of current notifications.



(Sample Image) Quick Settings menu screen

- 2 Touch the **Settings** (⚙️) icon to open the Settings menu, and then select the setting you wish to change.

The following are icons you will find in the Quick Settings menu.

Icon	Name	Description
	Airplane mode	Touch to turn ON/OFF Airplane mode, see “Wireless and networks settings” on page 58.
	Wi-Fi®	Touch to view the current Wi-Fi® connections, see “Wireless and networks settings” on page 58.
	Lock screen orientation	Touch to turn ON/OFF screen rotation, see “Screen settings” on page 61.

NOTE This may also be locked/unlocked by using the screen rotation lock/unlock switch.

	Screen brightness	Touch to adjust the screen brightness, see “Screen settings” on page 61.
	Notifications	Touch to turn ON/OFF Notifications, see “Sound settings” on page 60.
	Settings	Touch to select the tablet setting you wish to change, see “Apps and Settings menus” on page 53.



Wireless and networks settings

Use the Wireless & networks settings to configure and manage connections to networks and devices via Wi-Fi®, or Bluetooth®. For more information, see [“Setting up Wi-Fi® and Bluetooth® connections”](#) on page 34. The Wireless & Networks settings can also be used to configure connections between your tablet and virtual private networks (VPNs), and to turn off the device's radios while in-flight.

To change the **Wireless & networks** settings:

- 1 Touch the **Settings** (⚙️) icon.
The Settings menu appears.
- 2 Touch the **Wireless & networks** (📶) icon.
The Wireless & networks menu appears.
- 3 Touch the item you wish to change in the Wireless & networks menu.

Below are some of the categories to choose from:

- ❖ **Airplane mode**—Select to turn off the tablet's radios that transmit data.
- ❖ **Wi-Fi**—Select to turn on Wi-Fi® so you can connect to Wi-Fi® networks.
- ❖ **Wi-Fi settings**—See [“Setting up Wi-Fi® and Bluetooth® connections” on page 34.](#)

In addition to the settings described in this section, you can touch the **Menu** (☰) button in this screen's Application bar and touch **Advanced** to view the settings in the “Advanced Wi-Fi settings” screen.

Some of the options available are:

- ❖ **Wi-Fi**—Select to turn on Wi-Fi® so you can connect to Wi-Fi® networks. The network name is displayed when a network is connected.
- ❖ **Network notification**—If this is selected, you will receive a notification in the System bar when an open Wi-Fi® network becomes available.
- ❖ **Wi-Fi® Disconnect policy choices**—Choose from the following selections to set conditions for automatically turning off the Wi-Fi® connection:
 - When the screen times-out
 - Never while plugged into AC power
 - Never (uses more battery power)
- ❖ **Wi-Fi networks**—Displays a list of Wi-Fi® networks you've previously configured and those detected when the tablet last scanned for Wi-Fi® networks. See [“Setting up your Wi-Fi® connection” on page 30.](#)
- ❖ **Add Wi-Fi network**—Touch to open a dialog box to add a Wi-Fi® network by entering its SSID (the name it broadcasts), security type, and other properties. See [“Setting up your Wi-Fi® connection” on page 30.](#)
- ❖ **Bluetooth**—Select to turn on *Bluetooth*® so you can connect to *Bluetooth*® devices, such as an external keyboard.
- ❖ **Bluetooth settings**—For more information, see [“Setting up Wi-Fi® and Bluetooth® connections” on page 34.](#)

Some of the options available are:

- ❖ **Bluetooth**—Select to turn on *Bluetooth*® so you can connect to *Bluetooth*® devices.

- ❖ **Device name**—Touch to open a dialog box to give your tablet a name that is visible on some *Bluetooth*® devices. The current name is displayed.
- ❖ **Discoverable**—Select to make your tablet discoverable by other *Bluetooth*® devices for a brief period of time.
- ❖ **Bluetooth devices**—Displays a list of *Bluetooth*® devices that you've previously configured and those detected when the tablet last scanned for *Bluetooth*® devices.
- ❖ **Find nearby devices**—Touch to search for and display information about nearby *Bluetooth*® devices.




Sound settings

The Sound settings can be configured to set the audio for media playback, notifications, and alarms with the desired volume level and notification sounds. You can also set audible feedback when touching or locking and unlocking the screen.

To change the **Sound** settings:

- 1 Touch the **Settings** (⚙️) icon.
The Settings menu appears.
- 2 Touch the **Sound** (🔊) icon.
The Sound menu appears.

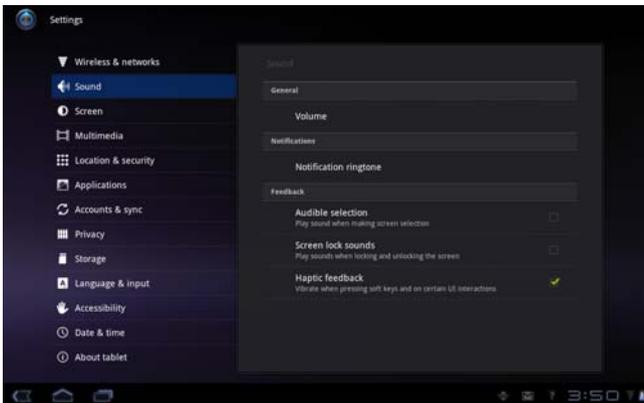

(Sample Image) Sound Settings menu screen

- 3 Touch the item you wish to change in the Sound menu.
Below are some of the categories you can choose from:

- ❖ **Volume**—Select to open a screen containing three sliders, used to adjust media volume, notification sounds, and alarm sounds.
- ❖ **Notification ringtone**—Select to open a screen containing a list of notification sounds. Touch a notification sound to listen to a sample of it.
- ❖ **Audible selection**—Select to hear a sound while touching the buttons, icons, and other onscreen items.
- ❖ **Screen lock sounds**—Select to hear a sound when locking or unlocking the screen.
- ❖ **Haptic Feedback**—Vibrate when pressing the soft keys and on certain UI interactions.




Screen settings

You can change the Screen settings for various things, such as orientation of the display or brightness level for energy conservation.

To change the Screen settings:

- 1 Touch the **Settings** (⚙️) icon.
The Settings menu appears.
- 2 Touch the **Screen** (⚙️) icon.
The Screen menu appears.

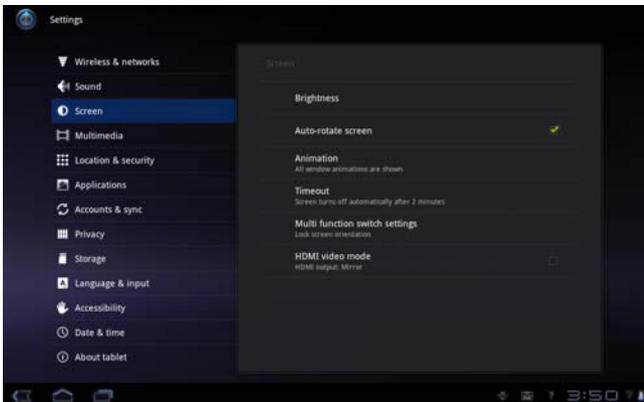

(Sample Image) Screen Settings menu screen

- 3 Touch the item you wish to change in the Screen menu.
Below are some of the categories you can choose from:

NOTE

The Automatic Brightness selection must be deselected to access the Brightness control screen. Under certain operating conditions, e.g., very high ambient temperatures, your tablet might automatically dim the LCD brightness in order to maintain a reasonable system temperature. This is a normal protective feature and you might not be able to manually adjust the LCD brightness during the auto dimming period.

- ❖ **Brightness**—Displays the Brightness control bar screen. To change the brightness level, deselect the Automatic brightness option. Then touch and slide the bar left or right to decrease or increase the screen brightness.
- ❖ **Auto-rotate screen**—Select to enable your screen to auto-rotate the screen in apps, Web pages, and games that support auto-rotation. This allows the screen to automatically switch the orientation of the currently viewed screen as you turn the tablet sideways or upright.
- ❖ **Animation**—Displays a list of settings to enable or disable animation while navigating your tablet in menus, screens, and apps that support it.
- ❖ **Timeout**—Displays a list of time interval settings that indicate the amount of time it takes for the screen to time-out. Using the shortest time-out period extends the battery life between charges.
- ❖ **Multi function switch settings**—Lock screen orientation.
- ❖ **HDMI video mode**—HDMI output: Mirror or Video area only.

**Multimedia settings**

Change the way in which your tablet displays media playback in videos, music, photos, etc.

- 1 Touch the Settings () icon.
The Settings menu appears.
- 2 Touch the **Multimedia** () icon.
The Multimedia menu appears.
- 3 Touch the item you wish to change in the Multimedia menu.



Location and security settings

Use the Location & security settings to configure how you want the tablet to determine your location (this affects accuracy), and the way in which you want to share your location with Google™ and others. Security settings can also be configured to help secure your tablet and its data.

⚠ WARNING Do not use this device while driving.

To change the **Location & security** settings:

- 1 Touch the **Settings** (⚙️) icon.
The Settings menu appears.
- 2 Touch the **Location & security** (📍) icon.
The Location & security menu appears.
- 3 Touch the item you wish to change in the Location & security menu.

Below are some of the categories you may choose from:

- ❖ **Use wireless networks**—Under **My Location**, selecting this option allows your tablet to use information from Wi-Fi® and networks to determine your approximate location. This is important for use in Maps and other geographically aware applications, etc. You will be asked if you consent to sharing your location anonymously with Google's location service, in order help improve the service.
- ❖ **Use GPS satellites**—Under **My Location**, selecting this option allows your tablet's global positioning system (GPS) receiver to pinpoint your location to within as close as several meters (street level). Actual GPS accuracy depends on weather conditions, as well as other factors.
- ❖ **Use location for Google Search**—Under **My Location**, select this option to include information about your location when you use Google Search, Voice Search, etc.
- ❖ **Configure lock screen**—Under **Screen unlock**, touch this option to configure your lock screen with a required pattern, PIN, or password to unlock the screen. For more information, see "[Securing your tablet](#)" on page 43.
- ❖ **Owner info**—Under **Screen unlock**, touching this option displays a screen that allows you to display information about yourself (such as your contact information) on the lock screen. You will be prompted to enter the text you wish to display.

-
- ❖ **Encrypt tablet**—Under **Screen unlock**, touch this option to encrypt the contents of your tablet in the event that it is powered off. Configure a required numeric PIN or password to decrypt your tablet each time you power it on, see [“Securing your tablet” on page 43](#).

CAUTION

If you choose to set a password (with or without encryption), Toshiba strongly recommends that you write down your password and keep it in a safe location where you can later access it should you not remember it.

Toshiba is not responsible for any losses that may occur, as a result of the inability to access your device.

- ❖ **Visible passwords**—Under **Passwords**, select this option to briefly display each character of your passwords as you enter them into the keyboard.
- ❖ **Device administrators**—Under **Device administration**, touch open a screen with a list of the applications you have authorized to be administrators for your tablet. This is typically an email, calendar, or other enterprise application that you granted this authority to, when you added an account hosted by an enterprise service that requires the ability to implement security policies on any devices that connect to it. Touch an application in this list to disable its authority to be a device administrator; if you do, the account you added will typically lose some functionality in its applications, such as the ability to sync new email or calendar events, until you restore the application's authority as a device administrator. Applications whose device administration authority you disable in this way, but that have accounts that require them to be device administrators, typically notify you how to restore their authority when you try to use them, unless you delete those accounts.
- ❖ **Use secure credentials**—Under **Credential storage**, select to allow applications to access your tablet's encrypted store of secure certificates and related passwords as well as other credentials. Credential storage is used to establish some kinds of VPN and Wi-Fi® connections, see [“Setting up Wi-Fi® and Bluetooth® connections” on page 34](#). This setting is dimmed if you do not set a password for credential storage.
- ❖ **Install from storage**—Under **Credential storage**, select to install a secure certificate from your tablet's storage.
- ❖ **Set password**—Under **Credential storage**, touch to open a dialog box. Enter the password you wish to use to set or change

an existing password for your secure credential storage. Your password must have at least 8 characters.

- ❖ **Clear storage**—Under **Credential storage**, select to delete all secure certificates and related credentials. You will be prompted to also confirm deletion of the credential storage password.




Applications settings

You use the Applications settings to view details about the applications installed on your tablet, to manage their data, to force them to stop if needed, and to set whether you want to permit installation of applications that you obtain from Web sites and email.

To change the **Applications** settings:

- 1 Touch the **Settings** (⚙️) icon.
The Settings menu appears.
- 2 Touch the **Applications** (📁) icon.
The Applications menu appears.

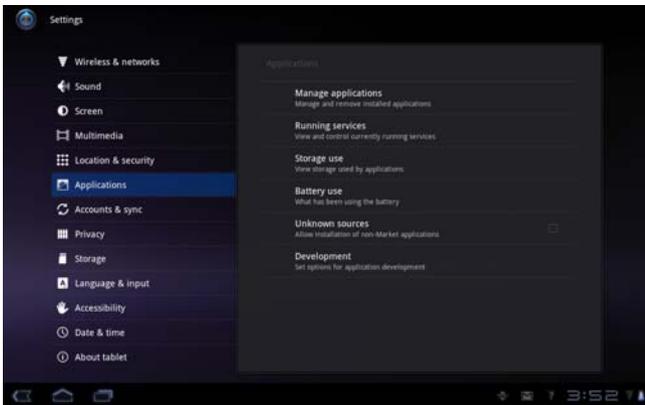

(Sample Image) Application Settings menu screen

- 3 Touch item you wish to change in the Applications menu.

Below are some of the categories you can choose from:

- ❖ **Manage applications**—Displays a list of the applications and other software installed on your tablet. The file information is available for each item.
- ❖ **Running services**—Displays a list of applications, processes, and services currently running.

- ❖ **Storage use**—Displays a list of the applications that are currently using memory resources on your tablet.
- ❖ **Battery use**—Displays a list of the applications using battery power since you last charged your tablet.
- ❖ **Unknown sources**—Allow installation of non-Market applications.
- ❖ **Development**—Set Options for application development.



Accounts & sync settings

You can add, remove, and manage your Google™ Accounts and other accounts, using the Accounts & sync settings. For more information, see [“Syncing and managing your accounts” on page 48](#). Use these settings to also control the ways in which applications send, receive, and sync data on their own schedules, or how applications synchronize user data automatically.

Gmail™, Calendar, and other applications may have their own setting options. For details, refer to the application’s documentation.

To change the **Accounts & sync** settings:

- 1 Touch the **Settings**  icon.
The Settings menu appears.
- 2 Touch the **Accounts & sync**  icon.
The Accounts & sync menu appears.
- 3 Touch the item you wish to change in the Accounts & sync menu.

Below are some of the categories you can choose from:

- ❖ **Background data**—Select to allow applications to synchronize data in the background even if the application is not currently being used. Disabling this setting can save battery power and data use.
- ❖ **Auto-sync**—Select to allow applications to synchronize data on their own schedule.

NOTE

If Background data is not selected, automatically synchronizing data is disabled and data will need to be manually synchronized in each application that supports it.

- ❖ **Manage accounts**—You can manage your Google Accounts and others you have added to the tablet by touching an account on this screen.

The account's screen displays.

- ❖ **Account screen**—The options available on this screen depend on the account screen you have displayed. You can choose to turn ON/OFF synchronize for each account, or touch the **Synchronize** button at the top right of the Application bar to synchronize data now. Touch **Remove account** to remove the account and all its data. For more information, see “[Privacy settings](#)” on page 67.



Privacy settings

You can use the Privacy settings to back up your settings and data to Google™ servers, using your Google Account. You can also perform a factory data reset to erase all data on your tablet. For more information, see “[Backing up your data](#)” on page 35.

To change the **Privacy** settings:

- 1 Touch the **Settings** (⚙️) icon.
The Settings menu appears.
- 2 Touch the **Privacy** (🔒) icon.
The Privacy menu appears.
- 3 Touch the item you wish to change in the Privacy menu.

Below are some of the categories you can choose from:

- ❖ **Back up my data**—Select to back up your personal data (Wi-Fi® passwords, Browser bookmarks, etc.) to Google servers, with your Google Account. Your data can be restored to a new tablet the first time you sign in with your Google Account. Some third-party applications may also take advantage of this feature, allowing you to restore the associated data of a reinstalled application.

NOTE

If you disable this option, data will no longer be backed up to your Google Account. All existing backed up data is deleted from Google servers.

- ❖ **Backup account**—Displays the Google Account used to back up your settings and data. Sign in to this account to restore your settings and data to a new tablet or other device.
- ❖ **Automatic restore**—Select this option to restore the associated settings and data when reinstalling an application.

-
- ❖ **Factory data reset**—Restores your device to its out-of-box state, see “[Factory data reset](#)” on page 51.
-

CAUTION

The recovery process deletes all data, restoring the tablet to its out-of-box state. Be sure to save your data to external media before executing the recovery), see “[Backing up your data](#)” on page 35.)

NOTE

Any system updates already installed are retained on your device.

**Storage settings**

The Storage settings can be used to monitor the used and available space in your tablet's internal storage or on a Micro SD™ Card inserted in your tablet.

To change the **Storage** settings:

- 1 Touch the **Settings** (⚙️) icon.
The Settings menu appears.
- 2 Touch the **Storage** (🗄️) icon.
The Storage menu appears.
- 3 Touch the item you wish to change in the Storage menu.

You can also view and manage the amount of storage used by your applications.

**Language & input settings**

You can select the language and configure various input methods, such as the text-to-speech synthesizer for applications that support it.

To change the **Language & input** settings:

- 1 Touch the **Settings** (⚙️) icon.
The Settings menu appears.
- 2 Touch the **Language & input** (🗨️) icon.
The Language & input menu appears.
- 3 Touch the item you wish to change in the Language & input menu.

Below are some of the categories you can choose from:

- ❖ **Select language**—Select to open the Language screen, and then select your preferred language for use on your tablet.

- ❖ **User dictionary**—Select to open a list of the words you've added to the dictionary. Touch a word to edit it, or touch the red **X** next to a word to delete it. Touch the **Plus** button at the top right of the Application bar to add a word.
- ❖ **Voice recognizer settings**—Select to open a screen that allows you to configure the following settings:

Some of the available options are:

- ❖ **SafeSearch**—Set whether you want Google™ SafeSearch filtering to block some search results when using Google Voice Search.
- ❖ **Block offensive words**—Select to have your Google voice recognition replace offensive words with hash symbols (#).
- ❖ **Text-to-speech settings**—Select to open a screen that allows you to configure the following settings:
 - ❖ **Listen to an example**—Using your current settings, a brief sample of the speech synthesizer is played.
 - ❖ **Always use my settings**—Select to use the settings on your device, rather than an application's speech synthesizer settings.
 - ❖ **Default engine**—If you have more than one text-to-speech application installed, select to set one of them as the default application.
 - ❖ **Install voice data**—If you do not have a speech synthesizer application installed on your device, this option connects to Android Market and guides you through the download process.
 - ❖ **Speech rate**—Touch to select the speed in which you would like the synthesizer to speak.
 - ❖ **Language**—Touch to select the text language you wish your synthesizer to speak.
 - ❖ **Engines**—Touch to view the text-to-speech applications installed on your device. Touch one to view or change its settings.
- ❖ **Current input method**—Select to open the screen, and then select the input method you wish to use, if more than one is installed. Touch **Configure input methods** to open the screen, and then configure the current input method. Alternative keyboards and other input methods can be downloaded from Android Market™.

-
- ❖ **Input method selector**—Select to open the screen, and then choose whether you want the Input Selector button to appear in the System bar, to the left of the Time display.
 - ❖ **Configure input methods**—Select to open a screen that allows you to configure the following settings:
 - ❖ **Active input methods**—Touch to select the languages you want available when speaking and typing, using the onscreen keyboard and voice input. When languages are specified, the Input Method button appears in the System bar when the onscreen keyboard is used.
 - ❖ **Settings**—Touch to select the keyboard settings you wish to use (**Auto-capitalization**, **Sound on keypress**, **Auto-correction**, **Show correction suggestions**).
-

NOTE The correction and capitalization features are supported only in English.

For more information on using the onscreen keyboard, see [“Using the onscreen keyboard” on page 76](#).



Accessibility settings

Use the Accessibility settings to configure any plug-ins that are installed on the tablet.

To change the **Accessibility** settings:

- 1 Touch the **Settings** (⚙️) icon.
The Settings menu appears.
- 2 Touch the **Accessibility** (👤) icon.
The Accessibility menu appears.
- 3 Touch the item you wish to change in the Accessibility menu.

Below are some of the categories you can choose from:

- ❖ **Accessibility**—Select to enable all installed accessibility plug-ins.
- ❖ **KickBack**—Select to allow the tablet to vibrate briefly while navigating, using the buttons, icons, keyboard, etc.
- ❖ **TalkBack**—Select to allow the tablet's installed speech synthesizer to announce the labels of the buttons, icons, etc. while navigating the tablet.
- ❖ **SoundBack**—Select to hear a sound each time you touch a button, icon, etc.

- ❖ **Accessibility scripts**—Select to hear a sound each time you touch a button, icon, etc.



Date & time settings

Use the Date & time settings to configure your preferences for the way in which dates are displayed.

To change the **Date & time** settings:

- 1 Touch the **Settings** (⚙️) icon.
The Settings menu appears.
- 2 Touch the **Date & time** (🕒) icon.
The Date & time menu appears.
- 3 Touch the item you wish to change in the Date & time menu.

Below are some of the categories you can choose from:

- ❖ **Automatic date & time**—Clear the selection to set the date and time manually.
- ❖ **Automatic time zone**—Clear the selection to set the time zone manually.
- ❖ **Set date**—If **Automatic date & time** is cleared, a screen opens to set the date manually.
- ❖ **Set time**—If **Automatic date & time** is cleared, a screen opens to set the time manually.
- ❖ **Select time zone**—If **Automatic time zone** is cleared, a screen opens to set the time zone manually.
- ❖ **Use 24-hour format**—Select to display the time using a 24-hour time format (i.e. 13:00, rather than 1:00).
- ❖ **Select date format**—Select to open a screen to select the displayed date's format.



About tablet

The About tablet menu displays information regarding your operating system software and hardware.

To view the **About tablet** information:

- 1 Touch the **Settings** (⚙️) icon.
The Settings menu appears.
- 2 Touch the **About tablet** (ℹ️) icon.
The About tablet menu appears.

- 3 Touch the item you wish to view in the About tablet menu.

Below are some of the categories you can choose from:

- ❖ **System updates**—Select to open the Toshiba Service Station that lists the availability of operating system software updates.
- ❖ **Status**—Select to open a screen that displays information about your battery, network connections, etc.
- ❖ **Battery use**—Select to open a list of the applications and operating system components used since you last charged the tablet.
- ❖ **Legal information**—Select to open a screen that displays legal information about the system software included with your tablet.

Chapter 3

Working with Apps

Downloading Toshiba Apps

You can download Toshiba apps from the Toshiba App Place™ by touching the App Place™ icon.

NOTE To download apps, you must be connected to the Internet.

TOSHIBA Media Player




The TOSHIBA Media Player is a multimedia player that allows users to experience outstanding multimedia viewing enjoyment.

The TOSHIBA Media Player supports a number of multimedia content formats. For detailed information regarding supported file formats, see the detailed specifications for your device at tabletsupport.toshiba.com.

NOTE Toshiba does not guarantee that all audio/video files will play correctly.

On the Media Player's main screen, touch the **Menu** (☰) button.

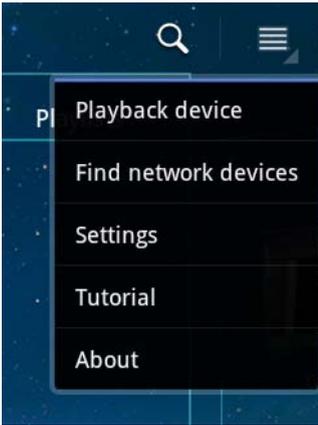

(Sample Image) Toshiba Media Player Settings menu screen

The menu displays the following options:

- ❖ **Playback device**—Opens the list of available playback devices
- ❖ **Find network devices**—Displays available network devices.
- ❖ **Settings**—Opens media player settings.
- ❖ **Tutorial**—Opens the media player tutorial.
- ❖ **About**—Displays version information, etc.

Apps

In Android Market™ you will have direct access to more than 100,000 apps. Search for your favorite games, apps, wallpapers, and more to customize your tablet.

To learn more, visit the Google™ Help Center.

Downloading from Android Market™

On the Home Screen, touch the **Market** (📦) icon. This opens Android Market™, allowing you to choose from the available apps, games, etc.

Preinstalled Apps on your tablet

Android Market™, Browser, Gmail™, Maps, YouTube™, and Calendar apps are preinstalled on your tablet and the shortcuts for them appear on your Home screen. You can move the icons for these applications to other Home screens to customize the look of

your tablet, see [“Moving an item from the Home screen”](#) on page 45.

You can install many more apps, widgets, games, etc. by visiting the Toshiba App Place™ or Android Market.

Uninstalling Apps on your tablet

To uninstall applications from your tablet.

- 1 Touch the **Apps** ( Apps) icon.
- 2 Touch & hold the icon that represents the application you want to delete, and then drag it to **Uninstall**.
- 3 Confirm the deletion.

NOTE Applications that came preinstalled on your tablet cannot be deleted from the device.

Chapter 4

Exploring the Features on your Device

Using the onscreen keyboard

Your tablet comes with an onscreen keyboard.




(Sample Image) Onscreen keyboard

Enter text using the onscreen keyboard. Some applications open a text field that when touched, opens the onscreen keyboard allowing you to enter text. Some apps open the keyboard automatically.

The onscreen keyboard has a number of settings. For more information, see [“Language & input settings”](#) on page 68.

Type to enter text

To begin typing, touch the text field in the application you are using to open the onscreen keyboard.

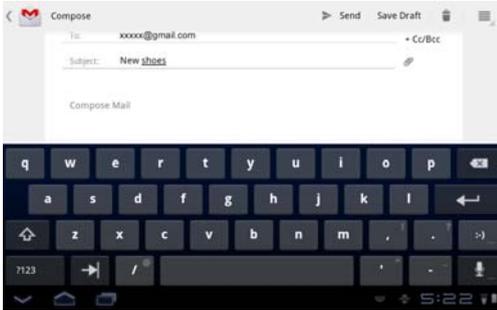


(Sample Image) Touching a text field to type

An insertion point tab (📍) appears where you touch the text field. If text has been previously entered you can drag the insertion point by its tab to move it to the location in the text line you wish to begin typing from.

You may also select one or more words to copy, cut, and paste.

NOTE Not all applications support this function.

- 1 Select the text you wish to cut or copy.

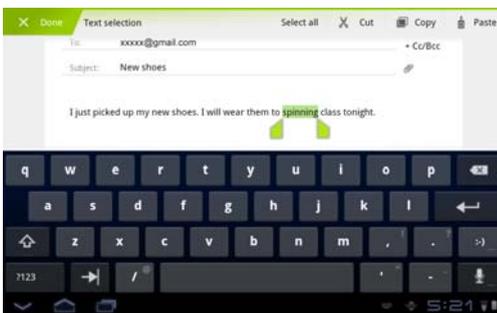

(Sample Image) Touching a text field to type


- 2 Touch **Cut** (✂️ cut) or **Copy** (📄 Copy) in the Application bar.
Touching **Cut** removes the selected text from the text field, but it can be pasted into another text field.
- 3 Place the cursor in the text field where you want to place the text.

- 4 Touch **Paste** ( Paste) in the application bar.

The text is inserted into the new text field.

NOTE Text can be copied and pasted from one app to another.

- ❖ Touch the space bar or a punctuation mark to auto complete a word you are typing.
- ❖ Touch the **Shift** () key one time to capitalize the next letter typed.
- ❖ Double-tap the **Shift** key to capitalize all of the letters you type. Touch the **Shift** key again to type in lower case.

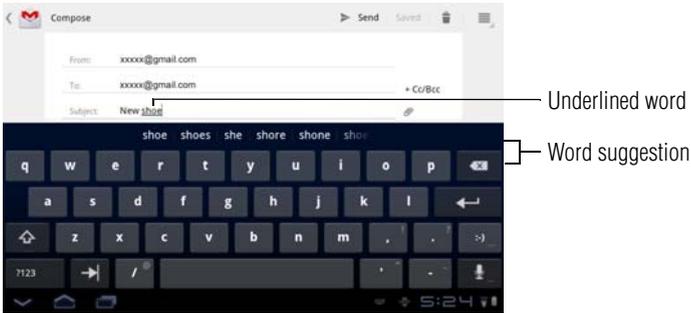

(Sample Image) Touching a text field to type

- ❖ While typing, spelling suggestions and similar word suggestions appear just above the keyboard. Touch a word suggestion to use it in place of the underlined word in the text field. To change the input settings, see “[Language & input settings](#)” on page 68.
- ❖ Touch the **Delete** () key to erase characters to the left of the cursor.
- ❖ Touch the Number and Symbols () key to type numbers, symbols, and other special characters.
- ❖ Touch the Close Keyboard () button when you are finished.

You can change the language you want to use by touching the Input Method () button, or by going to the Settings menu, see “[Language & input settings](#)” on page 68.

Speak to enter text

You can use the speech-recognition feature to input text to the onscreen keyboard.

- 1 Touch the text field.
- 2 Touch the Microphone () key on the keyboard.
- 3 Speak your text when you are prompted to “Speak now.”
The speech-recognition types the words you say.
- 4 To enter punctuation, say “comma,” “period,” “exclamation mark,” etc.
The text you enter by speech is underlined.
- 5 Touch the **Delete** () key to erase the underlined text, or the **Send** () button to accept the text.

You can change the language you want to use by touching the Input Method () button, or by going to the Settings menu, see “Language & input settings” on page 68.

Using the built-in speakers

Your tablet is equipped with internal speakers. To increase or decrease the volume, use the volume control buttons on the side of your tablet.

You can silence your tablet, so that your notifications are announced with a vibration instead of a tone. To place your tablet into Silent mode, use the volume decrease button to turn the volume down completely. The lowest setting places your tablet into Silent mode.

Using external speakers or headphones

Instead of using the internal speakers, you can connect headphones or a pair of external stereo speakers.

CAUTION

Do not set the volume too high on this device or when using headphones. Continuous exposure to loud sound can harm your hearing. Discontinue use and consult a physician if you experience any hearing discomfort.



TECHNICAL NOTE: When using amplified speakers, use speakers that require an external power source. Other types of speakers will be inadequate to produce sound from the device.



To play back sound files through external speakers or headphones:

- 1 Locate the headphone jack on the device.
- 2 Using any necessary adapters, plug the cable from the headphones or external speakers into the headphone jack.

The headphone jack requires a 16-ohm stereo mini connector.

To adjust the volume:

- ❖ For external speakers, use the volume controls on each speaker.
- ❖ For headphones, use the device's volume control.

Recording sounds

You may record sounds using the internal microphone on the device or by connecting a headset.

Using the cameras

Your device comes with a built-in camera on the front and one on the back of the tablet. With these cameras you can do the following:

- ❖ Take pictures and record videos with your device
- ❖ Chat with others and have them see you while using instant messaging (IM) programs
- ❖ Have video conference calls

NOTE

To email, instant message or video conference, you must be connected to the Internet.

The camera indicator light glows when the front camera is active. You may also adjust the settings to use a flash.

Using a Micro SD™ Card

For detailed information regarding supported media, see the detailed specifications for your device at tabletsupport.toshiba.com.


The Micro SD™ Card slot supports the use of Secure Digital™ (SD™) media. This media can be used with a variety of digital products: digital music players, cellular phones, PDAs, digital cameras, digital video camcorders, etc.

Inserting memory media

CAUTION When inserting memory media, do not touch the metal contacts. You could expose the storage area to static electricity, which can destroy data.

To insert a Micro SD™ Card:

- 1 Turn the media so that the contacts (metal areas) are face down.
- 2 Push the media into the adapter until it locks in place.

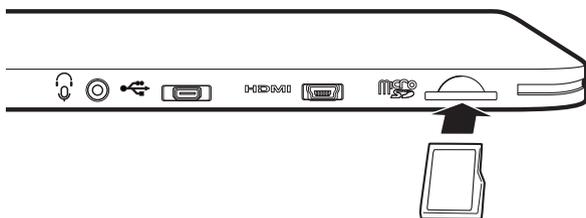

(Sample Illustration) Inserting memory media


Removing memory media

CAUTION Do not remove media while data is being written or read, or your data could be destroyed.

To prepare the card for removal:

- 1 Touch the **Settings** (⚙️) icon.
The Settings menu appears.
- 2 Touch the **Storage** (💾) icon.
The Storage menu appears.
- 3 Touch **Unmount SD card**.
- 4 Gently press the card inward to release it.
The card pops out slightly.

- 5 Grasp the card and pull it straight out.

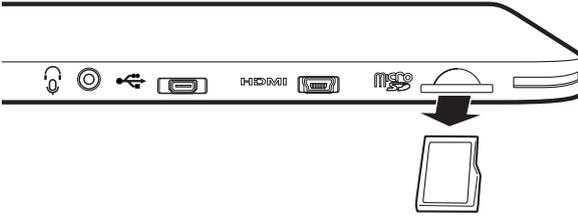

(Sample Illustration) Removing memory media

Adding optional external devices

After starting your device for the first time you may want to:

- ❖ Connect an external keyboard via the available *Bluetooth*[®] settings (see “Using an external keyboard” on page 82 or “Setting up Wi-Fi[®] and Bluetooth[®] connections” on page 34)
- ❖ Connect an external mouse via the available *Bluetooth*[®] settings (see “Using an external mouse” on page 82 or “Setting up Wi-Fi[®] and Bluetooth[®] connections” on page 34)
- ❖ Connect an external monitor via the Micro HDMI[®] Out port (see “Using external devices” on page 83)

Using an external keyboard

If you prefer to use an external keyboard, you can attach one to your device by pairing a *Bluetooth*[®] enabled keyboard using the available *Bluetooth*[®] connectivity on your device. For more information, see “Setting up Wi-Fi[®] and Bluetooth[®] connections” on page 34 and “Using external devices” on page 83.

NOTE Some keyboard functionality may not be supported.

Using an external mouse

You may want to use an external mouse instead of the device’s touch screen. You can attach one to your device by pairing a *Bluetooth*[®] enabled mouse using the available *Bluetooth*[®] connectivity on your device. For more information, see “Setting up Wi-Fi[®] and Bluetooth[®] connections” on page 34 and “Using external devices” on page 83.

NOTE Some mouse functionality may not be supported.


Using external devices

You can connect external devices to your device using the following available ports:

- ❖ A Micro HDMI® Out port—Connect an HDMI®-compatible television or display device to your tablet.

NOTE To connect a device to the Micro HDMI® Out port, you must purchase a Micro HDMI® cable.

- ❖ A Micro USB port—Supports data transfer.

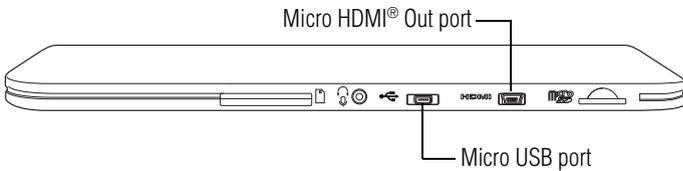

(Sample Illustration) External device ports on the bottom of the tablet

Connecting an HDMI®-compatible television or display device

To connect an HDMI®-compatible television or display device to the device:

- ❖ Connect one end of a Micro HDMI® cable (not included with your device) to the Micro HDMI® Out port on the side of your device, and then connect the other end of the cable to your television or display device. Refer to the manual that came with the television or display device for more information.

Your device will automatically detect the external display device.


Using a docking station

(Sold separately.)

The docking connector, located on the bottom of your tablet device, is used to attach your device to a docking station (not shipped with your system).

You can leave network cables and external devices (such as an external keyboard, mouse, speakers, and USB devices) connected to the docking station when the tablet is not connected to it. This allows you to quickly connect your tablet to the docking station and have immediate access to all of your network resources and

external devices. This eliminates the time-consuming process of connecting each external device individually, and saves wear and tear on the ports and cables.

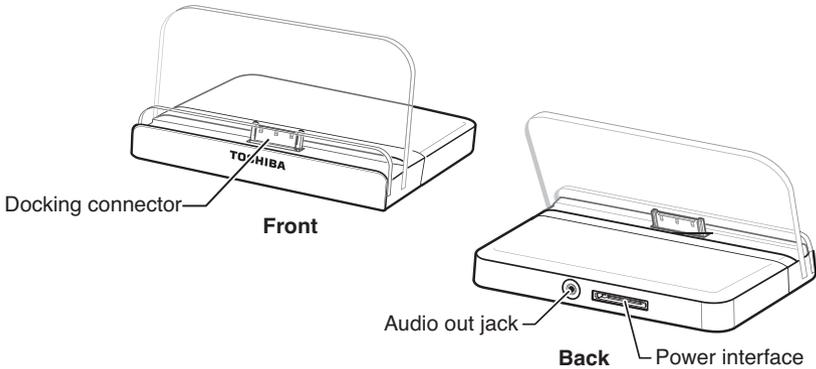

(Sample Illustration) Docking station

To achieve a proper connection between your tablet and the docking station, your tablet must be properly aligned with the docking station. For more information, consult the user's manual that came with your docking station, or visit support.toshiba.com.

To find a docking station that is compatible with your tablet device, please visit accessories.toshiba.com.

Connecting your tablet to a docking station


To connect your tablet to the dock:

- 1 Assemble the AC adaptor (provided with your Toshiba tablet), see “Connecting to a power source” on page 24.

NOTE Additional Toshiba USB/AC adaptors can be purchased separately at accessories.toshiba.com.

- 2 Connect the power cord/cable to the power interface slot on the back of the dock.
- 3 Connect the AC adaptor to a live electrical outlet.

- 4 Align the docking interface located on your tablet with the docking connector on the dock.

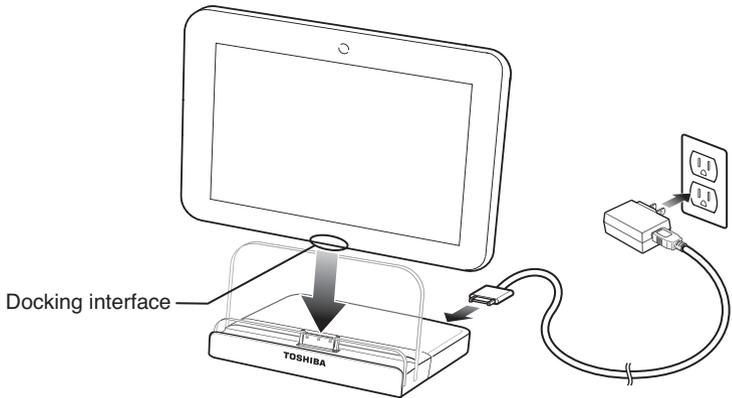

(Sample Illustration) Aligning the docking interface with the docking connector

NOTE

Not all USB devices are compatible. Check with the manufacturer of the USB device for compatibility.

Chapter 5

Utilities

Your device includes several utilities designed to help you reconfigure your system to best meet your individual needs. Together, these allow you to ascertain certain system details, set additional options, or change default options. These utilities are described in this chapter.

NOTE The utilities described in this chapter, and the icons shown in the sample images are applicable only if the related utility is available on your system.

- ❖ TOSHIBA Service Station
- ❖ TOSHIBA File Manager Utility
- ❖ TOSHIBA Adaptive display

TOSHIBA Service Station


The TOSHIBA Service Station utility provides you with updates for both application and system software. It notifies you when new versions of your system software are available, and then prompts you to download and install them.

To open TOSHIBA Service Station:

- 1 Touch the **Apps**  icon.


2 Touch the **Service Station** () icon.

The TOSHIBA Service Station screen appears.

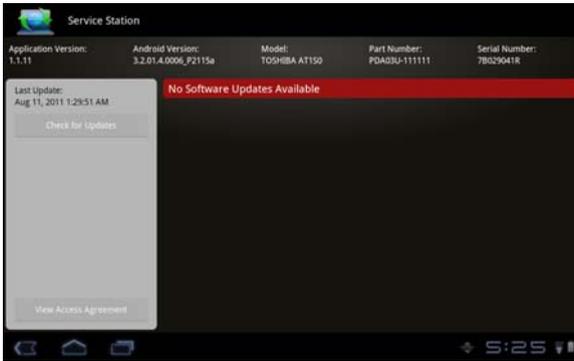

(Sample Image) TOSHIBA Service Station screen

The first time TOSHIBA Service Station is run, you will be prompted to accept the access agreement. This agreement authorizes the utility to collect certain basic information about your device and send it to the Toshiba servers as part of the process of obtaining updates.

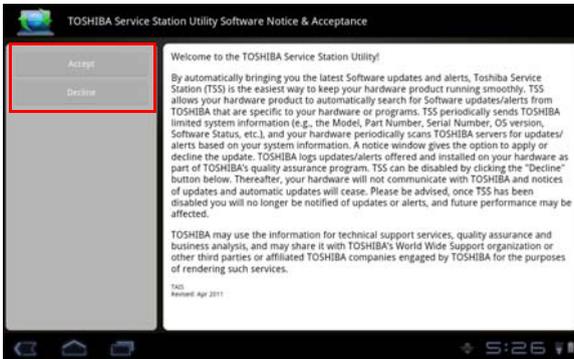

(Sample Image) TOSHIBA Service Station Acceptance screen

Touch the **Accept** button (recommended) to accept the agreement or touch the **Decline** button to decline.

NOTE

The TOSHIBA Service Station utility will not be able to notify you of new software and application updates if you choose to decline the agreement.

The main screen of this application includes the following areas:

- ❖ **Header**—This section runs along the top of the screen and contains basic information about your system, such as the version of the OS, the device part number, and serial number.
- ❖ **Buttons**—Buttons are displayed on the screen. Depending on the actions you have available, the buttons will vary.
- ❖ **Information**—The main part of the screen displays information, such as the list of available updates, or more detailed information about each specific update.

Check for application updates

During normal operations, the TOSHIBA Service Station will periodically check for updates to your system. This is done automatically. You will be notified with the **TOSHIBA Service Station** icon in the Status bar when new updates become available.

You can also check for updates manually. Touch the **Check for Updates** button. The application will refresh the list of available updates.

NOTE Connect the USB/AC adaptor before updating.

Downloading updates

NOTE Toshiba strongly recommends that you back up your data and settings before downloading updates.

Touch the **TOSHIBA Service Station** () icon in the Status bar when an update becomes available to display additional information about that item. To download the update, touch the **Download** button. The update begins to download and displays a progress indicator in the Notification bar.

NOTE Touch the Home () button to allow the download to continue while you use your tablet. A notification of download completion appears in the Status bar.

To discontinue the download process, touch the Back () button.

Installing updates

Once an update has been successfully downloaded, it can be installed.

- 1 Touch the **Download completion** notice on the Status bar.
- 2 Touch the **Install** button.
The application installer launches.
- 3 Confirm the installation to continue.

Downloading and installing System updates

TOSHIBA Service Station downloads both application and system updates. System updates require the device to be rebooted during the update process.

Installing a system update is similar to an application update, however you will be reminded that the device will automatically reboot during the update process. Make sure to close any applications and save all data prior to installing a system update.

CAUTION


Do not interrupt or turn off your tablet during a system update once it has begun. Data loss may occur.

TOSHIBA File Manager Utility

Using the TOSHIBA File Manager, you can back up your data to a Micro SD™ Card.

- 1 Insert a Micro SD™ Card into the Micro SD™ Card slot on your tablet. For more information, see [“Using a Micro SD™ Card” on page 80](#).
- 2 Touch the **Apps** ( Apps) icon.
- 3 Touch the **File Manager** () icon.

The TOSHIBA File Manager screen appears.

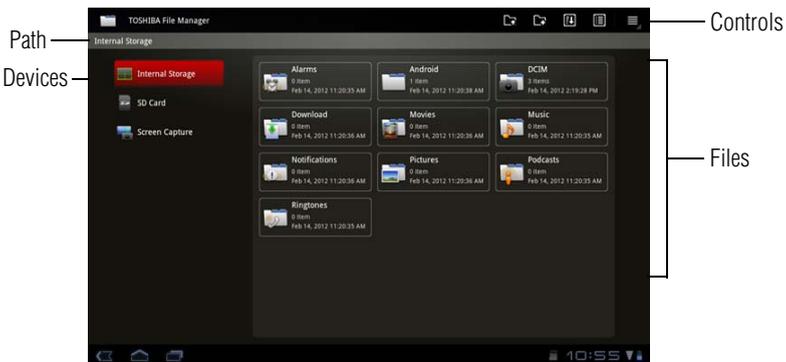

(Sample Image) TOSHIBA File Manager screen

- 4 Make sure **Internal Storage** () is selected at the top left of the screen.
- 5 Touch and hold a file or folder to enter selecting mode. Then touch the files/folders you wish to back up, or touch **Select All** from the **selected items count** drop-down menu located at the top left corner of the screen.



(Sample Image) TOSHIBA File Manager Select items count menu

The specific file or folder you have selected will highlight with a red checkbox in the upper right hand corner to signify that it has been selected for manipulation. All the other files and folders on the screen will also now have a checkmark in the upper right hand corner however they will remain grayed-out until specifically selected.



(Sample Image) TOSHIBA File Manager - files checked

At this time you can touch individual files and folders with the grayed-out checkmarks to select them.

- 6 Touch the **Copy** button () in the action bar located at the top right corner of the screen.
- 7 Touch the **SD Card** () icon from the device icons on the left of the screen to select the Micro SD™ card.

Touching the **SD** () icon displays the file/folder content on the Micro SD™ Card.

- 8 Select the folder you want to copy the files/folders to, and then touch the **Paste** icon () in the action bar located at the top right corner of the screen.

The files are copied to the Micro SD™ Card.

File browsing screen

The available options in the File browsing screen are:

- ❖ **Device**—Internal storage and Micro SD™ Card are displayed.

- ❖ **Path**—The device name is displayed on the left side of the screen, and the relative path is displayed on the right.
- ❖ **File**—Files/folders are listed in multi-columns with thumbnails showing the file information, such as name, modified date/time, etc. The selected files/folders are tagged in red.
- ❖ **Action bar**—You can create folders, change views and manipulate files from this menu bar.

Operation of files/folders

Touch and hold a file or folder to select it. This will change the action bar at the top of the screen to provide the options you can use for file or folder manipulation.

The available options are:

<i>Icon</i>	<i>Name</i>	<i>Description</i>
	Cut	Touch and hold the file or folder to select it. Touch the Cut icon to copy the file to the “virtual clipboard” and remove it from its current location.
	Copy	Touch and hold the file or folder to select it. Touch the Copy icon to copy the item to the “virtual clipboard”. Later you can use the “Paste” option to paste the item to the destination location of your choosing.
	Delete	Touch and hold the file or folder to select it. Touch the Delete icon to permanently delete the item from the location it is currently in. The system will prompt you to make sure this is what you want to do.
	Change View	This option allows the user to change the view from one in which items are shown in three columns and as many rows as needed to a single column list view.
	Options Menu	This option provides additional options based upon where you are in the process. As an example if have not yet selected any items the options are; Device Information, About and Help. If you have selected items the options become; Rename, Add to shortcut, Information and Help.

Rename files/folders

To rename a file/folder:

- 1 Touch and hold a file or folder to enter selecting mode.

- 2 Touch the options menu () icon.
- 3 Select **Rename** from the drop-down menu.
- 4 Type in the new name for the folder and touch **OK**.

Create folders

To create a new folder:

- 1 Choose the desired top directory in the File browsing screen.
- 2 Touch **Create a folder**.
A pop-up window appears.
- 3 Create a new folder name.
- 4 Touch **OK** to continue.

Storage structure

The following describes the function of each of the icons on the TOSHIBA File Manager screen:

<i>Icon</i>	<i>Name</i>	<i>Description</i>
	Internal storage	Displays the file content of the device's internal storage, (excluding system files).
	Micro SD™ Card	Displays the file content of the Micro SD™ Card that is inserted into the Micro SD™ Card slot.
	Screen Capture	Displays the file content of the screen captured images.

NOTE

To perform a screen capture, press the Back () and Home () buttons in the System bar simultaneously.

TOSHIBA Adaptive display

The Toshiba Adaptive display provides an enhanced visual experience in varying locations and conditions. It automatically adjusts the display brightness and gamma based on ambient light. It also automatically adjusts locally stored pictures and video content for optimal viewing.

Chapter 6

If Something Goes Wrong

Some problems you may encounter when using your tablet are relatively easy to identify and solve.

This chapter aims to help you solve many problems by yourself. It covers the problems you are most likely to encounter.

If all else fails, contact Toshiba. You will find information on Toshiba's support services at the end of this chapter.

Problems when you turn on the device

These problems may occur when you turn on the power.

The device will not start.

Make sure you attached the USB/AC adaptor and power/docking connector cord properly.

If you are using the USB/AC adaptor, check that the wall outlet is working by plugging in another device, such as a lamp.

Verify that the device is on by looking at the ON/OFF indicator. If the indicator is glowing, the device is on. Also, try turning the device off and then on.

The device starts but when you touch an icon nothing happens.

Your device may have an application or resource conflict. Try shutting down and restarting.

The operating system is not working

Once you are familiar with the Home screens and used to the way the operating system responds, you can easily detect if the it is not working correctly. For example:

- ❖ The operating system responds differently from the normal routine
- ❖ Screens and apps take a long time to load
- ❖ The screen does not look right

Unless a hardware device has failed, problems usually occur when you change the system in some way such as installing a new app or adding an external device.

Most issues are solved by “recycling the system” turning it off then back on. If this does not resolve the issue, try uninstalling the most recently installed application or disconnecting the most recently installed accessory. If this still does not resolve the issue, use the About tablet setting to check for available system updates. For more information, see “About tablet” on page 74.

Internet problems

My Internet connection is very slow.

Many factors contribute to the speed with which you can surf the Internet. They include: network speed, network conditions, time of day (when everyone else is surfing, your access can be slow) and popularity of the sites you are trying to access. If accessing a particular site is very slow, try later.

My browser cannot find the URL address I typed in.

Check the spelling of each name and the syntax of the address carefully. A single incorrect letter or missed character will make it impossible for your browser to locate the site.

My browser cannot find a site I bookmarked.

The World Wide Web is constantly changing. A site you bookmarked yesterday may not be available today or its server may be down for temporary repair. Try again later.

Power and the batteries

Your device receives its power through the USB/AC adaptor and power/docking connector cord or from the system battery. Power problems are interrelated. For example, a faulty USB/AC adaptor or power/docking connector cord will neither power the device nor recharge the batteries.

Here are some typical problems and how to solve them:

The Power light does not come on when you plug in the USB/AC adaptor and power/docking connector cord.

Make sure the USB/AC adaptor and power/docking connector cord are firmly plugged into both the wall outlet and the device.

If the Power light still does not come on, check that the wall outlet is working properly by plugging in a lamp or other appliance.

The USB/AC adaptor and power/docking connector cord work correctly, but the battery will not charge.

The battery does not charge while the device is consuming full power. Try turning off the device.

The battery may be too hot or too cold to charge properly. If you think this is the probable cause, let the battery reach room temperature and try again.

If the battery light does not glow after a few minutes, the battery may have reached the end of its useful life.

The device does not power on.

Let the battery discharge completely, then try charging it again.

Check the power options. For more information, see [“Optimizing battery life” on page 27](#). Is your software using the internal storage drive more? Is the display power set to turn off automatically? Was the battery fully charged to begin with? All these conditions affect how long the charge lasts.

If the device still does not power on, contact your service provider immediately.

After a period of time, the battery will lose its ability to perform at maximum capacity and will need to be replaced. This is normal for all batteries.

For more information on maintaining battery power, see [“Charging the battery” on page 26](#).

Display problems

Here are some typical display problems and their solutions:

The screen does not look correct.

You can change the display settings by touching the **Settings**  icon on the Home screen. For more information, see [“Screen settings” on page 61](#).

Small bright dots appear on your screen when you turn on your device.

Small bright dots may appear on your screen display when you turn on your device. Your display contains an extremely large number of thin-film transistors (TFT) and is manufactured using high-precision technology. Any small bright dots that may appear on your display are an intrinsic characteristic of the TFT manufacturing technology.

The screen does not appear as bright as it used to be

Over a period of time, and depending on the usage of the device, the brightness of the screen will deteriorate. This is also an intrinsic characteristic of the screen technology. When the device is operated on battery power, the screen will dim and you may not be able to increase the brightness of the screen while on battery power.

Sound system problems

The sound settings can be configured to your desired user preferences. For more information, see [“Sound settings” on page 60](#).

No sound is coming from the device’s speakers.

Adjust the volume control.

If you are using external headphones, speakers, or a headset, check that they are securely connected to your device.

Wireless networking problems

NOTE This section provides general troubleshooting tips for networking problems, specifically wireless (Wi-Fi®) networking.

The terms and concepts used assume a basic understanding of networks, and may be for more advanced users. If you need assistance or if you are not familiar with the terminology, please contact Toshiba.

- ❖ Your device is equipped with an internal Wi-Fi® adapter. Verify that your Wireless connection is enabled. For more information, see [“Setting up Wi-Fi® and Bluetooth® connections” on page 34](#).
- ❖ Verify that your device can detect access points or routers. If it can detect a Wi-Fi® access point or router then it may be a configuration issue.
- ❖ Verify that the signal strength is good.

- ❖ If another device is on the same network, verify that it has network access, and can connect to the Internet. If, for example, the other device cannot browse to a public Web site, the ISP's (Internet Service Provider) service may be disrupted.
- ❖ Verify that the Service Set Identifier (SSID), or network name, is correct - i.e., that it matches the SSID assigned to the access point you are attempting to connect through. SSIDs are case-sensitive.
- ❖ If you have enabled any security provisions (closed system, MAC address filtering, Wired Equivalent Privacy [WEP], etc.), check the access point vendor's Web site for recent firmware upgrades. Problems with WEP keys, in particular, are frequently addressed in new firmware releases.

If you need further assistance

If you have followed the recommendations in this chapter and are still having problems, you may need additional technical assistance. This section contains the steps to take to ask for help.

Before you contact Toshiba

Since some problems may be related to the operating system or the program you are using, it is important to investigate other sources of assistance first.

Try the following before you contact Toshiba:

- ❖ Review the troubleshooting information.
- ❖ If the problem occurs while you are running a program, consult the program's documentation for troubleshooting suggestions. Contact the software company's technical support group for their assistance.
- ❖ Consult the dealer from whom you purchased your device and/or program. Your dealer is your best source for current information.

For the detailed specifications for your device, visit tabletsupport.toshiba.com.

Contacting Toshiba

Toshiba's Technical Support Web site

For technical support, or to stay current on the most recent software and hardware options for your device, and for other product

information, be sure to regularly check the Toshiba Web site at tabletsupport.toshiba.com.

Other Toshiba Internet Web sites

toshiba.com	Worldwide Toshiba corporate site
us.toshiba.com	Marketing and product information in the USA
accessories.toshiba.com	Accessories information in the USA
www.toshiba.ca	Canada
www.toshiba-Europe.com	Europe
www.toshiba.co.jp/index.htm	Japan
support.toshiba.com	Mexico and all of Latin America
acclaim.toshiba.com	Toshiba USA Self-Service support web site
laptopforums.toshiba.com	Community discussion forums for Toshiba laptop users

Toshiba's worldwide offices

Australia

Toshiba (Australia) Pty. Limited
84-92 Talavera Road
North Ryde NSW 2113
Sydney
Australia

France

Toshiba Systèmes (France) S.A.
7, Rue Ampère; B. P. 131
92800 Puteaux Cédex
France

Italy

Centro Direzionale Colleoni
Palazzo Perseo
Via Paracelso 10
20041, Agrate Brianza
Milano, Italy

Canada

Toshiba Canada Ltd.
191 McNabb Street
Markham, Ontario
L3R - 8H2
Canada

Germany

Toshiba Europe GmbH
Leibnizstraße 2
D-93055 Regensburg
Germany

Japan

Toshiba Corporation, PCO-IO
1-1, Shibaura 1-Chome
Minato-Ku, Tokyo, 105-8001
Japan

Latin America and Caribbean

Toshiba America Information
Systems, Inc
9740 Irvine Boulevard.
Irvine, California 92618
United States

Spain

Toshiba Information Systems
(España) S.A.
Parque Empresarial San Fernando
Edificio Europa, 1a Planta
Escalera A
28831 (Madrid) San Fernando de
Henares
Spain

United States

Toshiba America Information
Systems, Inc.
9740 Irvine Boulevard
Irvine, California 92618
United States

Mexico

Toshiba de México S.A. de C.V.
Sierra Candela No.111, 6to. Piso
Col. Lomas de Chapultepec.
CP 11000 Mexico, DF.

United Kingdom

Toshiba Information Systems
(U.K) Ltd.
Toshiba Court
Weybridge Business Park
Addlestone Road
Weybridge, Surrey KT15 2UL
United Kingdom

The Rest of Europe

Toshiba Europe (I.E.) GmbH
Hammfelddamm 8
D-4-1460 Neuss
Germany

For more information on additional Toshiba worldwide locations,
please visit: www.toshiba.co.jp/index.htm.

Appendix A

Power Cord/Cable Connectors

 
Your device ships with the correct power supply for the country of purchase. This appendix shows the shapes of the typical AC power cord/cable connectors for various parts of the world.

USA



UL approved

Canada



CSA approved

United Kingdom



BS approved

Europe



VDA approved
NEMKO approved

Australia



AS approved

Glossary



TECHNICAL NOTE: Some features defined in this glossary may not be available on your device.

Acronyms

The following acronyms may appear in this User's Guide.

AC	Alternating Current
Apps	Applications
bps	bits per second
CPU	Central Processing Unit
DC	Direct Current
DPI	Dots Per Inch
EPROM	Erasable Programmable Read-Only Memory
FCC	Federal Communications Commission
GB	gigabyte
GPS	Global Positioning System
HDD	Hard Disk Drive
HDMI	High-Definition Multimedia Interface
HTML	Hypertext Markup Language

IEEE	Institute of Electrical and Electronics Engineers
I/O	Input/Output
IRQ	interrupt request
ISP	Internet Service Provider
KB	kilobyte
LCD	Liquid Crystal Display
LED	Light Emitting Diode
MB	megabyte
RAM	Random Access Memory
RFI	Radio Frequency Interference
ROM	Read-Only Memory
RTC	Real-Time Clock
SD	Secure Digital
TFT	Thin Film Transistor
USB	Universal Serial Bus
URL	Uniform Resource Locator
WAN	Wide Area Network
www	World Wide Web
WLAN	Wireless Local Area Network

Terms

The following terms may appear in this User's Guide.

A

active-matrix display—A liquid crystal display (LCD) made from an array of liquid crystal cells using active-matrix technology. Also known as a “TFT display,” in its simplest form there is one thin film transistor (TFT) for each cell. This type of display works well with tablet devices because of its shallow depth and high-quality color. Active-matrix displays are viewable from wider angles than most passive-matrix displays.

adapter—A device that provides a compatible connection between two units. For example, the tablet’s internal display adapter receives information from the software and translates it into images on the screen. An adapter can take a number of forms, from a microprocessor to a simple connector. An intelligent adapter (one that is capable of doing some processing) may also be called a controller.

Alternating Current (AC)—The type of power usually supplied to residential and commercial wall outlets. AC reverses its direction at regular intervals. Compare *Direct Current (DC)*.

application—A set of instructions that can be executed by a tablet.

App shortcut—An application icon that can be placed on a Home screen. Touching one opens the app without having to first open the Apps screen. See also *icon*.

B

backup—A copy of a file, usually on a removable disk, kept in case the original file is lost or damaged.

baud rate—The speed at which a communication device, such as a printer or modem, transmits information. Baud rate is the number of signal changes per second (not necessarily the same as bits per second). See also *bits per second*.

bits per second (bps)—A way of measuring the speed at which information is passed between two devices. This is the basic unit of measure used in modem communications, and is similar, but not identical, to the baud rate. See also *baud rate*.

Bluetooth—A proprietary open wireless technology standard that uses short wavelength radio transmissions to exchange data over short distances. Bluetooth can transmit from fixed and mobile devices, and provides a high level of security.

Bookmark—A Shortcut can be created and placed on a Home screen from a selected browser bookmark. Touching the icon opens the Web browser to the chosen bookmarked page. See also *icon*.

boot—To start the tablet. The term “boot” originates from bootstrap program (as in “pulling itself up by its bootstraps”), a program that loads and initializes the operating system. See also *reboot*.

bus—An electrical circuit that connects the central processing unit (CPU) with other parts of the tablet, such as the video adapter, disk drives, and ports. It is the pathway through which data flows from one device to another. See also *bus speed*, *frontside bus*.

bus speed—The speed at which the central processing unit (CPU) communicates with the other parts of the tablet.

C

cache—A section of very fast memory in which frequently used information is duplicated for quick access. Accessing data from cache is faster than accessing it from the tablet's main memory. See also *CPU cache*.

Central Processing Unit (CPU)—The chip that functions as the “brain” of the tablet. It takes information from outside sources, such as memory or keyboard input, processes the information, and sends the results to another device that uses the information.

character—Any letter, number, or symbol you can use on the tablet. Some characters are non-printing characters, such as a paragraph break in a word-processing program. A character occupies one byte of tablet device storage.

chip—A small piece of silicon containing tablet device logic and circuits for processing, memory, input/output, and/or control functions. Chips are mounted on printed circuit boards.

compatibility—The extent to which tablets, programs, or devices can work together harmoniously, using the same commands, formats, or language as another.

configuration—(1) The collection of components that make up a single tablet operating system. (2) How parts of the system are set up (that is, configured).

controller—A device that controls the transfer of data from a tablet device to a peripheral device and vice versa. For example, disk drives, monitors, keyboards, and printers all require controllers.

CPU—See *Central Processing Unit (CPU)*.

CPU cache—A section of very fast memory residing between the CPU and the tablet's main memory that temporarily stores data and instructions the CPU will need to execute commands and programs. See also *cache*.

cursor—An on-screen symbol (usually a flashing vertical line) that indicates the position where characters will appear when you enter data.

D

default—The setting selected by a program when the user does not specify an alternative setting.

device—A component attached to the tablet. Devices may be external (outside the tablet’s case) or internal (inside the tablet’s case). Printers, disk drives, and modems are examples of devices.

device driver—A program (called a “driver”) that permits the tablet to communicate with a device.

Direct Current (DC)—The type of power usually supplied by batteries. DC flows in one direction. Compare *Alternating Current (AC)*.

disable—To turn the option off. See also *enable*.

disk drive—The device that reads and writes information and programs on external media or hard disk. It rotates the disk at high speed past one or more read/write heads.

document—Any file created with an application and, if saved to disk, given a name by which it can be retrieved. See also *file*.

download—(1) In communications, to receive a file from another source through a network. (2) To send font data from the tablet to a printer. See also *upload*.

drag—To touch and hold an item for a moment and then, without lifting your finger, move the item until you reach the target position.

driver—See *device driver*.

E

emulation—A technique in which a device or program imitates another device or program.

enable—To turn on an option. See also *disable*.

executable file—A program that is ready to run. Application programs and batch files are examples of executable files. Names of executable files usually end with a .bat, .exe, or .apk extension.

expansion device—A device that connects to a tablet to expand its capabilities. Other names for an expansion device are port expander, port replicator, docking station, or network adapter.

extension—See *file extension*.

external device—See *device*.

F **file**—A collection of related information, saved on disk with a unique name. A file may be a program, information used by a program, or a document. See also *document*.

file name—A set of characters that uniquely identifies a file within a particular folder. It consists of two parts: the actual name and the file name extension. See also *file extension*.

file extension—The three characters following the period (pronounced “dot”) at the end of a file name. The extension indicates the type of file. Examples are .apk for application files and .pdf for documentation files. See also *file name*.

folder—A container for organizing files saved to a disk. A folder is symbolized on screen by a graphical image (icon) of a file folder. A folder can contain files and other folders.

G **ground**—A conductor to which all components of an electric circuit are connected. It has a potential of zero (0) volts, is connected to the earth, and is the point of reference for voltages in the circuit.

H **hard disk**—A storage device composed of a rigid platter or platters that can be magnetically coded with data. Hard disks hold much more information than some other external media and are used for long-term storage of programs and data. The primary (or only) hard disk in a tablet device is usually fixed.

hardware—The physical components of a tablet system. Compare *software*.

HDMI (High-Definition Multimedia Interface)—An interface used to transmit high quality audio and video signal via a single cable in digital format, providing better picture quality than analog signal.

hot swapping—The ability to add or remove devices from the tablet while it is running and have the operating system automatically recognize the change.

- I**
- icon**—A small image displayed on the screen that represents a function, file, or program.
- interlaced**—A method of refreshing the display screen, in which only every other line of pixels is refreshed. Interlaced screens take two passes to create a complete screen image. Compare *non-interlaced*.
- internal device**—See *device*.
- Internet**—The decentralized, world-wide network of computers that provides electronic mail, the World Wide Web, and other services. See also *World Wide Web*.
- L**
- LED (Light Emitting Diode)**—A solid state lamp (SSL) that uses light-emitting diodes (LEDs) as the source of light, which offers long life and high efficiency output. Multiple diodes are used together, since the light created by individual light-emitting diodes is small compared to incandescent and compact fluorescent lamps.
- LCD (Liquid Crystal Display)**—A type of display that uses a liquid substance between two transparent electrode panels. When an electric current passes through the electrodes, the molecules in the liquid form a crystalline pattern that polarizes the light passing through it. A filter over the electrodes permits only non-polarized light to pass to the surface of the display, creating light and dark pixels.
- M**
- memory**—Typically refers to the tablet's main memory, where programs are run and data is temporarily stored and processed. Memory can be volatile and hold data temporarily, such as RAM, or it can be nonvolatile and hold data permanently, such as ROM. A tablet's main memory is RAM. See also *RAM*, *ROM*.
- microprocessor**—See *Central Processing Unit (CPU)*.
- motherboard**—The computer's main circuit board that contains the processor, memory, and other primary components.
- mount**—To initialize the external storage device for transferring and storing files.
- multimedia**—A combination of two or more media, such as sound, animation, and video in an application or presentation.

- N** **network**—A collection of computers and associated devices that are connected by communications facilities. A network allows you to share data and peripheral devices, such as printers, with other users and to exchange electronic mail.
- non-interlaced**—A method of refreshing the tablet screen, in which each pixel of every line is refreshed as the electron beam scans across and down the screen. Compare *interlaced*.
- O** **online**—Available through a computer. Online may refer to information being read from your own computer's internal storage drive, such as online documentation or online Help, or to information coming from another company on a company network or the Internet.
- operating system**—A set of programs that controls how the tablet device works.
- P** **password**—A unique string of characters entered by a user to verify his or her identity to a computer or the network.
- peripheral**—Any device, such as a mouse or keyboard, that is attached to the tablet and controlled by the tablet's CPU.
- pixel**—Short for "picture element." The smallest dot that can be produced on a screen or printer.
- Plug and Play**—Generally, refers to the tablet's ability to automatically configure itself to work with peripheral devices. When capitalized, refers to a standard that, when followed by a device manufacturer, allows the tablet to configure itself automatically to work with the device.
- port**—A socket on the tablet where you plug in a cable for connection to a peripheral device.
- processor**—See *Central Processing Unit (CPU)*.
- properties**—The attributes of an object or device. For example, the properties of a file include the file's type, size, and creation date.
- R** **RAM (Random Access Memory)**—*Volatile* memory that can be written to as well as read. *Volatile* here means that information in RAM is lost when you turn off your tablet. This type of memory is used for your tablet's main memory. See also *memory*. Compare *ROM*.
- Random Access Memory**—See *RAM*.

Read-Only Memory—See *ROM*.

reboot—See *boot*, *restart*.

removable disk—A disk that can be removed from a disk drive. A Flash drive is one example of a removable disk.

resolution—A measure of the sharpness of the images that can be produced by a printer or displayed on a screen. For a printer, resolution is expressed in dots per inch (dpi). For a screen, it is expressed as the number of pixels available horizontally and vertically.

restart—Synonymous with reboot. To reset the tablet by reloading the operating system without turning the tablet off. See also *boot*.

ROM (Read-Only Memory)—Non-volatile memory that can be read but not written to. *Non-volatile* here means that information in ROM remains whether or not the tablet is receiving power. This type of memory is used to store your tablet's BIOS, which is essential instructions the tablet reads when you start it up. See also *BIOS*, *memory*. Compare *RAM*.

S

Secure Digital (SD)—A small, portable, non-volatile memory card used to store and transfer data between digital products, providing encryption capability for content security.

select—To highlight or otherwise specify text, data, or graphics with the intent to perform some operation on it.

shortcut—See *Application shortcut*.

Sleep—A feature of some operating systems that allows you to turn off the tablet without exiting your open applications and to continue from where you left off when you turn the tablet on again.

software—See *application*. Compare *hardware*.

Swipe—To move your finger quickly across the surface of the screen without pausing.

Sync—To synchronize files and data or accounts so that the same information is shared in multiple places.

T

TFT display—Thin Film Transistor display. See *active-matrix display*.

Touch—To activate items displayed on the screen, such as apps, setting icons, and onscreen buttons by touching them with your finger.

Transfer—To move files or data from one location to another.

U

unmount—To prepare the external storage media for removal from the device.

upload—To send a file to another computer through a modem or network. See also *download*.

utility—A computer program designed to perform a narrowly focused operation or solve a specific problem. Utilities are often related to computer system management.

W

Wallpaper—is a background image downloaded from the Web or chosen from the Gallery (pictures taken with the camera, or still images included with the system). A live wallpaper is an animated scene or maybe a map that centers on the current location.

Web—See *World Wide Web*.

Widget—A miniature app that can be placed on a Home screen. Touching the icon opens the application. Many of these include a clock, a music player, and the Google™ Search bar. See also *icon*.

Wi-Fi®—A registered trademark term of the Wi-Fi Alliance that stands for Wireless Fidelity, and is another term for the communication protocol to permit an Ethernet connection using wireless communication components.

World Wide Web (www)—The worldwide network of Web sites linked together over the Internet. A user of the Web can jump from site to site regardless of the location of the tablet hosting the site. See also *Internet*.

Index

A

about tablet

- battery use 72
- legal information 72
- settings 71
- status 72
- system updates 72

accounts

- manage 48
- sync 48

accounts & sync

- account screen 67
- auto-sync 66
- background data 66
- manage accounts 67
- settings 66

adding

- optional external devices 82

airplane mode

- wireless & networks 59

animation

- screen settings 62

applications

- settings 65

applications settings

- battery use 66
- manage applications 65
- running services 65
- storage use 66

Apps 74

apps

- icon 53
- Latitude 50
- Maps 50
- menu 53
- Navigation 50
- open 53
- Places 50
- preinstalled 74
- uninstalling 75

apps menu

- apps 53

audible selection

- sound settings 61

automatic date & time

- date & time settings 71

automatic time zones

- date & time settings 71

auto-sync

- account screen 67
- accounts & sync 66
- manage accounts 67

B

back camera 80

- indicator light 22

background data

- accounts & sync 66

backing up data 20

backup data 35

- Google™ Account 35
- TOSHIBA File Manager 35

battery

- care 27, 28
- charge indicator light 26
- charging 26
- maintaining 28
- monitoring power 26
- optimizing battery life 27
- safety precautions 27
- taking care of 27

battery use

- about tablet 72
- applications settings 66

Bluetooth®

- setting up 34
- wireless & networks 59

button

- power 29

buttons

- buttons and features 36
- power button 23
- screen rotation lock/unlock switch 23
- volume control 23

C

camera

- back camera 22
- front camera 22

cameras

using 80

caring for your device 52

charging the battery 26

cleaning the device 52

clear storage

location & security 65

configure input methods

language & input settings 70

configure lock screen

location & security 63

connecting

HDMI®-compatible TV or display device 83

power source 25

power/docking connector cord 26

USB/AC adaptor 24

USB/AC adaptor cord to power/docking connector 25

current input method

language & input settings 69

customize

device settings 53

D

data

- backing up 20, 35
- restoring 36

date & time

settings 71

date & time settings

- automatic date & time 71
- automatic time zone 71
- Select date format 71
- select time zone 71
- set date 71
- set time 71
- Use 24-hour format 71

date and time

setting up 32

device

- caring for 52
- cleaning 52

- disposal 28
 - turning off 46
 - turning off options 46
- device administrators
 - settings 64
- device will not start
 - troubleshooting 93
- devices
 - external 83
- disposal information 10
- disposing of the device 28
- docking connector 24
- docking station
 - connecting to 84
 - using 83
- downloads
 - managing 50
- E**
- encrypt tablet
 - location & security 64
- external device
 - Micro USB port 83
- external devices
 - keyboard 82
 - mouse 82
 - ports 83
- external display device
 - HDMI® Out port 83
- external headphones
 - using 79
- external speakers
 - using 79
- F**
- factory data reset 51
- features 18
 - features and components 21
 - other documentation 18
 - this guide 17
- features and components
 - back view 22
 - bottom view 24
 - front view 22
 - left side view 23
 - right side view 23
 - top view 24
- files/folders
 - operation 91
- first time use 29
- front camera 80
- G**
- Gmail icon 39
- Google™ Apps
 - Android Market™
 - downloading 74
- GPS
 - location & security 63
- H**
- HDMI® Out port 24
- headphone jack 23
- Home screen
 - adding items 45
 - moving items 45
 - removing items 45
- Home screens
 - apps 38
 - bookmarks 38
 - customizing 44
 - icons 38
 - thumbnails 38
 - widgets 38
- I**
- icon
 - apps 53
 - Gmail 39
 - safety 17
 - settings 53
- input method selector
 - language & input settings 70
- K**
- keyboard, external 82

L

- language & input
 - settings 68
- language & input settings
 - configure input methods 70
 - current input method 69
 - input method selector 70
 - select language 68
 - text-to-speech settings 69
 - user dictionary 69
 - voice recognizer settings 69
- LEDs
 - power light 26
 - system indicator lights
 - battery light 26
- legal information
 - about tablet 72
- Licenses 10
- light
 - power 23
- lights
 - back camera indicator light 22
- location & security
 - clear storage 65
 - configure lock screen 63
 - encrypt tablet 64
 - GPS 63
 - location for Google 63
 - owner info 63
 - secure credentials 64
 - set password 64
 - settings 63
 - visible passwords 64
 - wireless networks 63
- location for Google
 - location & security 63
- location preferences
 - setting up 31

M

- maintaining your battery 28
- manage

- accounts 48
- manage applications
 - applications settings 65
- managing
 - downloads 50
- Micro SD™ Card
 - using 80
- Micro USB port 23
- microphone Line-In jack 23
- mouse, external 82
- multimedia
 - settings 62

N

- Navigation and features 36
- navigation buttons 40
- notifications
 - managing 41
 - notification bar 41
 - viewing new 42

O

- online resources
 - Toshiba 20
- onscreen keyboard
 - speaking 79
 - typing 77
 - using 76
- operating system
 - troubleshooting 94
- optimizing battery life 27
- optional external devices
 - adding 82
- other documentation 18

P

- ports
 - docking connector 24
 - external devices 83
 - HDMI® 83
 - HDMI® Out port 24
 - headphone 23
 - Micro USB 23

- Micro USB port 83
- microphone Line-In 23
- SD™ Card 24
- power
 - connecting cable to USB/AC adaptor 25
 - cord/cable connectors 100
 - power/docking connector cord 26
 - turning on 29
- power button 23, 29
- power indicator light 23
- power light
 - LEDs 26
 - power light 24
- precautions
 - safety 19
- preinstalled apps 74
- privacy settings
 - automatic restore 67
 - back up my data 67
 - backup account 67
 - factory data reset 68
 - settings 67
- Q**
- Quick Settings menu
 - settings 57
- R**
- recording sounds 80
- recovery
 - factory data reset 51
- registering your Toshiba device 35
- restoring your data 36
- running services
 - applications settings 65
- S**
- safety
 - disposing of the device 28
 - icons 17
 - precautions 19
- safety precautions
 - battery 27
- screen
 - screen auto-rotate 62
 - settings 61
- screen auto-rotate
 - screen 62
- screen brightness
 - screen settings 62
- screen rotation lock/unlock switch 23
- screen settings
 - animation 62
 - screen brightness 62
 - screen time-out 62
- screen time-out
 - screen settings 62
- SD™ Card reader
 - inserting memory media 81
 - removing memory media 81
- SD™ Card slot 24
- secure credentials
 - location & security 64
- securing your tablet 43
- Select date format
 - date & time settings 71
- select language
 - language & input settings 68
- select time zone
 - date & time settings 71
- service options
 - standard limited warranty 19
- set date
 - date & time settings 71
- set password
 - location & security 64
- set time
 - date & time settings 71
- setting up
 - USB/AC adaptor 24
- Settings
 - using Quick Settings 57
- settings
 - about tablet 71
 - accounts & sync 66

- applications 65
 - customize device settings 53
 - date & time 71
 - device administrators 64
 - icon 53
 - language & input 68
 - location & security 63
 - menu 53
 - multimedia 62
 - open 53
 - privacy settings 67
 - Quick Settings menu 57
 - screen 61
 - sound 60
 - storage 68
 - wireless & networks 58
 - settings menu
 - settings 53
 - setup
 - Bluetooth® 34
 - date and time 32
 - Google™ Account, sign in 32
 - language 30
 - location preferences 31
 - Wi-Fi® 34
 - Wi-Fi® connection 30
 - Shut down mode
 - using 47
 - Sleep mode 48
 - using 48
 - waking the tablet 33
 - sound
 - settings 60
 - sound settings
 - audible selection 61
 - volume 61
 - sounds
 - recording 80
 - speakers 24
 - using 79
 - status
 - about tablet 72
 - storage
 - settings 68
 - storage use
 - applications settings 66
 - sync
 - accounts 48
 - sync accounts
 - add an account 49
 - remove an account 49
 - System bar
 - Apps button 40
 - Customize button 40
 - Google™ Search 40
 - navigation buttons 40
 - notification icons 40
 - status icons 40
 - time 40
 - system indicator lights
 - LEDs 26
 - system updates
 - about tablet 72
- T**
- taking care of battery 27
 - text-to-speech settings
 - language & input settings 69
 - this guide
 - features 17
 - Tips
 - file management tips 20
 - Toshiba
 - online resources 20
 - worldwide offices 98
 - Toshiba App Place™
 - downloading apps 73
 - Toshiba Apps Place
 - Media Player 73
 - TOSHIBA File Manager Utility
 - file browsing 90
 - files/folders 91
 - rename files/folders 91
 - TOSHIBA Service Station

- Application updates 88
 - download updates 88
 - install updates 88
 - tablet system updates 89
- touch screen navigation
 - onscreen 39
- troubleshooting 95
 - bookmarked site not found 94
 - contacting Toshiba 97
 - device will not start 93
 - display problems
 - screen is blank 95
 - operating system not working 94
 - power and batteries 94
 - screen does not look correct/
flickers 95, 96
 - slow Internet connection 94
 - sound system 96
 - touch screen will not respond 93
 - URL address not found 94
 - wireless networking 96
- turning off
 - device 46
 - options 46
- turning on
 - power 29
- U**
- uninstalling apps 75
- USB/AC adaptor 24
- Use 24-hour format
 - date & time settings 71
- user dictionary
 - language & input settings 69
- using Quick Settings
 - Settings 57
- Utilities 86
 - TOSHIBA Adaptive display 92
 - TOSHIBA File Manager Utility
 - 89
 - TOSHIBA Service Station 86

V

- visible passwords
 - location & security 64
- voice recognizer settings
 - language & input settings 69
- volume
 - sound settings 61
- volume control buttons 23

W

- waking the tablet 33
- wallpaper
 - customize background 46
- warranty
 - standard limited warranty 19
- Wi-Fi®
 - setting up 34
 - wireless & networks 59
- Wi-Fi® connection
 - setting up 30
- wireless & networks
 - airplane mode 59
 - Bluetooth® 59
 - settings 58
 - Wi-Fi® 59
- wireless networking
 - troubleshooting 96
- wireless networks
 - location & security 63