

QUICK START

encore[®] 2 *write*

TOSHIBA
Leading Innovation >>>

Check the components

Your device comes with:

- USB/AC Adaptor
 - USB power cable
 - Documentation, including this Quick Start document
- and a Standard Limited Warranty
- Other components, depending upon model

California Prop 65 Warning

▲ WARNING This product contains chemicals, including lead, known to the State of California to cause cancer and birth defects or other reproductive harm. ***Wash hands after handling.***

▲ WARNING Do not use this device while driving.

▲ CAUTION The screen is made of glass so avoid contact with sharp, rough, or abrasive objects or substances as screen may break or scratch if not handled properly. If you see a crack in the glass, discontinue use of the device to avoid injury.

Note: Your device contains a rechargeable battery that may need to be charged prior to use.

Note: The device's battery is not accessible by the user.

Notice

- Certain device chassis are designed to accommodate all possible configurations for an entire product series. Your select model may not have all the features and specifications corresponding to all of the icons or switches shown on the device chassis, unless you have selected all those features.
- **Subject to Change.** Product specifications, configurations, prices, system/component/options availability are all subject to change without notice.

Getting started

Connect to a power source

Assemble the AC/USB adaptor and the USB power cable and then connect it to your device and a live electrical outlet. You are now ready to start using your device. You can also charge your device by connecting the USB power cable to a USB port on your device. Make sure your device is turned ON while charging via USB. If your device is turned OFF, depending on device specifications, the tablet battery may discharge. We recommend that you do not use your tablet while charging via USB as auto shutdown may occur if the battery charge is too low.

Connect to the Internet

Connect to a network to take full advantage of your device's features.

Backup your device

 
It is strongly recommended that you create a back up of your device before using it for the first time. This will enable you to return it to its out-of-box state, if necessary.

Register your device

Enhance your ownership experience by taking a few minutes to register your Toshiba Product at **register.toshiba.com**. Completing Product registration allows Toshiba to provide you with Product information updates, special offers and promotions. Failure to complete Product registration will not diminish your rights under the Standard Limited Warranty.

Quick Tour

Front

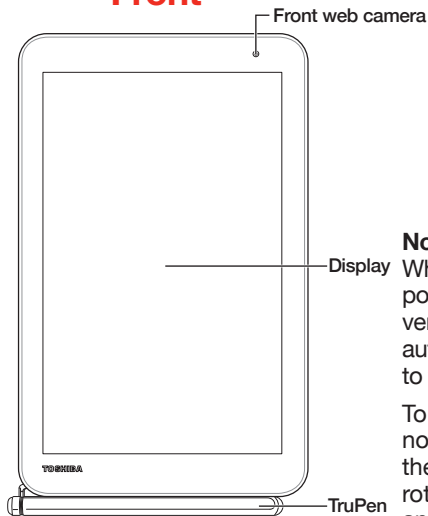


Note:

When you rotate the device from portrait to landscape (or vice versa), the screen orientation automatically changes according to the rotation angle.


To lock the screen so that it does not rotate automatically, orient the device in the desired screen rotation (portrait or landscape) and do the following steps:

1. Swipe in from the right edge to reveal the charms.
2. Touch the **Settings** charm.
3. Touch the **Screen** icon.
4. Touch the **auto-rotate** icon.

 Back

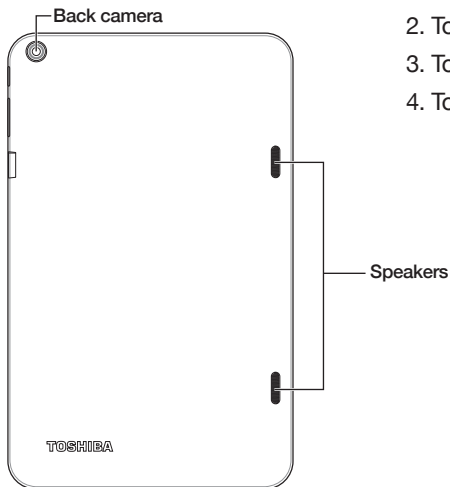


Top

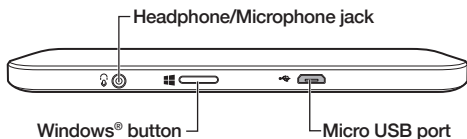 

Bottom



 Right

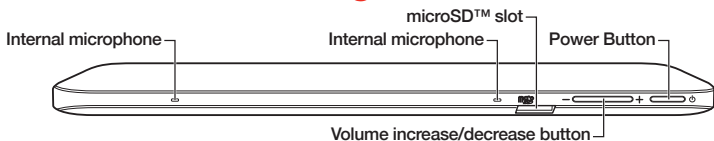

TruPen

Erase button (for TruNote™) Right click button



 
Note:

To avoid draining the TruPen battery, place the cap over the tip when not in use.

Navigation


The Start screen contains tiles that are shortcuts to your apps and programs. Swipe up from the bottom edge or swipe down from the top edge and select **All apps** to see more.

Navigation

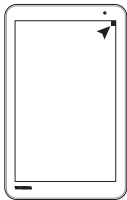

Sample Image

 Swipe in from the right edge of the screen to reveal the charms.




Search – Allows you to locate items (apps, photos, music, documents) on your device

Share – Allows you to share items (links, photos, and more)

Start – Takes you to the Start screen or, if you're already on the Start screen, returns you to your last app

Devices – Allows you to manage your hardware

 Settings – Allows you to access your device's settings (volume, brightness, connecting to the internet, and more)



Internet connectivity

1. Swipe in from the right edge of the screen. When the Windows® charms appear, touch the **Settings**  charm.
2. Touch the **Wi-Fi**  icon. The Networks screen appears. Select your network. Touch **Connect**.
3. Enter the network security key (if applicable). Touch **Next**. Your device should be connected.

Note: To turn the wireless antenna ON/OFF, use the Airplane mode switch located in the Networks section.

Turn off your device

Swipe in from the right edge to reveal the charms.

Touch the **Settings**  charm.

Select **Power**  then **Sleep/Shut down/Restart**.

General Safety Instructions

Please read the following safety and operating instructions before using your Product. Keep the information near your Product for future reference.

To reduce the risk of fire, bodily injury and/or damage to your Product, please observe all of the following instructions:

AC Adaptor

Always use the Toshiba AC adaptor that was provided with your Product or as specified by Toshiba.

Circulation and Cooling

Allow sufficient air circulation around Product and AC adaptor during use and while charging the battery to ensure adequate cooling of the device. Prevent direct exposure to heat sources.

Cleaning

Unplug Product from the electrical outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. The injected combustible gas produced by these types of cleaners may remain inside of your product. The electrostatic spark from the motor or contact point of switch may ignite the gas residue, which could result in an explosion, fire, or burn injury. Instead use a lightly dampened cloth for cleaning in general and remove dust with a dry cloth.

Comfort Recommendations

When you use your Product, rest your eyes periodically and relax or stretch your muscles to avoid strain.

Viewing Recommendations

Some individuals may experience health-related complications when exposed to certain images or flashing lights (for example when playing videos or games). Discontinue use and consult a physician if you experience any health-related complications.

Choking Hazards

Keep Product away from small children. This Product is not a toy and may be hazardous to small children, for example, small detachable parts may be a choking hazard.

Disassembly

Do not disassemble, modify, tamper with or repair your Product.

Disposal

Dispose of Product or any components in compliance with all applicable laws.

Foreign Objects

Never push a foreign object through an opening in the Product. Never allow metal objects (such as screws, staples, or paper clips) to enter Product. This could cause a short circuit.

Heat

Keep Product away from radiators, stoves, heat sources or other equipment that produce heat.

Hot Surfaces

Allow the equipment's internal components and hot-pluggable drives to cool before touching them.

Operating Environment

Never expose your Product to excess heat, extremely low temperatures, sudden temperature variations, or dusty environments. This could cause system malfunction, loss of data or damage to Product.

Power Cables/Cords and Power Source

Always use power cables/cords and power sources that comply with the voltage and frequency specifications and requirements of the country of use.

Service Provider

Disconnect Product from the electrical outlet and take Product to an authorized Toshiba service provider if:

- AC adaptor or power cable/cord is damaged.
- Liquid has spilled into Product or an object (such as a screw, staple or paper clip) has entered Product.
- Product has been dropped, subject to shock or impact and/or damaged in some way.
- Noticeable signs of overheating, smoke, deformation, cracks, leaks or unusual odor occur.
- Service is needed on component inside compartments requiring opening or removal of covers.

Thunderstorm

Never operate your Product during a thunderstorm. An electrical surge caused by the storm may cause system failure, loss of data or hardware damage.

Wireless Functionalities

Turn off your Product and/or all wireless functionalities where electronic devices are regulated or controlled or when near a person with any medical electric devices.

Water and moisture

Do not use Product in a wet location. Do not connect/disconnect a power plug/cord with wet hands.

Need Help?

Most problems are easy to correct. Save time with one of these simple solutions.

Consult the electronic User's Guide (Internet connection required)

Start Screen

To access the electronic User's Guide through your Start screen

1. Touch the **TOSHIBA Central**  tile/icon

2. Touch **User's Guide**

Note: The User's Guide will be automatically downloaded and saved on your device so that you can access it at a later time. The User's Guide opens in the default PDF reader software; you may be required to complete a setup process.

For solutions to the most common problems, refer to the "If Something Goes Wrong" section of the User's Guide.

Visit Toshiba's Support Web site

Technical support is available online at Toshiba's Web site at **support.toshiba.com**. At this Web site, you will find answers for many commonly asked technical questions plus many downloadable software drivers, BIOS updates, and other downloads.

Encore and TruNote are trademarks of Toshiba America Information Systems, Inc. and/or Toshiba Corporation
HDMI, the HDMI Logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing, LLC.

Microsoft and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Secure Digital, SD, and microSD are trademarks or registered trademarks of SD-3C, LLC in the United States, other countries or both.

Wi-Fi® is a registered trademark of the Wi-Fi Alliance®.

All other brand and product names are trademarks or registered trademarks of their respective companies.

 Printed on recycled paper

TOSHIBA
Leading Innovation >>>



© 2014 Toshiba America Information Systems, Inc.

GMA501348010 • 11/14