


MEET YOUR FIRE MAX 11

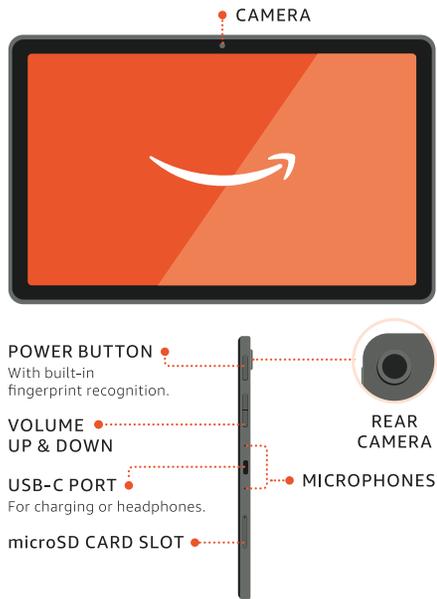

Also included: USB-C cable, 9W power adapter, microSD card ejection pin.

ACTIVATE YOUR FIRE MAX 11



USE WITH ACCESSORIES

All accessories sold separately, including Fire Max 11 Keyboard Case, Made for Amazon Stylus Pen, and microSD card.

ATTACH FIRE MAX 11 KEYBOARD CASE




Attach the Fire Max 11 Keyboard Case to make it easier to type, navigate, and do more on your Fire Max 11.

ATTACH THE MADE FOR AMAZON STYLUS PEN



Attach your Made for Amazon Stylus Pen to the magnetic sides.

EXPAND STORAGE

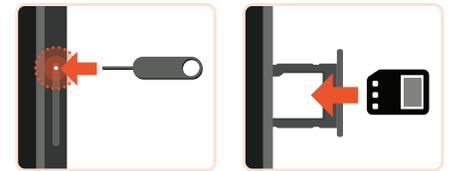

You can expand storage by using the microSD card ejection pin to eject the microSD card tray, inserting a microSD card into the tray, and reinserting the tray.

CONNECT HEADPHONES

