

MEET YOUR FIRE HD 10

SPEAKER FRONT CAMERA SPEAKER



microSD CARD SLOT

 
Install microSD for up to 1TB of additional storage.
microSD card sold separately.



Also included: USB-C cable, power adapter.

BACK

REAR CAMERA



SIDE

POWER BUTTON

VOLUME
UP & DOWN

MICROPHONE

USB-C PORT

HEADPHONE JACK



ACTIVATE YOUR FIRE HD 10

1


POWER

Power on your tablet.

2

SETUP

Follow the on-screen instructions to complete setup.

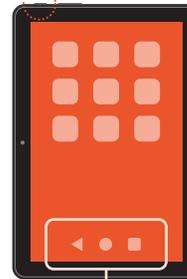

Tip:
swipe up to
unlock the device.

NAVIGATE FROM HOME SCREEN

- ◀ Go back
- Return home
- Switch between apps

EXPLORE YOUR FIRE HD 10

TO ACCESS SETTINGS AND SHORTCUTS



Swipe down for settings and quick controls.

Swipe left for libraries.

Swipe right for books, TV shows, movies, games, and other content.

CHARGE YOUR FIRE HD 10



For troubleshooting tips and Amazon Customer Service, visit www.amazon.com/devicesupport.