



Welcome to your NOOK GlowLight™

Quick Start Guide




1 Charge your NOOK®

You must charge your NOOK before using it for the first time.

Plug your NOOK into a USB port on your computer using the USB Cable included with your NOOK.

It takes approximately 4 hours to charge your NOOK from your computer.

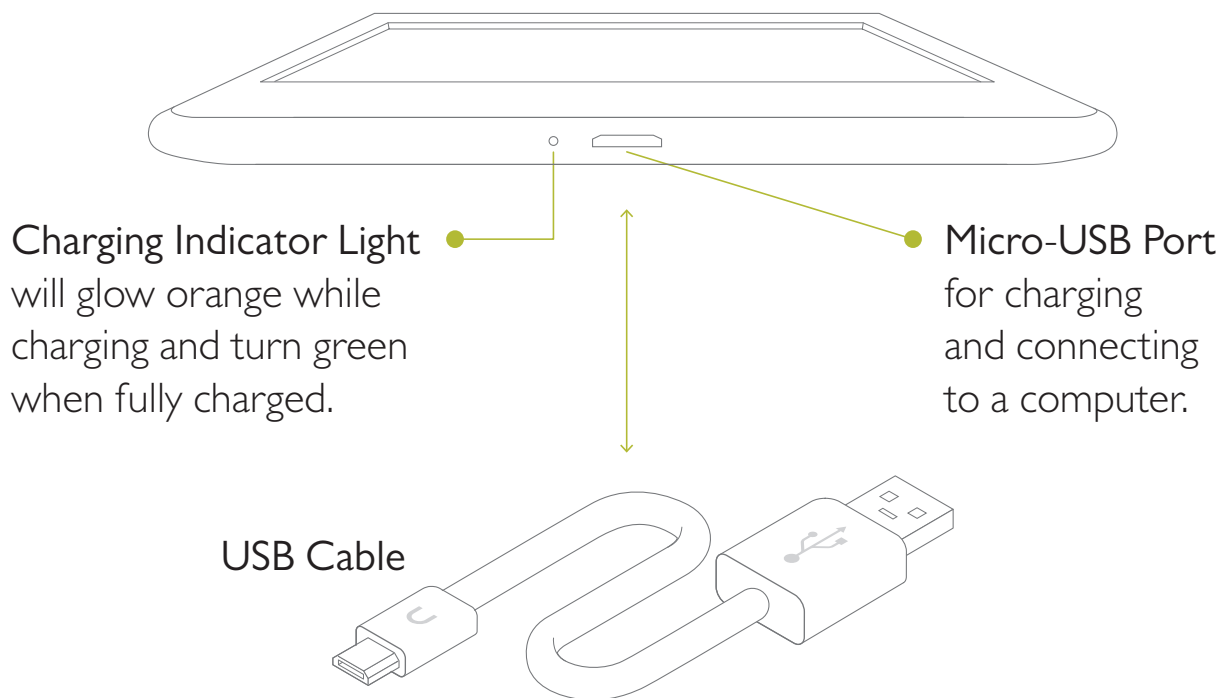


Note: A power adapter is available as an optional accessory for charging your NOOK from a wall outlet.



2 Get to know your NOOK

Power Button

Press and hold the power button on the left side of your NOOK for about 2 seconds to turn it on or off.

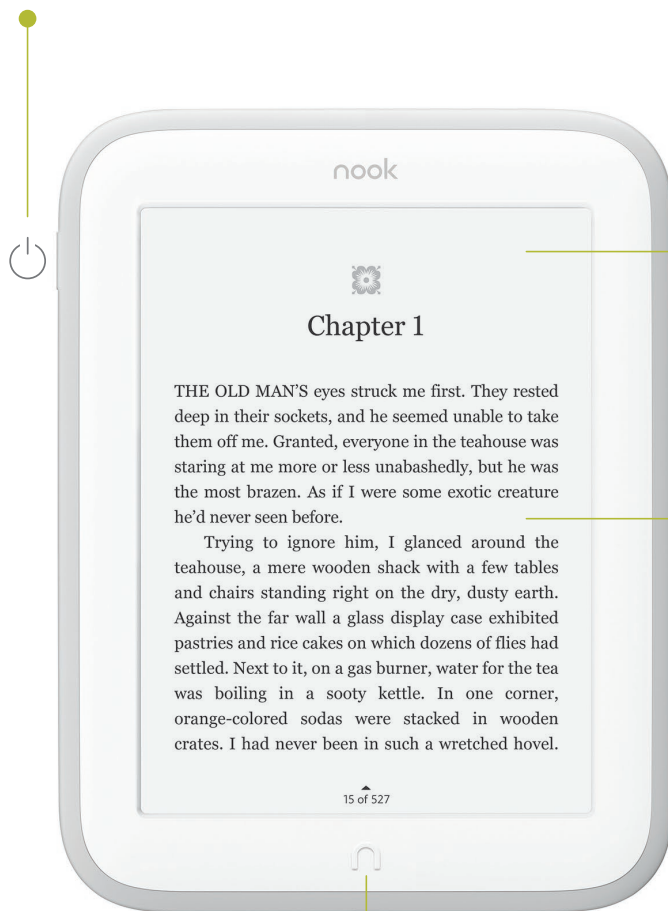


GlowLight®

Evenly lights your display for reading in the dark or low light conditions.

Touchscreen E Ink® Display

Your NOOK features a full touchscreen for easy navigation.

NOOK Button

Press the NOOK Button  to wake up your device from sleep mode (turn the display on). When the device is on, press the NOOK Button to return to your Home screen or press and hold for 2 seconds to turn GlowLight on or off.

3 Set up: turning on your NOOK for the first time

1. Read and accept the Terms of Service and Privacy Policy

Your NOOK will display the Terms of Service and Privacy Policy. Please read these terms and tap *Agree* to accept them.

2. Select your Time Zone

Tap on your time zone (for example, Eastern Time). Then tap *Next*.

3. Connect to a Wi-Fi® network

To register your NOOK and to purchase and download books and periodicals, you need to be connected to a Wi-Fi network.

4. Register your NOOK

You must register your NOOK to your NOOK (or BN.com) account. This gives you access to any books in your NOOK Library and allows you to shop for new books, magazines, and newspapers on your NOOK.

If you already have a NOOK (or BN.com) account:

1. Enter the email address and password for your account.
2. Tap *Sign In*.


If you do not yet have a NOOK (or BN.com) account:

1. Tap the *Create Account* button.
2. Fill in the form with your name, email, password, and other information.
3. Tap the checkmark to continue.

That's it. You've registered your NOOK. You're now ready to shop at The NOOK Store® and read your favorite books, magazines, newspapers, and more.

4 Home screen

On your Home screen you quickly access your current reads and navigate to the various features on your NOOK, like your Library and The NOOK Store.

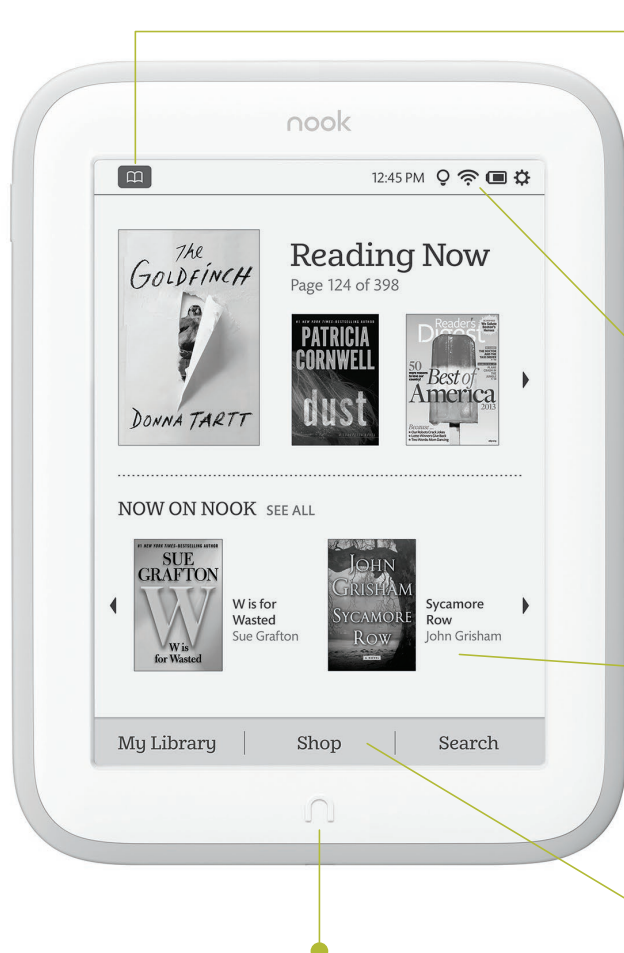

Reading Now

At the top of most screens, you'll find an open book icon, which is a quick link to the most recent book or periodical you've been reading.

Status Bar

The Status Bar includes the time and icons for battery status, GlowLight, bookmarks, and Wi-Fi connectivity.


What to Read Next

Here you'll find recommendations from Barnes & Noble for exciting books or periodicals to read next.

Nav Buttons

Tap the Nav Buttons along the bottom of your Home screen to open various features on your NOOK, such as *My Library*, *Shop*, and *Search*.

NOOK Button


Press the NOOK Button  at any time when the device is on:


- Press once to display your Home screen.
- Press and hold for 2 seconds to turn GlowLight on or off.

5 Touch navigation

The following gestures help you to use and navigate on your NOOK®.

Unlock Your NOOK

Press the NOOK Button  to wake up your NOOK, and then drag the closed padlock icon to the right to unlock your NOOK.

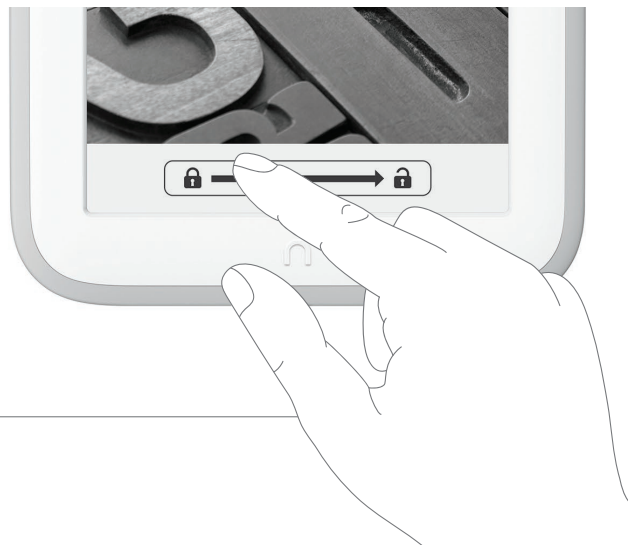


Scroll

Slide your finger up or down the screen to scroll through a vertical list.

Swipe

Glide your finger across the screen, usually to the left or the right, to turn pages or scroll through a list.

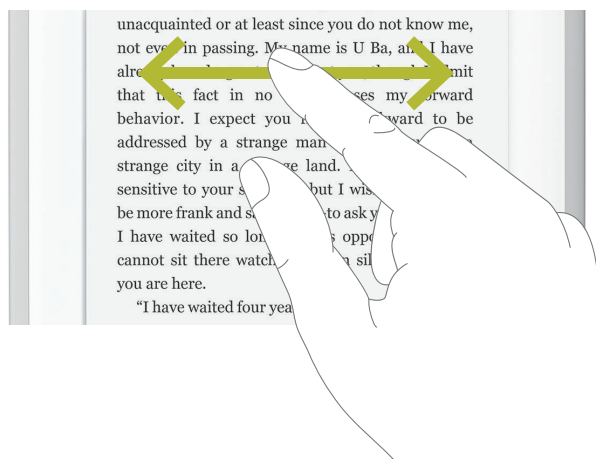

Touch navigation, continued





Tap & Double Tap

To select a feature or item, touch your fingertip quickly to the screen once, as though you were tapping a key on a keyboard. Double tap your finger quickly on a book cover in your Library to bring up additional details.

Press & Hold

Touch your finger to the screen and hold it there for approximately 2 seconds. In many situations, pressing and holding will pop open a menu, such as the Highlight and Look Up menu while reading.

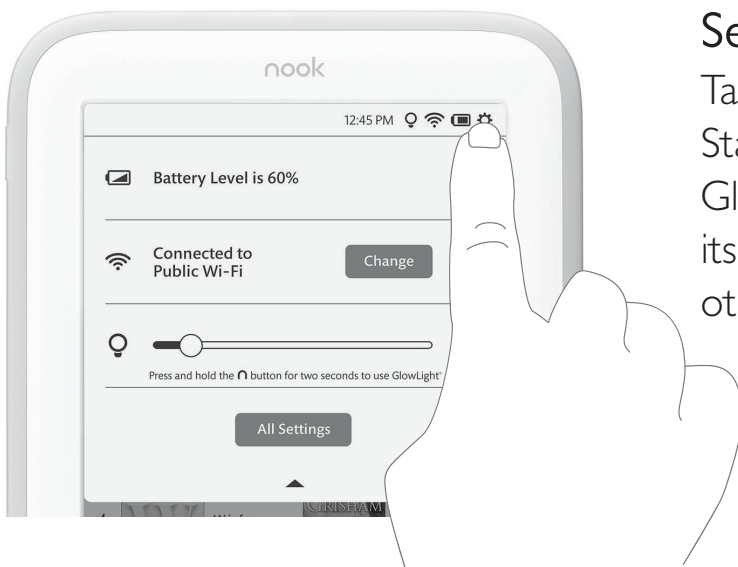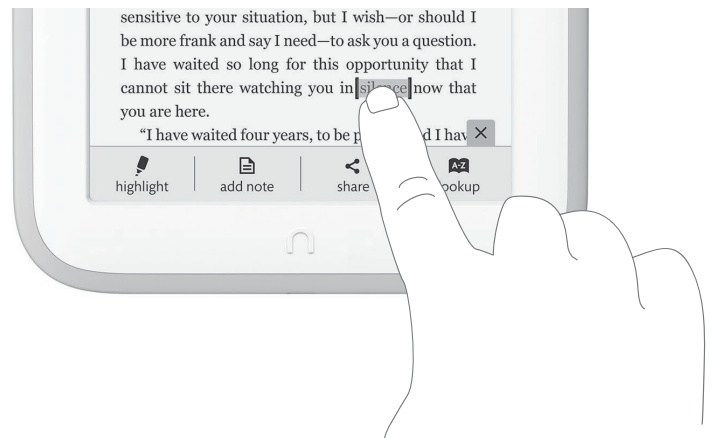


Settings


Tap the right side of the Status Bar for controls to turn GlowLight on and off, to adjust its brightness, and to access all other Settings for your device.

6 Start reading

Sync Button

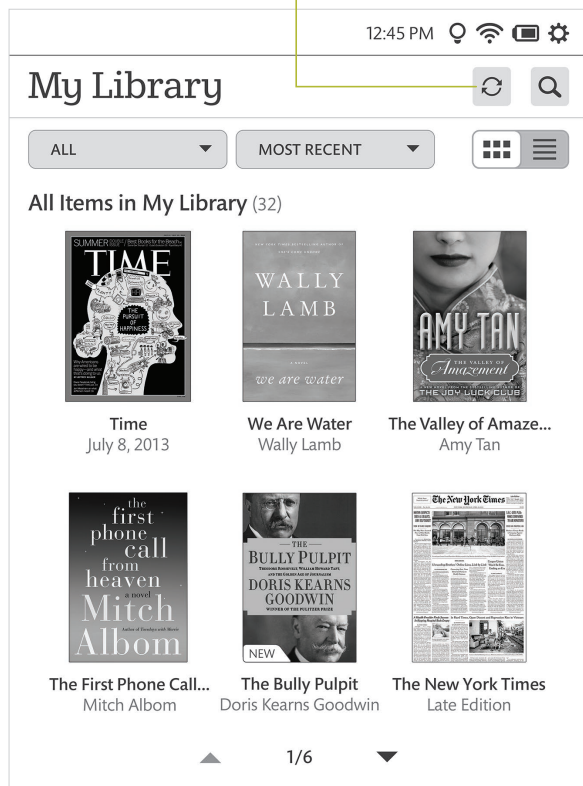

Find a Book

You'll find your books, magazines, and newspapers in your Library. To get to your Library, press the NOOK Button  to display your Home screen. Then tap *My Library*. Here, you can sort and view all your content the way you want.

Open a Book

To open a book, tap on its cover.

Turn Pages


To turn the page of a book forward or back:

- Tap the right or left edge of the screen.
- Swipe from right to left or left to right.

Change Text Size & More

When in a book, tap the center of the screen or the up arrow at the bottom of the screen to bring up the Reading Tools. To adjust the text, tap the text icon **Aa** and select your text size, font style, and other options. You can also:

- Browse the table of contents and view your notes and bookmarks
- Search for words or phrases
- Go to a specific page number




7 Discover new favorites

Shop at The NOOK Store

Shopping is fun and easy on your NOOK. To visit The NOOK Store:

1. Connect to Wi-Fi.
2. Press the NOOK Button  to display your Home screen.
3. Tap *Shop*.

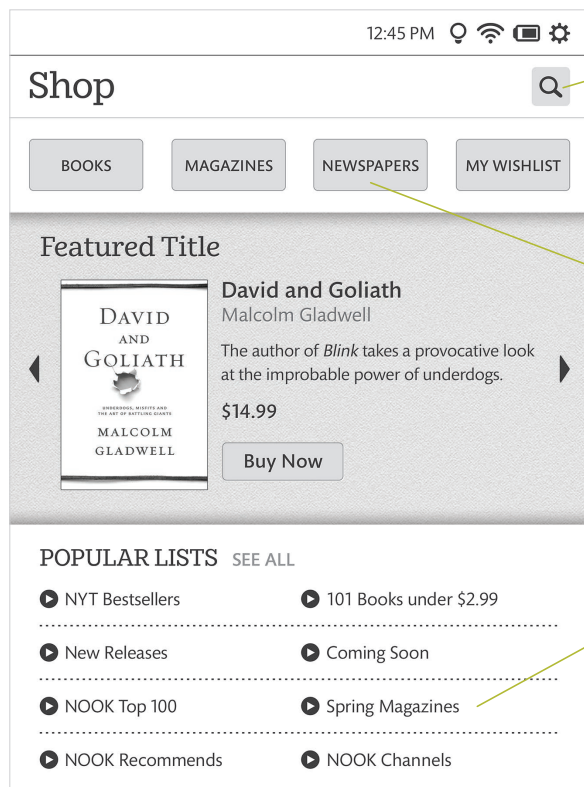

Search The NOOK Store

Tap the search button to display an on-screen keyboard to search by a title, author name, or topic.

Shop by Category

Tap a category button to shop by content type or from your personal wishlist.

Browse Popular Lists

Choose a popular list to get easy access to recommended reads and top titles.

Just Tap to Buy

Once your NOOK account is set up with a valid credit card, you can make purchases with the tap of your finger. Just tap the *Buy* button next to the book or periodical you want. Tap *Confirm* and your NOOK downloads the item to your Library automatically.

8 Learn more

User Guide

In addition to this *Quick Start Guide*, please read the *User Guide* for complete information about all the features of your NOOK. You'll find a copy of the *User Guide* in your Library on your NOOK.

Additional Support

Please visit NOOK.com/support for additional information, including:

- A PDF version of the *NOOK® User Guide* that you can download to your computer
- Frequently Asked Questions
- Live Chat with a NOOK Expert
- Tutorial videos and more

You can also tweet Customer Service at @NOOK_Care.

Note: To ensure the highest quality of reading, your NOOK has an anti-glare film already installed. Please don't use any additional screen protector as it will damage the device. To protect your NOOK's screen from accidental damage, we recommend using a NOOK cover. Your limited warranty does not cover damage to your NOOK's screen resulting from use of an additional screen protector.

barnesandnoble.com llc, 76 Ninth Avenue, New York, NY 10011 USA.

© 2013 barnesandnoble.com llc. All rights reserved. GlowLight, NOOK, NOOK GlowLight, NOOK Store, and the NOOK logos are trademarks of barnesandnoble.com llc or its affiliates. Patent Pending. Screenshots and product images are simulated and for instructional purposes only. They may differ from the actual product and are subject to change without notice. Content shown may vary from actual available content, which may change without notice. Your use of NOOK is subject to the Terms of Service located in the Settings area of your device and here: www.NOOK.com/legal. Contains Reader® Mobile technology by Adobe Systems Incorporated. Wi-Fi is a registered trademark of the Wi-Fi Alliance. All trademarks or registered trademarks that are not the property of barnesandnoble.com llc or its affiliates are the property of their respective owners.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.